

# What's in the box



 
TCL TV



Power cable




Quick Start Guide



2 x AAA batteries  
for remote



VESA adapters

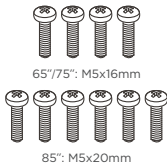


Stand screws




65"/75"/85":  
M4x8mm



Cable clips

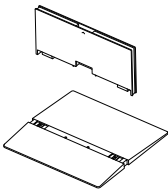


TV stands

 



TV remote

# What you need

 

Phillips head  
screwdriver

## Make the most of your TV

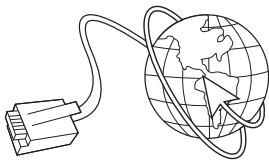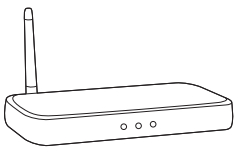

Router + Internet Connection  
(needed for streaming)

For additional support, please visit [support.tcl.com](https://support.tcl.com)

# Step 1 Set up your TV

Ready for the step-by-step? You're only minutes away from TV bliss!

Warning: To avoid the danger of suffocation, keep plastic packaging away from babies, children, and pets. Do not use packaging bags in cribs, beds, carriages, or playpens.


## Remove your TV from the box





Be careful, it's heavy!

## To use the stand

- A** Remove the back cover from the vertical stand component as illustrated, then align the vertical stand with the stand plate and secure with the screws from the accessory bag.
- B** Align the stands with the screw holes located on the TV. Secure the stands to the TV with the remaining stand screws. The stands can be installed at a higher or lower position as illustrated.
- C** Insert the cable clips as illustrated.
- D** Route the cables as illustrated.
- E** Reinstall the back cover to the vertical stand component by aligning the four guide pins with the corresponding holes.
- F** Stand installation is completed.

**Note:** Make sure the installation direction of the stand is the same as illustrated. Please remove the protective film after installation.

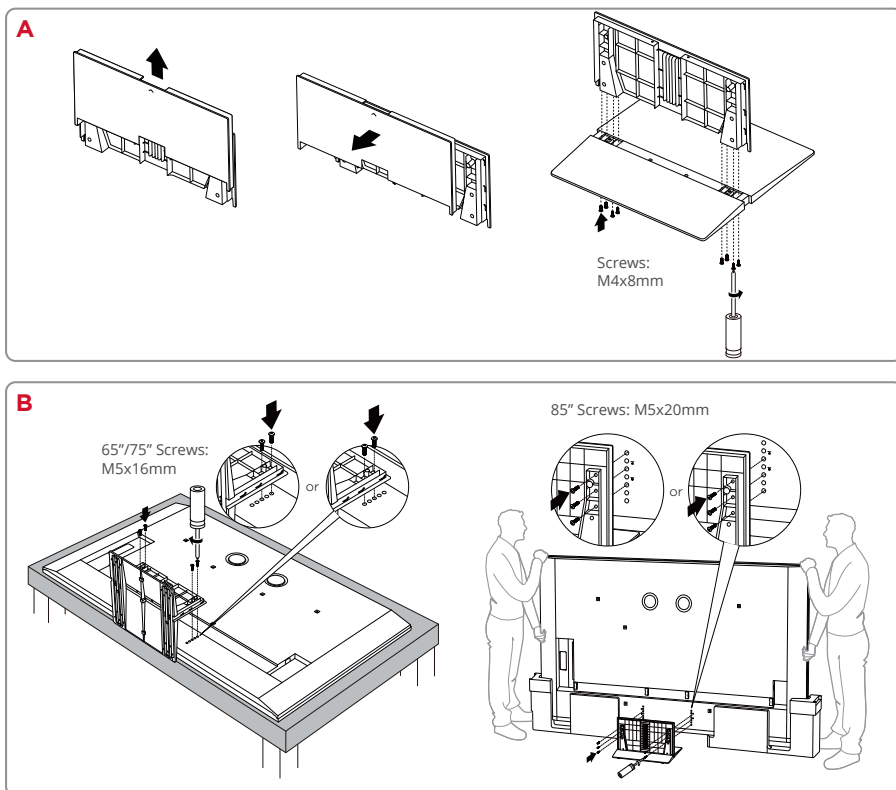

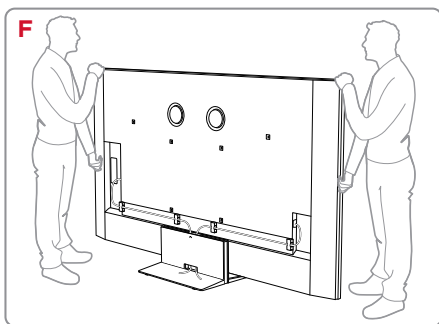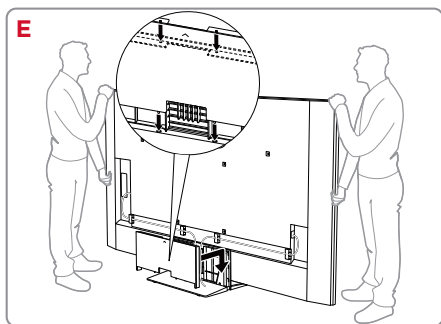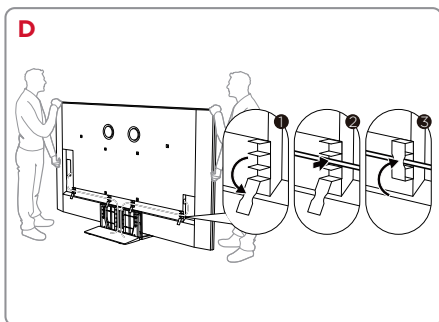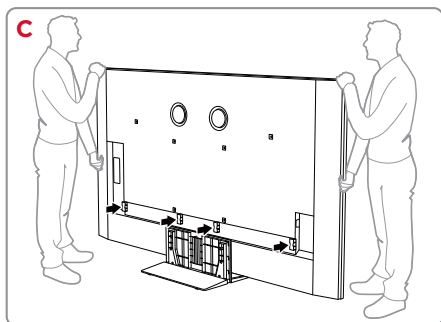

### **Warning (Stability Hazard):**


 














Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.
- NEVER place items that might encourage children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

## Step 3 Grab your remote

 
The TV remote should feel right at home in your hand. We designed it to be incredibly intuitive for watching TV and navigating on-screen menus.

-  **MUTE** Press the button to mute the sound
-  **REMOTE MICROPHONE** Talk to the remote microphone after pressing the Google Assistant button
-  **POWER** Turn TV on and off
-  **INPUT** To select input source and display the quick panel
-  **QUICK SETTINGS** Open the quick menu
-  **CIRCULAR D-PAD** Navigation direction buttons (Up/Down/Left/Right)
-  **OK BUTTON** To confirm an entry or selection
-  **BACK** Return to previous screen
-  **SETTINGS** To display the dashboard menu
-  **GOOGLE ASSISTANT BUTTON** Press to activate the remote's Google Assistant microphone. Search content through your voice by holding down the button.
-  **HOME** To access the TV homepage
-  **FREE TV** To access the Free TV
-  **VOLUME** Raise and lower volume
-  **VIRTUAL KEYBOARD** To display the on-screen keyboard
-  **LIVE GUIDE** Open the Live TV Electronic Programming Guide (EPG)
-  **CHANNEL** To change channels



### Turning off the remote backlight

By default, the backlight of the remote will automatically activate when lifted. If you want to turn off the backlight, press and hold the SETTINGS button and the BACK button at the same time for 3 seconds. If you want to turn on the backlight again, press and hold the SETTINGS button and the BACK button at the same time for 3 seconds.


**Tip!** Follow the on-screen guide to pair the remote control with the TV when pressing the  button for the first time.

## Step 5 Complete guided setup

### It's the final stretch-hurray!

#### Let's Connect

Once your language has been selected, you can quickly set up the TV using the Google Home app on an Android or iOS phone.

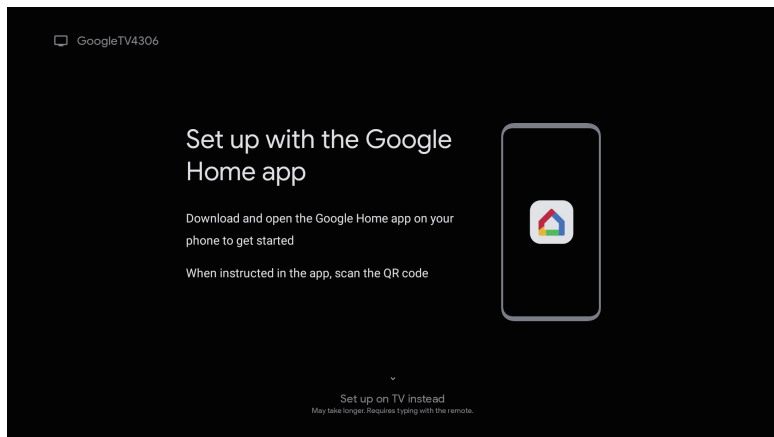

TV interface may vary and is subject to change.

The model number shown will vary depending on your TCL Google TV model number.

Or you can follow the easy on-screen instructions to setup your TV. If you aren't ready to connect your TV to a wireless network, you can still use it as a regular TV.

To enjoy all smart features and services on your TCL TV with Google TV™, a Google Account, a TCL account, and a reliable broadband internet connection are required.

### And setup is done... Congratulations!

Continue using the remote to personalize your Home screen, streaming apps line-up, stream movies, and so much more.

#### Key things to know:

A paid subscription or other payments may be required for some streaming apps. Streaming apps availability are subject to change and vary by country.

### WE ARE READY TO HELP

contact us first with any questions



TCL SUPPORT:  
support.tcl.com  
1-877-300-9509