

Barbasol[®]

Rechargeable LCD Head Shaver Set



USE AND CARE GUIDE

(For model: CBT1-9000-BLU)

Manufactured under exclusive license of Perio Inc. ©Barbasol

PLEASE RETAIN THIS USE & CARE GUIDE FOR FUTURE REFERENCE

When using an electrical appliance, basic precautions should always be observed. Read all instructions before using this shaver.

DANGER

To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug it immediately.
2. Do not charge while bathing or in the shower.
3. Do not charge this unit near a tub, toilet or sink.


WARNING/IMPORTANT

1. Read the instruction manual thoroughly before using the device.
2. Use the shaver only for purposes described in this instruction book.
3. For the hygienic reason, the shaver should not be shared with others.
4. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge.
5. Regularly check the foil condition, if signs of damage are visible, do not use.
6. Do not use if skin is red, irritated, inflamed, infected or blistered.
7. Foils and blades will wear over time and may require replacing.
8. This product is for household use only.
9. Do not place or store your unit in direct sunlight. Store only in a cool dry place.
10. Keep your unit out of reach of children.
11. Do not charge the shaver where the temperature is below (32°F), or higher than (100°F), or where it will be exposed to direct sunlight or a heat source, or near excessive moisture.
12. Use the included charging USB cord only.
13. Dry the shaver completely before charging it.
14. Keep the charging cord away from water and handle with dry hands.
15. Do not pull, twist, or severely bend the cord.
16. Do not wrap the power cord tightly around the appliance.
17. Do not take the housing apart.

PRODUCT INTRODUCTION

LCD SCREEN INDICATION



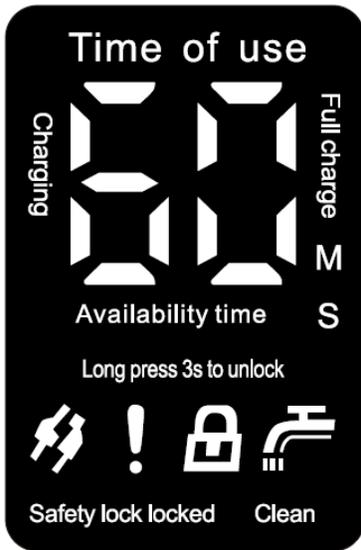

1. When full charged, it will show 60 M. Also show you the availability time when in use.
2. The charging plug will light up when are you charging the shaver.
3. Press on/off switch 3 seconds to lock the shaver.
4. Re-press on/off switch 3 seconds to unlock the shaver.
5. Please wash the shaver when the faucet symbol light flash up.
6. Exclamation symbol is blocked rotor protection warning, when this light flash up, please switch off the product first, then switch it on.
7. Time of Use: show number 1-60, this will advise you the used time: minute/second.

CHARGING

1. Use only the included USB cord supplied with this appliance.
2. Regular shaving will require 1.5 hours charging time for 60 minutes of run time. Usage time may decrease over time.
3. When you charge the shaver for the first time or after three months of non-use, let it charge continuously for 1.5 hours.
4. Do not overcharge, as this may damage the battery life.
5. Be sure to check that the product is turned off when charging.
6. Connect the charging cord on the charging connection of the shaver.
7. Connect the other end of the charging cord to a USB charger, current 5V 1A.

SHAVING

HOW TO USE

1. Switch on by pressing the on/off switch.
2. Hold the shaver at a right angle to your skin.
3. Apply gentle pressure as you move the shaver across your face, stretching the skin with your free hand. Move the shaver back and forth to achieve the desired result.
4. Applying excessive pressure will not result in a closer shave and may cause irritation or skin damage.
5. If the shaver is no power, you can shave without charging by connecting the shaver with power cord to the mains 5V 1A.

FACIAL CLEANING

Choose the brush attachment and simply snap it on the unit. Apply your favorite soap or cleanser to the brush (or

use without for dry brushing) and use it on your face to gently micro-massage skin while exfoliating and deep cleaning to leave skin feeling energized and radiant.

CLEANING

1. Turn off the shaver when cleaning.
2. Press the “Head Removal Catch” to release the “Head Cover”. Remove any hair debris after each use using the brush provided.
3. Rinse the “Head Cover” only under running water.
4. Do not clean when it is charging.

DO NOT REMOVE THE BATTERY.

ENVIRONMENT PROTECTION

NOTE! The battery the appliance is equipped with contains substances, which may result in environmental pollution.

Do not dispose of the appliance. Please take all WEEE marked waste to your local recycling center for proper disposal.

