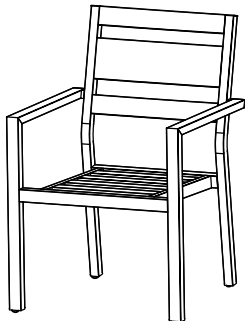
 


ITEM NAME/NOM D'ITEM: RADER DINING CHAIR


ITEM #/NO. ITEM: 704059

PARTS LIST/LISTE DES PIÈCES


(1)	(2)
 x1	 x1

ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

I

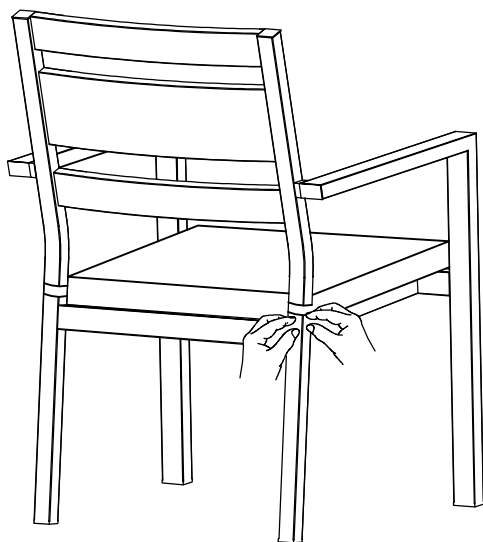

II

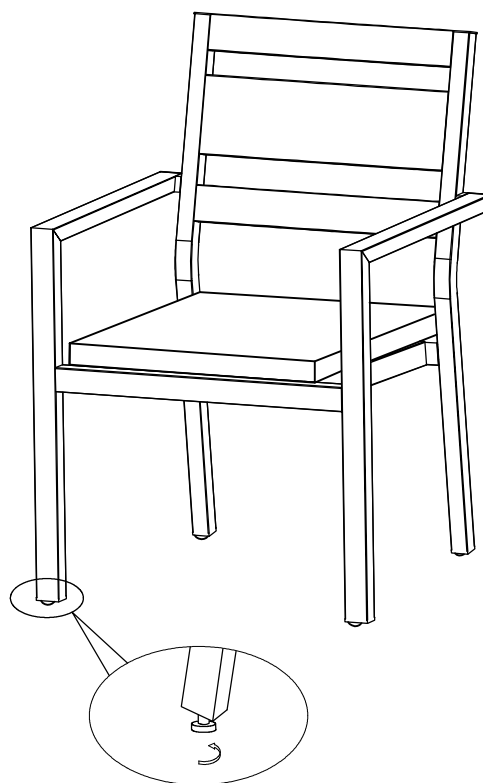

Please use the attached adjustable footglides to level the chair on uneven surface.

For missing parts or damaged parts, please call /
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico: (866) 798-6663

AI-V1-B008-241008