

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

222933 Dresser

### ITEM: **222933**

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

1. Remove hardware from box and sort by size.

**BOLT** 

- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

### PARTS IDENTIFICATION

A DRESSER

1PC

B LEG

4PCS

C CENTER SUPPORT TEG WITH LEVELER

1PC

#### HARDWARE IDENTIFICATION

2 ALLEN WRENCH
(M4 x 110MM - BLK)

1PC


8PCS

## ITEM: **222933**


## **ASSEMBLY INSTRUCTIONS**



## STEP 1

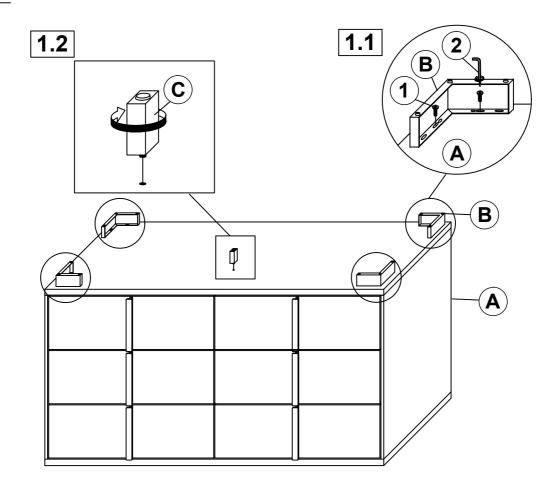

# STEP 2 COMPLETE

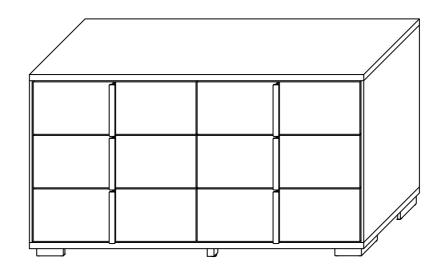


PAGE 3 OF 3



ITEM: **222933** 



Inner Size of Drawer : 24.50"W X 12.25"D X 5.00"H X 0.25"T

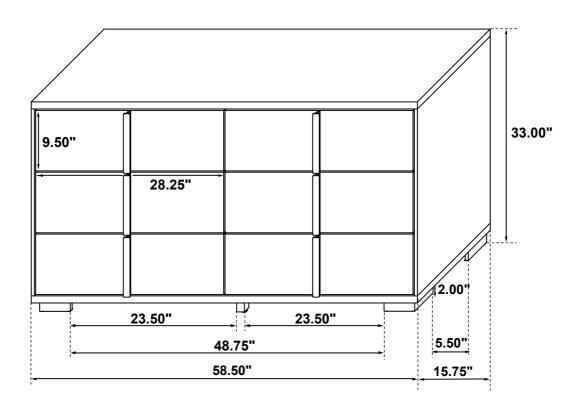

Note: Dimension tolerance ±5%