

# FISHER & PAYKEL

## DATA SHEET

Oven, 30"

### Model no:

### OB30SD13PLX1, OB30SD16PLX1

(refer page 2 for metric measurements)

Product Dimensions	in
Overall height of oven	27 3/16"
Overall width of oven	29 15/16"
© Depth of front frame (excludes handle, front stainless steel trim and dial)	1 9/16"
<ul> <li>Depth of oven chassis and front frame (excludes handle, front stainless steel trim and dial)</li> </ul>	23 7/8"
Depth of chassis	22 5/16"
F Height of chassis	26 9/16"
Width of chassis	28 3/8"
(ii) Height of control panel	3 15/16"
<ol> <li>Height of stainless steel trim on control panel</li> </ol>	13/16″
<ul> <li>④ Height from bottom datum to top of oven door</li> </ul>	22 3/4"
Height from bottom datum to centerline of handle     A statement of the statement o	21 3/4"
① Height from bottom datum to bottom of door	1 1/8"
Width of handle	28 5/8"
Depth of handle	1 5/8"
<ul> <li>Thickness of handle</li> </ul>	5/8"
Depth of door when open (measured from front of door)	21 5/8"

Minimum Clearances	in
Minimum inside height of cavity	26 13/16"
Minimum inside width of cavity	28 1/2"
Minimum inside depth of cavity (proud installation*)	22 5/8"

\*Flush installation possible. Depending on cabinet panel thickness a rebate around front frame might be required, refer to the installation guide.


IMPORTANT NOTE: For full installation and clearance details please refer to the installation guide.

INDICATES PRODUCT DATUM --INDICATES CABINETRY CLEARANCES ------

### DATE: 08.08.2022

G

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

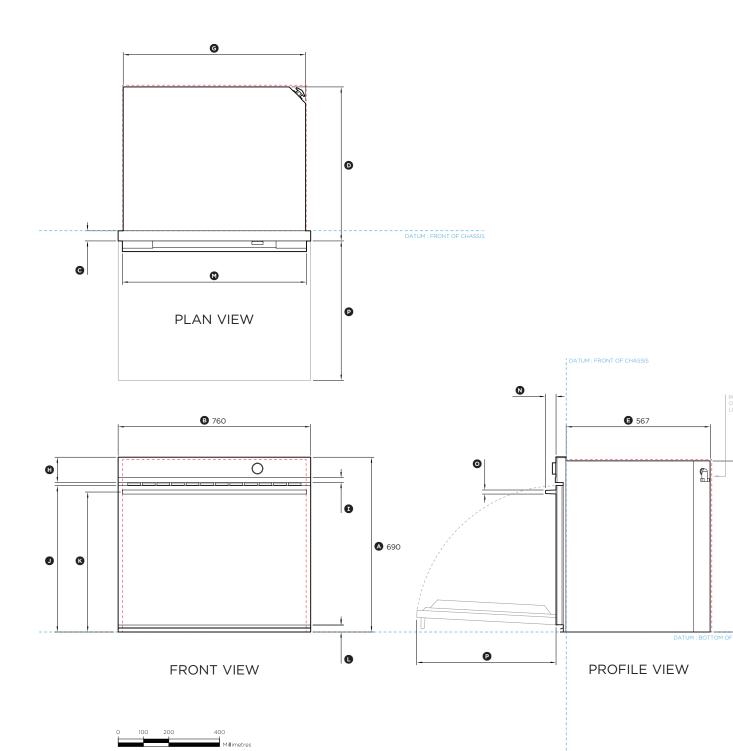

# FISHER & PAYKEL

## DATA SHEET

Oven, 30"

#### Model no:

### OB30SD13PLX1, OB30SD16PLX1

(refer page 1 for imperial measurements)

Product Dimensions	
Product Dimensions	mm
Overall height of oven	690
Overall width of oven	760
© Depth of front frame (excludes handle, front stainless steel trim and dial)	40
<ul> <li>Depth of oven chassis and front frame (excludes handle, front stainless steel trim and dial)</li> </ul>	607
Depth of chassis	567
F Height of chassis	674
⑥ Width of chassis	720
Height of control panel	100
<ol> <li>Height of stainless steel trim on control panel</li> </ol>	20
<ol> <li>Height from bottom datum to top of oven door</li> </ol>	578
Beight from bottom datum to centerline of handle	553
Height from bottom datum to bottom of door	28
<ul> <li>Width of handle</li> </ul>	727
Depth of handle	42
<ul> <li>Thickness of handle</li> </ul>	16
Depth of door when open (measured from front of door)	550

Minimum Clearances	
Minimum inside height of cavity	681
Minimum inside width of cavity	724
Minimum inside depth of cavity (proud installation*)	575

\*Flush installation possible. Depending on cabinet panel thickness a rebate around front frame might be required, refer to the installation guide.

IMPORTANT NOTE: For full installation and clearance details please refer to the installation guide.

INDICATES PRODUCT DATUM -----INDICATES CABINETRY CLEARANCES ------

### DATE: 08.08.2022

G

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com