



Instruction Manual

SPIDEY TO THE RESCUE DRIVER

 


Marvel Spidey and his Amazing Friends

© MARVEL
All rights reserved.

INTRODUCTION

Thank you for purchasing the **VTech® Spidey and His Amazing Friends Spidey to the Rescue Driver!** This interactive driver includes Spidey's Web-Crawler and Spin's Techno-Racer modes for exciting role-play.

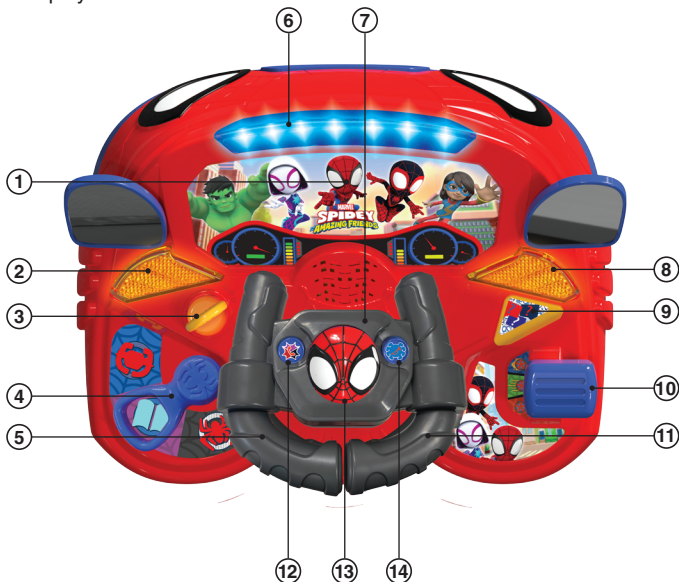

- | | |
|--------------------------------|---------------------|
| ① Hero Buttons | ⑧ Right Turn Signal |
| ② Left Turn Signal | ⑨ Help Button |
| ③ Off/Low/High Volume Selector | ⑩ Control Handle |
| ④ Mode Selector | ⑪ Right Handgrip |
| ⑤ Left Handgrip | ⑫ Call Button |
| ⑥ 7 Blue LEDs | ⑬ WEB-Ster Button |
| ⑦ Steering Wheel | ⑭ Horn Button |

INCLUDED IN THIS PACKAGE

- One **Spidey to the Rescue Driver**
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

GETTING STARTED

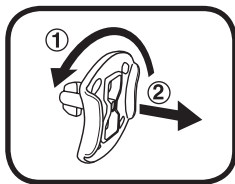


Unlock the Packaging Locks

- ① Turn the packaging locks counterclockwise several times.
- ② Pull out and discard the packaging locks.

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

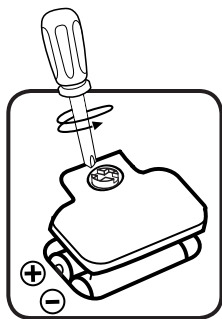

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

1. Off/Low/High Volume Selector

To turn the unit **On**, turn the **Off/Low/High Volume Selector** to the **Low** 🗣️ or **High** 🗣️ position. To turn the unit **Off**, turn the **Off/Low/High Volume Selector** to **Off** 🚫 position.



2. Hero Buttons

Press the **Hero Buttons** to learn about each hero and to help them complete missions.



 
3. Mode Selector

Turn the **Mode Selector** to choose between the driving, learning, or missions modes.



4. Call Button

Press the **Call Button** to learn about the **Call Button**, hear Comm Link talk, sounds, or answers to various questions.

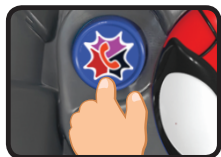

5. Horn Button

Press the **Horn Button** to learn about the **Horn Button**, honk the horn or answer questions.



6. WEB-Ster Button

Press the **WEB-Ster Button** to learn about the **WEB-Ster Button** or answer questions.



7. Help Button

Press the **Help Button** to repeat instructions.



8. Left and Right Handgrips

Turn both **Left** and **Right Handgrips** in to transform to Spidey's Web-Crawler or turn both **Left** and **Right Handgrips** out to transform to Spin's Techno-Racer.



9. Steering Wheel

Turn the **Steering Wheel** to the left or right to learn directions or answer questions.



10. Control Handle

Turn the **Control Handle** to different positions to hear fun sounds, or answer questions.




11. Automatic Shut-Off

To preserve battery life, the unit will automatically power **Off** after several minutes without input. The unit can be turned **On** again by turning the **Off/Low/High Volume Selector** to the **Low Volume** or **High Volume** position, or by turning the **Mode Selector** to the **Driving Mode**, **Learning Mode** or **Mission Mode** position. If the unit repeatedly powers down or the light flashes then fades out, we suggest changing the batteries.

ACTIVITIES

1. Driving Mode




Slide the **Mode Selector** to  to enter **Driving Mode**. Turn the **Control Handle** to green or blue to turn on vehicle sounds. Turn to red to turn off vehicle sounds. Turn both **Handgrips** to transform between Spidey's Web-Crawler and Spin's Techno-Racer. Press the **Hero Buttons** to hear fun sounds. Press the **Call Button**, **Horn Button**, **WEB-Ster Button**, or turn the **Steering Wheel** for driving fun.



2. Learning Mode




Slide the **Mode Selector** to  to enter **Learning Mode**. Turn both **Handgrips** to transform between Spidey's Web-Crawler and Spin's Techno-Racer. Press **Hero Buttons** to hear Spidey or Spin introduce the facts about each hero. Press the **Call Button, Horn Button, WEB-Ster**

Button, or turn the **Steering Wheel** to the left or right to learn about the directions and more. Turn the **Control Handle** to green, blue or red to hear engine sounds.



3. Mission Mode



Slide the **Mode Selector** to  to enter **Mission Mode**. Follow Spidey's or Spin's instructions to complete missions with other heros by pressing the **Hero Buttons, Call Button, Horn Button, WEB-Ster Button**, turning both **Handgrips**, turning the **Steering Wheel** or **Control Handle** for role-play fun.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5806
Product Name: Spidey to the Rescue Driver
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESired OPERATION.
CAN ICES(B)/NMB(B)



**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty



© 2025 VTech.
All rights reserved.
IM-580600-000
Version:0