ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED





Allen Wrench

 


2 - People

ASSEMBLY RATING



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



Are you missing anything?	Check out our Quick Tips!		
Double-check all parts, hardware and accessories listed are all acccounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!		
Should we send any replacements?	Prep Time!		
Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instructions and all diagrams prior to assembling.		

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.

 




Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

DRESSER& MIRROR



- · Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

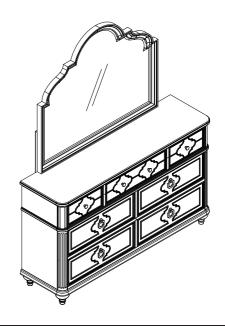

PARTS













DREESER 1pc



LEGS 4pcs



SUPPORT LEG 1pc



MIRROR 1pc



DRESSER SUPPORT 2pcs

HARDWARE









LOCK WASHER Ø1/4"





BOLT Ø1/4" x 1-5/8" 8pcs





ALLEN WRENCH 4mm 1pc

8pcs






ANTI-TIP KIT 1set

FLAT WASHER Ø1/4" 8pcs


EXPLODED VIEW

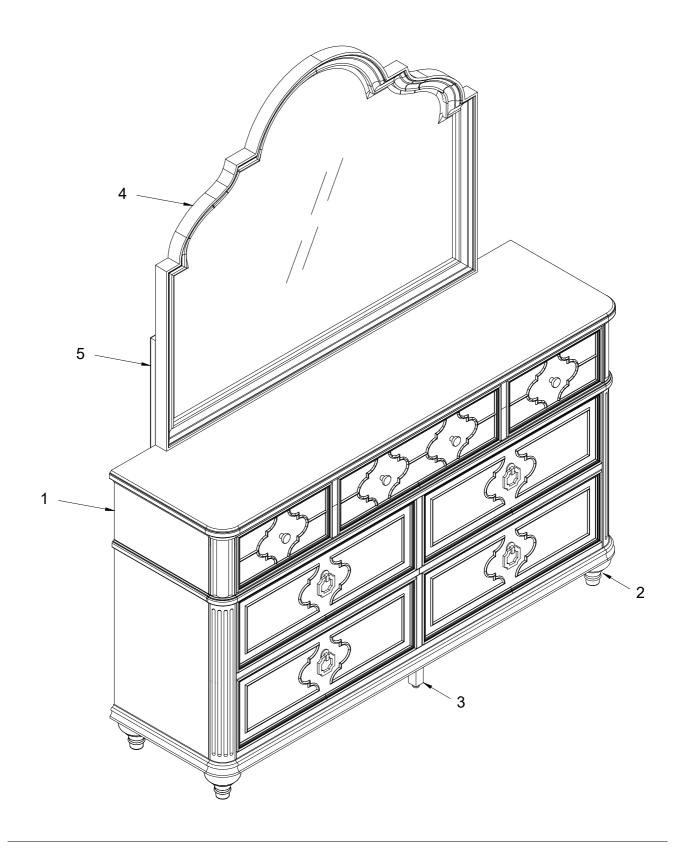


packed in 2 cases


Carton	Disignation	Part		Hardware
	DREESER	1		
	LEGS (4pcs)	2		E 1set
	SUPPORT LEG	3		
	MIRROR	4		A 8pcs B 8pcs
	DRESSER SUPPORT (2pcs)	5		C 8pcs D 1pc

ASSEMBLY INSTRUCTIONS

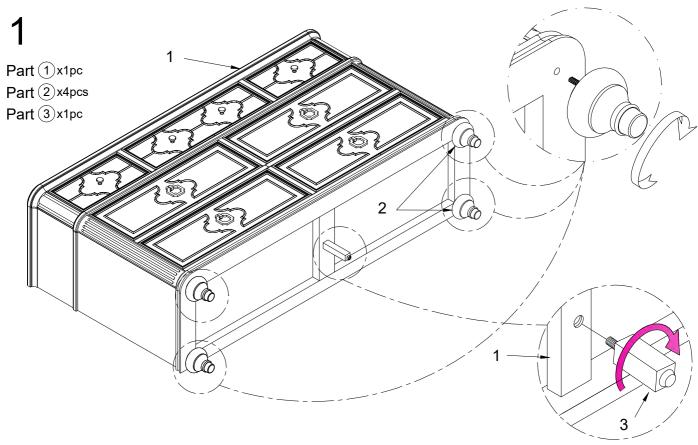

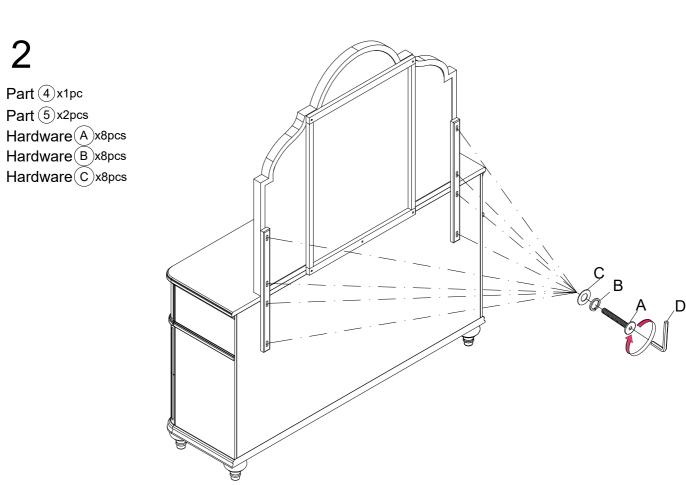

ASSEMBLY INSTRUCTIONS

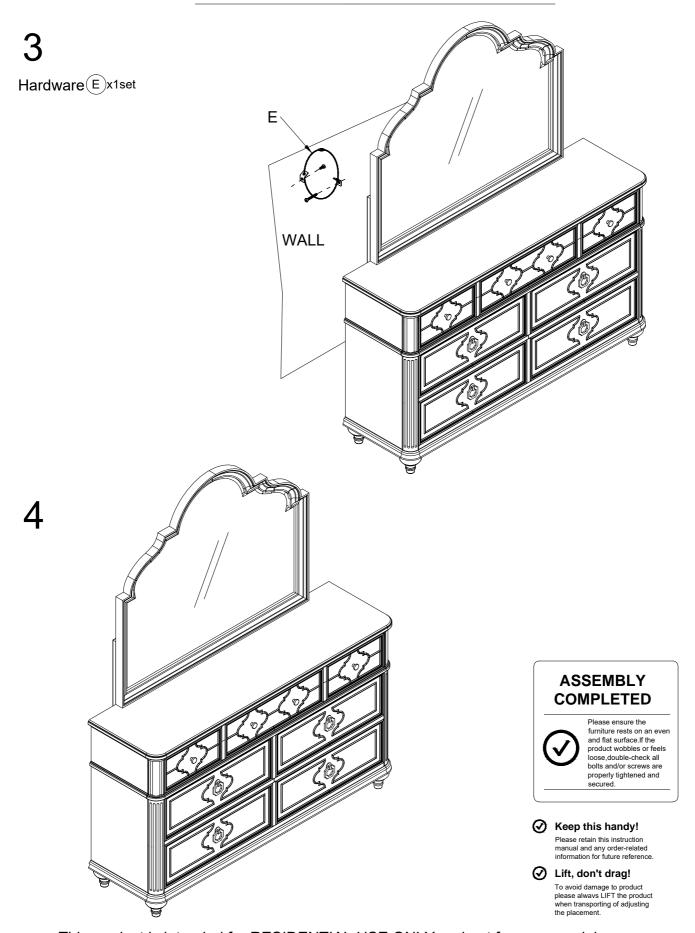

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.