

## MEET YOUR ALEXA VOICE REMOTE PRO



## POWER UP YOUR ALEXA VOICE REMOTE PRO

### INSERT YOUR BATTERIES



Press and hold your thumb on the arrow to release the latch.



With one thumb pressing on the arrow, use your second thumb to slide open the cover. Insert included batteries.

### TIPS AND TROUBLESHOOTING



Make sure you ① press the arrow firmly to release the latch as you ② slide the cover off.



If the new remote does not connect, remove and reinsert its batteries.

### AAA

Always replace dead batteries with new 1.5V alkaline or 1.2V NiMH rechargeable AAA batteries.

## PAIR WITH YOUR FIRE TV

**IF YOU HAVE THE REMOTE THAT CAME WITH YOUR FIRE TV DEVICE, YOU'LL NEED BOTH REMOTES FOR SETUP**

### NEW REMOTE

Insert batteries and press the Home  button once.

### ORIGINAL REMOTE

1. Press the Home  button, navigate to  on the menu bar, then select Controllers & Bluetooth Devices > Amazon Fire TV Remotes > Add New Remote.

2. Check if the new remote shows up in the list.

**Tip:** If the new remote does not show up in the list, long press Home  button for 10 secs on the new remote.

3. Select the new remote from the list. You'll see an on-screen message when it has been successfully paired.

**YOU CAN NOW USE  
YOUR NEW ALEXA VOICE  
REMOTE PRO.**

**IF THIS IS A REPLACEMENT REMOTE AND YOU DON'T HAVE THE REMOTE THAT CAME WITH YOUR FIRE TV DEVICE**

### RESTART YOUR DEVICE

Restart your Fire TV device by unplugging it and plugging it back in. Once the Home screen for Fire TV appears, wait 60 seconds until "cannot detect your remote" is seen on the screen.

### NEW REMOTE

Press Home  button once on the new remote. Remote should successfully pair with the Fire TV device and you should see a blue light flicker on the remote.

**Tip:** If it did not pair, press and hold the Home  button until the remote starts to flash amber (it may take 10 seconds or more).

A notification will appear on your screen indicating that your remote is successfully paired.

**YOU CAN NOW USE  
YOUR NEW ALEXA VOICE  
REMOTE PRO.**

## PAIR WITH YOUR ECHO SHOW 15 OR 21



1. Open your Echo Show's menu.
2. Tap Settings  > Fire TV Settings > Fire TV Remotes.
3. On your new remote, press and hold Home  for 10 seconds. Once discovered, it will appear on the screen.
4. On your Echo Show, tap Connect to finish pairing.

**YOU CAN NOW USE  
YOUR NEW ALEXA VOICE  
REMOTE PRO.**

## HOW TO USE YOUR ALEXA VOICE REMOTE PRO



### REMOTE FINDER

Using any Amazon device with Alexa, Alexa Built-in device, or the Alexa app, you can say:

*"Alexa, find my remote."*

*"Alexa, ring my remote."*

You can also tap the Remote Finder button or the Alexa button in the Fire TV app, if your remote is paired with a Fire TV device.

**Note:** The Remote Finder feature has a range of up to 30 ft (10 m) and requires the Fire TV device or Echo Show to be on.



### ACTIVATE BACKLIT BUTTONS

Backlit buttons will automatically turn on when using your remote in low-light environments.



### PROGRAM CUSTOMIZABLE BUTTONS

To program customizable button ① or ②, press and hold it, and select a shortcut option from the side panel that pops up on the screen.

The list of shortcut options will be personalized to you.

Examples include:

1. The app you are currently using or recently used, e.g.  
*"Open YouTube."*
2. Alexa commands, e.g.  
*"Alexa, play music."*
3. Smart Home controls, e.g.  
*"Show me the front door camera."*



### PAIR YOUR WIRELESS HEADPHONES

To easily pair or unpair your headphones or other Bluetooth audio devices with your Fire TV or Echo Show, press the headphone button ④ and follow the on-screen instructions.



### DO MORE WITH ALEXA

Just press the voice ③ button on your remote and ask Alexa to find, launch, and control content. Alexa can also play music, answer questions, read the news, check the weather, and set up alarms.

*"Alexa, find action movies."*

*"Alexa, rewind 30 seconds."*

*"Alexa, dim the lights."*