



GO LUX ANC
HEADPHONES

We love that you are rocking JLab!
We take pride in our products and fully stand behind them.



YOUR WARRANTY

All warranty claims are subject to JLab authorization and at our sole discretion. Retain your proof of purchase to ensure warranty coverage.



CONTACT US

Reach out to us at support@jlab.com or visit jlab.com/contact

REGISTER TODAY

jlab.com/register

[Product updates](#) | [How-to tips](#)
[FAQs & more](#)

PAIRUP

1





Press and hold button for **8 seconds**. Release. Lights will **flash blue/red**.



2

Enter your Bluetooth device settings and select JLab GO Lux ANC.


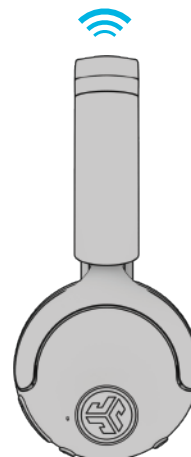
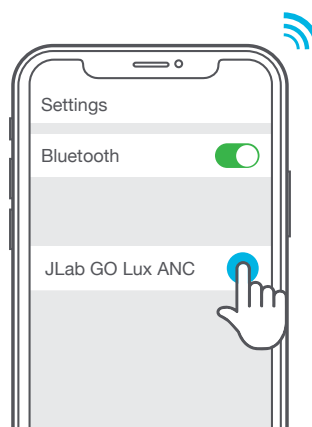


GET CHARGED

CHARGING



  
CHARGED

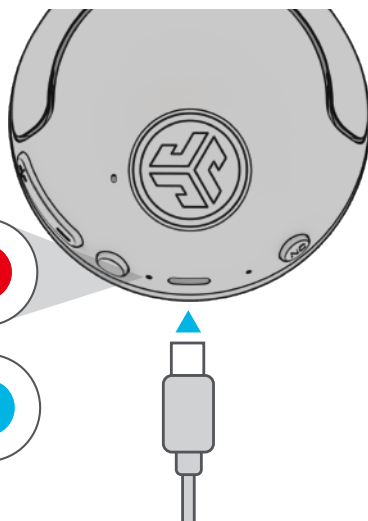

Connect to computer or 5V USB-C charger.

GO AHEAD, PRESS THE BUTTON



1x Press ● 2x Press ● ● Press Hold 

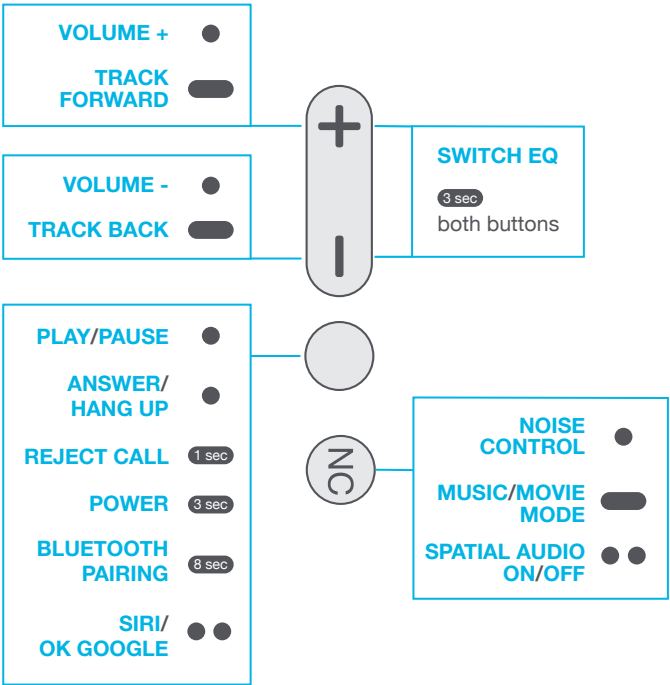

MULTIPOINT


1

Once **FIRST** device is connected, turn off Bluetooth in device settings. GO Lux ANC will auto enter Bluetooth Pairing.

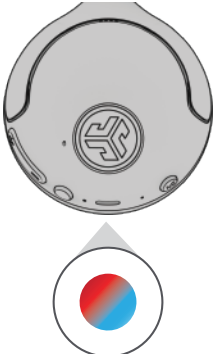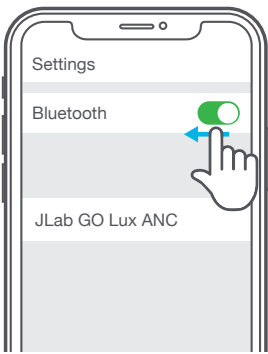


2

Enter your **SECOND** device Bluetooth settings and connect to GO Lux ANC.

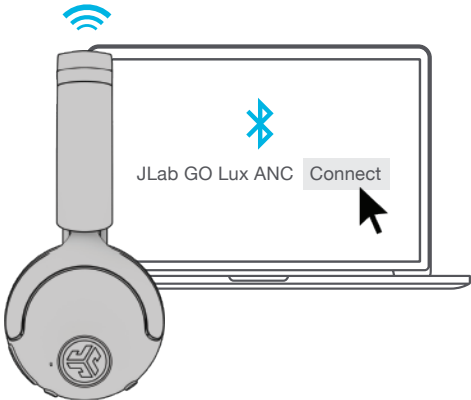


3

Enter **FIRST** device settings. Turn on Bluetooth and reconnect to GO Lux ANC.

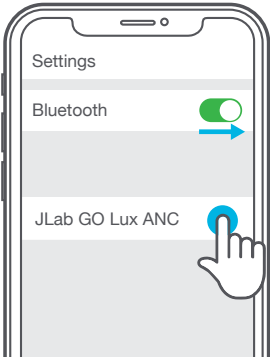

LabShare (Share between two GO Lux ANC headphones)


- 1 Connect **FIRST** headphone to device.

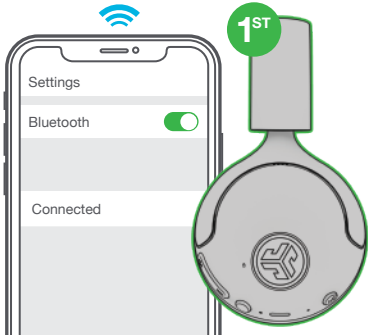


- 2 **SECOND** headphone should be powered off. **Press hold** until flashing blue/red.



- 3 **SECOND** headphone **5x Press** and blinks blue.

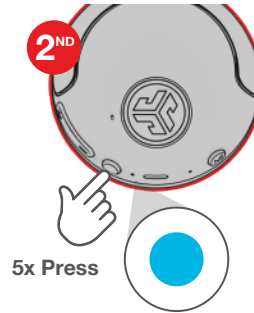

- 4 **FIRST** headphone **5x Press** to share.

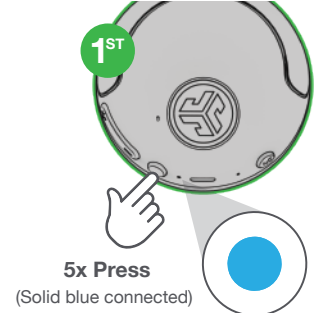

DOWNLOAD THE MOBILE APP

Customize GO Lux ANC features and update the latest software.



[Shop products](#) | [Product alerts](#) | [Burn-in your headphones](#)

JLab Store + Burn-in Tool



[JLAB.COM](https://www.jlab.com)