

Children’s Electric Ride On Car
Installation And Operation Manual



Model: LX570
Age Range: 37-95 Month
Maximum Weight: 35 KGS
Execution Standard:
GB6675&GB19865 ☐
EN71&EN62115 ☐

LX570




Pictures are for reference only , please adhere to the original products as standard

1:All spare parts When open the carton



WARNING:

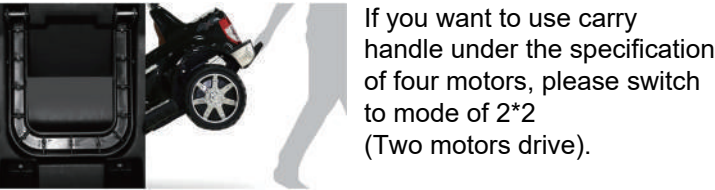

If you want to use carry handle under the specification of four motors, please switch to mode of 2*2 (Two motors drive).

Assembling Procedure (Must be assembled by Adults)

1.Install gearboxes for left and right sides



Please find gearboxes in the car and disconnect the connection lines. Please connect the gearboxes to the axle, and then make the lines of gearboxes insert into the hole of car body. (Please refer to the photos) and re-connect the lines to the power lines.

2.Connect electricity



Please first put the sleeves into the wheels.
Tips: Please note that the cotter pins should be bent into circle otherwise it will be scuffing the wheels.(Please refer to the photos)



Please take out sleeves from the screw&bolts bags and put into inner and outer sides of front wheels, as well as outer sides of back wheels, and then put one metal gasket into the axle, and then put wheel into the axle, insert the cotter pins to the hole on the axle, and then make the cotter pin across(refer to the photo). Finally, please put the cover onto the wheels.

3.Install steering wheel



Due to the reason of movement of steering tube, sometimes there is possibility that the hole on the steering wheel and the hole on the steering tube can not match well. If this happens, please use one hand to hold the hook under the car body in order to fix the steering tube. (Referring to the picture)

4. Connect power



Open the hood and the cover under the hood. Connect the power lines refer to the photo.

5: Install seat



Put the seat on the car and use two screws to fix.

6: Install rear view mirrors



Make the rearview mirrors aim at the neck and push inside.

Explosive View



Specifications

Item	Specifications
Battery	12V7AH/12V10AH
Motor	35W
Available Ages	Children from 37-95 month
Maximum Weight	35KGS
Size	142*74*48cm
Speed	3-5km/h
Charging Time	8-12hours
Remote Control Batteries	2PCS of AAA Batteries
Charger	Input:220V/110V Output:DC12v1000MA

CHARGING PRECAUTIONS

Battery polarity cannot be reversed, please ensure the red wire is connected to the red battery terminal and the black wire is connected to the black battery terminal


- Press the power switch to OFF position to turn the power off.
- Open the seat,connect the battery plug,red to red.
- Never drain battery completely or to a crawling speed,recharge the battery when a decrease in speed and power is noticed. Warrantywill be voided if misuse has occurred.
- Battery charging must be done by adults only.Never allow children to charge the battery.A child could be injured by the electricity involved in charging the battery.
- Please don't connect the wires to a short circuit.The charger and the battery are not a toy.Do not allow children to play with the charger and the battery.Only operate the battery and charger specified according to the manual instructions.
- Please do not open the battery and the charge.
- To maintain safety of vehicle, always secure the battery with the bracket.
- The battery must be handled and operated by adults only: the battery is heavy and contains sulfuric acid(electrolyte). Dropping the battery could result in serious injury
- Before charging the battery check for wear or damage to the battery,charger , the connectors and other parts .If any damage found , the charger should be repaired or replaced immediately .Do not use a damaged charger.
- It is normal for the adaptor to feel warm during charging, but if the charger feels too hot, stop charging immediately and check the battery and adaptor. When charging please turn off the power switch. Please charge the battery for 8-10 hours after first use. Subsequent charges should be 6-8 hours but not exceeding 10 hours. If do not use the car for a long time, please charge at least once a month to keep the battery cells active.

- 1.Plug the charger into the charging socket.
 - 2.Plug the other end of the charger into your wall socket.
- Batteries are perishable items that are subject to under and over charging. Please observe the charging time.

TROUBLESHOOTING

Problem: The car will not move

Answer 1: The battery is low, please charge for 6-8 hours but not exceeding 10 hours.
Charge at least once a month to keep the battery cells active.
Answer 2: The battery is low. Please charge the battery for 6-8 hours but not exceeding 10 hours.
Charge at least once a month to keep battery cells active.

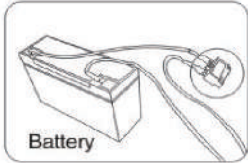

- To avoid short fuse or power cut off:
1. Do not overload the product. Max load is 35Kg.
 2. Do not drag any item behind this product.
 3. Do not allow water or any liquid into electric parts.
 4. Do not change wire system without a professional.

TROUBLESHOOTING

Problem:The car only runs for a short time

Answer 1: The battery is low, please charge for 6-8 hours but not exceeding 10 hours.
Charge at least once a month to keep the battery cells active.
Answer 2: The battery may need to be replaced depending on its charging history and age.

Problem: The sound does not work.



Please ensure the volume is turned up and the MP3 line is not connected. Sounds from steering wheel will not work when MP3 is plugged in.

Problem: Charger overheating

It is normal for battery and charger to be slightly warm during charging.
If the charger feel excessively hot, please check for a current overload or battery short circuit.

SAFETY PRECAUTIONS

01. While driving , adult supervision is required all the time
02. Always wear a helmet when driving
03. Please don't drive near road or on the footpath.
04. It is not recommended to drive the vehicle on wet surface or on slope greater than 15-degree.
05. It is recommended to drive this vehicle on smooth surface only.
06. Please don't drive this vehicle outdoors when it is raining.
07. Make sure that the vehicle stop completely before changing direction from forward to reverse
08. Please don't allow children to operate the charger or play with the battery
09. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to drive this vehicle.
11. It is prohibited to change the circuit or add other electric parts.
12. Adults must teach their children about safe driving procedures.
13. Please turn the power off when not in use.
14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
15. Inspect all wires and connection of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located underneath the seat.
18. In order to avoid accidents, please ensure the vehicle is safe before driving.
19. Please don't let children touch the wheels or be near them when the car is moving.
20. Please mind fingers when opening and closing doors.

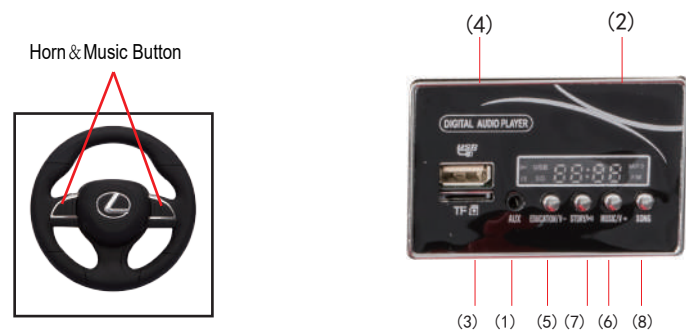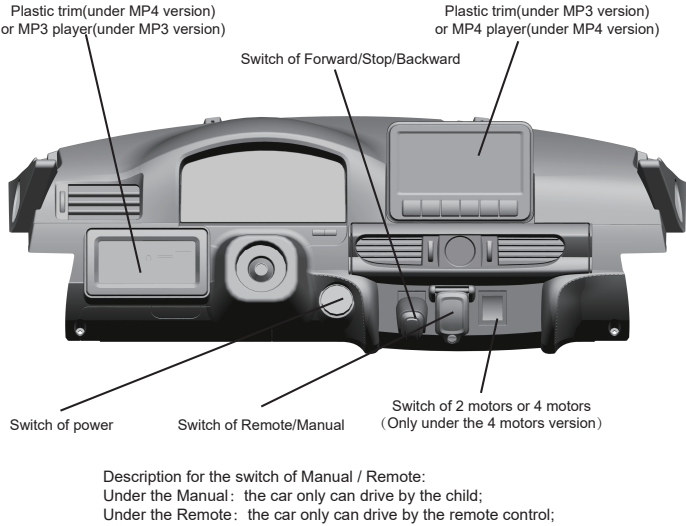

- 1:MP3
2:display
3:TF socket
4:USB socket
5:Story (Pressing for a longer time and it will lower the volume)
6:Music(Pressing for a longer time and it will Higher the volume)
7:Education(Next one)
8:Model choose(Radio,Bluetooth,SD Card,MP3,USB Connector)

- 1.Press the music button on the steering wheel for horn or music.
- 2.Plug in your MP3 device to play your own music through the car. Please note the steering wheel sounds will not work when the MP3 device is connected.



Operation Guide

For first time use or after replacing the battery, select not to pair. The car will power on after turning the ignition key.

If you choose to pair the remote control with the car, please follow the instructions below.

- Step1. Insert two AAA 1.5V batteries into the battery compartment of the remote control. Ensure the battery polarity is matched correctly. If the frequency lights flashes then the battery is correctly installed.
- Step 2: Hold the Car Select button for 2-3 seconds.
- Step 3: Turn on the ignition key to turn on the car.

- *Manufactured according to FCC certification testing and ECM credential.
- *This remote is to be used by adult only.

Warning-When replacing a replaceable battery,first open the lid and take out the old battery.Put in the new battery,pay attention to the positive and negative poles,cover the lid.



WARNING!

- For safety reasons,
- *please use this vehicle under adult guidance and supervision.
 - *do not use this product on main roads, slopes, highways or other dangerous places.
 - *children must wear shoes and protective gears when operating the vehicle.
 - *children should be seated with the seat belt fasten when driving.
 - *only load a maximum of 35Kg on the vehicle.
 - *only children aged 37 - 95 months should be allowed on this vehicle.
 - *use this toy strictly according to safety manual.
 - *please check the tires, breaks, steering wheels, seats and seat belts before operating vehicle.
 - *this toy vehicle should be used with caution and requires skill to avoid fall or collision with third parties.

Pictures are for reference only , please adhere to the original products as standard

WARNING:
To reduce the risk of injury, adult supervision is required.
Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 1 rider.