


 

ASSEMBLY INSTRUCTIONS

B4900-1 DRESSER

CRWN


(BOX 1) - BOX OF DRESSER

PARTS LIST

NO.	DESCRIPTION	SKETCH	QTY
1	DRESSER		1
2	BUN FOOT		4
3	VERTICAL LEG		1

IMPORTANT NOTE :

 - * Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- * Check to be sure that you have all parts and hardware.
- * Remove all wrapping materials, including staples & packing straps before you start to assemble.
- * Do not tighten all screws/bolts until all completely assembled.
- * Keep all hardware parts out of reach of children.

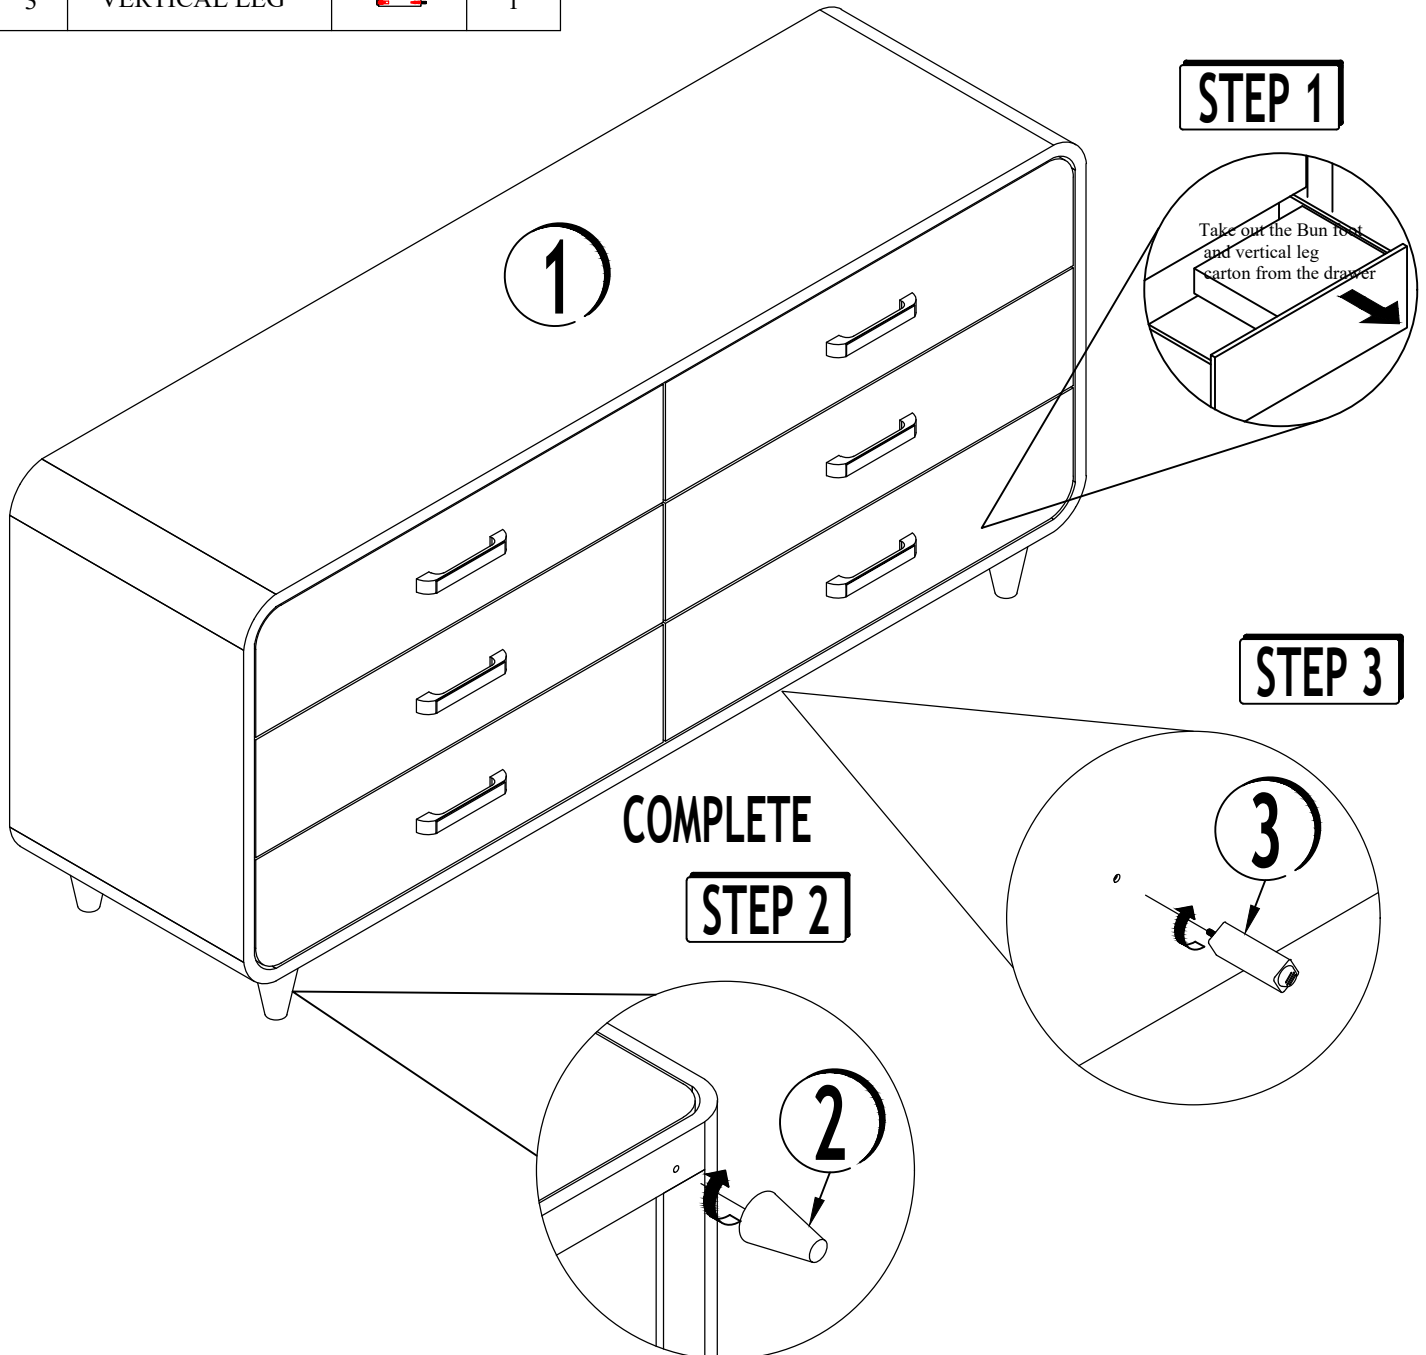

THE ANTI TIPPING HARDWARE IS LOCATED AT THE TOP RIGHT DRAWER OF DRESSER

THE HARDWARE IS LOCATED IN THE PACKING ITEMS