
Assembly Instructions

HELLO KITTY® SLAYSTATION MINI with Silver Leg (DR083)

HELLO KITTY® SLAYSTATION MINI with Golden leg (DR083)

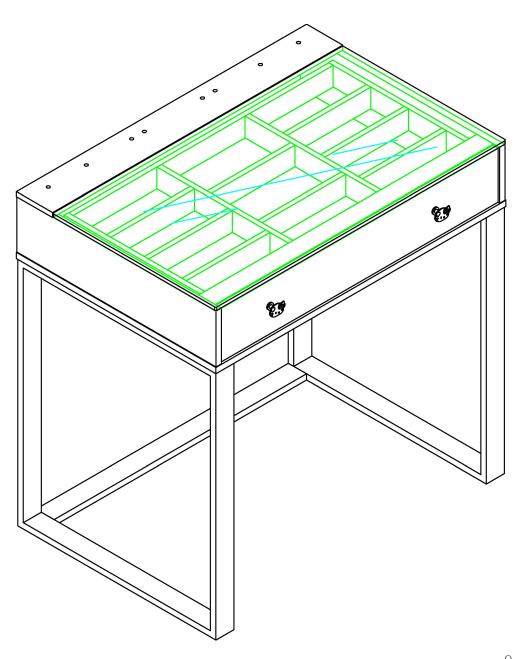




WARNING


FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY

1

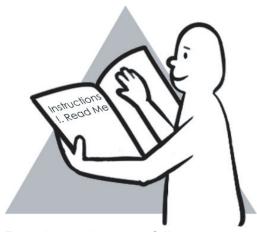


Read Instructions carefully. Check no parts are missing.

2

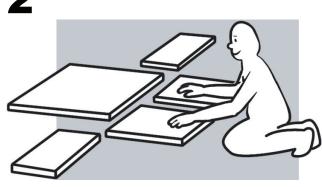


Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.

3

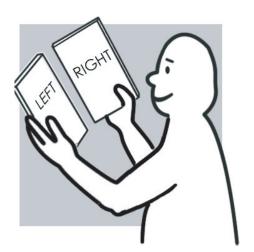


Carefully identify each component, especially those that are similar. The most common mistake is getting things back to front.

4

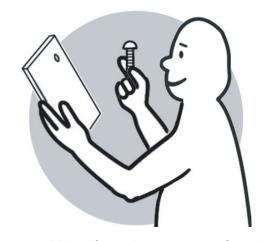


Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

5

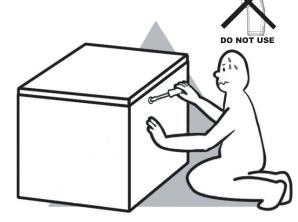

DO NOT fully tighten screws (leave slightly loose). When the item is fully assembled tighten the screws - but do not over tighten.

6

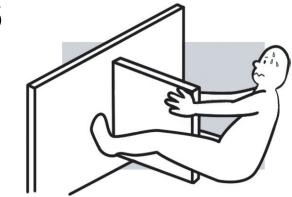

If glue is required DO NOT set until you are certain that the parts belong together.

SECURE YOUR FURNITURE!

Furniture tip-over prevention

Every year many children are injured from furniture tipping onto them. Children are naturally inquisitive and will not always use furniture as it is intended.

A simple way to help prevent furniture tip-over accidents is to secure furniture to the wall. We urge customers to inspect their chests of drawers and dressers to ensure that they are securely anchored to the wall using the restraints provided with this unit.


Tips to Improving Safety

- Attach, mount, bolt or secure furniture to walls and floors.
- Do not put heavy items on top shelves of bookcases.
- Discourage small children from climbing on furniture.
- Do not put tempting items such as favourite toys on top of furniture that encourage children to climb up and reach.
- Do not place unstable furniture near where children play.
- Put locking devices on all drawers to prevent children opening them and using them as steps.


Finished!!

To Adjust your drawer front panels to make the gaps more even (Optional).


Step 1 Adjust the uneven between upper drawer and lower drawer

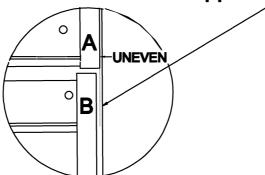

Pull out the drawer and press down the black plastic pivot, then you can completely take out the drawer.

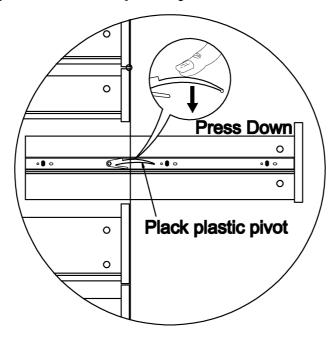


Once the drawer is removed, loosen and realign the screws making sure they are centered within the pre-drilled holes on each side or the side that is uneven. Then refit to ensure the drawer is aligned.

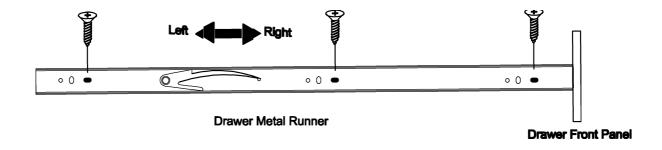


Finished!!

To Adjust your drawer front panels to make the gaps more even (Optional).


Step 1 Adjust the gap between upper drawer and lower drawer

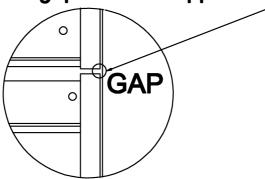

Pull out the drawer and press down the black plastic pivot, then you can completely take out the drawer.

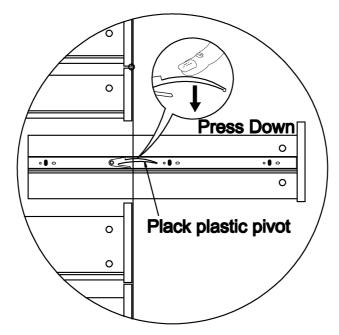



Once the drawer is removed, loosen and realign the screws making sure they are centered within the pre-drilled holes. If screw is at the top of the hole, the gap will get smaller, otherwise the gap will be larger.

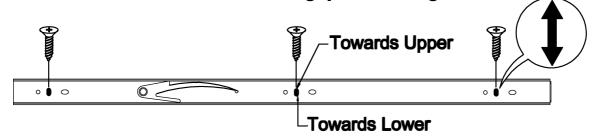


HERE'S HOW



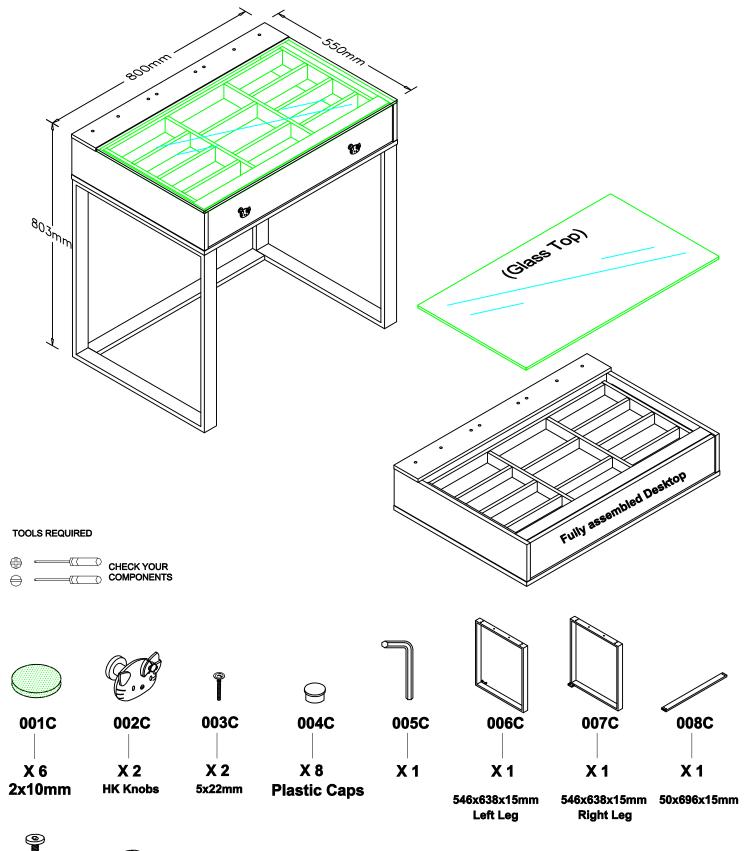

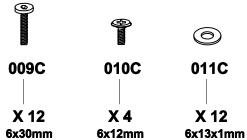

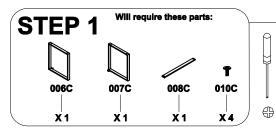

Reminder: Please use the gloves to assemble the metal legs to avoid having the fingerprints or dust on the legs.

