

vtech[®]

Instruction Manual

KidiZoom[®]

CAMERA PIX[™] FX



INTRODUCTION

KidiZoom® Camera Pix™ FX is a fun, durable and easy-to-use digital camera that takes fun photos and videos. You can add amazing Wild Lens effects with the new rotatable lens. There's even a selfie mode that can help take selfie pictures automatically. It's packed with creative tools that help you enhance your photos with a variety of frames, stamps and funny effects. You can also make your very own comic style pictures and stop-motion videos! In addition to all of these features, you can record your voice with funny characters and play four built-in games.

FEATURES



INCLUDED IN THIS PACKAGE

- **KidiZoom® Camera Pix™ FX**
- Wrist strap
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:



Please save this Instruction Manual as it contains important information.

ATTENTION :


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

This toy is only to be connected to equipment bearing either of the following symbols:  or 

Environmental Phenomena

Static electricity may cause the **KidiZoom® Camera Pix™ FX** to malfunction. In cases where **KidiZoom® Camera Pix™ FX** is malfunctioning due to static electricity, reset the system by pressing and holding the **On/Off Button**  for 5 seconds. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

PRODUCT SPECIFICATIONS

| | |
|-----------------------|--|
| Display | 2.4" TFT color LCD |
| Max. Photo Resolution | 16 MP : 4800 x 3600 (Interpolation) 2 MP : 1600 x 1200 0.3 MP: 640 x 480 |

| | |
|---------------------------------|--|
| Video Resolution | 320 x 240 640 x 480 (No effect when using memory card) |
| Video Length Limit | 5 minutes per each recording file |
| Digital Zoom | 4X |
| Focus Range | 1.5 feet - ∞ |
| Internal Memory | 128 MB built-in memory (shared with program data, actual memory available for user storage will be less) |
| File Format | Videos: AVI (Motion JPEG) Photos: Standard Baseline JPEG |
| Connectivity | Built-in USB Type-C port for computer connection |
| Memory Card Format and Capacity | microSD/ microSDHC card (not included) with capacity from 1 GB to 32 GB are recommended |
| Batteries | 4 X AA (AM-3/LR6) batteries (not included) |
| Operating Temperature | 0 - 40°C |

STORAGE CAPACITY FOR REFERENCE

| Media | Quality | Internal Memory | 16 GB Card | 32 GB Card |
|-------------|---------|-----------------|------------|------------|
| Photos | 0.3 MP | 590 | 167,700 | 335,500 |
| | 2 MP | 110 | 31,800 | 63,700 |
| | 16 MP | 70 | 19,900 | 39,800 |
| Video (min) | 320x240 | 3 | 910 | 1,830 |

Note: The above amounts are approximations. The actual amount depends on the shooting environments. The video length limit is 5 minutes per file.

GETTING STARTED

PRODUCT LAYOUT AND BUTTONS

On/Off Button

Press this button to turn the camera **On** or **Off**.

Rotatable Lens

Turn the Rotatable Lens to use Wild Lens effects in Camera or Video modes.

Home Button

Press this button to go to the **Main Menu** or to go back to the previous submenu.

Directional Buttons

Press these buttons to move the cursor and make a selection.

OK Button

Press this button to confirm a choice or action.

Tip: The **OK Button** can also be used to take a photo when in **Camera Mode** and to start or stop recording videos in **Video Mode**.

Delete Button

Press this button to delete a selected file.

Shutter Button

Press this button to take a photo, or to start and stop a video recording.

Zoom Buttons

Press these buttons to zoom in or out.

Tip: The zoom buttons can also be used to set the volume when the zoom function is not available.

Memory Card Slot

Insert a microSD card here for memory expansion.

USB Port

Plug a USB Type-C cable (not included) into this port to connect to your computer.

INSTRUCTIONS



WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.



 
ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.

Battery Removal and Installation

1. Make sure the unit is turned Off.
2. Find the battery cover located on the handles of the camera, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new 1.5V AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

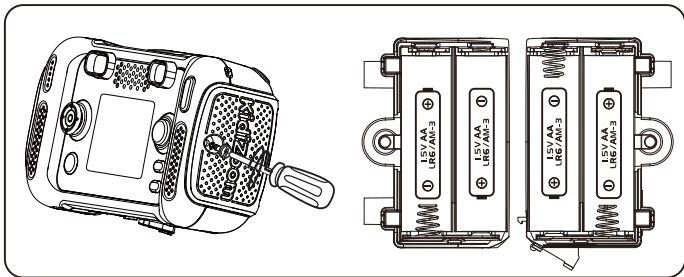

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES :

- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

BATTERY STATUS

When the screen shows a **Low Battery** icon , we recommend installing a fresh set of batteries as soon as possible.

 
When the screen shows a **Batteries Exhausted** icon , the unit will not work properly. New batteries should be inserted before further use.

AUTOMATIC SHUT-OFF

To preserve battery life, **KidiZoom® Camera Pix™ FX** will automatically turn off after 3 minutes without operation in camera previews or 5 minutes in My Cartoon Voice's main screen. In the other modes, the auto-off time is 2 minutes.




MEMORY CARD INSTALLATION

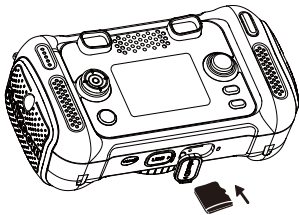- **KidiZoom® Camera Pix™ FX** is compatible with microSD/microSDHC memory cards up to 32 GB.
- Make sure the camera is turned **Off**.
- Locate the memory card slot at the bottom of the camera.
- Pull up the rubber cover.
- Insert the memory card (not included) as illustrated. Once the memory card is detected and can be used, the default memory will be set as the memory card automatically.
- To remove the memory card from the slot, make sure the camera is turned **Off** and push the card once and it will eject.





Note: If a memory card is being used, data stored in the internal memory cannot be seen from the camera unless the memory card is removed. To prevent accidental data loss, make sure you have backed up all important data from your memory card before using.

TO BEGIN USING KIDIZOOM® CAMERA PIX™ FX

- Press the **On/Off Button**  to turn on the camera.
- If it is turned on for the first time, you will be asked to select the language. Next, set the date and time to complete the initial setup. If you wish to change the language, date and time later, please go to Settings.
- Then, it will go directly into **Camera Mode** and you can start taking photos.
- Press the **Home Button**  to go to the Main Menu where you can enter other activities.
- Press the **On/Off Button**  again to turn the unit off.

 
Adjust Camera Speaker Volume

You can adjust the camera speaker's volume from the **Settings** menu's Volume tab. You can also use the **Zoom Buttons**   as a shortcut to adjust the volume when in any other modes where the Zoom function is not available.

WRIST STRAP ATTACHMENT INSTRUCTIONS


Step 1:

Locate the thread loop on the end of the strap. Insert it into the groove behind the bar and then push it through.

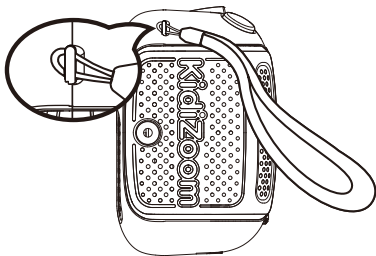


Step 2:

 Feed the end of the strap up through the loop and pull it all the way through.

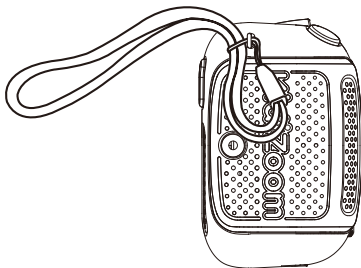

Step 3:

 Make sure the loop is securely tightened around the bar.

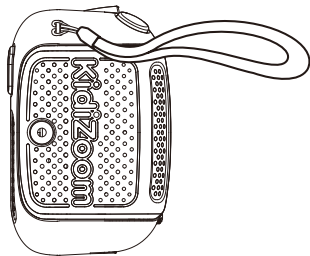

CONNECTING TO A COMPUTER



You can connect the camera's USB port to a PC or Mac computer by using a USB Type-C cable (not included). Once connected, you can transfer files between the camera and computer. Two removable drives called "VTech 5947" and "VT SYSTEM" will appear. "VTech 5947" is for storage of your data, "VT SYSTEM" is for storage of system data and cannot be accessed.

- The photo or video files taken by the camera are in the subfolders such as 100VTECH at the DCIM folder.
- The voice files recorded by the camera are in the VOICE folder.

Note: If there is a memory card in the camera, the removable drive will show the contents of the memory card only.

To transfer photo or video files to the camera, open the DOWNLOAD folder and copy the files into their respective PHOTO or VIDEO subfolders.

Note: Do not transfer photo or video files created by other cameras to **KidiZoom® Camera Pix™ FX**, as their file formats may not be compatible.

To avoid any potential damage to your **KidiZoom® Camera Pix™ FX**:

- When the USB cable (not included) is not connected to the camera, ensure the USB rubber cover is fully covering the USB port of the camera.
- Please ensure the microSD card slot rubber cover of the camera is fitted in place.

Note: Once the camera is connected to your computer, do not insert or remove the memory card and do not disconnect the camera while files are transferring. After you finish, remove the camera by taking the appropriate steps for your system to safely remove hardware from your computer. You can then physically unplug the camera from the computer.

SYSTEM REQUIREMENTS FOR COMPUTER CONNECTION:

Microsoft® Windows® 10 or above / macOS 10.13 or above Operating System




USB Port required

Microsoft® and Windows logos are trademarks of Microsoft Corporation in the United States and other countries. Macintosh and Mac logos are trademarks of Apple Inc. in the United States and other countries. All other trademarks are the property of their respective owners.

USB Type-C and USB-C are registered trademarks of USB Implementers Forum.

MODES

HOME MENU

- Press the **Home Button**  to go to the **Main Menu** to select a mode.
- Press the **Directional Buttons**  to select a mode and press the **OK Button**  to enter the selected mode.



1. CAMERA

In **Camera Mode**, you can take normal photos, selfies or pictures with effects.










- While holding the camera steadily, press the **Shutter Button**  or the **OK Button**  to take a picture.
- Press the **Zoom Buttons**   to use the digital zoom feature.
- To view photos you've taken, press the **Up**  **Directional Button** to enter **Playback Mode**.

Photo Effects

- To add special effects, press the **Left**  or **Right**  **Directional Buttons** to select an effect or press the **Down**  **Directional Button**  to go to the **Photo Effect Menu** and select a photo effect by type.



- You can take selfies automatically by selecting **Selfie Mode**. Stay in front of the camera and wait to hear the beep sounds, and then the camera will count down and take a picture automatically. Please ensure the lighting conditions are good and the camera is in the proper position for face detection to work properly. If the camera does not detect a face, it will still take a picture automatically after a few seconds.
- You can merge a group of pictures by selecting **You & Me / Collage** when in **Camera Mode**. First, press the **Left** ⏪ or **Right** ⏩ **Directional Button** to select a style. Once selected, take pictures of your friends or yourself in each numbered frame. If you want to retake the last frame, just press the **Delete Button** 🗑️.
- In **Burst Mode**, you can take 3 pictures in rapid succession.



Rotatable Lens

You can rotate the lens to use different Wild effect filters to make amazing pictures.



2. VIDEO

In **Video Mode**, press the **Shutter Button** 📷 or the **OK Button** OK to start recording. Press either button again to stop the recording. After you stop recording, press the **OK Button** OK to review your video.



- To add an animated frame, press the **Left** ⏪ or **Right** ⏩ **Directional Button** to scroll through the options before recording.

Note: You cannot change the selected animation frame during recording.

- Press the **Zoom Buttons** 📏 📏 to use the digital zoom feature.
- To view the videos you've taken, press the **Up** ⏶ or **Down** ⏷ **Directional Buttons** once to enter **Playback Mode**.
- You can rotate the lens to use different Wild effect filters to make amazing videos.

3. PLAYBACK



In **Playback Mode**, you can view all the photos and videos you've taken. Press the **Up** (▲) or **Down** (▼) **Directional Buttons** to view the previous or next file. Press the **Zoom Out Button** (📏) to zoom out and view the files in thumbnails. Then, press the **Zoom In Button** (📏) to return to the full-screen browser.

Viewing a Photo

- While viewing a photo, press the **Zoom In Button** (📏) for a closer view of the photo. Press the **Directional Buttons** (⬅️➡️) to pan across the photo. Press the **Zoom Out Button** (📏) to return to smaller magnification or press the **OK Button** (OK) to select viewing size.

Viewing a Video File

- Press the **OK Button** (OK) to start playing a video. While playing a video, press the **Left** (◀️) and **Right** (▶️) **Directional Buttons** to toggle between 1X/2X/4X playing speed.

Viewing a Panoramic Photo

- Press the **OK Button** (OK) to play and press the **Left** (◀️) and **Right** (▶️) **Directional Buttons** to move around the photo.

Deleting a Photo or Video File

- While viewing a photo or video file, press the **Delete Button** (🗑️) to view the **Delete Menu** and either delete the current photo or video or all photos and videos.

4. GAMES



Four games are built into **KidiZoom® Camera Pix™ FX**.

A. Jumping Frog

Help the frog get back home safely! Press the **OK Button** (OK) at the right time and jump all the way home. Collect stars along the way to get extra points.




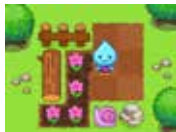 
B. Speedboat Mission

There is trash all over the ocean—let's clean it up! Press the **Up** (▲) or **Down** (▼) **Directional Buttons** to steer the speedboat to avoid obstacles and collect the trash.




C. Fast Flowers

Use your wits to plant the garden in a single pass without stepping on the flowers. Press the **Directional Buttons**  to chart your course. In later levels, the cracked squares of earth allow you to pass over them twice.



D. Photo Puzzle

Solve scrambled puzzles that are based on fun pictures or even your own photos! Press the **Directional Buttons**  to move the tiles and restore the pictures before the timer runs out.










5. CREATIVE TOOLS



My Cartoon Voice



Watch funny characters animate and speak in your voice.


- Press the **Up**  or **Down**  **Directional Buttons**  to select a character. To create a custom avatar, select the last balloon avatar, then choose the Camera icon  to take a new photo or select a photo to create one from your own photos.
- In the main screen, speak to the character to hear it repeat your voice with animation.
- Select the Record icon  to record your voice. After recording, it will show a playlist of your recordings.
- Select the Mood icon  to change the mood of the avatar.
- Select the Playlist icon  to replay or delete your recordings.



NOTE: The cartoon animation and voice-changing effect is not available when the voice file is transferred and played on a computer.

Music Slideshow




Here you can view the photos on your camera as a slideshow with music. Press the **OK button**  to change the settings:


- Background Music: Choose among four songs or turn off music
- Shuffle: On or Off
- Delay: Set time gap between photos

Comic Style



In this mode you can take a photo or select a previous photo and convert it into a comic drawing style. First, take a photo or select a photo previously taken.

Next, the selected photo will be converted into the first comic style; press the **Directional Buttons** 

to select a different comic style or adjust the effect intensity in three levels. Press the **OK button**  to confirm and go to next screen to apply a border on top of your picture to finish the creation.



Panorama Camera




After watching the introduction animation, press the **OK Button**  to go to the Capture Screen and take two to five photos to stitch together for your panoramic photo. You can view your completed panoramic photos in **Playback Mode**.

Photo Editor



In the **Photo Editor**, you can add photo frames, stamps and special effects to a photo. Select a photo and then choose one of the editing functions to begin.

- **Photo Frames** 

Choose this function to add a photo frame to your photo.

- **Stamps** 

Choose this function to add a stamp to your photo; change the size of the stamp; and move the stamp around the picture.

- **Special Effects** 

Choose this function to add a special effect to your photo. For some effects you can change the size and position of the effect.

Note: Generating a special effect on your camera may take more than one minute.

- **Undo** 

Choose this function to undo the last editing operation.

- **Save As** 

Choose this function to save the photo that you just edited as a new file.

Note: The process of saving an edited photo with a special effect may take more than one minute.



Animation Maker


Animation Maker guides you to create your very own photo animations. You will find a demo project when you enter the project selection screen. From this screen you can play an animation, edit the animation, or start a new project.



Note: The demo project is for reference only, it cannot be edited, deleted or saved as video.

- **New Project** 






From the preview screen you can press either the **Shutter Button**  or **OK Button**  to take photos that will be the frames of your animation. After taking a photo a semi-transparent overlay will appear so you can align your next photo. Once you are done taking photos, use the **Directional Buttons** to select the Checkmark icon and review your animation and adjust its settings.


- **Play the animation** 

This is where you can preview the animation you made. While playing the animation, press the **OK Button**  to stop and return to the project selection screen.

• Edit the animation

Here you can further edit the project:

| | |
|---|---|
|  Add frames | Take more photos after the last captured frame (Maximum number of frames = 100) |
|  Play animation | Preview the animation with background music |
|  Save as video | Save the animation as a video (AVI file) to view or share on a computer (It may take a few minutes to save the animation as video) |
|  Advanced options | Change the: <ul style="list-style-type: none">• Animation Speed• Background Music• Frame Overlay On/Off |
|  Return | Return to project selection screen |



Note: To delete a selected frame, press the **Delete Button**  to view the **Delete Menu**, then select “Yes” to confirm and continue.

6. SETTINGS

• Volume

Press the **Up**  or **Down**  **Directional Buttons** to adjust the volume.

• Brightness

Press the **Up**  or **Down**  **Directional Buttons** to adjust the brightness of the display.

• Memory

Here you can review the status of the camera's internal memory or memory card (if inserted). There are two advanced commands in this setting:



Format

This will erase all data in the internal memory or memory card if inserted.



Factory Reset

Factory Reset will erase the contents stored in the internal memory and reset all system settings to factory default, e.g. file index, photo resolution, game level.

After choosing any of these options you will be asked to confirm your choice. Follow the instructions on the screen to confirm the action.

Note: If a memory card is being used, data stored in the internal memory cannot be seen by the camera until the microSD card is removed. If the internal memory of the **KidiZoom® Camera Pix™ FX** is getting full, or when the file indexes are used up, you should back up all the files from the camera's internal memory to your computer. Then, delete the files from the camera's internal memory to free up space.

- **Photo Resolution**

Select the maximum photo resolution. Please refer to the **Product Specifications** and **Storage Capacity** sections for more details.


- **Indoor Light Frequency**

The default value is set according to the A.C. frequency of your region, please leave your camera set to the default value unless you are traveling.

- **Date & Time**

This menu shows the current date and time. If you want to change the setting, press the **OK Button**  and adjust at the next screen.

- **Language**

This menu shows the current language selection. If you want to change the language setting, select your desired language and press the **OK Button**  to confirm your selection.

- **Parental Control**

Follow the on-screen instructions to access these settings to either disable games or set a daily time limit. By default there is no time limit enabled. You can set a time limit of 15, 30, 60 or 90 minutes per day. Once a time limit is reached, games will not be accessible until the following day. When games are disabled, icons will appear in the Main Menu in a slightly different configuration.

Tip: This feature is designed for parents of children who cannot yet read, as access to the setting is granted by following simple, on-screen instructions.

- **FCC Compliance Statement (US English only)**

This page confirms that this product complies with FCC regulations.

CARE & MAINTENANCE

1. Keep the camera clean by wiping it with a slightly damp cloth.
2. Keep the camera out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the camera is not in use for an extended period of time.
4. Do not drop the camera on a hard surface and do not expose it to moisture or immerse it in water.

TROUBLESHOOTING

Go through this section if you experience difficulty in operating **KidiZoom® Camera Pix™ FX**.

| Problem | Solution |
|--------------------------|---|
| Camera stops working | <ol style="list-style-type: none">1. Let the camera sit for a few minutes without batteries, then replace the batteries.2. Turn the unit ON. The unit should now be ready to play again.3. If the unit still does not work, replace the batteries with an entire set of new batteries. |
| Image taken is not clear | <ol style="list-style-type: none">1. Check if the camera is being held steadily.2. Make sure the lighting condition of the shooting environment is good.3. Check to see if the camera lens protection window is clean. |

| | |
|--|--|
| Cannot connect to computer | Check the connections on the USB cable between the camera and the computer, and review the appropriate connection procedure in this manual. |
| Cannot save files | Check if the memory card is full. If there is no memory card inserted, check the KidiZoom® Camera Pix™ FX internal memory. |
| Can't view the downloaded video or photo files | Check if the downloaded files are in the correct directory in the KidiZoom® Camera Pix™ FX . Photos should be put in the DOWNLOAD/PHOTO folder, videos should be put in the DOWNLOAD/VIDEO folder in KidiZoom® Camera Pix™ FX when it is connected to a computer. |
| Screen displays incorrectly | <ol style="list-style-type: none"> 1. Turn off the camera and let it sit for a few minutes without batteries, then replace the batteries. 2. Turn the unit On. The unit should now be ready to play again. 3. If the unit still does not work, install a new set of batteries. |
| Memory card cannot be detected | <ol style="list-style-type: none"> 1. Check if the memory card is correctly inserted. 2. Check to see if the memory card is the supported type. The camera only supports microSD or microSDHC cards. 3. Check to see if the file system of your memory card is FAT or FAT32. KidiZoom® Camera Pix™ FX does not support NTFS or exFAT file systems. You should back up all important data from your memory card and format it in either the FAT or FAT32 file systems before using in your KidiZoom® Camera Pix™ FX. |

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: vtechkids.com

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

HOW TO TAKE A GOOD PHOTO

Are you ready to have fun taking photos? Here are some tips on how to get the best results from your new **KidiZoom® Camera Pix™ FX**.

Step One

First, slide the wrist strap over your hand to help you hold your new camera properly.

Step Two

There are two ways to look at your photo before you take it. You can either use the color LCD screen on the back of your camera, or the dual viewfinders above the screen.

Note: What you see via the dual viewfinders may not be the same as the color LCD screen and the final captured photos.

Step Three

Now you are ready to take some photos! Make sure you hold your camera as still as you can with both hands.

Step Four

Get close to the object you are taking a photo of. Be careful not to get too close or your photo will be blurry. This can take some extra practice so don't worry if you don't get your photo right the first time.

Step Five

If you are taking outdoor photos on a sunny day, stand with the sun behind you.

Have fun!



DISCLAIMER AND LIMITATION OF LIABILITY

VTech[®] Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. **VTech**[®] Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product. **VTech**[®] Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs.

Company: **VTech**[®] Electronics North America, L.L.C.

Address: 1156 W. Shure Drive, Suite 200, Arlington Heights, IL, 60004 USA

Phone: 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful

interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5947
Product Name: KidiZoom® Camera Pix™ FX
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES(B)/NMB(B)

To access the above compliance statement from the product software:

1. In the Main menu, Select the Settings Menu icon .
2. In the Settings menu, select the FCC Compliance statement page 
The FCC Compliance Statement page is only available in the US English version of the program. To change the language version, please refer to the Settings section of this Parents' Guide.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

