Alaterre Furniture

Shaker Cottage End Table



Thank you for purchasing our Shaker Cottage End Table. Assembly of this product requires a screwdriver. We have found it helpful to have a second person present in at least one step of the assembly.

End Table Assembly Instructions

Lay out all parts on a "non-abrasive" surface to avoid scratching furniture.

| NO. | Drawing | Description | Qty. |
|-----|---------|-------------|------|
| A | | Top Unit | 1 |
| В | | Shelf | 1 |
| С | | Posts | 4 |
| D | | Feet | 4 |
| E | 9 | Drawer Knob | 1 |

PARTS

Step 1


Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when first assembling this product.

Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface (like the carton or carpet) to prevent damage to the finish.

Step 3

Lay Top Unit (A) upside down and screw on Posts (C) to underside of Top until tight.

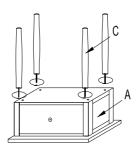

Step 4


Lay Shelf (B) over Posts (C).

Step 5

Screw on Feet (D) through shelf (B) into Leg (C) and tighten. Note: feet have adjustable levelers on bottom to make table level.



Screw on Knob (E) to Drawer Front.

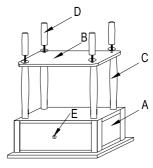

CARE

Clean with mild soap and wipe dry.

REPLACEMENT PARTS

Please do not contact the company you purchased from as we can help you faster.

Order replacement parts and hardware at "alaterrefurniture.com"