

## Detaching and attaching cutting elements

- 1 To detach a cutting element, push upwards against the teeth of the cutting element and take it off the handle (Fig. 3).
- 2 To attach a cutting element, insert the lug of the cutting element into the guiding slot and push the cutting element onto the product (click) (Fig. 4).

## Attaching and detaching guards

- 1 To attach any type of guard onto a cutting element, slide the front part of the guard onto the teeth and push the projection at the back of the guard into the product (click) (Fig. 6).
- 2 To detach any type of guard from the cutting element, pull its back part off the product and then slide it off the cutting element (Fig. 5).

## Switching the product on and off

- 1 Press the on/off button once to switch the product on or off.

## Precision attachments

### Nose and ear trimmer

You can use the nose and ear trimmer to trim your nose hair and ear hair.

- Make sure your nasal passages are clean. Make sure your outer ear channels are clean and free from wax.
- Do not insert the tip more than 0.5cm/3/16in.
- Always clean the attachment after each use.

### Trimming nose hair

- 1 Gently move the tip in and out of your nose while turning it around to remove unwanted hairs (Fig. 7).

### Trimming ear hair

- 1 Slowly move the tip round the ear to remove hairs that stick out beyond the rim of the ear.
- 2 Gently move the tip in and out of the outer ear channel to remove unwanted hairs (Fig. 8).

### Precision trimmer

Use the precision trimmer without a guard to create fine lines and contours around your facial style, close to the skin (to a length of 0.5mm/1/32in).

- 1 Hold the precision trimming head perpendicular to the skin and move the trimming head upwards or downwards with gentle pressure.

## Attachments

### Full-size trimmer

Use the full-size metal trimmer without a guard to trim hair close to the skin or to create clean lines around your beard, neck and sideburns close to the skin (to a length of 0.5mm/1/32in).

- 1 To trim hair close to the skin, place the flat side of the cutting element against your skin and make strokes against the direction of hair growth (Fig. 9).
- 2 For contouring hold the cutting element perpendicular to the skin and move it upwards or downwards with gentle pressure (Fig. 10).

### Trimming guards

When attached to the full-size trimmer, use the 3 beard guards, 1 stubble guard and 3 hair guards to evenly trim your hair.

Guard type	Color	MM	Inch	Guard #
Stubble	Light gray	1mm	1/16"	#1/2
Beard	Dark gray	3mm	1/8"	#1
		5mm	13/64"	#2
Hair	Black	7mm	9/32"	#2/#3
		9mm	23/64"	#3
		12mm	5/32"	#4
		16mm	5/8"	#5

- 1 Attach a guard onto the full-size trimmer.
- 2 Switch on the product.
- 3 For best results, make trimming strokes against the direction of hair growth (Fig 10).

## Cleaning

**Only the attachments can be rinsed under the tap.**

**Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.**

- 1 Switch off the product and disconnect it from the wall outlet.
- 2 Wipe the handle of the product with a dry cloth.
- 3 Remove any guard or attachment from the product.
- 4 Blow out any hair that has accumulated in the hair chamber (Fig. 11).
- 5 Blow out any hair that has accumulated in the attachments and/or guards.

- 6 Clean the attachments and the guards (Fig. 12) under a lukewarm tap after every use.
- 7 Carefully shake off excess water and let all parts dry completely.

**Never dry the trimmer teeth with a towel or tissue, as this may damage the trimmer teeth.**

This product has no other user-serviceable parts. For assistance call 1-800-243-3050.

## Storage


- Be sure the product is turned off. Remove cord from outlet and product before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Store cord in a safe location where it will not be cut or damaged.
- Do not place or store the product where it can fall or be pulled into a tub or sink, water or other liquid.

## Disposal

- This product contains a rechargeable lithium-ion battery which must be disposed of properly. Contact your local town or city officials for battery disposal information. You can also call 1-800-822-8837 or visit [www.call2recycle.org](http://www.call2recycle.org) for battery drop-off locations.
- For assistance, visit our website [www.philips.com/support](http://www.philips.com/support) or call 1-800-243-3050 toll free.
- Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. For recycling information, please contact your local waste management facilities or visit [www.recycle.philips.com](http://www.recycle.philips.com)

## 45-DAY MONEY BACK GUARANTEE

If you are not fully satisfied with your product send the product back and we'll refund you the full purchase price. The product must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price and date of purchase, and the money-back guarantee return authorization form enclosed. We cannot be responsible for lost mail. The product must be postmarked no later than 45 days after the date of purchase. Philips reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price. To obtain money-back guarantee return authorization form, call 1-800-243-3050 for assistance. Delivery of refund check will occur 6-8 weeks after receipt of returned product.

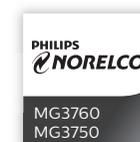

Congratulations on your purchase! Register your product and get support at [www.norelco.com/register](http://www.norelco.com/register)



## Full Two-Year Warranty

Philips Electronics North America Corporation warrants this new product (except cutters and guards) against product defects for two years from the date of purchase, and agrees to replace any defective product without charge. **IMPORTANT:** This warranty does not cover damage resulting from accident, misuse, lack of reasonable care. **NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES**

Manufactured for:  
Philips Consumer Lifestyle  
A division of Philips Electronics  
North America Corporation  
P.O. Box 10313, Stamford, CT 06904

This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco is a registered trademark of Philips Electronics North America Corporation.

PHILIPS is a registered trademark of Koninklijke Philips N.V.

©2016 Philips Electronics North America Corporation. All rights reserved.

[www.philips.com](http://www.philips.com)

4222.002.8672.3

## ENGLISH

# IMPORTANT SAFETY INSTRUCTIONS

When using an electric product, basic precautions should always be followed, including the following:

**Read all instructions before using this product.**

## DANGER

**To reduce the risk of electric shock:**

- Do not reach for a corded product that has fallen into water. Unplug immediately.
- Use the product only in dry condition. Do not use the product while bathing or in a shower.
- Do not place or store the product where it can fall or be pulled into a tub or sink. Do not place or drop the product into water or other liquid.
- Always unplug this product from the electrical outlet immediately after use, except when the product is (re)charging.
- Unplug and remove power supply cord from the product before cleaning.
- The batteries used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

## WARNING

**To reduce the risk of burns, fire, electric shock, or injury to persons:**

- Close supervision is required when this appliance is used by, on, or near children, or persons with limited physical, sensory, or mental capabilities or invalids.
- Use this product for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
- Never operate this product if it has a damaged cord or charging plug, if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in. For assistance call 1-800-243-3050.

- Keep the product, cord, charging plug and any attachments away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use the adapter in or near a power outlet that contains an electric air freshener to prevent damage to the adapter.
- Do not operate, charge, clean or plug in product outdoors where aerosol (spray) products are being used or where oxygen is being administered.
- Always check cutters, cutting unit and guards before using the product. Do not use the product if cutters, cutting unit or guards are damaged, as injury may occur.
- Always attach plug to product first, then to outlet. To disconnect, turn on/off switch to „OFF“ position, then remove plug from outlet.
- To prevent possible damage to the cord, do not wrap cord around the product.
- Never put the product in direct sunlight or store at a temperature above 140°F (60°C).
- Keep the cord dry at all times. Do not handle with wet hands.
- Never immerse the product in water or rinse under the tap.
- This product is for use on human hair (beard, moustache and sideburns) only. Do not use the product for any other purpose.
- Always store the product, attachments and power plug in a moisture-free area. Make sure the cord is disconnected from the product.
- Do not attempt to open the product to remove/replace the battery.
- Only use the power plug supplied with the product.

## SAVE THESE INSTRUCTIONS

**IMPORTANT:** The power plug contains a transformer. Do not cut off the power plug to replace it with another plug, as this will cause a hazardous condition.

### Assistance

For assistance, visit our website: [www.philips.com/support](http://www.philips.com/support) or call toll free 1-800-243-3050. Online information is available 24 hours a day, 7 days a week.

### General description (Fig. 1)

- 1 Nose and ear trimmer
- 2 Precision trimmer
- 3 Full size trimmer
- 4 On/off button
- 5 Handle
- 6 Socket for small plug
- 7 Beard guard (7mm/9/32in)
- 8 Beard guard (5mm/3/16in)
- 9 Beard guard (3mm/1/8in)
- 10 Stubble guard (1mm/3/64in)
- 11 Hair guard (9mm/3/8in)
- 12 Hair guard (12mm/15/32in)
- 13 Hair guard (16mm/21/32in)
- 14 Storage pouch
- 15 Power plug
- 16 Small plug

### Charging

It takes approximately 8 hours to fully charge the product. When the product is fully charged, it has an operating time of up to 75 minutes (MG3760) or 60 minutes (MG3750).

- Charging, recharging, or using the product at temperatures below 40°F (4,5°C) or higher than 95°F (35°C) adversely affects lifespan of the battery.
- If the product is subjected to a major change in temperature, pressure or humidity, let the product acclimatize for 30 minutes before using.

- 1 Switch off the product.
- 2 Put the small plug in the product and put the power plug in the wall outlet (Fig. 2).
- 3 After charging, remove the power plug from the wall outlet and pull the small plug out of the product.

### Note:

- When the battery is empty, you need to charge the product for 15 minutes before you can turn it on. At this point, the battery contains enough energy for up to 5 minutes of trimming
- An adapter plug may be necessary for cord usage in some foreign countries. Use an attachment plug adapter of the proper configuration for power outlet.

### Using the product

**Always check the product before you use it. Do not use the product if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.**

Note: This product can only be used without cord.

- Use this product for its intended household use as described in this manual.
- For hygienic reasons, the product should only be used by one person.
- Trimming is easier when the skin and hair are dry.

