

9. This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury and electrical shock it should not be played with or placed where small children and pets can reach it.


STORAGE:

- (1) Unplug power source from the wall outlet and remove all ornaments and decorations.
- (2) Unplug each section.
- (3) Gently lift off the tree top and remove the bottom section from the tree stand. Carefully place the tree in its box and tape it shut. DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100° F.

TROUBLE SHOOTING INSTRUCTIONS

If Lights Do Not Work:


1. If the bulbs are non-replaceable. Please check the following:
 - Disconnect the set from the mains.
 - Check the adapter is secured in place.
 - Check the connectors have been connected between each tree sections.
 - If your product includes floor switch, check the floor switch has been connected to the adapter.
2. If the bulbs are replaceable. Please check the following:
 - Disconnect the set from the mains.
 - Check the adapter is secured in place (if available).
 - Check the connectors have been connected between each tree sections.
 - Check whether all bulbs are tightly inserted into lamp holders and replace any missing or broken bulbs.
 - Check the light string fuse (if available) in the section plug that is out, but unplug garland first. If the fuse is blown (see if wire inside is intact or glass is blown). Replace the blown fuse following the diagram. There is a spare fuse included for easy replacement.

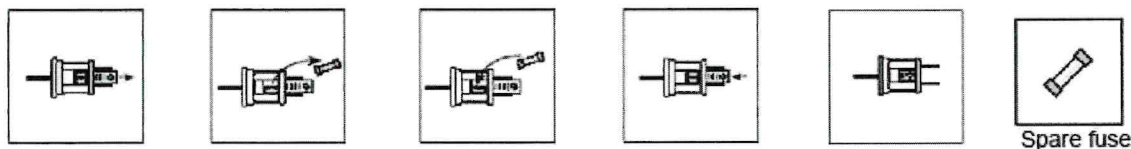

If a bulb does not work:

First remove the bulb and make sure the wires are on either side of the bulb adaptor so that they will contact with the brass inside the lamp holders and reinsert.

If bulb still does not light, it is blown, remove the bulb and replace only with the supplied replacement bulbs following the diagram below.

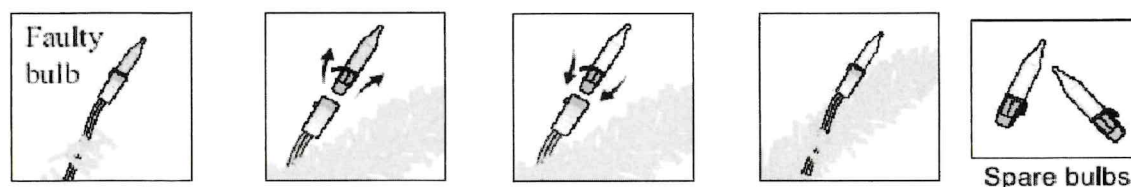

FLAME RETARDANT

MADE IN CHINA