 


Getting started
with your

side-by-side refrigerator



Before you start



Before starting the refrigerator

Remove tape and glue residue from surfaces before turning on the refrigerator. Choose a place that is near a grounded electrical outlet, allowing for clearances for ease of installation, proper circulation, and plumbing and electrical connections. After you remove all of the package materials, clean the inside of your refrigerator before using it. See **CARE AND CLEANING** in your Use & Care Manual.

Set your controls

 
This refrigerator is designed to operate at 37°F refrigerator/0°F freezer. Temperatures should stabilize within 24 hours of installation.

To maintain temperatures, a fan circulates air in the refrigerator and freezer compartments. For good circulation, do not block cold air vents with food items.

You're in control



Your display

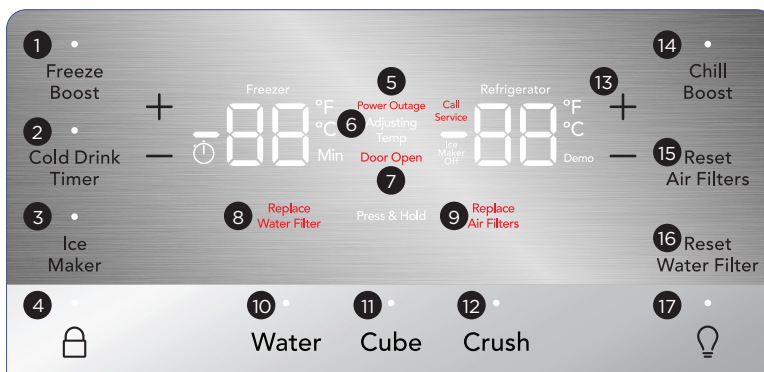

1 Freeze Boost (on/off) activates a faster rate for freezing food in the freezer.

2 Cold Drink Timer quickly chills a drink inside the freezer compartment.

3 Ice Maker
Press and hold for 3 seconds to turn the ice maker on/off.

4 The lock button can be used to lock the display preventing it from being used in certain situations.

5 Power Outage will illuminate once power has been restored, and a tone will sound.

6 Adjusting Temp
Press either the + or - to adjust to desired temperature setting.
Freezer temp
Control temperatures range from -6°F / -21°C to +4°F / -15°C.
Refrigerator temp
The Control temperature ranges from +33°F / +1°C to +43°F / +7°C.

7 Door Open
If a door is left open for 5 minutes or more, an alarm will sound and the display will be illuminated until the doors are shut.

8 Replace Water Filter illuminates every 6 months or after 125 gallons of water have been dispensed.

9 Replace Air Filter illuminates every 6 months or when filter needs replacing.

10 Water dispenses water.

11 Cube dispense cubed ice.

12 Crush dispenses crushed ice.

13 °F/°C toggles between Fahrenheit (°F) and Celsius (°C)

14 Chill Boost is a faster rate for chilling food in the refrigerator compartment.

15 Air Filter shows the current status of the air filter (**Good**, **Order**, or **Replace**).

16 Water Filter shows the current status of the water filter (**Good**, **Order**, or **Replace**).

17 Toggles dispenser light On and Off.



Quick care



 
A little love goes a long way

Keeping your refrigerator clean maintains its appearance and maintains freshness.



Be gentle

Clean with warm water and mild soap. For stainless steel models only, use Frigidaire **ReadyClean™** Stainless Steel Cleaner.



PureAir Ultra II™ Air Filter (some models)

Our **PureAir Ultra II** air filter's active carbon technology optimizes the reduction of refrigerator odors. See **FILTER REPLACEMENT** in your Use & Care Manual for more information on how to order.



PurePour™ Water Filter

Change your water filter every 6 months to ensure great-tasting, safe water. **Water Filter Status** on the front control prompts you to replace the filter after a standard amount of water (125 gal/453 L for **PurePour**) has flowed through the system.



PAULTRA2

FPPWFU01

FAQs

My refrigerator is making unfamiliar sounds. Is this normal?

Your new, high-efficiency unit may introduce unfamiliar sounds. These sounds normally indicate your appliance is operating correctly. See the **NORMAL OPERATING SOUNDS** section of your Use & Care Manual for more information.

Why does my refrigerator run most of the time?

Today's refrigerators are designed with a variable speed compressor to be more energy efficient than previous models. This means your compressor reacts quickly to temperature fluctuations and circulates cold air based off your use and room temperature.

What should I do if my ice maker is not making any ice in my refrigerator?

 
If your ice maker is not making any ice, check to see if the ice maker has been inadvertently turned off. Make sure the refrigerator is connected to the water line and/or the water valve is open. If your dispenser will not dispense water, check to see if the water filter is seated properly. Remove and reinstall the water filter until you hear it lock solidly into position. Remember: the freezer needs up to 24 hours to stabilize after plugging it in before it produces ice.

Can I adjust the shelves in my Side-by-Side refrigerator to fit my spacing needs?

Shelves are easily adjusted to suit individual needs. Before adjusting the shelves, remove all food. Shelves are supported by side rails.

To adjust, lift up on the back of the shelf and pull forward.

Replace the shelf by sliding it on top of the formed rails on the side walls of the cabinet until the rear plastic hooks of the shelf lock into the rear of the cabinet liner.

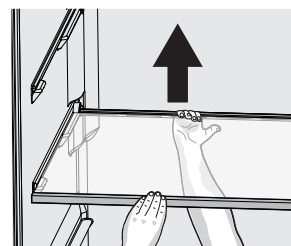

For more information refer to **TROUBLESHOOTING** in the back of your Use & Care Manual.

Let's make it official!

Take the first step to becoming a part of the Frigidaire family by registering your side-by-side refrigerator.

Look for the PhotoregisterSM icon on your registration card.



We are
here
for you



Have a question?



Want help?



Need service?

Scan the QR Code to the right or visit
frigidaire.com • frigidaire.ca
for owner support

