



Instruction Manual

Bark & Bop Dance Party™



INTRODUCTION

Thank you for purchasing the **Bark & Bop Dance Party™**. Get DJ Puppy moving with the microphone, play musical instruments and add scratch disc sound effects for DJ play. Have a pup-tacular dance party!



INCLUDED IN THE PACKAGE

- **Bark & Bop Dance Party™**
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

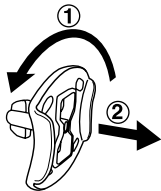


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA batteries (AM-3/LR6) following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

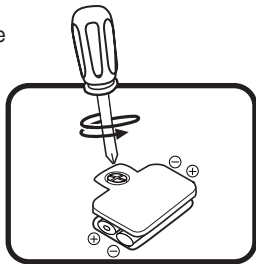

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:



- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

 
NOTE

This product is in try-me mode in the packaging. To activate normal play, turn the unit **Off**, then turn the unit back **On**. If the unit powers down or if the light fades out during play, please install a new set of batteries.

PRODUCT FEATURES

1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On**  position. You will hear fun sounds, a short tune, phrases and songs in the selected modes. To turn the unit **Off**, slide the **On/Off Switch** to the **Off**  position.

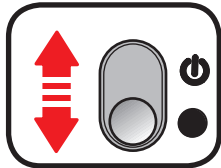

2. Mode Selector

Slide the **Mode Selector** to Music mode 🎵, Learning mode 🔍 or Play mode 🎸, you will hear an opening sequence of sounds, phrases and a song in each mode.



3. Automatic Shut-Off

To preserve battery life, the **Bark & Bop Dance Party**™ will automatically power down after approximately 35 seconds without input. The unit can be turned On again by pressing any button, moving the joystick or turning the disc.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Light-Up Instrument Buttons

Press the **Light-Up Instrument Buttons** to hear short instrument songs, tunes and melodies in Music mode, learn the names and sounds of instruments in Learn mode and play with instrument sounds by changing the sound of the melodies in Play mode. The lights will flash with the sound.



2. Microphone Joystick

Move the **Microphone Joystick**, up and down, or side to side to hear music with puppy sounds in Music mode, cute sing-along songs in Learn mode and melodies and phrases in Play mode. Moving the **Joystick** will make puppy swing and dance. The lights will flash with the sound.



3. Turning Disc

Slide the **Turning Disc** to hear fun DJ scratch sounds, music and cute phrases depending on the selected mode.



MELODIES

1. Where Has My Little Dog Gone?
2. Row, Row, Row Your Boat
3. Wheels on the Bus
4. Chopsticks
5. Bingo
6. There Was a Crooked Man
7. Yankee Doodle
8. Little Robin Redbreast
9. Pussy Cat, Pussy Cat
10. Ten in the Bed
11. Do You Know the Muffin Man?
12. Rockin' Robin
13. Give My Regards to Broadway
14. Let Your Hands Tramp! Tramp!
15. Daring Young Man on the Flying Trapeze

SONG LYRICS

Song 1

Play a little jazz on the saxophone,
Glide your fingers across the strings!
Tip-tap, tip-tap on the keys,
Tap the xylophone with all of your might!

Song 2

Did you ever see a puppy, a puppy, a puppy?
Did you ever see a puppy bop and dance to the beat?

Song 3

Get this musical party started!
Hit the keys and groove!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE

If the problem persists, please contact our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5648
Product Name: Bark & Bop Dance Party™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

