


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

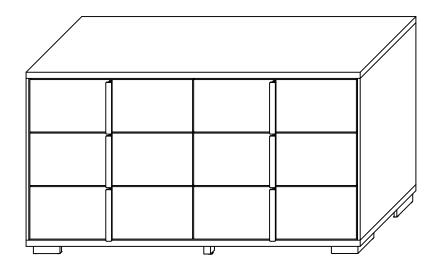

Fine Furniture for every stage of life

222833 Dresser

ITEM: **222833**

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

BOLT

- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A DRESSER 1PC

B LEG 4PCS

C CENTER SUPPORT 1PC

HARDWARE IDENTIFICATION

2 ALLEN WRENCH
(M4 x 110MM - BLK)

1PC


8PCS

ITEM: **222833**


ASSEMBLY INSTRUCTIONS



STEP 1

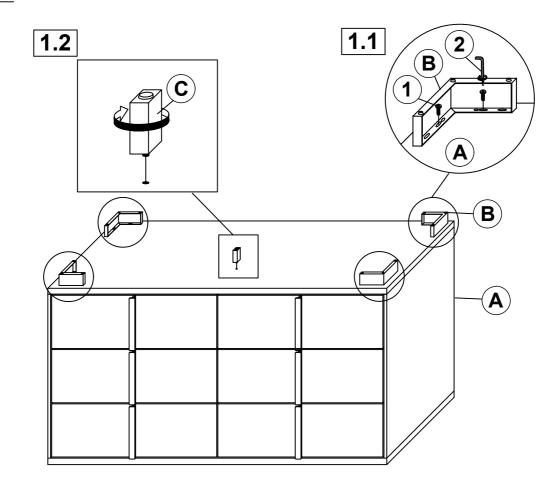

STEP 2 COMPLETE

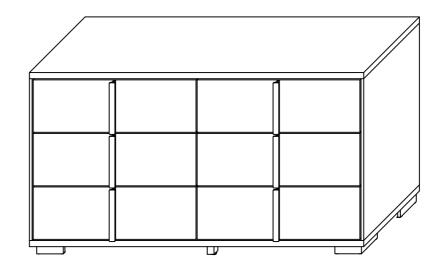




ITEM: **222833**



Inner Size of Drawer : 24.50"W X 12.25"D X 5.00"H X 0.25"T

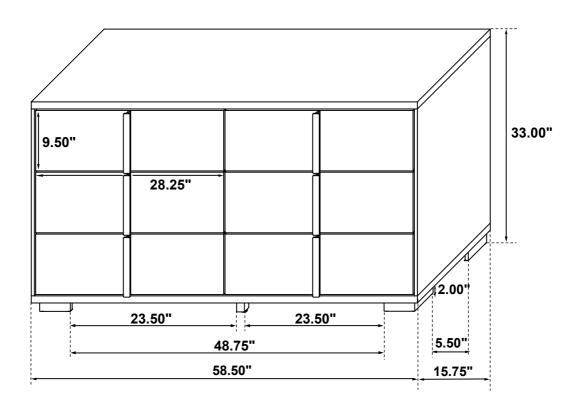

Note: Dimension tolerance ±5%