

vtech[®]

 
Instruction Manual

Sort & Discover Activity Wagon™



INTRODUCTION

Thank you for purchasing the **Sort & Discover Activity Wagon™**! Roll into an adventure while exploring four sides packed with exciting activities that will spark imagination and curiosity. Sit and say hello to animal friends and activities, then pull the wagon along to take the play on the go.

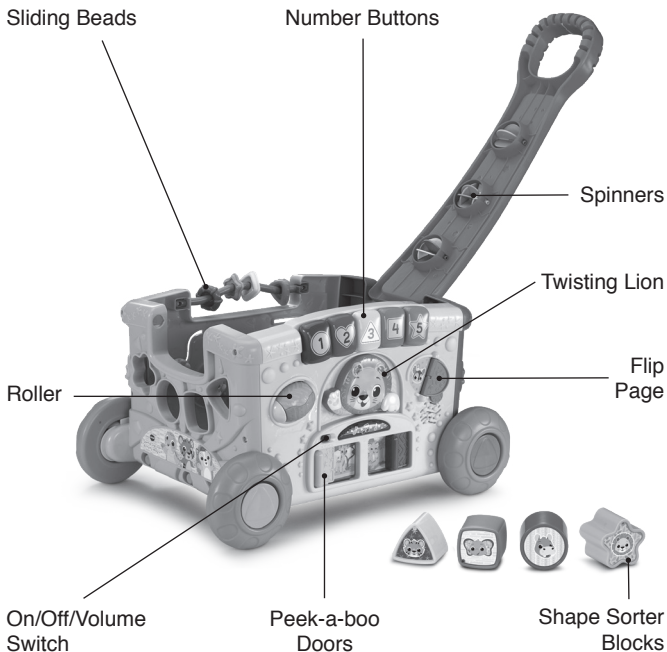

INCLUDED IN THE PACKAGE



 
Electronic Panel



Back Panel




Bottom Panel

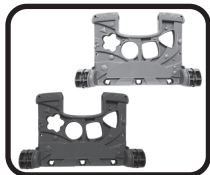

2 Side Panels



 
Handle

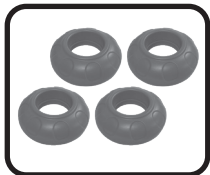

4 Wheels



 4 Shape
Sorter Blocks

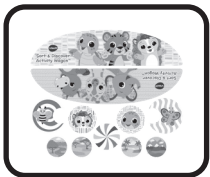

Label Sheet



9 Screws

- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

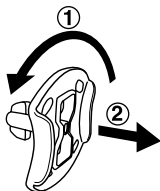


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the **Electronic Panel**. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.

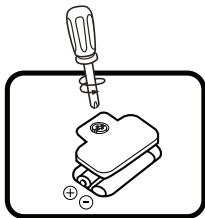

4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.



WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.



CAUTION:

Adult assembly required. This product contains small parts. For your child's safety, do not let your child play with the toy until it is completely assembled.



ATTENTION :

Ce jouet contient des petites pièces. Ce jouet doit être assemblé par un adulte. Pour la sécurité de votre enfant, ne pas le laisser jouer avec le jouet tant que ce dernier n'est pas complètement assemblé par un adulte.

IMPORTANT: BATTERY INFORMATION

 
 
 
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

LABEL APPLICATION

Please securely stick the labels to the activity panels as indicated below:

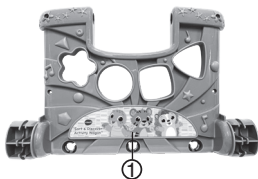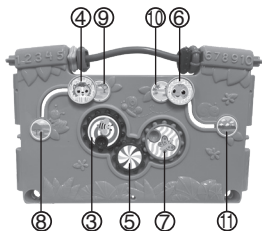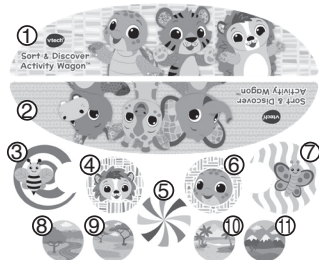


ASSEMBLY INSTRUCTIONS

With the **Sort & Discover Activity Wagon™** safety comes first. To ensure your child's safety, adult assembly is required. For your child's safety, do not let your child play with the toy until it is fully assembled.

1. Attach the 4 **Wheels** to the **Side Panels**. Start by placing the 4 **Wheels** on a flat surface with the rounded side of the wheels facing down. Align the **Side Panels** above the **Wheels** and insert the **Wheel Supports** into the **Wheels**, pressing firmly until you hear two clicks. Ensure the **Wheels** are flush against the **Supports** as shown in the image below, and that they roll smoothly.



 2. To assemble the sides, make sure the VTech® logo side of the **Bottom Panel** is facing up. Connect the **Front Panel** and the **Back Panel** to the **Bottom Panel** first. Next, connect the two **Side Panels** to the **Bottom Panel**. You will hear the pieces click together when inserted correctly. Use the 9 **Screws** to secure the panels together.

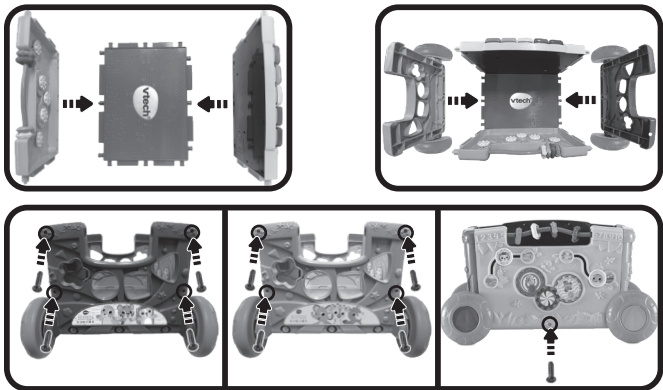

3. Connect the **Handle** to the **Side Panels**. Push the **Handle** down until you hear the **Handle** click into place.



PRODUCT FEATURES

1. On/Off/Volume Switch

To turn the unit **On**, slide the **On/Off/Volume** to the Low volume (speaker icon with two lines) or the High volume (speaker icon with three lines) position. You will hear a song and phrases. To turn the unit **Off**, slide the **On/Off/Volume** to the **Off** (dot icon) position.



2. Automatic Shut-Off

To preserve battery life, the **Sort & Discover Activity Wagon™** will automatically shut down after approximately 30 seconds without input. The unit can be turned on again by interacting with any of the features on the **Electronic Panel**.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Number Buttons

Press the **Number Buttons** to hear numbers, colors, shapes and melodies. The light will flash with the sound.



2. Roller

Spin the **Roller** to hear fun sounds and short tunes. When a short tune is playing, roll the **Roller** again quickly to speed up the short tune. The light will flash with the sound.



 
3. Twisting Lion

Twist the **Twisting Lion** to hear cute phrases, sounds, songs and music. The light will flash with the sound.




4. Flip Page

Turn the **Flip Page** to hear the animals identified, short tunes and playful sounds. The light will flash with the sound.

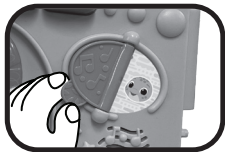

5. Peek-a-boo Doors

 Slide the **Peek-a-boo Doors** to learn about the animals, hear sounds and short tunes. The light will flash with the sound.

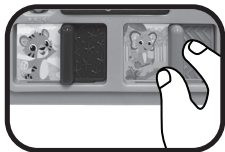


6. Motion Sensor

Push or pull the wagon to activate the **Motion Sensor** to hear a phrase, fun sounds and short tunes.

7. Shape Sorting

 For added fun, slide the **Shape Sorter Blocks** into the matching slots on either end of the wagon.

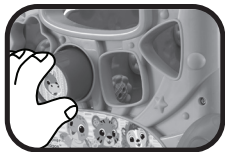

MELODIES

1. Alphabet Song
2. A-Tisket, A-Tasket
3. Bingo
4. The Entertainer
5. Girls and Boys Come Out to Play
6. Hey Diddle Diddle
7. Hickory, Dickory, Dock
8. Hot Cross Buns
9. Humpty Dumpty
10. Little Bo-Peep
11. Mary Had a Little Lamb
12. Old MacDonald
13. On Top of Old Smokey
14. Row, Row, Row Your Boat
15. Skip to My Lou
16. Teddy Bears' Picnic
17. Toyland
18. The Wheels on the Bus

SONG LYRICS

Song 1

We're going on an adventure,
Can you see any animals?
Spin or slide, play peek-a-boo,
There's so many animals to see.

Song 2

Fill up the wagon, I'm ready to play.
I wonder what we'll find on our journey today.
Push me or pull me,
What will we see?

Song 3

1, 2, 3, 4, 5!
My wheels roll round and round.
5, 4, 3, 2, 1!
There's so much to see and explore.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5685
Product Name: Sort & Discover Activity Wagon™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

