


# COYOTE

## Coyote Stainless Flat Top Grill Use & Care Manual

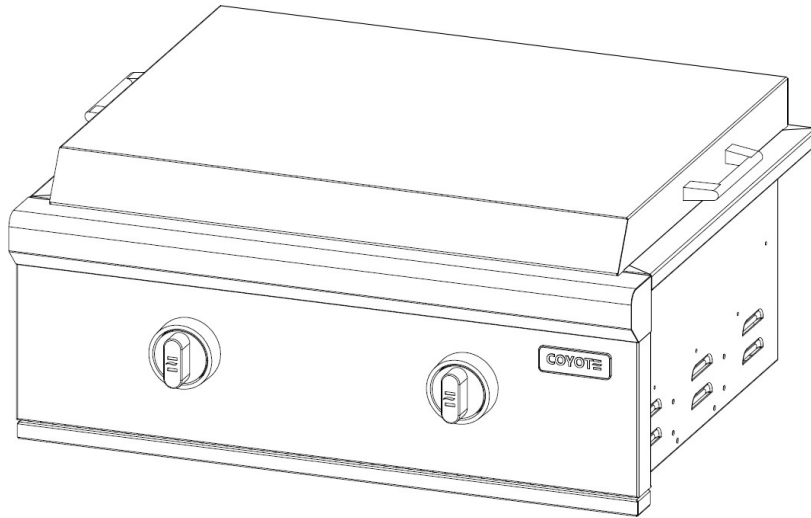

### 30" Flat Top Grill Propane Model No: C3FTG30LP Natural Gas Model No: C3FTG30NG

#### FOR OUTDOOR USE ONLY

Conforms to ANSI STD Z21.58  
Certified to CSA STD 1.6 Outdoor Cooking Gas Appliances  
CSA/ANSI Z21.58:22-CSA1.6:22 Outdoor Cooking Gas Appliances

**IMPORTANT:** Read all instructions and warnings carefully before using this product. Like any outdoor grill, using this product involves potential risks from high temperatures and exposure to smoke and fumes. Please exercise caution and common sense to ensure safe operation.

- **For the Installer or Assembler:** Leave this manual with the grill for the consumer's future reference.
- **For the Consumer:** Retain this manual for future reference as it contains essential warnings and instructions.



**COYOTE OUTDOOR LIVING, INC.**

Scan QR Code for brief  
safety and installation  
video.



## Welcome & Congratulations!

Congratulations on purchasing a **Coyote Outdoor Living Gas Grill**. You have chosen a high-quality, innovative, and stylish product from a company dedicated to enhancing your outdoor cooking experience. We are thrilled to welcome you to the **Coyote family!**

### Get Started

- **Register Your Grill:** Please register your grill at [www.CoyoteOutdoor.com](http://www.CoyoteOutdoor.com). Registration ensures you receive updates and personalized support for your grill.
- **Need Assistance:** If you have any questions, please call our Customer Support Team at **855-520-1559**. We are here to help.

### **Read, Save, and Follow the Instructions**

For optimal performance and longevity of your grill:

- Carefully **read this manual** to understand how to install, operate, and maintain your grill.
- Always **obey all warnings and instructions** outlined in this manual.

This manual provides specific operating instructions for your gas grill model. While it covers most scenarios, applying common sense and exercising caution when installing, using, or maintaining your appliance is essential.

### **Need a Replacement Manual?**

1. **Download a replacement** at [www.CoyoteOutdoor.com](http://www.CoyoteOutdoor.com)
2. **Contact Customer Support** at **855-520-1559** for assistance.



Thank you for choosing **Coyote Outdoor Living**. We are confident you will enjoy cooking with your new gas grill for years!

**Welcome to the Coyote family!**



## Contents

Important Warnings and Safety Instructions .....	4
Limited Warranty .....	6
Locating the Grill .....	9
Gas Requirements.....	12
Operating the Grill .....	19
Care and Maintenance.....	24
Troubleshooting your Grill .....	26
Parts Listing .....	29



### Safety Symbols

 **DANGER** 



**DANGER** indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

 **CAUTION** 

**CAUTION** indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate personal injury, or property damage.



 **WARNING** 

**WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

 **WARNING** 



**FOR OUTDOOR USE ONLY:**

NEVER operate grill in enclosed areas, as this could lead to gas accumulating from a leak, causing an explosion or a carbon monoxide buildup which could result in injury or death. DO NOT use your grill in garages, breezeways, sheds, or any enclosed area. NOT FOR USE BY CHILDREN. If these instructions are ignored, a hazardous fire or explosion could result in physical injury, death, or property damage!

 **DANGER** 

**IF YOU SMELL GAS:**

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. Open Lid.
4. If odor continues, keep away from the appliance, and immediately call your gas supplier or your fire department.

 **WARNING** 

**WARNING:**

1. DO NOT store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.
2. A Liquid Propane (LP) cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

## Important Warnings and Safety Instructions

### General Safety Instructions for Coyote Grills



#### Intended Use

- Coyote grills are designed exclusively for **outdoor use** and must not be used indoors or in enclosed spaces such as garages, sheds, or breezeways.
- These grills are intended for **residential use** by the original purchaser (homeowner) and are unsuitable for commercial applications.
- Do not install the grill on recreational vehicles, portable trailers, boats, or any other moving installation.

#### Fire and Explosion Prevention

- **Ventilation and Combustion:** Use the grill only in open areas with **good ventilation** to prevent toxic fume buildup, fire, or explosion. Never obstruct airflow or ventilation.
- **Keep Area Clear:** Maintain a clean area around the grill, free from flammable liquids and materials such as cleaning fluids, gasoline, or lighter fluid.
- **Wind Conditions:** Avoid using the grill in windy conditions. Use a windbreak if it is in a windy area (e.g., oceanfront or mountaintop). Adhere to clearance guidelines.
- **Gas Compatibility:** Never use natural gas in a grill designed for liquid propane or vice versa.
- **Drip Tray Usage:** Always grill with the drip tray properly in place to prevent grease fires or explosions.

#### Burn and Injury Prevention

- **Supervision:** Never leave the grill unattended while in use.
- **Child and Pet Safety:** Keep children and pets away from the grill, especially when it is hot.
- **Burn Hazards:**
  - Avoid leaning over an open grill, as heat and steam can cause burns.
  - Wear appropriate clothing (avoid loose or flammable fabrics) and use heat-resistant gloves when handling hot surfaces.
  - Remove the lid before lighting the grill.
- **Grease Fires:** Never attempt to extinguish a grease fire with water.
- Use an **ABC fire extinguisher** to put out flames.
- **Handling Grease:** Allow grease to cool before handling or disposing.
- Regularly clean the drip tray to prevent grease buildup.

#### Gas and Leak Safety

1. **Leak Testing:** Only use the grill once a **leak test** has been completed.
2. **Gas Connections:** Turn off the LP cylinder valve and control knobs when the grill is not in use.
3. Keep gas supply lines as short as possible and correctly connect them.
4. **Gas Cylinder Storage:** Never store a spare gas cylinder under or near the grill.
  1. Ensure gas cylinders are stored upright and away from heat sources or enclosed areas.
5. **Unregulated Gas Lines:** Never connect an unregulated gas line to the grill, as it can cause excessive heat, fire, or damage.

### Operation and Maintenance

- **Use Only Approved Accessories.**
- Do not use lighter fluid or other accelerants in a gas grill.
- **Electrical Safety:** Keep electrical cords away from water and hot surfaces.
- Use only a Ground Fault Interrupter (GFI)-protected circuit for outdoor cooking appliances.
- **Moving the Grill:** Never move it while it is hot or in use.
- **Container Safety:** Never heat unopened glass or metal containers on the grill, as pressure buildup may cause the container to burst.
- **Regular Maintenance:** Inspect the grill regularly for grease buildup, leaks, or signs of wear.
- Only a qualified technician should perform repairs or replacements.

### Emergency Procedures

- **Burner Outages:** If a burner goes out, turn all control knobs to the **OFF** position and let the grill air out for minutes before attempting to relight.
- **Fire Precautions:** Always have an **ABC fire extinguisher** nearby and accessible when using the grill.

### Additional Guidelines

- **Alcohol and Drug Use:** Never operate the grill under the influence of drugs or alcohol.
- **Clearance Requirements:** Adhere to clearance guidelines specified in the user manual to ensure proper ventilation and safe operation.
- **Proper Shutoff:** Turn off the LP cylinder tank valve and ensure all control knobs are in the **OFF** position after use.

### Key Reminders

- Keep the grill in a well-ventilated outdoor area, free of combustible materials.
- Never leave the grill unattended while cooking.
- Follow all maintenance and safety guidelines to ensure safe and optimal operation.



DO NOT RELY JUST ON THIS SAFETY SECTION. USE CAUTION AND COMMON SENSE AT ALL TIMES.  
PLEASE READ THE REST OF THIS MANUAL CAREFULLY FOR OTHER IMPORTANT SAFETY WARNINGS.

**CALIFORNIA PROPOSITION 65 - WARNING:** This product can expose you to Carbon Monoxide, which is on the list of substances known by the state of California to cause cancer, birth defects or reproductive harm. For more information go to: [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov). California law requires businesses to warn customers of potential exposure to such substances. To minimize exposure to these substances, always operate this unit according to the Use and Care Manual, ensuring you provide good ventilation when cooking with gas.

## Limited Warranty

### Coyote Outdoor Living, Inc. Limited Warranty

#### General Terms

To the maximum extent permitted by law, this **Limited Warranty** and the remedies outlined herein are **exclusive** and supersede all other warranties, whether oral or written, express or implied. **Coyote Outdoor Living, Inc.** expressly disclaims any implied warranties, including but not limited to warranties of **merchantability** and **fitness for a particular purpose**.

This warranty is provided to the **original purchaser** at the original delivery site with proof of purchase and applies only to **residential use**. The warranty covers defects in workmanship and materials under regular residential use for the specified periods outlined below. It is **non-transferable** and does not apply to any grill used in a **commercial setting**. Surface corrosion, scratches, discoloration, and other cosmetic issues arising from regular use are explicitly excluded.

#### Warranty Coverage Periods

##### Lifetime (no rust or burn-through)

- Griddle Plate
- Stainless Steel Frame/Housing
- Stainless Steel Burners

##### One Year

- Ignition Systems/Valves
- Electric/Plastic Components

#### Coyote's Obligations

Coyote Outdoor Living, Inc. will repair or replace defective components at its discretion during the warranty period. Replacement or repair is the **exclusive remedy** under this warranty. Liability under this warranty is limited to the cost of the replacement part or repair. **Labor and labor-related charges are not covered**, and customers are responsible for shipping and handling fees for replacement parts.

#### Exclusions

This Limited Warranty does **not** cover:

**Normal wear and tear** or damage caused by:

- Misuse, negligent use, or abuse of the product.
- Improper fuel/gas supply.
- Failure to follow operating instructions.
- Alterations by anyone other than a factory-authorized technician.

**Cosmetic issues**, including but not limited to:

- Scratches, dents, corrosion, or discoloration due to weather, heat, abrasive cleaners, chemical exposure, or pool and spa chemicals.
- Paint loss, surface rust, or stainless-steel discoloration are considered **normal wear and**

- tear.
- **External factors include damage** from accidents, vandalism, flashback or grease fires, and improper installation, maintenance, or service.
- Severe weather events (hail, hurricanes, tornadoes, earthquakes, etc.), terrorism, Acts of God, or exposure to atmospheric chemicals.
- **Inconveniences or damages:** Personal injury, property damage, or any incidental or consequential damage arising from improper use or product failure.

#### **Warranty Claim Procedure**

If you require service or replacement parts for your Coyote Grill, follow these steps:

- **Contact the Warranty Service Center:** Phone: **855-520-1559**
- Email: [support@coyoteoutdoor.com](mailto:support@coyoteoutdoor.com)
- Website: [www.coyoteoutdoor.com](http://www.coyoteoutdoor.com) (Warranty claims can be submitted online.)
- **Provided With Required Information:**
  - Model number.
  - Serial number.
  - Proof of purchase.

Coyote Outdoor may require defective parts to be returned for examination. Customers are responsible for prepaying shipping charges. If the part is deemed defective, Coyote Outdoor will approve the claim and issue replacement parts at no charge. Shipping and handling costs for replacement parts remain the customer's responsibility.

#### **Important Notes**

- **Exclusion of Extended Warranty:** Warranty periods are not extended by any repair or replacement.
- **Customer Responsibility:** The customer is responsible for the proper maintenance and operation of the grill, as outlined in the product manual.
- **Non-Covered Issues:** Damages from misuse, improper cleaning, and exposure to harsh environmental conditions are not covered.


#### **Limitation of Liability**

To the maximum extent permitted by law, Coyote Outdoor Living, Inc. shall not be liable for:

- Incidental or consequential damages.
- Costs of inconvenience, personal injury, or property damage resulting from improper use or product failure.

This Limited Warranty constitutes the sole and exclusive warranty provided by Coyote Outdoor Living, Inc.; no other warranties, express or implied, will apply.

# Grill Models

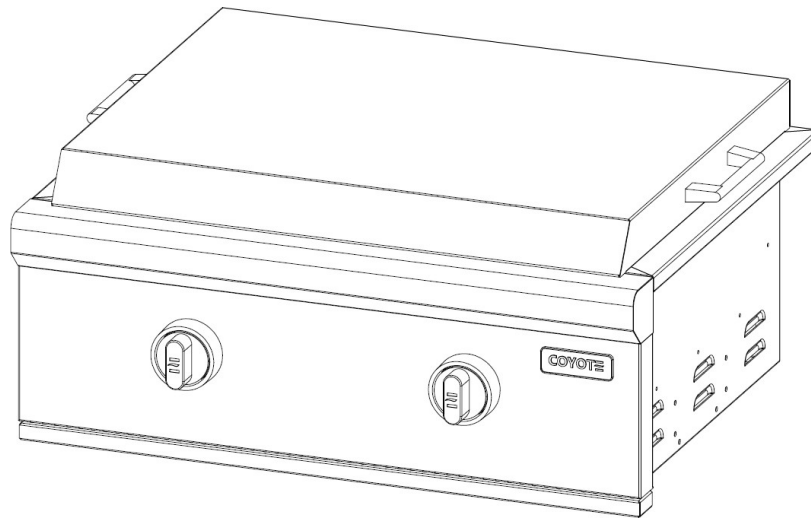

Model	Product (Inches)	BTU/HR	Burner(s)	Knob Lights	Electric Required
C3FTG30LP	30"	34,000	2 Burners	Yes	Yes – Qty 1
C3FTG30NG	30"	34,000	2 Burners	Yes	Yes – Qty 1

- Each burner can produce up to 17,000 BTUs, and each grill has been optimized for fuel efficiency and cooking performance. Please contact Coyote Customer Service for additional information on BTU output.



## Locating the Grill

Check your local building codes for the proper method of installation. In the absence of local codes, this unit should be installed in accordance with the *National Fuel Gas Code No. Z223.1-1998 USA* or *CAN/CGA-8149.1/.2 Natural Gas/Propane Code (Canada)* latest edition or the *National Electrical Code ANSI/NFPA No. 70* or the *Canadian Electrical Code CSA C22.1, 1990* or latest version.

### Installation and Safety Guidelines for Coyote Grills



#### Pre-Installation Recommendations

- **Record Product Information:** Before installing a built-in grill, copy the product details, including the **model number**, **serial number**, and **fuel type** (e.g., natural gas or LP). Store this information in a safe place for future reference.
- **Locate Gas Shut-Off:** If the grill is installed by a professional, ensure they show you the location of the **gas supply shut-off valve**. The valve must be **readily and easily accessible**.
- **Check for Gas Leaks:** If you smell gas, check for leaks using a **soap and water solution**. Never inspect leaks with an open flame.

**Notice:** Professional installation of your Coyote Grill is highly recommended. These instructions provide the necessary measurements for constructing a masonry structure to house your outdoor gas grill.

#### Location Requirements

**Outdoor Use Only:** Always install the grill in a well-ventilated outdoor area. If placing the grill in an enclosed space such as a garage, shed, or breezeway, ensure it is equipped with a properly approved ventilation system.

**Minimum Ambient Operating Temperature: 0°F (-17.8°C)**

#### **Definition of Outdoor Installation:**

- An appliance is considered outdoors if installed with shelter no more inclusive than with walls on three sides but with no overhead cover; all openings must be permanently open; sliding doors, garage doors, windows, or screened openings are not considered permanent openings.
- An appliance is considered to be outdoors if installed with shelter no more inclusive than within a partial enclosure that includes an overhead cover and no more than two sidewalls. The sidewalls may be parallel, as in a breezeway, or at right angles to each other; all openings must be permanently open; sliding doors, garage doors, windows, or screened openings are not considered as permanent openings.
- An appliance is considered to be outdoors if installed with shelter no more inclusive than within a partial enclosure that includes an overhead cover and three sidewalls, as long as 30% or more of the horizontal periphery of the enclosure is permanently open. All openings must be permanently open; sliding doors, garage doors, windows, or screened openings are not considered as permanent openings.

**Smoke Ventilation:** Choose a location where smoke can disperse quickly to avoid inhalation of potentially harmful fumes.

#### Gas Supply Pressure Warnings:

- The outdoor cooking gas appliance and its individual shut-off valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.5 kPa).

The outdoor cooking gas appliance must be isolated from the gas supply piping system by closing its individual manual shut-off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5 kPa).

### **Ventilation Requirements**

Proper ventilation allows heat and gas to escape, ensuring safe and efficient operation. Failure to meet ventilation requirements will void the Coyote warranty and pose a risk of injury or death.

#### **1. Ventilation for Built-in Islands:**

- Islands must have **at least two vents** (optimally four) per cabinet containing gas connections.
- Each vent must be **at least 20 sq. inches** in size and open to outside air.
  - **Propane grills:** Place vents at or below the height of the tank valve, as propane is heavier than air.
  - **Natural gas grills:** Place vents at or above the gas connection height, as natural gas is lighter than air.

#### **2. Wind Considerations:**

- Select a location that accounts for typical wind conditions to prevent heat buildup inside the grill or island.
- Wind can block exhaust and trap heat, causing control panels and knobs to overheat and potentially damage components like ignition systems or rubber gaskets.

#### **3. Optional Wind Guards:**

- **Coyote Wind Guards** can help divert wind over the grill, reducing overheating risks. However, they are not guaranteed to solve ventilation issues in high-wind conditions. These can be purchased from authorized dealers.

### Clearance Requirements



#### 1. **From Non-Combustible Materials:**

- If a **wall or partition** behind the grill blocks ventilation, we recommend maintaining a minimum clearance of **7 inches** from the back of the grill.
- A **2-inch minimum clearance** behind the grill will allow the hood to open fully.
- Allow **6 inches of clearance** on each grill side for the motor and spit handle to be used in a rotisserie.

#### 2. **From Combustible Materials:**

- Maintain at least **24 inches of clearance** from combustible materials below the countertop.
- Maintain at least **15 inches of clearance** from combustible materials behind the grill above the countertop.
- Never locate the grill under combustible structures unless an **approved ventilation hood** is installed:
  - The hood must be UL-certified, designed for outdoor Use, and installed per the manufacturer's specifications.
  - It should be installed at least **30 inches above** the cooking surface and be **6 inches wider than the grill frame** (3 inches on each side).

#### 3. **Insulated Jackets:**

- If the grill is within 24 inches of combustible materials below the countertop, an appropriate Coyote insulated jacket must be used. Failure to use an insulated jacket voids the warranty and compromises safety.

### Built-in Installation

#### 1. **Masonry Installation:**

- A built-in grill can be installed into masonry enclosures without a bottom deck to support the grill. The weight of the grill body is supported by the countertop within the cutout opening.
- Do not enclose the grill and block the ventilation around the grill's body.
- Ensure the **countertop is flat and level** relative to the floor.
- Install **two or more vents**, each at least **20 sq. inches** in size, for proper ventilation:
  - **Propane grills:** Position vents at or below tank valve height.
  - **Natural gas grills:** Position vents at or above the gas connection.

#### 2. **LP Tank Storage:**

- Store LP tanks in a **separate, ventilated compartment** with **bottom vents** for proper airflow.

### High-Elevation Use


- Coyote Grills are optimized for operation at **0-2000 feet** above sea level elevations.
- Performance remains stable between **2000-4000 feet**, though more gas combusts due to reduced oxygen levels.

- Cooking times above **4000 feet** may increase due to air/fuel mixture changes. For questions regarding high-elevation installation, contact **Coyote Customer Support** for guidance.

#### **Key Safety Notes**

- Proper ventilation is critical for safety and performance.
- Always adhere to clearance guidelines to prevent overheating and ensure warranty validity.
- Use Coyote-approved insulated jackets and ventilation hoods for combustible materials or high-risk areas.

Cut out Dimensions Figure A

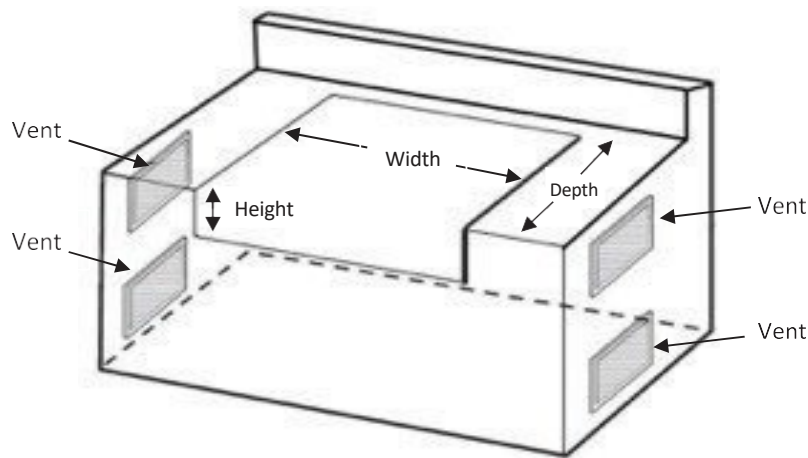

Minimum of 2 vents, *but optimally 4 vents*, per cabinet that has any sort of gas supply or connection. Each vent must be at least 20 sq. in in size and have access to outside/fresh air. Two vents on each side will facilitate and improve airflow and ventilation.

Model	Cutout Dimensions			Overall Dimensions			Total BTU Ratings		Electrical Outlets Needed (120V)
Grills	Height	Width	Depth	Height	Width	Depth	LP	NG	Lights
C3FTG30	10 1/4"	27-1/4"	20 1/2"	13-1/2"	30"	25 1/2"	34,000	34,000	Qty 1

Scan QR Code for brief safety and installation video.



## Gas Requirements



**Never attach an unregulated gas line to the appliance. Connection to an unregulated gas line can cause excessive heat or fire and the risk of property damage, bodily injury, or death.**

### Critical Safety Warnings

1. **Do Not Use Unregulated Gas Lines:**  
Never attach an unregulated gas line to the grill. This can result in excessive heat or fire, which can cause property damage, injury, or death.
2. **Control Knobs:**  
Always ensure the grill control knobs are in the **OFF** position before connecting the grill to a gas source.

### Gas Connection Instructions


1. **Verify Gas Type:** Confirm whether the grill is designed for **natural gas (NG)** or **liquid propane (LP)**. Do not connect an LP grill to a natural gas supply or vice versa.
  - Check the appliance rating label for compatibility with the gas supply.
2. **Gas Supply Regulations:** The installation must comply with **local codes** or, in their absence, adhere to the following:
  - **National Fuel Gas Code (ANSI Z223.1/NFPA 54)**
  - **Natural Gas and Propane Installation Code (CSA B149.1)**
  - **Propane Storage and Handling Code (CSA B149.2)**
  - Use approved pipe sealants resistant to LP gas, but **never use pipe sealants on flare fittings.**
3. **Pre-Operation Check:**
  - Gas valves are preset at the factory for natural gas or propane. Contact your dealer to convert your grill to a different gas type.
  - Always check the rating plate to confirm the gas supply matches the grill's manufacturing specifications.

### Liquid Propane (LP) Gas Guidelines

- **Key Characteristics of Propane:**
  - Propane is flammable, explosive under pressure, heavier than air, and can pool in low areas.
  - Propane is odorless in its natural state; an odorant is added for safety.

### **Safety Precautions:**

- Never use a propane cylinder that is damaged, dented, or rusted.
- Always store the LP cylinder upright, securely fastened, and away from excessive heat.
- Do not store LP cylinders indoors or near gas-burning appliances.

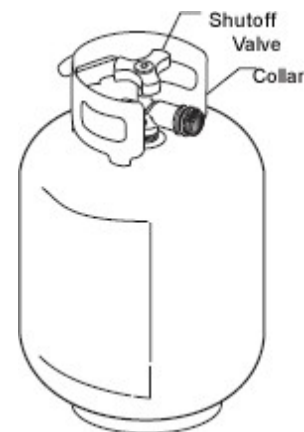

- **Cylinder Specifications:**
  - Use only cylinders **12 inches in diameter and 18 inches high**, with a maximum capacity of **20 lbs. of propane (80% full)**.
  - Ensure cylinders comply with **DOT or CSA B339** standards and include overfilling prevention devices.


#### LP (Propane) Gas Connection Process

1. Ensure the **tank valve** is in the **OFF** position.
2. Confirm all **burner control knobs** are in the **OFF** position.
3. Connect the **regulator** to the tank valve:
  - Insert the regulator inlet into the valve and turn the nut clockwise until tight.
  - Avoid over-tightening.
4. **Purge Air from the System:**
  - Turn the main tank valve on and the burner control valves to **HIGH** for 20 seconds to purge air before lighting.
5. Leak test all connections:
  - Use a soapy water solution to check for leaks. Tighten any connections if bubbles appear.
  - Do not use thread sealant on the brass LP flare fittings.




#### Key Features of the LP Hose and Regulator System

- It prevents gas flow until a positive connection is made.
- Includes a thermal element that shuts off gas during a fire.
- Features a flow-limiting device to restrict gas flow in case of a leak.

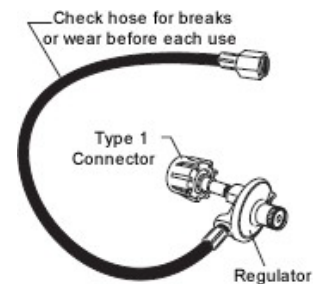

#### Propane Cylinder Handling and Storage

1. **Disconnection:**
  - Turn off all control knobs and the tank valve.
  - Detach the regulator by turning the coupling nut counterclockwise.
  - Install the safety cap onto the LP tank valve.
2. **Storage:**
  - Never store LP tanks in enclosed spaces or vehicles.
  - Keep tanks upright and away from areas where children play.
3. **Filling and Transporting:**
  - Use licensed LP dealers and ensure tanks are filled to no more than **80% capacity**.
  - Always assess new or exchanged tanks for leaks before connecting to the grill.

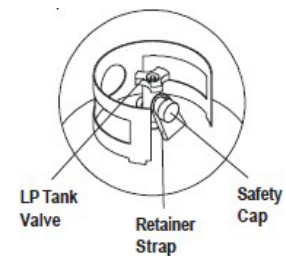

**Important:** Always leak-test the hose and regulator before using the grill.



#### Large-Capacity Propane Systems

If connecting to a large propane tank (e.g., a home's central propane system):

1. Use an **in-line LP regulator** purchased from an authorized dealer or plumbing supply company.
2. Ensure compliance with all state, county, and federal codes.

## In-Line Convertible Regulator

### Model # CINLNREG

Coyote sells a separate inline regulator for whole-home propane systems. This regulator can be used for Natural Gas (NG) or Propane (LP). It comes pre-set for Natural Gas, and you must convert it to Propane by performing the steps below.

### CINLNREG Output Pressure:

- Propane (LP): 10" WC (water column)
- Natural Gas (NG): 4" WC (water column)


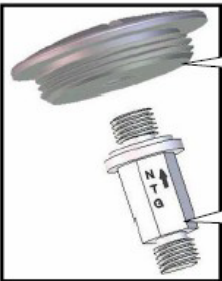


	1. Left icon is NG setting
 <div data-bbox="456 884 561 936">NUT</div> <div data-bbox="456 1031 618 1094">REGULATING POLE</div>	2. Unscrew the regulating pole
	3. Change the regulating pole to other side for LP
	4. Lock the regulating pole as left icon. a. It is necessary to close the lock 5. Lock the nut to regulator (necessary to close the lock)



Image of the regulating pole set to LP.

## Natural Gas Supply and Connection Guidelines

### Natural Gas (NG) Guidelines

- **Key Characteristics of Natural Gas:**
  - Natural gas is flammable, lighter than air, and can dissipate quickly in open spaces.
  - Natural gas is odorless in its natural state; an odorant is added for safety to help detect leaks.
- **Safety Precautions:**
  - Ensure all natural gas connections are correctly installed and regularly inspected for leaks or damage.
  - Never store or use natural gas appliances in confined or poorly ventilated spaces.
  - Always follow local codes and regulations when handling or installing natural gas systems.

### Professional Installation

**Important:** All natural gas connections must be performed by a licensed contractor or a representative from the local gas company.

### Natural Gas Regulator Guidelines

- **Model:** GR120
- **Gas Pressure:** 4" (101.6mm)
- **Maximum Working Pressure:** 1/2 Psig
- **Leak Testing:** Always leak-test the regulator before use. Do not operate the grill without performing this test.
- The regulator should be installed directly to the back of the grill or after the shutoff valve.



### Natural Gas Supply and Connection Instructions

1. Prepare the Grill:
  - Ensure all burner valves are in the "OFF" position.
2. Install Regulator and Shut-Off Valve:
  - All NG grills require a regulator and shut-off valve on the supply line.
3. Seal Pipe Threads:
  - Use gas-rated, outdoor-rated thread sealant on all pipe threads. Flare ends do not require or use sealant.
4. Attach Regulator:
  - Your Coyote NG grill includes a ½" regulator:
  - The regulator has a directional arrow showing the correct gas flow direction (arrow pointing toward the grill).
  - Attach a connection hose (not included) to the "in" side of the regulator, which is ½" MIP.
5. Connect the Hose:
  - Use \*\*½" stainless steel corrugated hoses\*\* for durability.
  - Ensure the hose length and capacity are suitable for your application.
  - Connect the other end of the hose to the shut-off valve.
6. Leak Testing:
  - Test all connections with the soap and water solution as described above.



### **Liability Disclaimer**

Coyote is not responsible for the selection, performance, or workmanship of contractors or installers who connect the natural gas supply to the grill.



### **Gas Conversion Guidelines**

#### **Gas Conversions: Natural Gas (NG) and Propane (LP)**

Coyote grills are designed to be convertible between liquid propane (LP) and natural gas (NG). To ensure proper and safe conversion:

1. **Use the Correct Conversion Kit:**
  - Obtain the appropriate Coyote conversion kit, available through your dealer or Coyote's Customer Support Department.
  - Using non-Coyote kits or orifices will void your grill's warranty.
2. **Hire a Professional:**
  - Gas appliance conversions should be performed by a **Licensed Plumber** or **Certified Installer**.
3. **Orifice Changes:**
  - Every burner on the grill requires a specific orifice for the desired gas type. Do not forget to replace orifices with **rotisserie** or **sear burners**, if applicable.
4. **Valve Change:**
  - For burners with safety valves, the valve must be replaced for conversion.

### **Final Testing and Safety**

- After reassembling the grill, perform a leak test using a soapy water solution on all connections.
- Check each burner, including the rear and sear, for proper ignition and flame performance.


Following these steps and ensuring proper installation, you can safely convert your Coyote grill between propane and natural gas while maintaining its performance and warranty. For additional assistance, contact Coyote Customer Support.

### **Leak Testing Instructions**



**Leak testing is mandatory before using the grill.**

1. Do not smoke or use open flames during the test.
2. Mix a solution of equal parts mild detergent or liquid soap and water.
3. Turn all grill control knobs to **OFF**.
4. Open the LP tank valve completely.
  - If you hear a rushing sound, shut the gas off immediately.
5. Apply the soapy solution to all connection points.
  - If bubbles form, there is a leak. Tighten connections and repeat the test.
6. If leaks persist, contact **Coyote Customer Support** at **855-520-1559**.

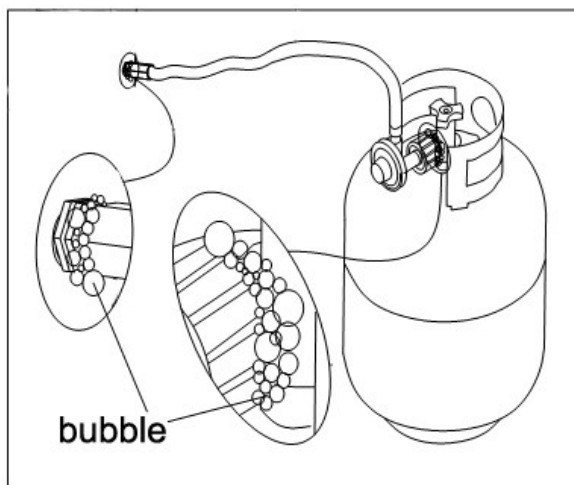

### **Final Safety Notes**

- Never connect the grill to an unregulated gas supply.
- Always ensure the gas supply matches the grill's design type.
- Contact **Coyote Customer Support** at **855-520-1559** with any questions or concerns.

### **Gas Conversions – Natural Gas and Propane**

Coyote grills are designed to support gas conversions, allowing a liquid propane grill to be converted to natural gas or vice versa. However, it is crucial to follow these guidelines to ensure safety and maintain the warranty:

- Obtain the Correct Conversion Kit: Only use a Coyote-brand conversion kit available through your dealer or Coyote's Customer Service Department.
- Professional Installation Recommended: Gas appliance conversions should be performed by a Licensed Plumber or a Certified Installer to ensure proper execution.
- Warranty Protection: Using non-Coyote conversion kits or orifices will void the warranty on your unit.
- Key Reminder: Every burner requires a corresponding orifice change during the conversion process.

### **Steps for Converting Your Coyote Flat Top Griddle**

1. Disassemble Components:
  - Remove the rear flue cover and front grease tray.
2. Detach the Griddle Plate:
  - Remove the three screws securing the griddle plate:
    - One screw is located under the rear flue cover.
    - Two screws are located behind the front grease tray.
  - Lift the griddle plate out of the grill.
3. Remove Burners:
  - Unscrew the rear screw securing each burner.
  - Lift the burner out from the rear, ensuring not to remove it completely to avoid damaging the electrode.  
*(Optional: You may remove the electrode for additional clearance, but this is not necessary for the conversion.)*
4. Replace Orifices:
  - Use a nut driver to remove the orifice from each valve located at the front of the grill where the burners were previously attached.
  - Install the new orifices provided in the conversion kit.
5. Change the Regulator:
  - Replace the regulator on the gas line to match the new fuel source.
6. Reassemble the Grill:
  - Reverse the disassembly steps to reassemble the grill.
7. Check for Leaks:
  - Test all connections using a soapy water solution to ensure there are no gas leaks before operating the grill.

### **Instructions for Connecting the Transformer (LED Lights)**

- The electrical transformer for the LED knob lights connects to the left rear corner of the grill (when viewed from the rear).
- Follow these steps to connect the transformer:
  1. Insert the black male plug into the female socket on the included transformer.
  2. Plug the transformer into a standard 110V outlet.
- Important Note: The LED knob lights will only function when the griddle is connected to a gas source.

If you have any questions or concerns regarding the transformer or LED connection, consult a qualified electrician.

### **Instruction for Connecting the Transformer**



**Transformer**



**Male Plug**



**Complete Connection**

## Operating the Grill

### **DANGER**

- Failure to open the barbecue lid before igniting the burners or to wait at least 5 minutes for gas to dissipate if the barbecue fails to light can lead to an explosive flare-up, posing a serious risk of severe injury or death.

### **WARNING**

- NEVER use the grill if you detect a gas odor.
- NEVER stand with your head, body, or arms over the grill when igniting it.
- ALWAYS inspect the gas hose before use. Replace it immediately if there are signs of excessive wear, abrasion, or cuts. Use only the replacement hose assembly specified by the manufacturer.
- ALWAYS keep the area around the barbecue free from flammable materials such as gasoline, yard debris, or wood.
- ALWAYS check that the airflow through the vent space beneath the grill is unobstructed to ensure safe operation.

## GENERAL RULES

### **WARNING**

#### **NEVER leave the grill unattended while cooking!**

- Ensure the grill has been leak-tested and is placed in a location with adequate ventilation and proper clearance.
- Verify that each burner tube is correctly positioned over its corresponding valve orifice.
- Follow the manual's instructions to ignite the grill burners safely.
- Adjust the heat settings to reach your desired cooking temperature.
- After cooking, allow the grill to cool, wipe away splatters or grease, and clean the drip tray.
- NEVER cover the grill while hot, which may pose a fire hazard.

## First-Time Use: Burning Off Manufacturing Residue

Before cooking for the first time, operate your grill at the **"HIGH" setting** with the hood closed for no more than **5 minutes**. This will remove any residual odors or debris from the manufacturing and shipping process. After this step, your grill is ready for cooking!

## Understanding Your Grill's Valves, Burners

Your grill has **safety valves** that control gas flow to each burner. They are equipped with **thermocouples**, a safety feature to prevent gas flow if the flame goes out. These components, located behind the control knobs, are essential for setting your desired temperature, managing fuel consumption, and ensuring safe operation.

- **Important Reminder:** If a control knob is left on while the burner is unlit, gas can leak through the valve. Always double-check that all knobs are in the **"OFF" position** after using the grill to prevent dangerous gas leaks. Proper use and care of the valves and thermocouples are critical for safe grilling.

Lighting a grill burner with a safety valve equipped with a thermocouple involves a slightly different process than lighting standard burners. The thermocouple is a safety feature attached to the valve, ensuring the gas flow stops if the flame goes out.

### Using the Grill's Built-In Ignition System

1. **Select the Burner to Ignite:**
  - Locate the knob corresponding to the burner you wish to light.
  - **Depress and rotate the knob counterclockwise to the "High" position.** As you turn the knob, you will feel resistance as the spring inside the valve builds energy for the igniter.
  - Once you hear a "click," the igniter has sparked to light the burner.
2. **Mind the Knob Rotation Speed:**
  - Turn the knob steadily—not too fast or too slow:
    - **Too fast:** The gas may not reach the burner in time to meet the spark.
    - **Too slow:** Excess gas can build up, potentially causing a large flash when it ignites.
3. **Hold the Knob to Heat the Thermocouple:**
  - Once the burner ignites, **continue pressing the knob in the "High" position for 6-10 seconds.**
  - Pressing the knob allows the thermocouple to heat up and keep the gas valve open.
  - If the flame goes out when you release the knob, the thermocouple may not be sufficiently heated. Repeat the process.
4. **If the Burner Fails to Ignite:**
  - Try lighting the burner again immediately, being cautious of gas buildup.
  - If the burner does not light after three attempts, turn the knob to the **"Off" position**, open the grill canopy, and let the gas clear for **at least 5 minutes** before trying again.
5. **Persistent Ignition Issues:**
  - If the burner still does not ignite or stays lit, the thermocouple may need adjustment or cleaning. Contact **Coyote Customer Support** for further assistance.

### Key Safety Notes



- **Ventilation:** Always operate the grill in a well-ventilated area and keep the canopy open during ignition.
- **Gas Buildup:** Be cautious of gas buildup. If ignition fails repeatedly, allow time for the gas to dissipate before retrying.
- **Safety Valve Maintenance:** Keep the valve and thermocouple clean and properly aligned with the burner. If the burner struggles to stay lit, the thermocouple attached to the valve may need to be replaced.
- **Professional Assistance:** For persistent issues, do not attempt repairs yourself. Contact your local technician or **Coyote Customer Support** for help.

## Key Safety and Maintenance Notes



1. **Gas Leaks:**
  - Always be vigilant for gas odor (natural gas or propane). Gas leaks are a serious safety concern.
  - If you suspect a leak, immediately shut off the gas supply and inspect the grill.
  - When preparing to light the burners, never stand with your head directly over the grill to prevent possible bodily injury.
2. **Thermocouple Maintenance:**
  - Keep the thermocouples clean and properly aligned with the burners.
3. **Burner Cleaning:**
  - Regularly clean your burners and check the air adjustment screw (Air Venturi) to ensure proper gas flow and combustion.
  - Refer to your manual's **Care and Maintenance** section for detailed cleaning instructions.
4. **Food Safety:**
  - Always practice safe food handling and use a meat thermometer to ensure proper cooking temperatures.
5. **Electrical Safety:**
  - To protect against electric shock, do not immerse cord or plugs in water or other liquid.
  - Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
  - Do not operate any outdoor cooking gas appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact the manufacturer for repair.
  - Do not let the cord hang over the edge of a table or touch hot surfaces.
  - Do not use an outdoor cooking gas appliance for purposes other than intended.
  - When connecting, first connect the plug to the outdoor cooking gas appliance, then plug the appliance into the outlet.
  - Never remove the grounding plug or use it with an adapter of two prongs.
  - Use only extension cords with a three-prong grounding plug, rated for the power of the equipment, and approved for outdoor use with a W-A marking.



## Electrical Grounding Instructions



1. **Transformer Grounding:**
  - The transformer has a **three-prong grounding plug** to protect against electric shock.
  - Insert the plug directly into a **properly grounded three-prong receptacle**.
  - **Do not cut or remove the grounding prong** from the plug, compromising safety.
2. **Grounding Compliance:**
  - The transformer must be grounded per **local codes**.
  - In the absence of local codes, follow the **National Electrical Code (ANSI/NFPA 70-1990)** or the **Canadian Electrical Code (CSA C22.1)**.
3. **Extension Cord Warning:**
  - Do not use an **extension cord** to supply power to the Power Burner. This can result in fire, electrical shock, or personal injury.
  - Never install a neutral or ground circuit fuse, which creates an electrical shock hazard.
  - Avoid grounding the appliance to a gas or hot water pipe.

## **Note**

- The **gradient knob lights** adjust automatically to match the Power Burner's heat settings as the knob is turned.

## Preparing Food for the Grill



Safe food handling and preparation practices are essential to prevent foodborne illnesses.

Always follow these guidelines:

### 1. **Cooking and Preparation:**

- Cook foods thoroughly to kill bacteria, especially if previously thawed or exposed to warm conditions.
- Keep uncooked foods refrigerated until ready to grill.
- Marinate meat in the refrigerator and discard excess marinade—**never reuse it.**

### 2. **Preventing Cross-Contamination:**

- Use **separate plates and utensils** for raw and cooked food.
- Never place cooked food on a plate that previously held raw food.
- Wash all plates, utensils, and surfaces that have encountered raw food before reusing.

### 3. **Food Hygiene:**

- Wash vegetables, seafood, and poultry thoroughly before cooking.
- Store leftovers in the refrigerator within **2 hours** of cooking.

## Flame Adjustment Instructions

### 1. **Review Safety Precautions**

- Familiarize yourself with all safety instructions at the front of this manual.
- Do not smoke while lighting the appliance or checking gas supply connections to avoid the risk of fire or explosion.

### 2. **Check Gas Connections**

- Ensure all gas connections are securely tightened.
- Test for leaks using a soapy water solution. **Never use a flame to check for leaks!**

### 3. **Light the Burners**

- Remove the griddle plate to expose the burners.
- Light the main burners and set them to the **high** setting.

### 4. **Inspect Flame Appearance**

- A proper flame should be mostly **blue**, stable, and not lifting off the burner surface.
- If adjustments are needed:
  - Locate the air shutter near the valve at the end of the burner.
  - Remove the burner from the appliance.
  - Loosen the Phillips head screw securing the air shutter to the burner.
    - If the flame is yellow, **open** the air shutter to increase airflow, creating a bluer flame.
    - If the flame is lifting off the burner surface, **close** the air shutter slightly to reduce airflow.
  - Re-tighten the screw, reinstall the burner, and recheck the flame.
  - Repeat the process, if necessary, until the desired flame appearance is achieved.

### 5. Check Low Flame Setting

- Turn the burners to the **low** setting and observe the flame height.
- The flame should be between **¼ inch and ½ inch** on the low setting.
- To adjust the low flame height:
  - Light the burner on the **low** setting.
  - Remove the knob and knob base.
  - Use a flat-head screwdriver to turn the adjustment screw located beneath the knob on the front of the valve (refer to the diagram below).
  - Adjust until the flame height is within the specified range.

### 6. Final Verification

- Recheck high and low flame settings to ensure proper function and appearance.
- Repeat adjustments as necessary for optimal performance.

**Important Note:** Always thoroughly reassemble and test the appliance after making adjustments to ensure safe and efficient operation.





## Care and Maintenance

### Comprehensive Grill Maintenance and Care Instructions

#### Grease Tray Maintenance

- **Cleaning:** The grease tray should be cleaned periodically to prevent debris and grease buildup.
- **Cooling:** Allow the drip tray to cool completely before cleaning it.
- **Weather Precautions:** Do not leave the grill uncovered during inclement weather. Rainwater can be collected inside the grill, cart, or drip tray.
- If the drip tray is left uncleaned and uncovered, water mixed with grease may overflow, damaging the grill cart.
- **Recommendation:** Clean and store the drip tray after every use.

#### Griddle Cleaning

- **Post-Cooking Cleaning:** Use a barbecue mitt and a griddle scraper after cooking. Exercise caution, as the griddle may be extremely hot.

#### Stainless Steel Care and Maintenance

- **Cleaning Process:**
  1. Allow the grill to cool completely before cleaning.
  2. Wash off dirt and debris with warm water. For tough spots, use a third-party degreaser.
  3. Rinse and dry with a clean towel to prevent water spots or discoloration.
  4. Apply a third-party stainless-steel polish to protect the exterior (do not use it on cooking grates or heat control grids). Follow the Polish manufacturer's instructions.
  5. If discoloration or rust occurs, clean it as above and use polish to restore the surface.
- **Environmental Factors to Consider:**
  - Avoid exposure to mortar, pool chemicals, hard water, salt air, dust, rust particles, and organic matter. If not promptly cleaned, these can cause surface discoloration or corrosion.
  - Do not leave cleaning solutions or sprays containing salt, acid, or alkaline substances on the grill.

#### Annual Grill Housing Cleaning

1. Allow the grill to cool completely and disconnect the gas supply.
2. Cover gas valve orifices with aluminum foil to prevent debris entry.
3. Brush the grill's interior with a stiff wire brush and wash with soapy water.
4. Remove the foil, check orifices for obstructions, and test the electrode spark.
5. Reinstall all components and reconnect the gas supply. Check burner flames for proper operation.

**Important:** Do not line the grill bottom with foil, sand, or absorbent substances, as these can block grease flow and cause a grease fire.

### Maintenance Guidelines

1. Keep the grill area clear of combustible materials and flammable substances.
2. Ensure proper airflow for combustion and ventilation.
3. Check the burner flames regularly—they should be blue and stable, with no yellow tips or excessive noise. Address issues promptly.
4. Clean the appliance and special surfaces with recommended cleaning agents.
5. Inspect and clean burners for insect nests or blockages to prevent fires beneath the grill.

### Avoiding Rust and Scratches

- **Rust Prevention:** Use a **Coyote Grill cover** for protection against contaminants.
- Keep the grill covered during masonry work or near splashing pool chemicals.
- **Scratch Removal:** Use a third-party scratch repair kit to resurface stainless steel, following product instructions carefully.

By following these detailed maintenance and care guidelines, your grill will remain in excellent condition, providing safe and enjoyable cooking experiences for years.



## Troubleshooting your Grill

### General Troubleshooting Guide

Inspect your burners at least once a year or immediately if any of the following conditions occur:

- You smell gas.
- Burner flames appear primarily yellow.
- The grill does not reach the proper cooking temperature.
- Burners produce a snapping or popping noise.
- The grill heats unevenly.

### When to Check for Spiders/Insects

Spiders and insects can obstruct the burner venturi, causing operational issues. Inspect the burners once a year or immediately after experiencing any of the following:

1. The smell of gas combined with yellow flames.
2. The grill does not heat to the expected temperature.
3. The grill heats unevenly.
4. Burners make popping noises.

### Troubleshooting Guide

If the grill is not functioning correctly, use the information below for guidance.

**Safety First:** If you cannot resolve the issue, contact **Coyote Customer Support** at **855-520-1559**.

### The grill will not ignite.

- Ensure the **gas supply** is turned on.
- If using LP gas, verify there is fuel in the tank. Check the gas level.
- Confirm that at least one burner is turned on, allowing up to **5 seconds of gas flow** to ignite.
- Check if the igniter is working. You should hear a snapping sound.
- Check for a spark at the electrodes if there is a snapping sound. (Remove cooking grates and heat control grids to inspect.)
- Ensure the electrode gap is **1/8" to 1/4"** between the electrode and contact point.
- Inspect for loose wire connections to the igniter or electrodes.
- Clear any debris blocking the electrodes.
- If the igniter still does not work, try lighting the grill manually with a lighter.

### Flare-ups

- Check for excess grease or food debris on heat control grids and cooking grates.
- Ensure the drip tray is clean (do not line it with aluminum foil).
- Avoid placing the grill directly in the path of wind.
- **Note: Some flare-ups are normal when cooking greasy foods.**

### Yellow flames

- Check burner air inlets for obstructions, such as debris or insect nests.
- Ensure the grill is not in an overly windy location.

**If the flame blows out on a low setting or uneven heat**

- Inspect the venturi tubes for spider webs or insect nests and clean them thoroughly.
- Preheat the grill on high for **5 minutes** before cooking.
- Ensure the venturi tubes are correctly aligned over the orifices.
- Relocate the grill to a less windy area, especially in cold or windy weather.
- Check for sufficient fuel. Confirm that the cylinder valve is open and that the cylinder contains fuel.

**Low heat on the "HIGH" setting**

- Inspect the fuel hose for kinks or bends.
- Clear dust or debris from the grill area.
- Verify gas supply and pressure.
- Clean the burner and orifice if the issue affects only one burner.

**The grill is too hot.**

- Excess grease buildup may cause grease fires.
- Replace damaged or faulty regulators with factory-authorized parts.
- Lower the cooking temperature setting.

**Flame behind the control panel or knobs.**

- **IMMEDIATELY shut off the cylinder valve and let the grill cool.**
- Inspect venturi tubes for obstructions and clean them.
- Tighten loose connections with a wrench and replace any damaged parts. Perform a leak test before reusing the grill.
- Realign the venturi tubes over the orifices.
- If you cannot find the issue, contact Customer Support.

**Fire at any connection**

- **IMMEDIATELY shut off the cylinder valve and let the grill cool.**
- Tighten connections with a wrench and replace damaged parts. Perform a leak test before using the grill.
- If unresolved, contact Customer Support.

**Important Notes**

- For safety, always inspect burners for blockages or misalignment after extended periods of non-use.
- Always err on the side of caution when dealing with potential gas leaks or malfunctioning equipment.
- **Contact Customer Support:** Call 855-520-1559 for expert assistance with unresolved issues.

### **Controlling Flare-Ups** **WARNING**

Flare-ups are a natural part of grilling meat and contribute to the unique flavor of gas grilling. However, excessive flare-ups caused by grease buildup can overcook food and create safety risks.

Follow these tips to minimize and control flare-ups:

#### **1. Minimizing Flare-Ups:**

- Trim excess fat from meat before cooking.
- Cook fatty meats like chicken or pork on **low heat** or indirectly.
- Ensure the grill is on **level ground**, allowing grease to drain properly through the evacuation hole.


#### **2. Managing Flare-Ups:**

- If a grease fire occurs, **close the hood** and turn off the burners. Wait for the grease to burn out.
- Use caution when reopening the hood, as flare-ups may occur suddenly.

**Never pour water on flames**, which can cause splattering and severe burns.

## Parts Listing

### C3FTG30 Exploded Parts View

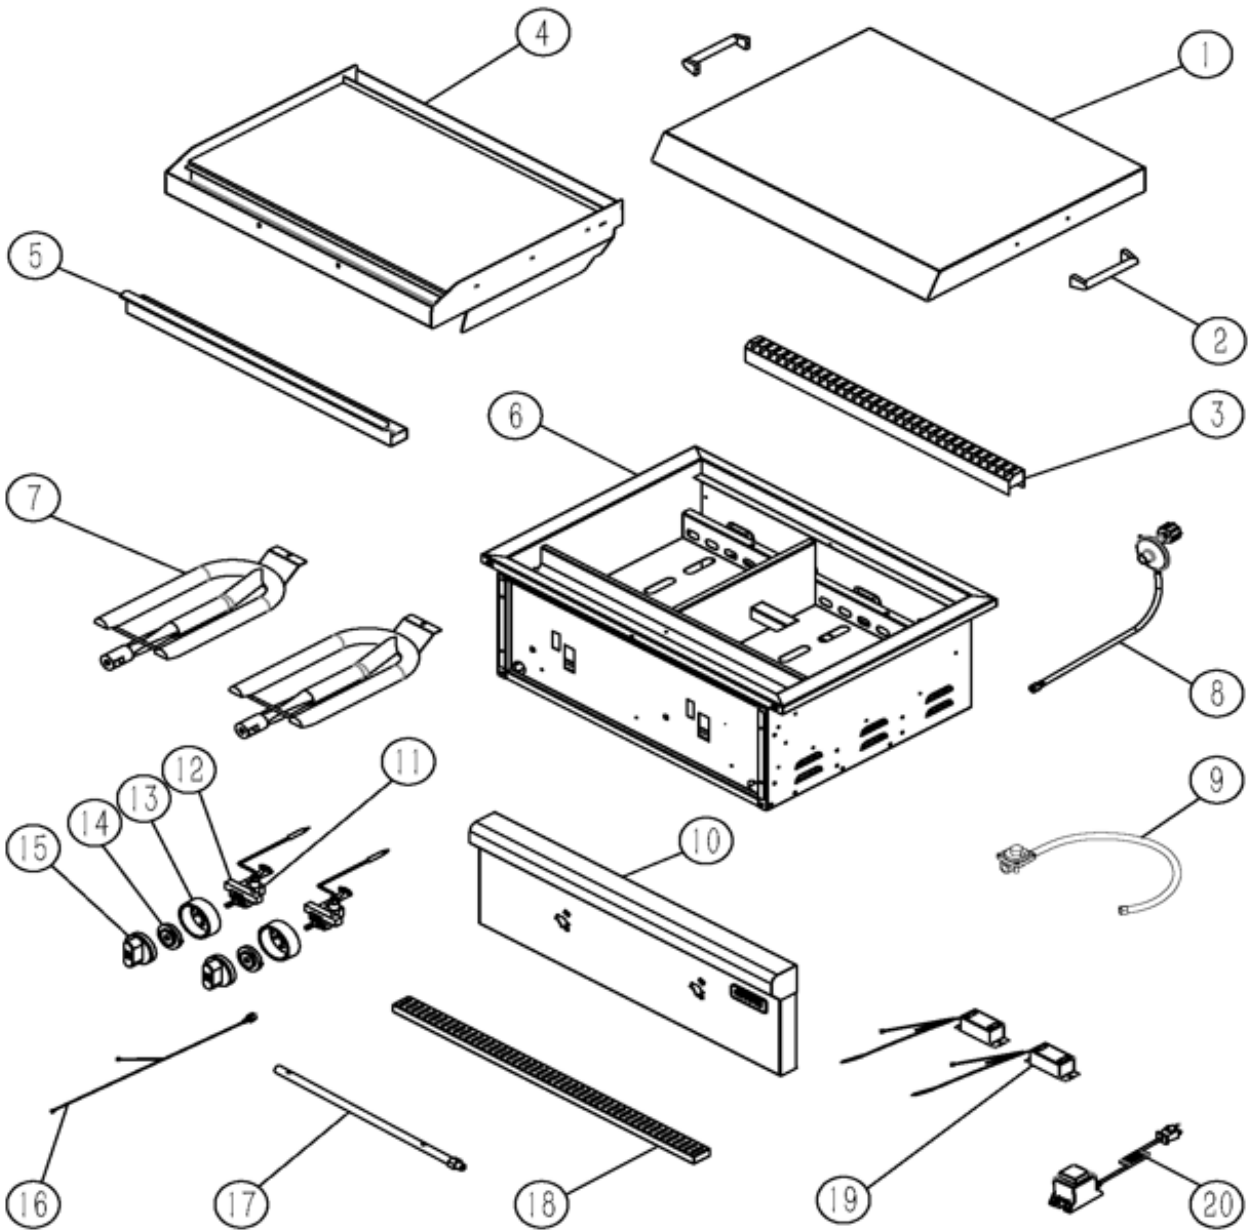

<b>C3FTG30 Parts Listing</b>				
	No.	Name	Qty	Part No.
	1	Cover	1	C1FT0001
	2	Handle	2	C1FT0002
	3	Flue Cover Assembly	1	C1FT0003
	4	Flat Top Grill Plate Assembly	1	C1FT0004
	5	Grease Tray	1	C1FT0005
	6	Firebox C3	1	C3FT0008
	7	Burner C3	2	C3FT0007
	8	Propane Regulator	1	CWLP0038
	9	Natural Gas Regulator	1	CWNG0030
	10	Front Panel C3	1	C3FT0010
	11	Valve Propane C3	2	C3CWLP11
	12	Valve Natural Gas C3	2	C3CWNG12
	13	Knob Base C3	2	C3CW0022
	14	LED light ring C3	2	C3CW0024
	15	Knob C3	2	C3CW0021
	16	Wiring Harness	1	C1FT0016
	17	Gas Pipe	1	C1FT0017
	18	Front Panel Trim	1	C1FT0018
	19	Terminal Block	2	C1FT0019
	20	Transformer	1	C1FT0020