



Instruction Manual


Get Growing Tractor & Mower Ride-On™



INTRODUCTION

Thank you for purchasing the **Get Growing Tractor & Mower Ride-On™**.

The **Get Growing Tractor & Mower Ride-On™** easily transforms from a push mower to a ride-on tractor. Hit the road with the take-along toy driver to hear safety tips and listen to the radio while exploring exciting locations.

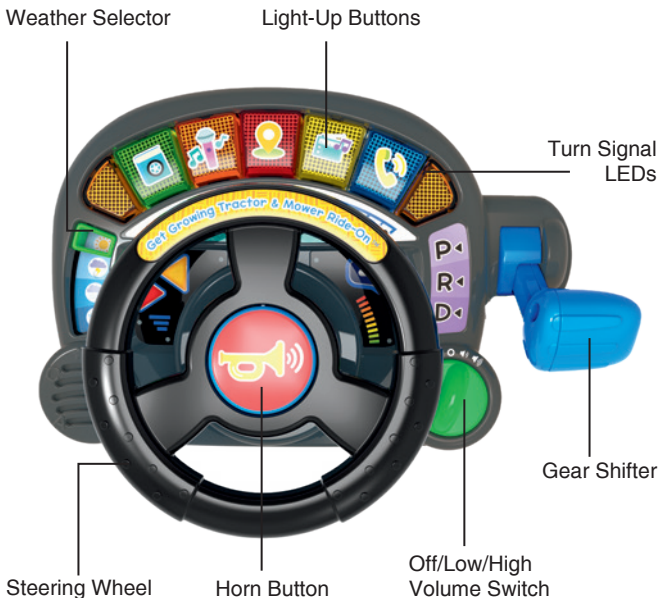

INCLUDED IN THIS PACKAGE


- Toy Driver



- Engine Hood




- Seat with Mower Handle

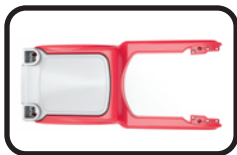


- Front Wheel Bracket



- Tractor Base

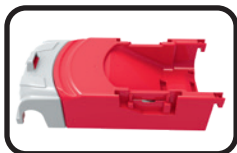

- Engine

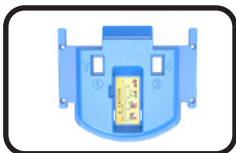

- Rear Wheel Bracket



- Backrest




- Left/Right Foot Rest




- Exhaust Pipe



- 20 Screws

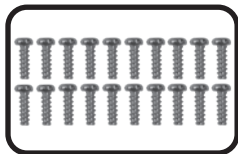

- 1 Label Sheet

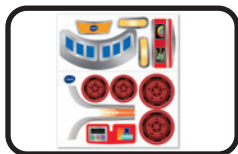

- Engine Support



- 2 Small Front Wheels



- 2 Large Rear Wheels



- Quick Start Guide



WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE:

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

**CAUTION:**

Adult assembly required. This package contains small parts. For your child's safety, do not let your child play with the toy until it is fully assembled.

**ATTENTION :**

Ce jouet contient des petites vis. Il doit être assemblé par un adulte. Pour la sécurité de votre enfant, ne pas le laisser jouer avec tant qu'il n'est pas complètement assemblé par un adulte.



WARNING: :

1. This toy requires adult supervision at all times.
2. Use this toy on a flat surface only. Do not use on steps or steep inclines where toy could roll away.
3. Please make sure child has shoes on at all times while using this Tractor.
4. Do not use for transportation.
5. This is a toy; do not use as a stroller.



ATTENTION :

1. Ce jouet doit toujours être utilisé sous la surveillance d'un adulte.
2. Ce jouet doit toujours être utilisé sur une surface plate. Il ne doit pas être utilisé dans des escaliers ou des terrains pentus qui pourraient le faire rouler.
3. S'assurer que l'enfant porte toujours des chaussures pendant l'utilisation du jouet.
4. Ne pas utiliser comme véhicule.
5. Ne pas utiliser comme poussette.



CAUTION


PINCH HAZARD:

- ALWAYS lock in play mode before allowing use by child.

IMPORTANT:

- The maximum weight limit is 42 lbs. Not intended for children older than 36 months.
- Use with adult supervision and KEEP child AWAY from real tractors and lawnmowers.
- Always inspect before use and STOP USING if signs of excessive wear or breakage.

Unlock the Packaging Locks:

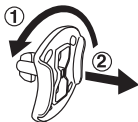

- ① Turn the packaging locks counterclockwise several times.
- ② Pull out and discard the packaging locks.

GETTING STARTED



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.




ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

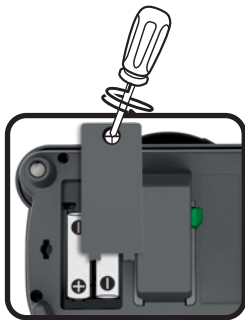

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

ACTIVATING NORMAL PLAY MODE

This product is in Try-Me mode in the packaging. Once the toy is assembled, attach the **Toy Driver** to the top of the unit. Turn the **Off/Low/High Volume Switch** to start, you will then hear three short “beeps”.



MODES

Toy Driver



Tractor Mode




Mower Mode




TRACTOR ASSEMBLY INSTRUCTIONS




1. Insert the left and right foot rest into the **Tractor Base**.

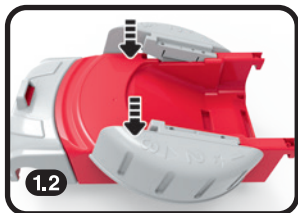

2. Insert the **Engine Support** into the slot in the **Tractor Base**.

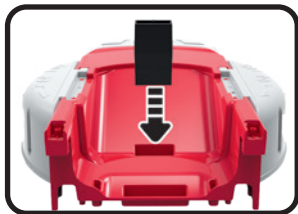


3. Place the **Engine** onto the **Engine Support**. Secure with **4 Screws**.

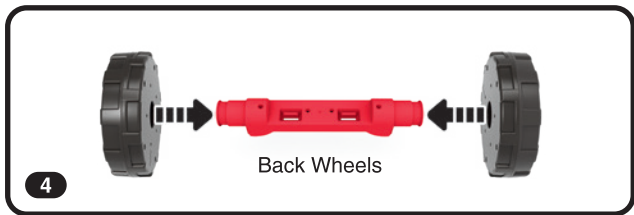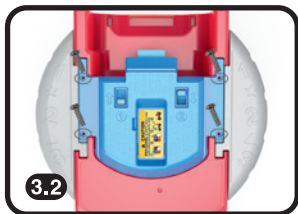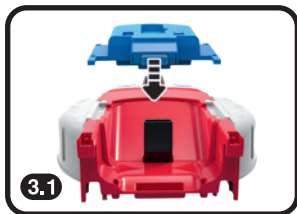


5. Align the slots on the **Rear Wheel Bracket** and insert into the end of the **Tractor Base**.



6. Place the **Tractor Base** onto the **Front Wheel Bracket**.

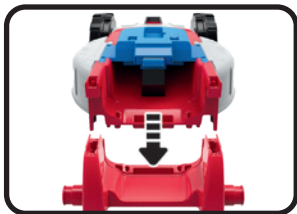

7. Turn the unit upside down and secure with **4 Screws**.

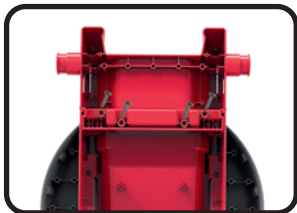


8




Front Wheels

9. Insert the **Seat with Mower Handle** into both sides of the **Engine Hood** as shown in the illustrations. Then flip them upside down and use **8 Screws** to secure them.

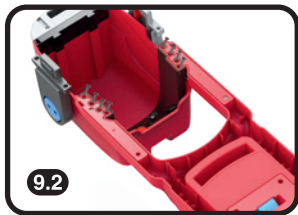

10. Place the **Engine Hood** with the **Seat with Tractor Handle** onto the **Tractor Base**. Secure with **4 Screws**.

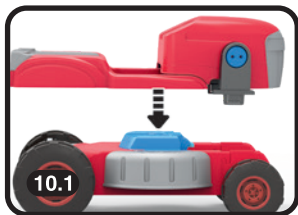

11. Insert the **Backrest** into the **Tractor Base** (it will click in place once fully inserted).



12. Insert the **Exhaust Pipe** onto the side of the **Engine Hood**.




13. Slide the **Toy Driver** up onto the **Engine Hood**.



Transforming from Tractor to Mower

Press down the green button and slide the **Toy Driver** off.

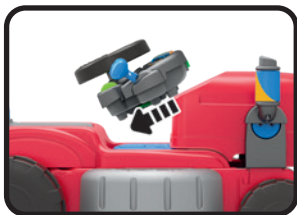


Transforming from Mower to Tractor


1. Press down the green button and lift the **Toy Driver** up.



2. Slide the buttons as shown to release the handle. Lower the handle.

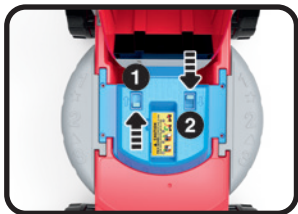

3. Slide the **Toy Driver** onto the **Engine Hood**.

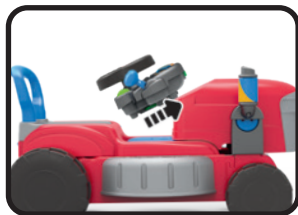

LABEL APPLICATION


Please secure labels onto the vehicle as shown below.



PRODUCT FEATURES

1. Off/Low/High Volume Switch

Slide the **Off/Low/High Volume Switch** to turn the **Driver** on and adjust the volume to **Low** or **High**.

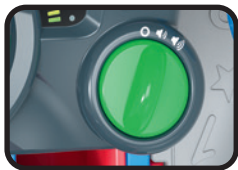

2. Five Light-Up Buttons

Press the **Light-Up Buttons** to hear sung songs, phrases and fun sound effects.



3. Gear Shifter

Move the **Gear Shifter** up or down to hear driving sounds.



4. Weather Selector

Slide the **Weather Selector** to hear phrases and sound effects for sunny, stormy, rainy and snowy weather.



5. Horn Button



Press the **Horn Button** to hear horn and mower sounds.

6. Steering Wheel

Turn the **Steering Wheel** left or right to hear turn signal sounds and see the matching indicator light up.



7. Automatic Shut-Off

To preserve battery life, the **Get Growing Tractor & Mower Ride-On™** will shut **Off** automatically after approximately one minute of inactivity. The unit can be turned **On** again by sliding the **Off/Low/High Volume Switch** or pressing any button. Additionally, when the batteries are very low, the unit will shut **Off** automatically and a red light will flash three times.

ACTIVITIES

1. Light-Up Buttons:

- **Learning Button** Hear safety and driving tips.
- **Music Button** Play songs about driving and mowing.
- **Map Button** Hear fun locations to “drive” to.
- **Radio Button** Listen to pretend radio tunes and updates.
- **Phone Button** Enjoy playful phone call phrases.

2. Horn Button:

Press to hear horn beeps or mower charge-up sounds.

3. Weather Selector:

Slide to hear weather sounds, facts and phrases.

4. Gear Shifter:

Move to hear the tractor/mower start, stop and shift sounds.

5. Steering Wheel:

Turn to activate turn signals, matching lights and driving sound effects.

SONG LYRICS

Song 1

It's lovely out today.
It's time to run and play.
Driving here and driving there.
What a perfect day.

Song 2

It's lovely out today.
It's time to bale the hay.
Hauling here and hauling there.
What a perfect day.

Song 3

It's lovely out today.
It's time to mow the lawn.
Mowing here and mowing there.
What a perfect day.

Song 4

Racing and roaming,
let's go and explore again.
Where should we go? What should we see?
Let's play, you and me!

Song 5

Driving and roaming,
let's go and explore again.
We'll round up the sheep, into the shed,
To keep them safe and warm.

Song 6

Running and roaming,
let's go and explore again.
We'll jump in puddles, and splash and play.
So much fun! Hip-hip Hooray!

Song 7

I have a car.
It makes this sound.
I love to drive all around, all around.
I love to drive all around.

Song 8

My tractor's big.
It makes this sound.
I love to work all around, all around.
I love to work all around.

Song 9

My mower's fast.
It makes this sound.
I love to mow all around, all around.
I love to mow all around.

Song 10

Let's all go out side today,
the road will take us on our way.
Let's all go out side today,
driving in the town.

Song 11

Let's all go out side today,
feed the cows and haul the hay.
Let's all go out side today,
working on the farm.

Song 12

Let's all go out side today,
trim the grass and run and play.
Let's all go out side today,
mowing in the yard.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Trade Name:	VTech®
Model:	5765
Product Name:	Get Growing Tractor & Mower Ride-On™
Responsible Party:	VTech Electronics North America, L.L.C.
Address:	1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.
CAN ICES(B)/NMB(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

