

WARNING

Pls secure screw all legs are tightened completely, four for each leg, totally 12pcs bolts.

Do not try to seat or use before confirm all the screws are tightened completely.




ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTION


A		1
B		4
C		1
E		12
H		12
G		12
I		1

①

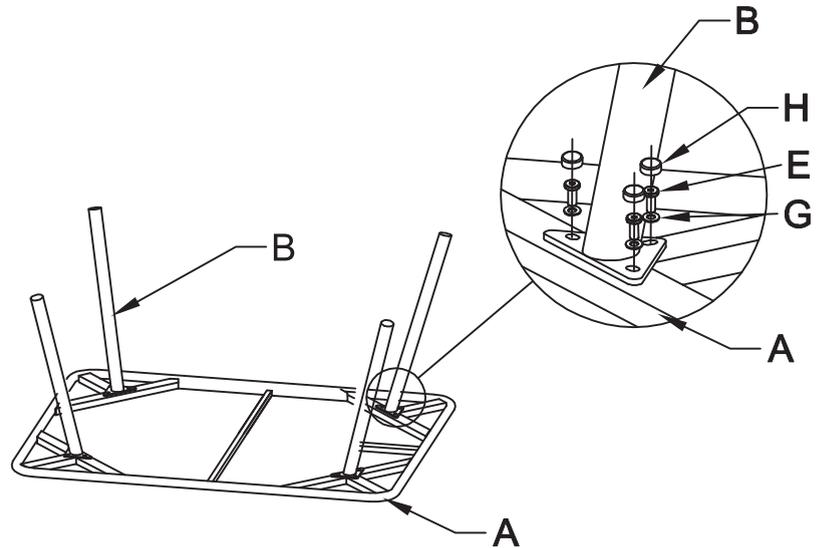


1. Place Table Top(A) upside down on a non-abrasive surface to avoid scratching the top. Secure Bolts (E) and Washers(G) to connect Leg(B) and table top (A). Some adjustments may be necessary to ensure the legs are aligned properly.

②

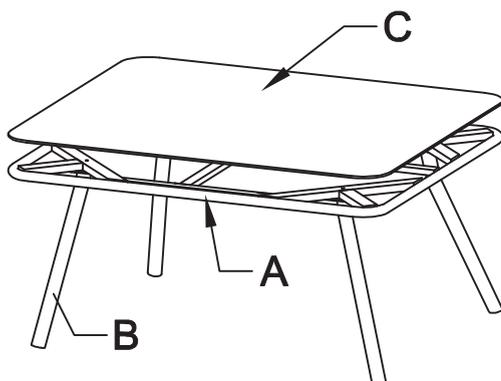

③

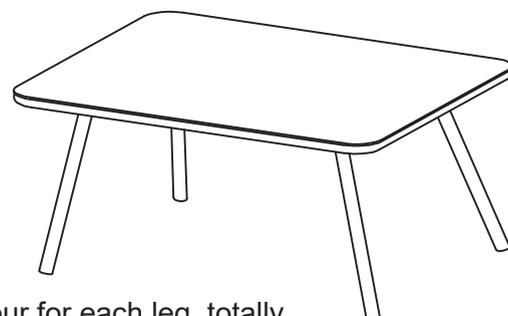

2. Please secure screw all legs are tightened completely, four for each leg, totally 12 pcs bolts. Then with help of other person to turn the table upright position and put the table glass on the top. if you find the bolts can not be screwed tightened, pls return the table.

Need some help?



CARE INSTRUCTIONS

Outdoor furniture naturally weathers and shows color variation over time. We recommend the following care for the best results:

- Wipe with a soft cloth.
 - Wash with mild soap and water as needed; do not use abrasive cleaners.
 - Cover furniture with an outdoor cover (not included) when not in use.
 - Store in a dry, covered area during inclement weather or winter season.
-



After assembly is completed, save these instructions and any included tools for future maintenance or re-assembly.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.