



## PM06024 / PM06024B 60" SIT / STAND ELECTRIC DESK

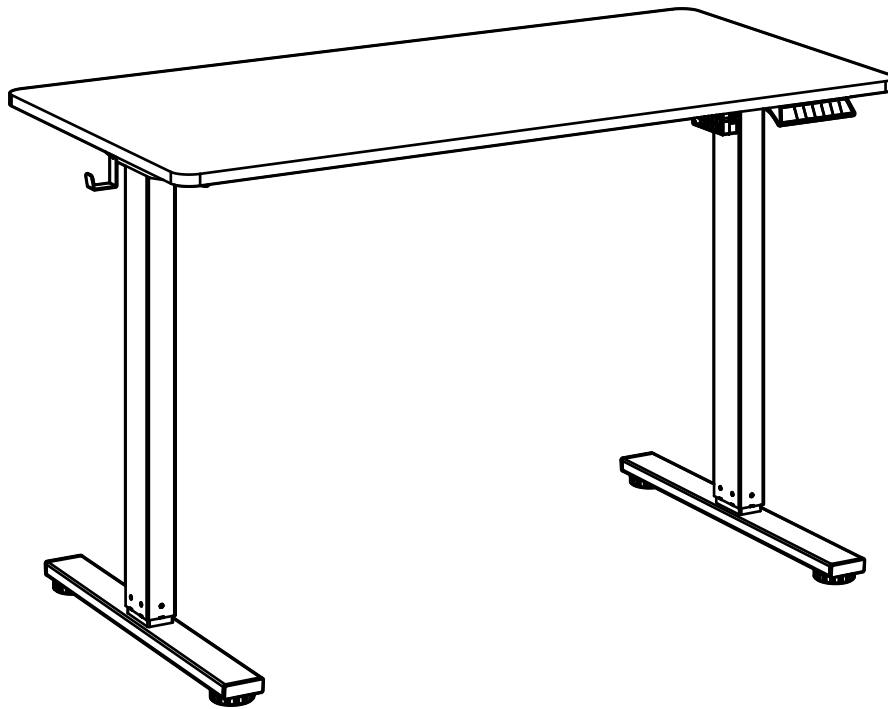

### Assembly Instructions - Important:

Carefully unpack and identify each component before attempting to assemble. Refer to parts list. Please take care when assembling the unit and always set the parts on a clean, soft surface. If you require any assistance with assembly, parts or information on other products, please visit our website: [www.officestar.net](http://www.officestar.net) or call or write us.

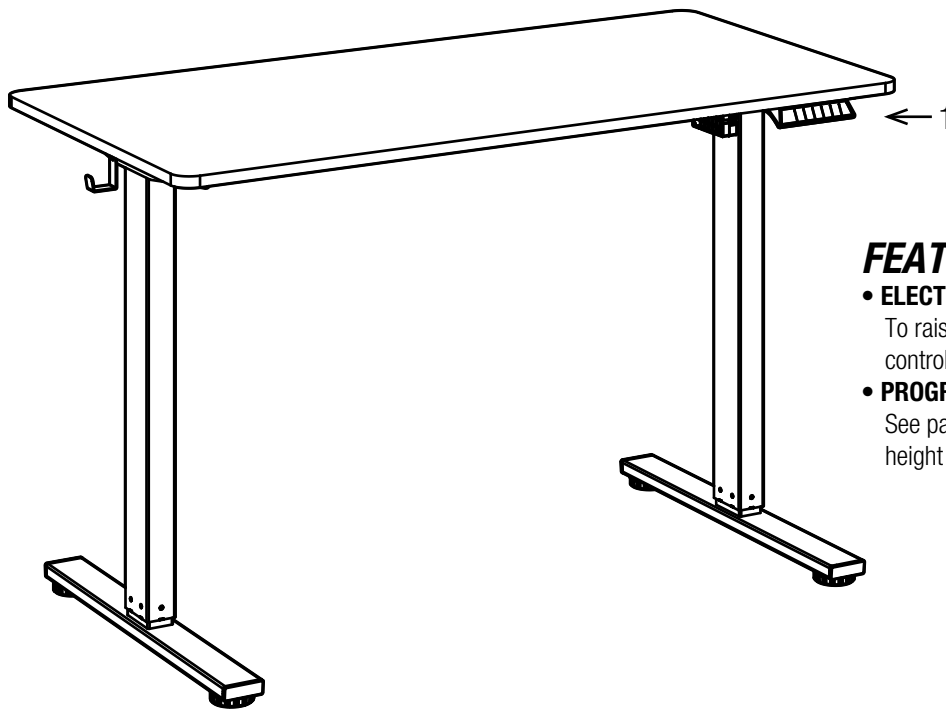

## **FEATURES**

- **ELECTRIC ONE-TOUCH CONTROL**

To raise or lower desk, push the up or down arrow on control pad (1).

- **PROGRAMMABLE MEMORY**

See page 12 for instructions on how to set programmable height memory.

1. Do not use this product unless all screws and bolts are securely tightened.
2. Check that all screws and bolts are tight every three months or as needed.
3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
4. Do not use this product as a stepladder.
5. Use this product for its intended purpose only.
6. **FOR INDOOR RESIDENTIAL USE ONLY.**

 
## **LIMITED WARRANTY**

OSP Home Furnishings® warrants to the original purchaser that this product will be free from defects in material and workmanship as described below. Home Furnishings® will repair or replace, at its option, without charge to the original purchaser only, defective products or parts for one (1) year from the date of purchase. Replacement parts can only be supplied if parts are available. Items out of production may be unavailable. This warranty shall be effective for the applicable time period beginning from the date of purchase as shown on your original sales receipt. This warranty is your sole remedy for product defects and excludes defects due to or arising in connection with product abuse or misuse, use modification of, or attachments to the product, and products or parts not used, maintained, or installed in accordance with the company's installation, maintenance and/or applicable guidelines. There are no other warranties, express or implied, other than those specifically described, including without limitation any implied warranty of merchantability or of fitness for a particular purpose. OSP Home Furnishings® will not be responsible for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when parts are damaged or missing. Our Parts Department will do everything possible to promptly remedy the problem. Contact us via e-mail [parts.department@officestar.net](mailto:parts.department@officestar.net) by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 3:30 p.m. Pacific Time. To make a warranty claim, contact Parts Department. Provide model number, proof of purchase, description of the problem and obtain return authorization. At its option OSP Home Furnishings® will: (a) Supply compatible components of current manufacture. (b) Repair the customer's component. The customer must prepay freight on any components returned to the factory. Return freight on components still in warranty will be paid by OSP Home Furnishings®.


PARTS




(A) Bracket (2 Pcs)



 (B) Crossbeam (1 Pc)



 (C) Right Column (1 Pc)



(D) Left Column (1 Pc)



(E) Transmission Rod (1 Pc)



(F) Coupling (1 Pc)



 
(G) Baffle (2 Pcs)




(H) Motor with Handset (1 Pc)




(I) Hook (2 Pcs)



 
(J) Pedestal (2 Pcs)



  (K) Cable Clip (4 Pcs)












(L) Power Cable (1 Pc)



 (M) Tabletop (1 Pc)
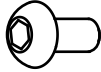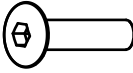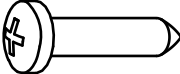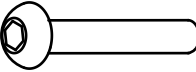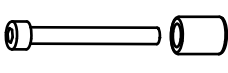
## HARDWARE

NO	DRAWING	DESCRIPTION	SIZE	QUANTITY
1		Allen Bolt	N/A	4 Pcs
2		Allen Bolt	N/A	4 Pcs
3		Phillips Screw	N/A	16 Pcs
4		Allen Bolt	N/A	4 Pcs
5		Allen Bolt	N/A	8 Pcs
6		Bolt and Connector	N/A	2 Pcs ea.
7		Hex Wrench	N/A	1 Pc
8		Allen Key	2.5mm	1 Pc
9		Allen Key	4mm	1 Pc


*Phillips screwdriver needed for assembly (not provided).  
Assemble on rug or carpet to avoid scratches. We recommend two people for easier assembly.  
Hardware drawings are for reference only. Actual hardware may be slightly different.*

## TECHNICAL DATA


Column Stage:	2
Max. Load Capacity:	65kg with hook / Hook capacity: 5kg.
Max. Speed:	15mm/s
Lowest Height:	745mm
Highest Height:	1190mm
Tabletop Size:	1500mm x 600mm x 25mm

## STEP 1

INSERT THE COUPLING INTO THE MOTOR.


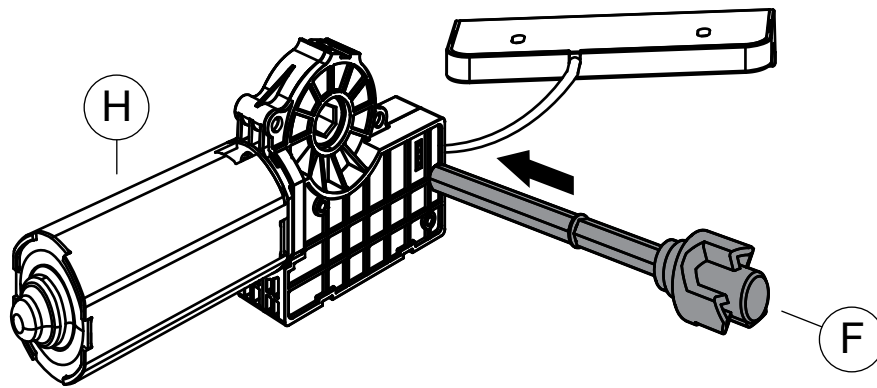


PAY ATTENTION TO THE ORIENTATION OF THE MOTOR DURING INSTALLATION.

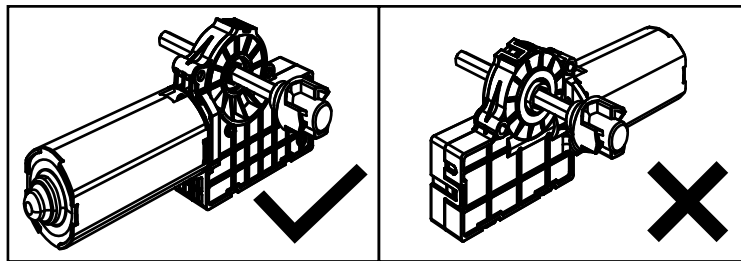


## STEP 2

  ASSEMBLE THE MOTOR AND RIGHT COLUMN.






WHEN INSERTING THE COUPLING INTO THE COLUMN, PLEASE MAKE SURE NOT TO ROTATE IT MORE THAN 60°.

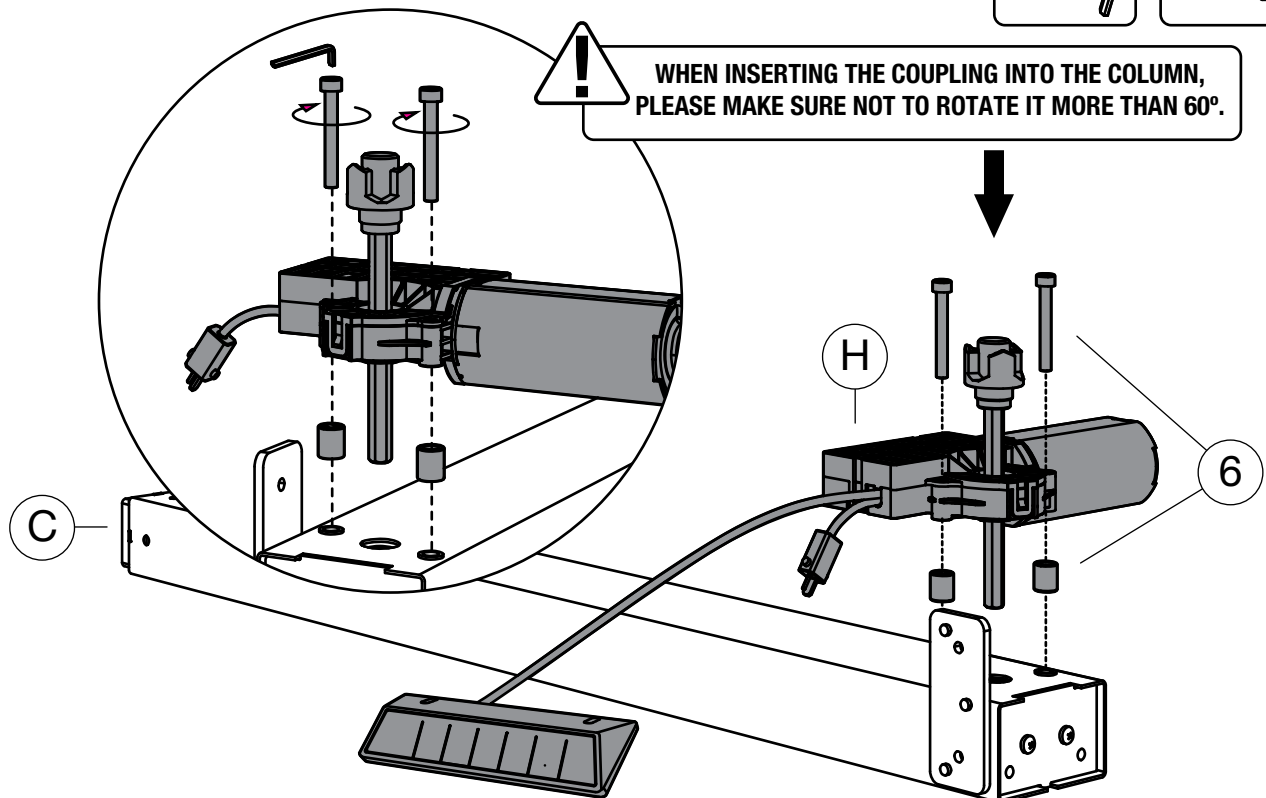


**STEP 3**

  **INSTALL THE CROSSBEAM.**

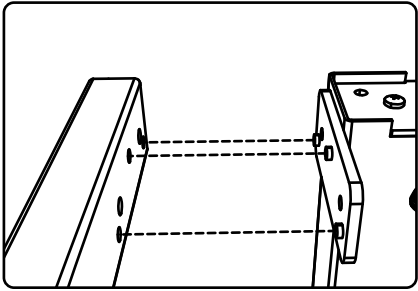




**DURING INSTALLATION, MAKE SURE THAT THE THREE PROTRUSIONS ON THE TABLE LEG ALIGN WITH THE HOLES ON THE CROSSBEAM.**

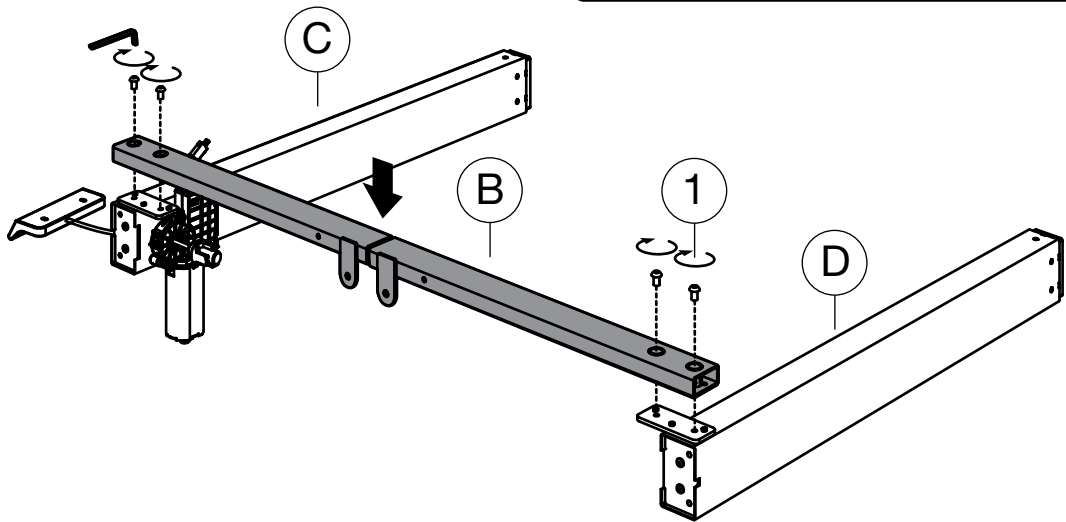


**STEP 4**

  **INSTALL THE BRACKETS.**

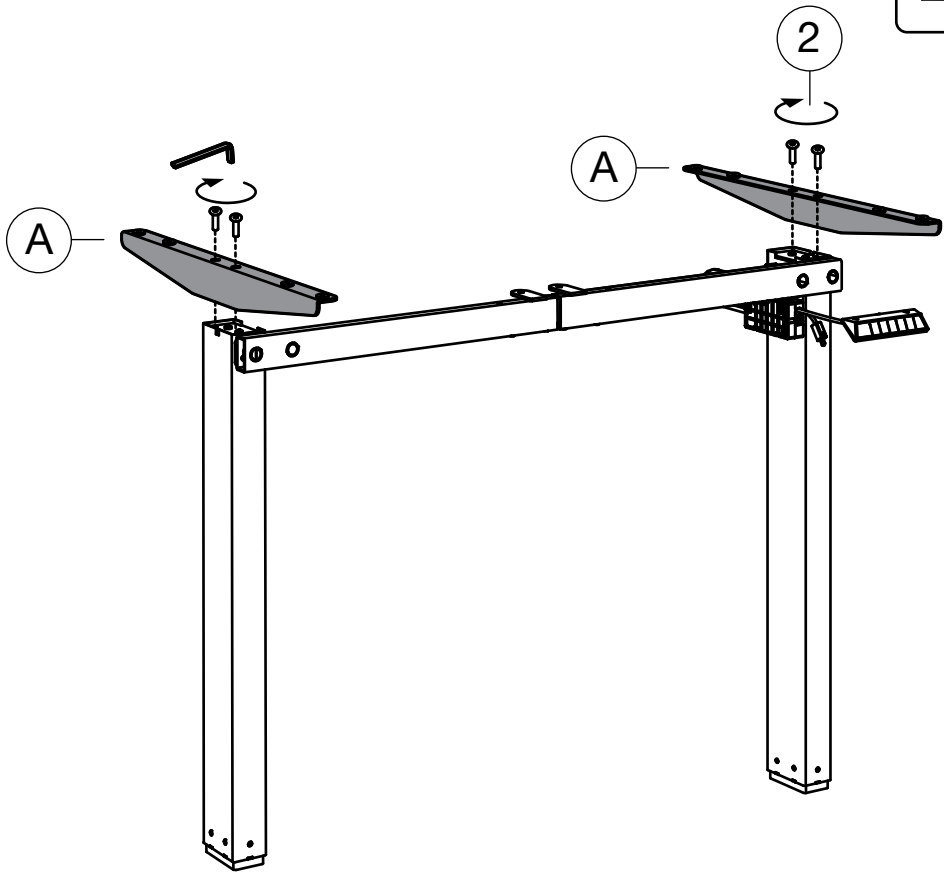



## STEP 5

### INSTALL THE PEDESTALS.

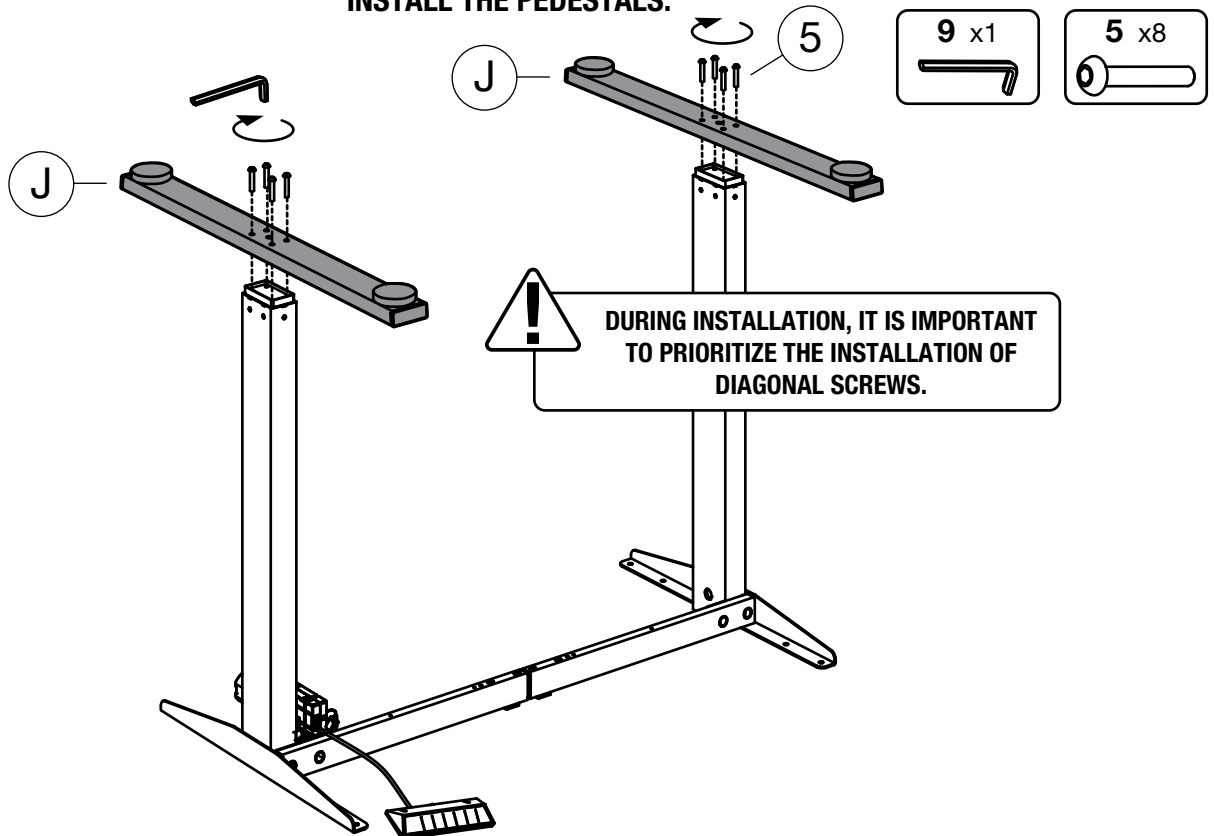


## STEP 6
 
### ADJUST THE CROSSBEAM.

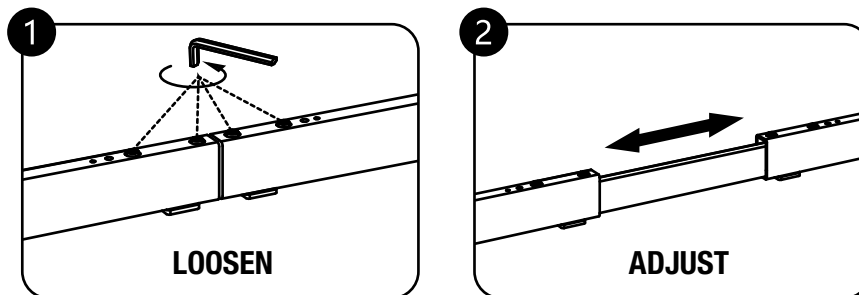


**WHEN ADJUSTING THE CROSSBEAM, ENSURE THAT THE CONNECTOR PORT DOES NOT EXCEED THE OUTER SET SCREW.**

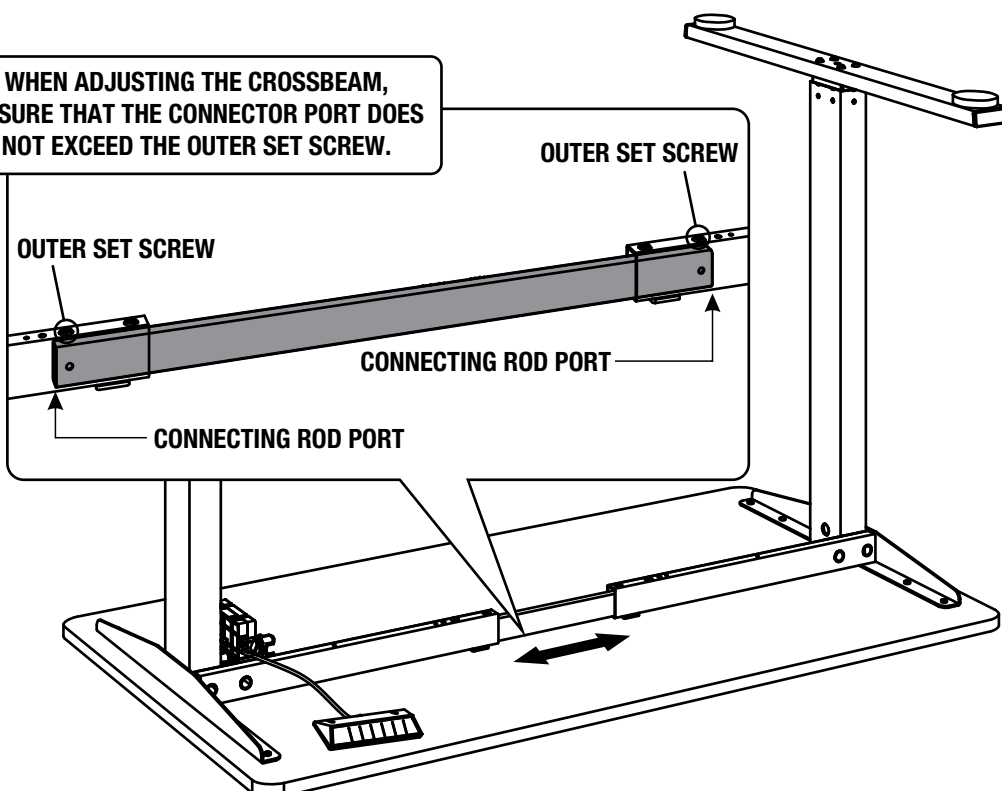


STEP 7

INSTALL THE TABLETOP.

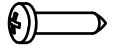
3 x10  


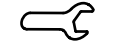
THE INSTALLATION SEQUENCE FOR THE SCREWS IS  → 

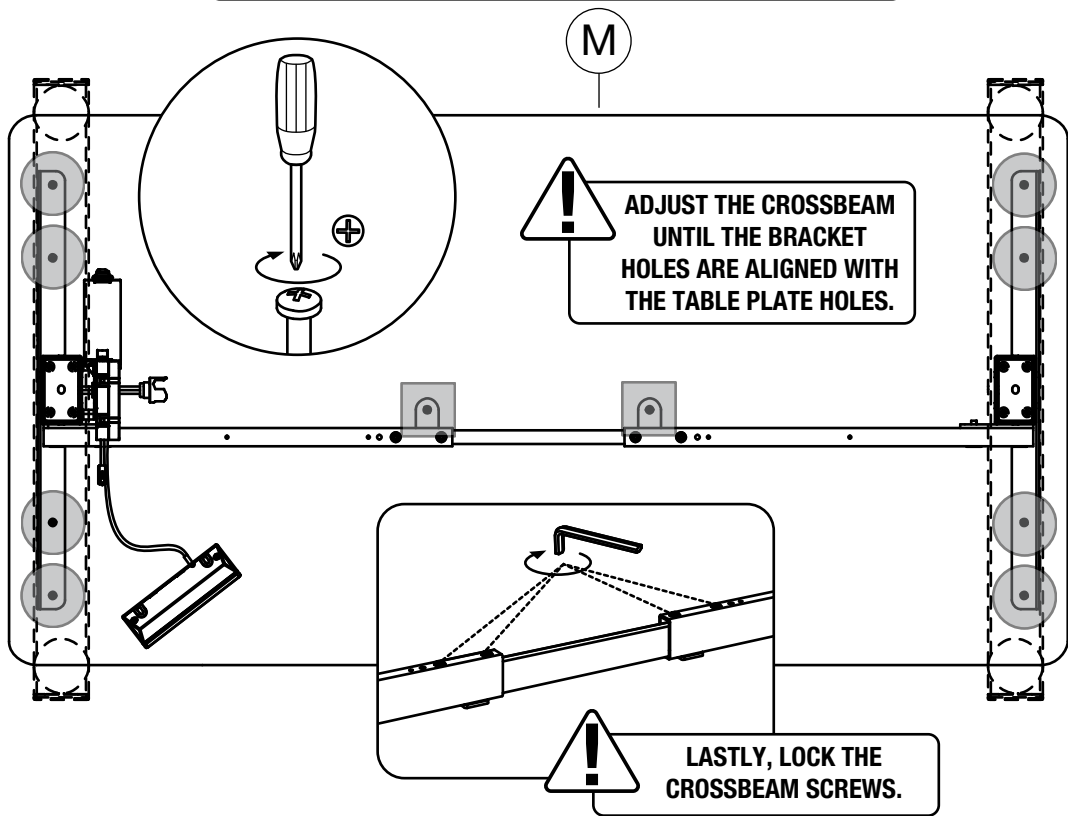


STEP 8

INSTALL THE TRANSMISSION ROD.



8 x1  


7 x1  

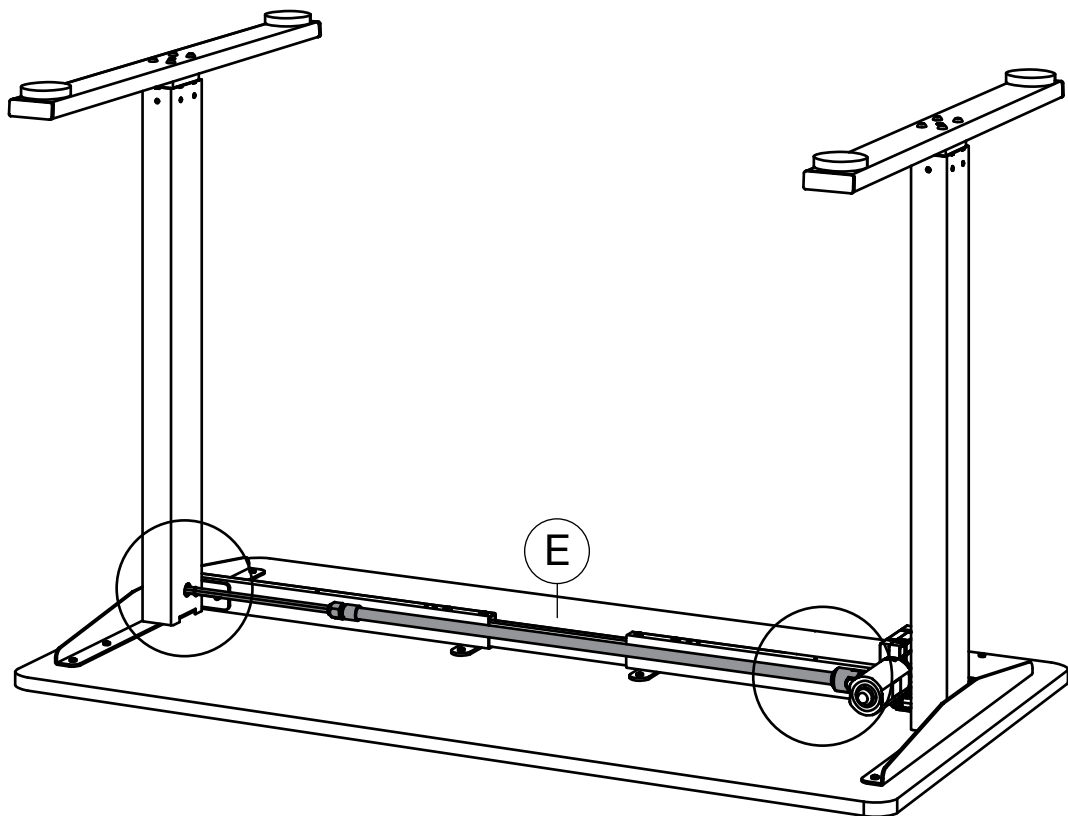
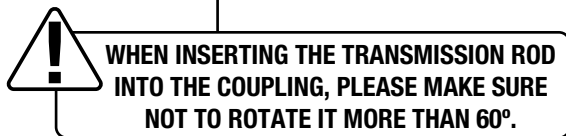
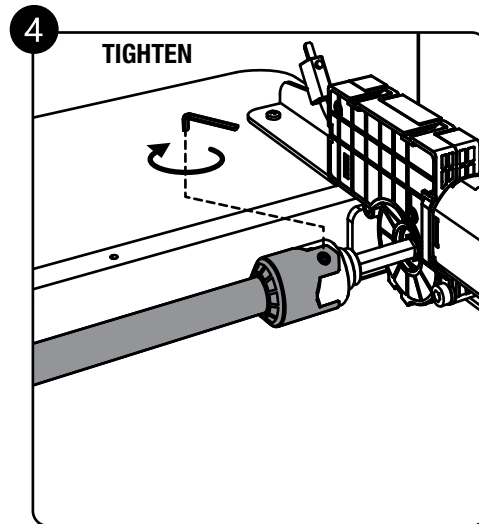
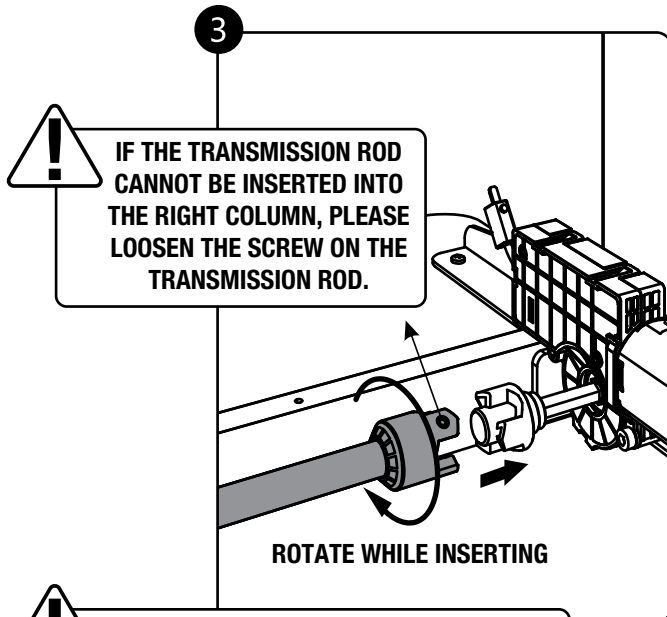





## STEP 9

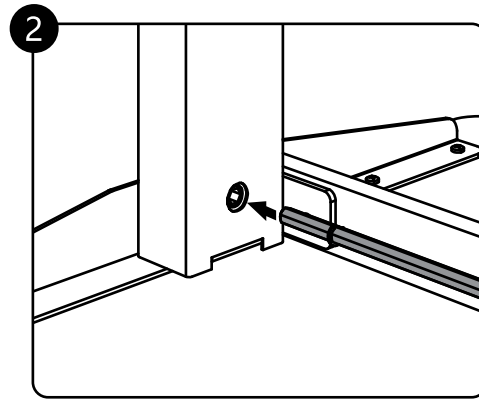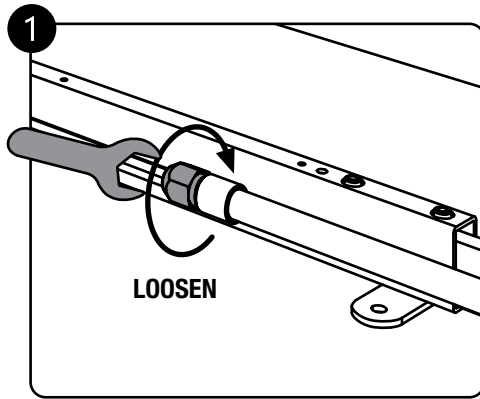

7 x1





TIGHTEN THE DRIVE ROD NUT.

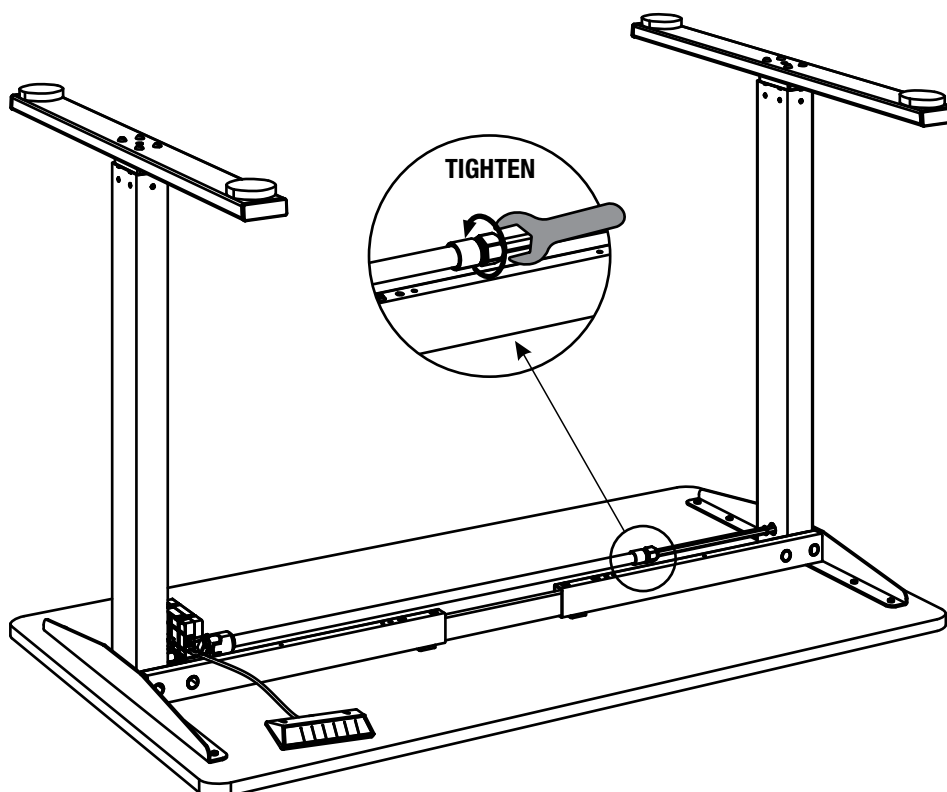




**STEP 10**

 **INSTALL THE HANDSET.**

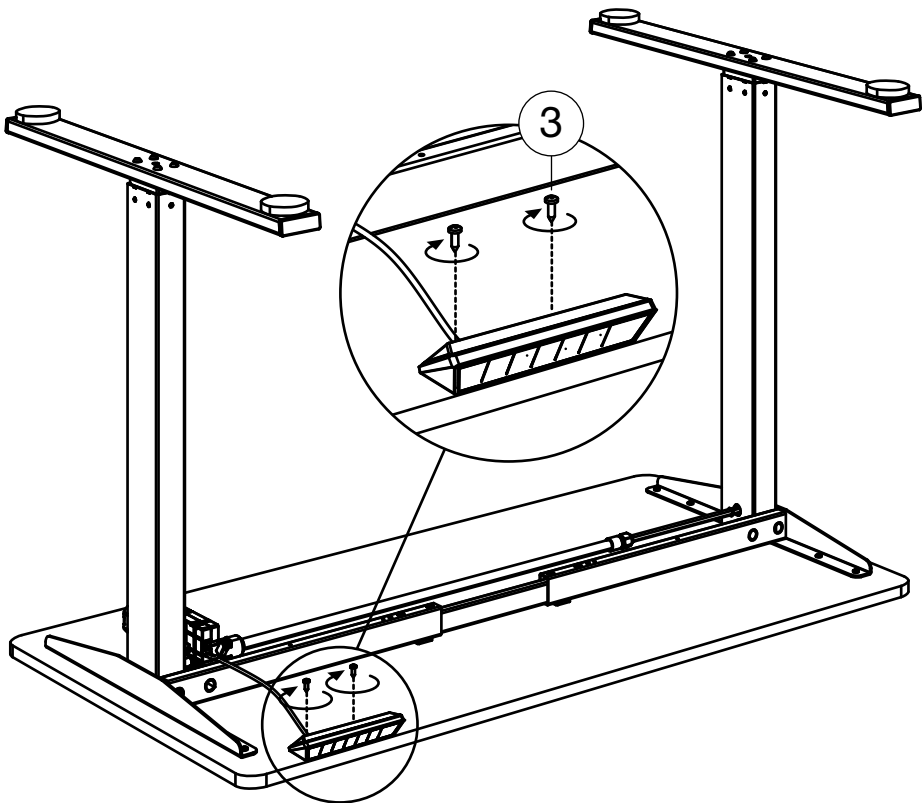


**STEP 11**

  **INSTALL THE BAFFLES.**

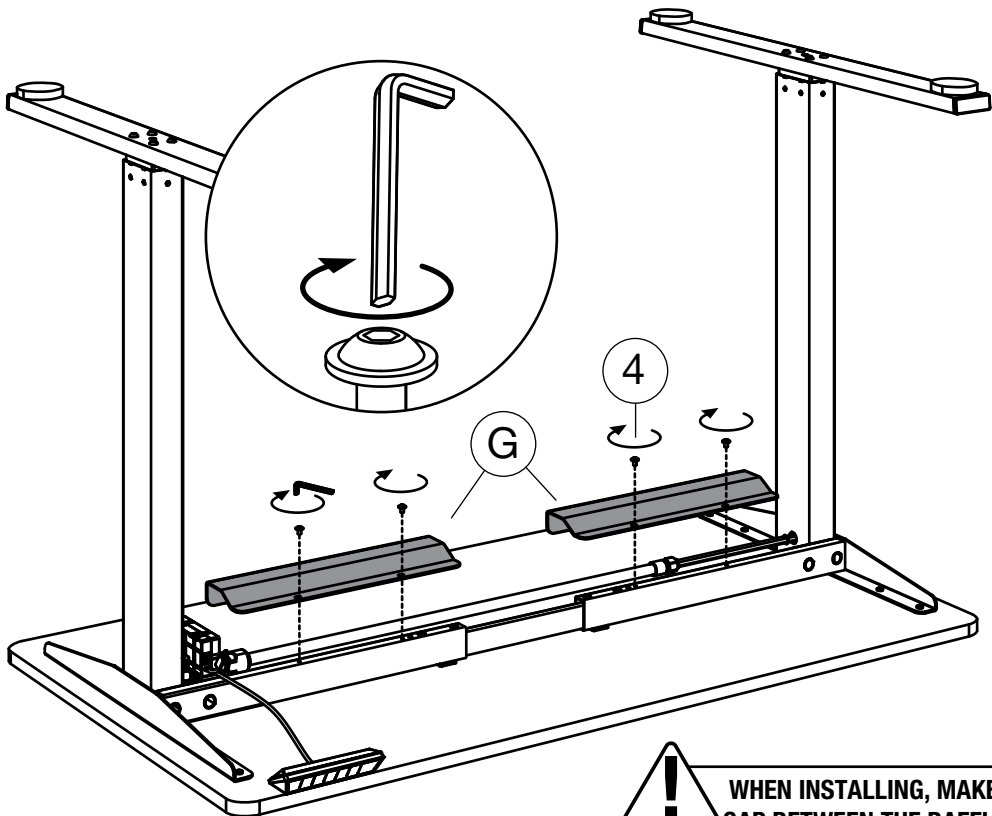


**! WHEN INSTALLING, MAKE SURE TO LEAVE A GAP BETWEEN THE BAFFLE AND THE MOTOR.**


**STEP 12**      **INSTALL THE HOOKS.**

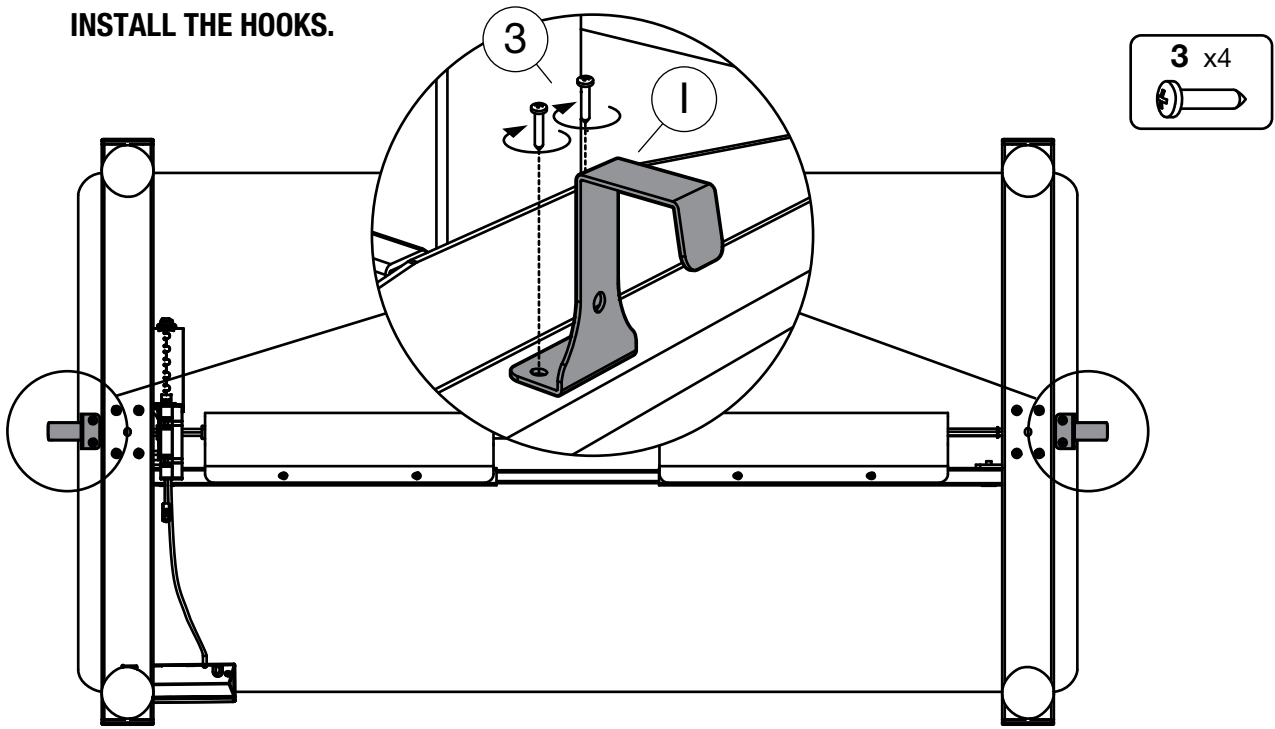

**STEP 13**      **CONNECT THE CABLES.**

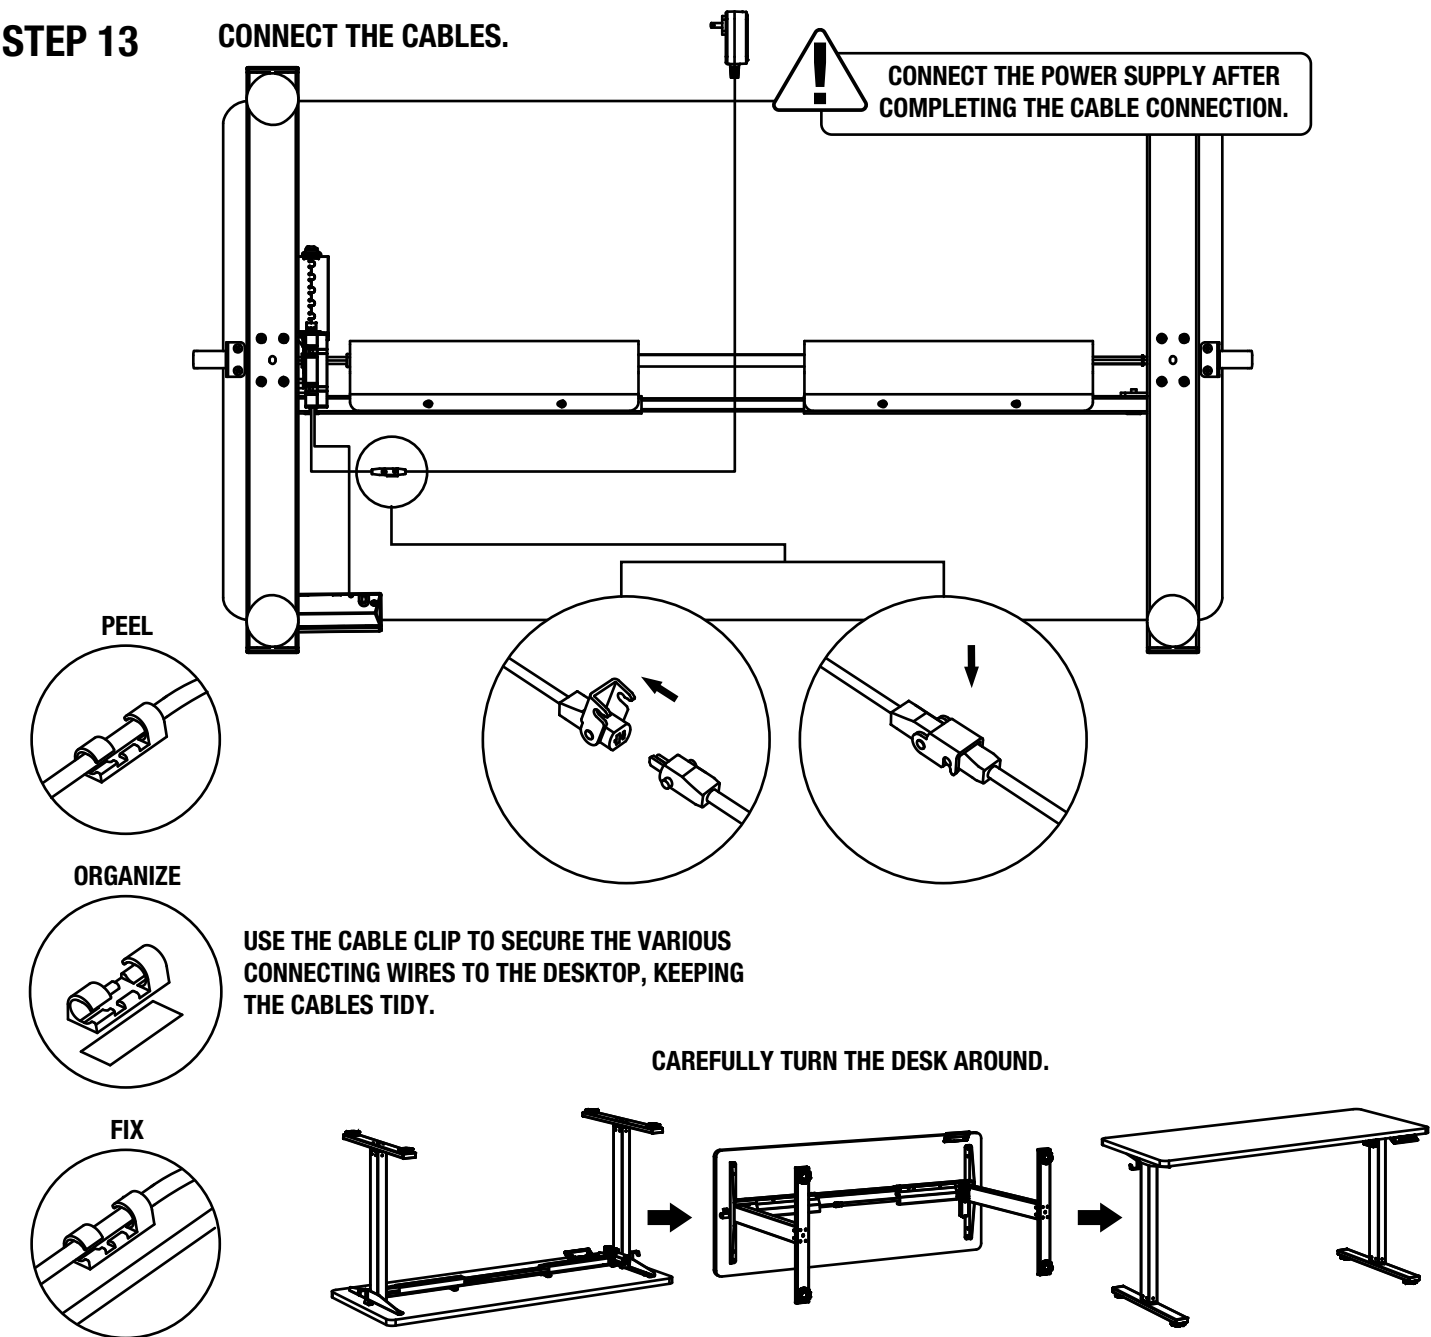

## INSTRUCTIONS FOR SETTING UP AND USING THE HANDSET

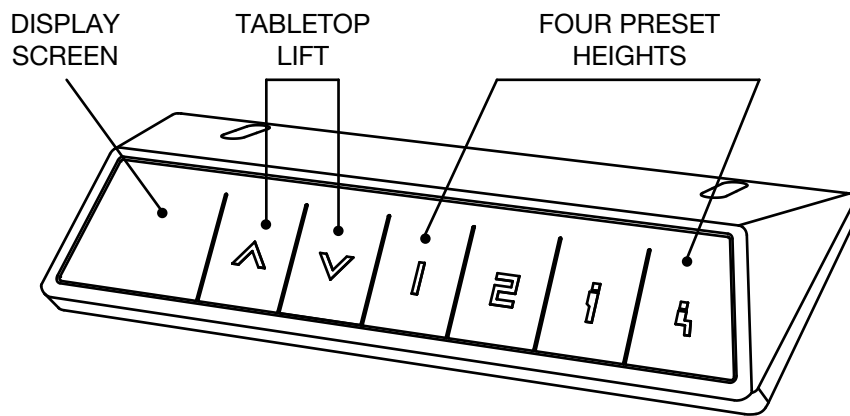

**NOTE:** Ensure that there are no obstacles blocking the movement of the desk during the lifting process and confirm that all cables are long enough for the desk to move up and down.



### BUTTON CONTROL FOR HEIGHT ADJUSTMENT:

By pressing the **^** or **v** button, you can adjust the height of the desk up or down, and the current height will be displayed on the screen.



**STAND:** Set the most comfortable height when standing. Additional preset heights can be freely set to other heights.



**SIT:** Set the most comfortable height when sitting.

### HEIGHT MEMORY FUNCTION:

When the desk is in a stationary state, press and hold the **1** button for 3 seconds, and the screen will display 5-1, indicating that the current height has been successfully saved in memory. Then, you can adjust the desk to any height, and by pressing the **1** button, it will automatically return to the saved height.

The **2**, **STAND**, and **SIT** buttons also have the same height memory function as the **1** button. By repeating the above steps, you can save the corresponding height in memory. Then, by pressing the respective button, the desk will automatically move to the saved height.

### ADJUSTING COLLISION SENSITIVITY (OPTIONAL):

There are four gears total. When the lifting system encounters resistance, Collision Sensitivity is triggered for safety.

Press and hold the **^** and **v** buttons at the same time for three seconds to switch the sensitivity. You can switch up to 4 different levels: (A0 - A1 - A2 - A3)

- A0 indicates that the collision prevention function is turned off.
- A1 indicates low sensitivity.
- A2 indicates medium sensitivity.
- A3 indicates high sensitivity.



## RESET FUNCTION:

**Method 1:** Long press the down button. The desk will move to the lowest or highest position and then rebound until it stops. At this time, the display screen will show the height in numbers. Release the down button to complete the reset.

**Method 2:** Press and hold the **STAND** and **SIT** buttons for three seconds to view the software version of the device. Once the viewing is complete, continue to hold the **STAND** and **SIT** buttons until the LED display shows *rSt*, then release the buttons. This will enter the reset mode. To reset, continue to hold the down button until the display shows the current height, then release the down button. The reset is now complete.

When the lifting system experiences a malfunction, release the button and press and hold the down button until the lifting system reaches the bottom and stops rebounding. Reset is successful.



## TROUBLESHOOTING:

- Reset function definition: The LED display shows *rSt*. Hold down the down button until the desk lowers to the lowest position and then rebounds up to a stop. The display will show the lowest height. After releasing the **V** button, the reset is complete and the desk can be used normally again.
- If you see **E01**, allow the desk to rest for at least 18 minutes before using it again.
- If you encounter any other error codes and the **V** button does not respond, please check if the connection cable is undamaged and properly connected. Disconnect the power for at least 10 seconds, then reconnect it. The LED screen will display *rSt*. Press and hold the **V** button to reset.
- If you have followed the above steps and the desk still does not function properly, please contact customer service for further assistance.

This list is used for checking and solving faults and errors. Please contact the manufacturer if the problem you encounter is not on the list below.

The electronic functions are unable to operate properly:

**Check the cable connection.**

Speed of lifting is slow:

The tabletop slides downward:

The device often enters the reset state:

**Check if the load weighs more than 65 kg.**

Only descending, not ascending, or only ascending, not descending:

Insufficient height for ascending and descending:

The tabletop cannot rise:

**Perform a reset operation.**

After exceeding the working duty cycle requirements (duty cycle: Max 2 min. ON/18 min. OFF)


**Power off for 18 minutes and then reconnect the power.**

When pressing the down button, the device goes up instead:

**Check if there are any obstacles or hanging cables under the desk.**

**ATTENTION:**

1. Power supply: AC100V-240V, frequency 50/60Hz.
2. Operating environment: Indoor, 0-40°.
3. Before cleaning, make sure to unplug the power cord. Use a slightly damp cloth to wipe away surface dust, taking care not to let water drip into the internal components or damage the connection wires. Regularly check if screws are loose and tighten them if necessary.
4. The electrical box contains electronic components, metals, plastics, wires, etc. Dispose of it according to the environmental regulations of your country, not as regular household waste.
5. Before using the product, carefully inspect and ensure that it has been correctly installed. Use only the accessories provided by the manufacturer for installation. Leave adequate safety clearance when placing the product to avoid pinch hazards.
6. Before first use, familiarize yourself with all the functions and program settings of the product.
7. Children are not allowed to play on this product. Certain unpredictable behaviors may result from children playing on the product, and the manufacturer will not be responsible for any resulting accidents.
8. Slight noises from the multi-belt or brake system caused by the structure will not affect the use of the equipment.
9. The use of corrosive or abrasive materials for cleaning equipment is prohibited. Make sure that the cleaning agents used will not contaminate the environment.
10. Operate the equipment only after understanding the relevant hazards. Children under the age of 14 or individuals with physical or sensory impairments or mental disabilities should use the equipment under proper supervision and guidance. Children should not have unattended access to the product.
11. Children should not perform cleaning and user maintenance without supervision.
12. In case of power cord damage, it must be replaced by the manufacturer or relevant professionals to avoid injury.
13. Ensure that your operating environment is free of any potential hazards, such as not littering tools. Always handle packaging materials with caution to avoid various potential dangers, such as the choking hazard posed by children playing with plastic bags.
14. When moving the product, ensure that there are no items placed on the desk, screws are tightened, and the power plug is unplugged. Use at least 2 people for moving. If necessary, keep the original packaging for future transportation.
15. When storing for a long time, unplug the power cord and clean out any loose objects. Store it in a cool and dry place.
16. This product contains small parts that can pose a choking hazard if swallowed accidentally. Keep these small accessories away from children.

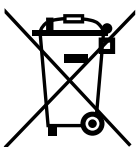

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.