



## Instruction Manual

# MORE TO EXPLORE LEARNING LAPTOP



© 2025 Viacom International Inc. All Rights Reserved. Nickelodeon, Dora and all related titles, logos and characters are trademarks of Viacom International Inc.

# INTRODUCTION

Thank you for purchasing **VTech® Dora More to Explore Learning Laptop**.

This laptop offers different activities to introduce letters and words, numbers and counting, shapes, instruments, melodies and to see characters dancing. Get ready to learn some Spanish by exploring and learning with Dora!



# INCLUDED IN THIS PACKAGE

- One VTech® Dora More to Explore Learning Laptop
- One Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

## Unlock the Packaging Locks:





① Turn the packaging locks counterclockwise several times.

② Pull out and discard the packaging locks.

# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

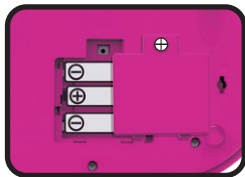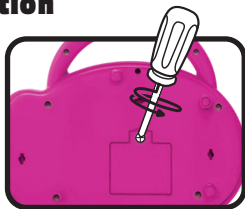

### **WARNING:**

**Adult assembly required for battery installation.**

**Keep batteries out of reach of children.**



### **ATTENTION :**

**Les piles ou accumulateurs doivent être installés par un adulte.**

**Tenir les piles ou accumulateurs hors de portée des enfants.**

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## ACTIVATE NORMAL PLAY MODE

Press and hold keys 1 and 6 for more than one second until you hear “Du Du” sounds to exit Try-Me Mode. Press the **On/Off Button** to turn the unit **On**.



# PRODUCT FEATURES

## 1. On/Off Button



To turn the unit **On**, press the **On/Off Button**. Press the **On/Off Button** again to turn the unit **Off**.

## 2. Five Activity Buttons



Press an **Activity Button** to enter a category to choose an activity.

## 3. Number Buttons



Press a **Number Button** to learn about numbers, counting and shapes.

## 4. Letter Buttons



Press the **Letter Buttons** to learn about letters and words in English and Spanish.

## 5. Mouse

Move the **Mouse** left and right to choose and confirm selections.



## 6. Backpack Button



Press the **Backpack Button** to enter the object quiz game.

## 7. Dora Button



Press the **Dora Button** to learn about cartoon characters and personalized information.

## 8. Map Button



Press the **Map Button** to take an adventure on the map by answering questions.

## 9. Settings Button



Press the **Settings Button** to set the volume and LCD contrast level, and to customize the user's name, age, favorite food, instrument and cartoon character.

## 10. Help Button



Press the **Help Button** to repeat the current response or question.

## 11. Backlight On/Off Button



Press the **Backlight On/Off Button** to turn the LCD backlight **On** or **Off**.

## 12. Background Music On/Off Button



Press the **Background Music On/Off Button** to turn the background music **On** or **Off**.

## 13. Automatic Shut-Off

To preserve battery life, the **Dora More to Explore Learning Laptop** will shut **off** automatically after several minutes of no input. The unit can be turned **on** again by pressing the **On/Off Button**. The unit will also automatically turn **off** when the batteries are very low.



# ACTIVITIES

## 1. Learn With Dora

This activity introduces numbers and counting, letters and words. Press the **Letter Buttons** to learn about uppercase and lowercase letters, and words. Press the **Number Buttons** to learn about numbers and counting.



## 2. Type With Dora

Users can practice typing words and expressions in this activity. Press the **Letter Buttons** to type words and expressions. Press the **Mouse** to currently typed letters.



## 3. Bridge Crossing

This is a quiz about uppercase and lowercase letters. There are two levels with 26 questions each. The questions in the first level are about uppercase letters, and those in the second level are about lowercase letters. Move the **Mouse** left or right to choose the correct letter and press the **Mouse** to confirm. Press a **Letter Button** to choose the correct letter.



#### 4. Missing Letter

This activity contains two levels with 26 questions each. The questions in the first level are words in capital letters with the first letter missing, and those in the second level are words in capital letters with any one of the letters missing. Move the **Mouse** left or right to choose the correct letter and press the **Mouse** to confirm. Press a **Letter Button** to choose the correct letter.



#### 5. Treasure Hunt

This activity is a quiz about shapes. Move the **Mouse** left or right to choose and press the **Mouse** to confirm the answer. Press the **Letter Buttons** to hear letters. Press the **Number Buttons** to hear numbers.



#### 6. Hangry Fish River

This activity is a quiz about counting numbers. Move the **Mouse** up or down to play the game (avoid fish or obstacles in the river). After the game finishes, use the **Mouse** or press a **Number Button** to answer a question about numbers. Move the **Mouse** left or right to choose and press the **Mouse** to confirm the answer.



## 7. Exploring Instruments

This activity is a quiz about instruments. Hear an instrument sound and its name, and then find it from several instruments. Move the **Mouse** left or right to choose and press the **Mouse** to confirm the answer. Press the **Letter Buttons** to hear letters. Press the **Number Buttons** to hear numbers.



## 8. Dance Party

Play music and change to different instruments in the music. Use the **Mouse** to choose one of the ten melodies to play. When the melody is playing, the screen will show a character dancing. Move the **Mouse** up or down and press it to add or remove instruments from the melody. Press the **Letter Buttons** to hear letters. Press the **Number Buttons** to hear numbers.



## 9. Spanish Discovery

Get introduced to Spanish words, letters, and numbers. Press the **Letter Buttons** to hear letters and words in English and then in Spanish. Press the **Number Buttons** to hear numbers in English and then Spanish.



## 10. Spanish Words

This activity is a quiz about Spanish words. Hear a word in Spanish, and then use the **Mouse** to choose the correct answer. Move the **Mouse** left or right to choose and press it to confirm the answer.



## 11. Map

Press the **Map Button** to answer quiz questions based on the location selected on the map. There are three locations on the map for each round. Users need to pass the locations one by one. Move the **Mouse** or press a **Letter** or **Number Button** to answer questions, depending on the activity.



There are a total of six locations: lake, bridge, mountain, beach, river and forest. Three of the locations will randomly appear on the map for each round.

**Bridge:** a question from Activity 3 will be given.

**Mountain:** a question from Activity 4 will be given.

**Beach / Sea:** a question from Activity 5 will be given.

**River:** a question from Activity 6 will be given.

**Forest:** a question from Activity 7 will be given.

## 12. Backpack

Press the **Backpack Button** to answer questions about objects. Move the **Mouse** left or right to choose and press it to confirm the answer. Press the **Letter Buttons** to hear letters. Press the **Number Buttons** to hear numbers.



## 13. Meet Dora's Friends

Press the **Dora Button** to meet characters from the Dora series and personalized information set by users. Move the **Mouse** left or right and press the **Mouse** to confirm a character to learn about. Press the **Letter Buttons** to hear letters. Press the **Number Buttons** to hear numbers.



## Customization

Press the **Settings Button**, and then move the **Mouse** to choose and enter the customization activity to set the user's name, age, and favorite food, instrument and character. The customized information will be shown in Activity 13.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **NOTE**

**This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced radio/TV technician for help.**

## **CAUTION**

**Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**Supplier's Declaration of Conformity**  
**47 CFR § 2.1077 Compliance Information**

**Trade Name:** VTech®  
**Model:** 5804  
**Product Name:** Dora More to Explore Learning Laptop  
**Responsible Party:** VTech Electronics North America, L.L.C.  
**Address:** 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
**Website:** vtechkids.com

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.**

**CAN ICES(B)/NMB(B)**



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

**Read our complete warranty policy online at  
*vtechkids.com/warranty*  
*vtechkids.ca/warranty***

