

## LIFETIME WARRANTY (U.S. AND CANADA ONLY)

Your Cuisinart® Advantage® Ceramica XT Nonstick Cookware is warranted to be free of defects in material and workmanship under normal home use from the date of original purchase throughout the original purchaser's lifetime.

### HASSLE-FREE REPLACEMENT WARRANTY

Your ultimate satisfaction in Cuisinart products is our goal, so if your Cuisinart® Cookware should fail within the generous warranty period, we will repair it or, if necessary, replace it at no cost to you. To obtain a return shipping label, email us at [www.cuisinart.com/customer-care/product-return](http://www.cuisinart.com/customer-care/product-return). Or call our Consumer Service Center toll-free at 1-800-726-0190 to speak with a representative.

This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discoloration or other damage to external or internal surfaces which does not impair the functional utility of the cookware.

This warranty also expressly excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (a) to the store where it was purchased or (b) to another retail store which sells Cuisinart® products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility, if service or repair can be economically accomplished. Cuisinart, and not the consumer, will be responsible for the reasonable cost of such service, repair, replacement or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190. To obtain a return shipping label, email us at

[www.cuisinart.com/customer-care/product-return](http://www.cuisinart.com/customer-care/product-return).

Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.

# Cuisinart

ADVANTAGE® CERAMICA XT  
NONSTICK COOKWARE



## USE AND CARE GUIDE

# CUISINART ADVANTAGE® CERAMICA XT NONSTICK COOKWARE

*Congratulations on your purchase of Cuisinart® Cookware! Designed from the inside out for today's gourmet chef, Cuisinart® Cookware combines uncompromising, superior cooking performance with naturally derived ceramic surface. We guarantee you a lifetime of good cooking with your Cuisinart® Cookware.*

---

## ■ BEFORE USING FOR THE FIRST TIME

Remove all labels. Wash cookware in warm water with a mild dish soap. Rinse thoroughly in warm water and wipe dry with a soft dish towel.

## ■ HEALTHIER COOKING, EASY CLEANING

When cooking with your Cuisinart Advantage® Ceramica XT Nonstick Cookware, you do not need to add oil or butter to prevent foods from sticking. If you wish to enhance the flavor and appearance of foods, you need add only a minimum amount to the nonstick surface of your cookware.

## ■ ENERGY-EFFICIENT COOKING

Select a burner size that matches the diameter of the bottom of the pan. When cooking over a gas burner, make certain that the flame touches only the bottom of the pan. If the flame extends up the sides of the pan, energy is wasted.

## ■ ESSENTIAL PRECAUTIONS

Never use Cuisinart Advantage® Ceramica XT Nonstick Cookware on high heat or food will burn. The aluminum core of this cookware heats quickly and its even heat distribution prevents hot spots. We recommend using a low to medium setting for most cooking. To boil water, medium-high is sufficient. Never leave Cuisinart® Cookware or any pan empty over a hot burner. Doing so can ruin the pan and void the warranty, and cause damage to the stovetop.

## ■ COOKING ON A GLASS STOVETOP

To avoid scratching a glass cooktop, do not slide cookware on the glass surface. Please consult your glass cooktop manual for information and recommendations on use.

## ■ OVEN COOKING TEMPERATURE

Cuisinart Advantage® Ceramica XT Nonstick Cookware can be used in the oven up to 350°F for short amounts of time, not to exceed 20 minutes. Using Cuisinart® Cookware in the oven will cause the handles as well as the pan to become hot. Use oven mitts when removing the cookware from the oven. **DO NOT** place Cuisinart® Cookware under the broiler.

## ■ PROPER COOKING UTENSILS

We recommend using plastic or wooden utensils in your Cuisinart Advantage® Ceramica XT Nonstick Cookware to maintain its appearance and performance. Refrain from cutting foods or using sharp utensils such as forks, knives, mashers or whisks that can scratch the cooking surface. Slight surface marks and abrasions are normal and will not affect the performance of the Ceramica® XT coating.

## ■ EASY MAINTENANCE

Let your Cuisinart Advantage® Ceramica XT Nonstick Cookware cool before cleaning. Cookware should be washed by hand with hot, sudsy water and a soft mesh-wrapped sponge or soft dishcloth. Do not use steel wool or other metal or abrasive pads that can scratch your cookware. Do not soak cookware in water for an extended period of time as this can affect the nonstick performance. After washing, rinse thoroughly and dry immediately. **NOTE: Do not put in the dishwasher, since harsh detergents will harm the exterior and interior finish.**

## ■ CLEANING THE EXTERIOR

Cuisinart Advantage® Ceramica XT Nonstick Cookware has a smooth exterior finish, making it easier to clean and maintain. Food residue or buildup on the exterior of your cookware can easily be removed with hot, soapy water and a scrub pad. The exterior of Cuisinart® Cookware, like other brands, may show wear with continuous use. This condition will not in any way affect the superior cooking performance of your cookware.

## ■ CONVENIENT STORAGE

Hanging pans by their handles on a Cuisinart® Cookware rack provides convenient, safe storage for your Cuisinart® Cookware. Do not store cookware in direct sunlight. **Use care if you store your cookware in cabinets or drawers. Careless stacking and crowding may cause scratches or chipping of the ceramic interior surface.**