

Capresso

H2O GLASS
SELECT

Rapid Boil Kettle



Model #244.05
1500W / 120V / 60Hz

- Operating Instructions
- Warranty

Read all instructions before operating the appliance

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Do not touch hot surfaces. Use handles or knobs.
2. To protect against fire, electric shock and injury to persons, DO NOT IMMERSE CORD, PLUG, OR POWER BASE UNIT in water or other liquids.
3. Close supervision is necessary when any appliance is used by or near children. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
5. Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
6. Always use the appliance on a dry level surface.
7. Do not leave the appliance unattended when in use.
8. Never insert a finger, or anything else in the spout of the kettle during operation as scalding or other serious injury may occur.
9. Do not leave water standing in the kettle for prolonged periods of time. When finished using the kettle always discard any remaining water.
10. The use of accessory attachments not recommended by Capresso may result in fire, electric shock, or injury to persons.
11. Do not use outdoors.
12. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
13. Do not place on or near a hot gas or electric burner, or in a heated oven.
14. Always fill the kettle first, then set the appliance onto the power base, and finally plug cord into outlet. To disconnect, remove kettle from power base, then remove plug from wall outlet.
15. Do not use this appliance for other than intended use.
16. Always make sure that lid is closed during operation. Scalding may occur when lid is open during operation.
17. To avoid scalding, never fill above the "MAX" line marking on the kettle.
18. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
19. Extreme caution must be used when moving the kettle containing hot water.

SPECIAL CORD SET INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

1. A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a long cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If an extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.
 - c. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.

**SAVE THESE INSTRUCTIONS.
FOR HOUSEHOLD USE ONLY.**

Warning! To reduce the risk of fire or electric shock, do not remove any service covers. There are no user serviceable parts inside. Only authorized personnel should repair the appliance.


Please read all of the instructions in this manual carefully before you begin to use this appliance. Proper care and maintenance will ensure a long life and a trouble-free operation for this appliance. Please save these instructions and refer to them frequently for cleaning and care tips.

Fig. 1



CAUTION: Handle kettle carefully, the metal housing and glass surface will become hot during and after heating

Fig. 2

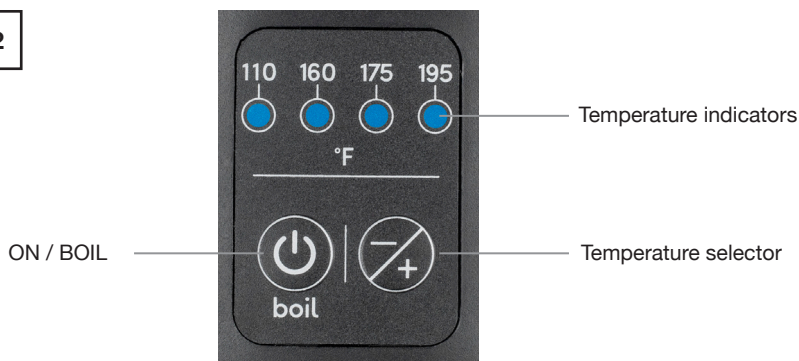

ON / BOIL button:

Pressing this button will turn the kettle on. If you do not select a specific temperature, the kettle will start boiling the water to 212° F.

TEMP SELECT button:

When pressing this button, you can select either 110° F, 160° F, 175° F or 195° F

BEFORE USING FOR THE FIRST TIME

Read all important safeguards and operating instructions before using this kettle. Discard the first two filling of boiling water to remove any dust and residues from the manufacturing process.

Tips for the H2O Glass Select Kettle:

- Never position the lid handle towards spout while water is heating up or boiling.
- Never boil water while the lid is open. Hot steam may cause injuries and may damage wooden panels in your kitchen.
- Never try to remove the lid while water is heating up or boiling.
- Only remove the lid when water is not boiling.
- Never fill kettle with anything but water.
- Do not add instant soups or any other soluble to the kettle.
- Do not use the kettle to thaw food of any kind.
- Do not use the kettle to make sauces or to melt cheese, butter or any other items.
- Never immerse the kettle in any liquid. Never put kettle or base in the dishwasher.
- Lid is not attached to the kettle.
- The lid should only be removed with 2 fingers and never with only your thumb.
- To remove the lid, use 2 fingers to avoid the lid from popping off the top of the kettle.
- The max capacity is 2.0L (8 cups) – do not fill water past the 2.0L mark.

USING YOUR WATER KETTLE

1. To fill the kettle, remove it from the power base and fill with the desired amount of water. The water level should not exceed MAX marks or sit below MIN level. Too little water will result in the kettle switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

2. Place the kettle back onto the power base and plug the cord into the outlet.

NOTE: Designed power base can be rotated by 360 degree to facilitate the plug connecting with power outlet.

3. Function: when you place the kettle onto the power base, all the four indicators in the control panel turn on and one beep can be heard. At the same time, the indicator in the kettle lights up in red, green, blue in sequence and then turns off, and the indicators in the control panel turn off simultaneously, together with one beep heard.

NOTE: The kettle will illuminate in different colors for specific desired temperatures

Different colors indicate different temperatures: The indicator in the kettle will illuminate in different colors under different water temperature at any condition.

Each color corresponds to the following: 110°F – green, 160°F – blue, 175° F – yellow, 195° F – purple and 212°F boil – red

How to boil water

Place the kettle onto the power base, press boil button and the kettle starts to heat the water up. The kettle will illuminate in red around the base of the kettle. When the water temperature reaches boil (at 212° F), the red indicator in the kettle will turn off and will beep twice.

Note: when in boil mode, the temperature indication lights do not illuminate but the kettle will light up red.

How to heat water to selected temperature

Put the kettle onto the power base, press +/- button to select your desired water temperature (110° F, 160° F, 175° F, or 195° F) and its corresponding indicator turns on. Press the boil button so the kettle starts to heat the water to the selected temperature. When the water reaches the selected temperature, indicator lights turn off and the kettle will beep twice.

How to keep water warm at the selected temperature

Press +/- button on control panel and select your desired keep-warm temperature. After the desired temperature is selected (either 110° F, 160°F, 175° or 195° F), the corresponding color indicator light turns on and the kettle will begin to heat up.

Press and hold the boil button for 3 seconds or long press the +/- button and the kettle will enter into keep-warm mode after heating the water to the selected temperature.

The blue indicator of the selected keep-warm temperature will keep blinking once. When the water temperature reaches selected temperature, it will beep once and the kettle will enter into keep warm mode. After keeping warm for 30 minutes, the kettle will automatically shut off and all indicator lights will turn off.

Helpful hints:

- Never try to boil water with the lid open.
- Do not leave water standing in the kettle. Discard unused water.
- If the kettle takes longer to boil or heat than usual, please follow descaling instructions below.

Dry boil shut-off protection

If you turn the kettle on without water in the kettle, the indicator lights and heater will shut off after a few seconds. Allow the kettle to cool down before filling with water. The thermostat will reset after a few minutes

Cleaning

- Always unplug cord of power base before cleaning.
- Make sure kettle is cold.
- Removable scale filter located in the spout can be pulled up and out for cleaning. Run the filter under hot water and rub with a cleaning cloth or brush.
- Clean the exterior surface with a clean, damp, soft cloth.
- Never use abrasive cleaners, steel wool, chemical cleaners or scouring agents to clean the kettle.
- Rinse out kettle and wipe dry with a soft, lint-free cloth.

Attention:

- Over time the stainless steel inside of the kettle may change color slightly. This is caused by the intense heat of the heating element, especially if the kettle was turned on repeatedly without water. This will not diminish the performance of the kettle in any way.
- If your water has a high calcium content, calcium deposits might dull the inside. Follow the instruction below for decalcification.

Decalcification

Hard water can leave calcium spots inside the kettle that can slow down boiling time. Use a commercial descaling agent, like Capresso Cleaning Solution and follow the instructions that come with the agent.

NOTE: Make sure kettle is cold when decalcifying.

Use of vinegar

You can also use white vinegar to descale the inside. Fill the kettle with 2 cups of water (16 oz) and add 6 tablespoons of white vinegar. Bring to a boil. Discard the solution and repeat if necessary. Rinse the kettle once or twice with fresh cold water.

LIMITED ONE-YEAR WARRANTY

This warranty covers your Capresso machine Model #244.05. This warranty is in effect for one year from the date of the first consumer purchase. This warranty covers all defects in materials or workmanship (parts and labor) **EXCEPT THE BREAKAGE OF GLASS**. Capresso will repair or replace your machine within one year from the date of the first consumer purchase.

The warranty does not cover:

- Any machine not distributed by Capresso.
- Any machine not purchased from an Authorized Capresso Dealer.
- Commercial use of the machine.
- Damage caused by accident, abuse, negligence, misuse, improper operation or failure to follow instructions contained in this manual.
- Any service or alteration performed by an unauthorized person, company or association.
- Any used machines bought at auctions and unauthorized websites.
- Any breakage of the glass itself

Other limitations and exclusions:

Any implied warranties including fitness for use and merchantability are limited in duration to the period of the express warranty set forth above and no person is authorized to assume for JURA any other liability in connection with the sale of the machine. JURA expressly disclaims liability for incidental and consequential damages caused by the machine. The terms “incidental damages” refers to the loss of the original purchaser’s time, loss of the use of the machine or other costs relating to the care and custody of the machine. The term “consequential damages” refers to the cost of repairing or replacing other property which is damaged when this machine does not work properly. The remedies provided under this warranty are exclusive and in lieu of all others. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Customer Service

1-800-767-3554

Mon-Thu 8AM – 9PM • Fri 8AM – 8PM • Sat 9AM – 5PM

Eastern Time Zone

contact@capresso.com

JURA Inc.

20 Craig Road, Montvale, NJ 07645

201-767-3999 • Fax: 201-767-9684

www.capresso.com