

# **SETUP AND OPERATION GUIDE**

*Recliner and Lift Chair Collection*

## TABLE OF CONTENTS

Important Safety Instructions .....	2
<b>Assembly of Your Lift Chair</b>	
Cord and Transformer Connections .....	3
Chair Assembly .....	4
Installation of Back-up Batteries .....	5
Trouble Shooting .....	5
Customer Service .....	6

### **Note:**

When placing the furniture on non-carpeted flooring, Theorem recommend the use of floor protection such as an area rug or furniture pads. Area rugs and padding not included with purchase.

- **NOTE:** This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with appliance.

# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING.

**WARNING:** To reduce the risk of burns, fire, electric shock, or injury to persons:

1. **DANGER:** To reduce the risk of electric shock—Always unplug this furnishing from the electrical outlet before cleaning.
2. Unplug from outlet before putting on or taking off parts.
3. Close supervision is necessary when used by or near children, or disabled people.
4. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
5. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any object into any opening.
8. Do not use outdoors. Just for household indoor use only.
9. To disconnect, turn all controls to the off position, then remove plug from outlet.
10. **WARNING:** Risk of Injury – Keep children away from extended foot support.
11. **WARNING:** Risk of Injury to Persons—do not use this furnishing to support video equipment such as televisions or computer monitors.
12. When not in use, it is recommended that the wand be stored securely in the pocket on the outside of the arm.

## SAVE THESE INSTRUCTIONS.

## SERVICING OF DOUBLE-INSULATED PRODUCTS.

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product, nor is a means for grounding to be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system, and is to be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace.

 
Once the box has been removed from around the chair, you'll notice the back is laying on top of the seat. There are a couple items to remove from the seat portion of the chair first. Follow the steps below:

- ## 2 Side Control or Remote



## CHAIR ASSEMBLY

### ATTACHING THE CHAIR BACK TO THE CHAIR BASE

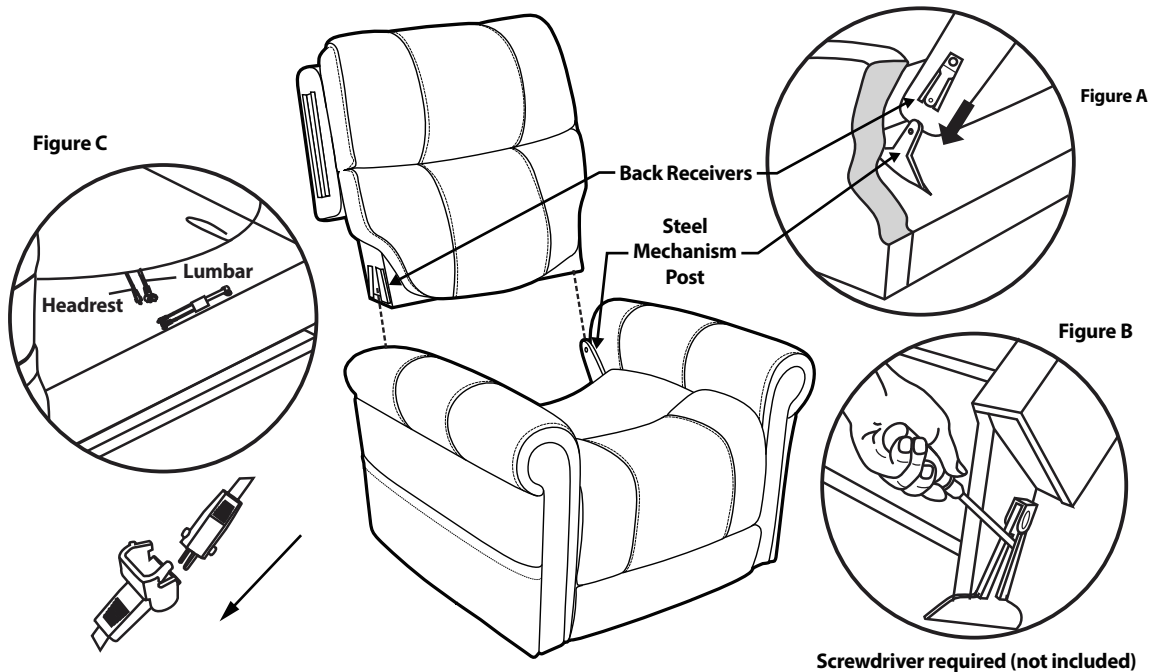


**CAUTION:** PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING ASSEMBLY PROCESS. IT IS RECOMMENDED TO USE TWO PEOPLE WHEN ASSEMBLING AND REMOVING THE INSIDE BACKS TO AND FROM THE BASE OF THE FURNITURE.

- STEP 1: Slide inside back receivers onto the steel mechanism posts in the base of the chair. (Figure A)
- STEP 2: Press both sides of the back firmly into place until the back automatically locks into place.
- STEP 3: To remove the back from the base, use a screwdriver pressing outward on the black tab in the metal receivers on both sides of the chair back and lift the back from the base of the chair. (Figure B)
- STEP 4: Connect the Headrest and Lumbar cable plugs (Figure C). Headrest-only models consist one less set of cables.

### ATTACHING THE CHAIR WINGS TO THE CHAIR BACK \*

 
- STEP 1: Slide the metal inserts on the chair's wings into the metal sleeves on the side of the chair back.
- STEP 2: Slide the wings down until they are completely set on the backs meta sleeves.

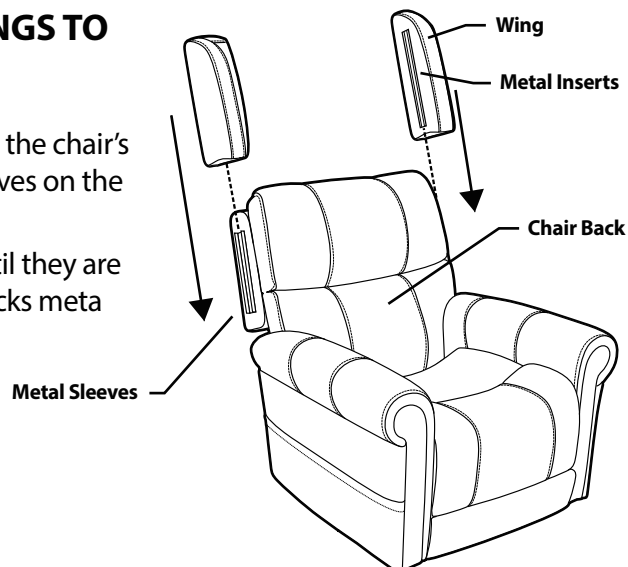

## INSTALLATION OF BACK-UP BATTERIES

2 - 9 Volt back-up batteries will lift the chair from the reclined position to the seating position **one cycle** in case of a power failure. If a power failure occurs and the chair is cycled, the 2 - 9 volts batteries will need to be replaced.

 1. Remove the sliding door on the side of the transformer to locate the 2 - 9 volt batteries.
2. Pull out the 2 - 9 volt batteries and replace with new batteries.
3. Replace door on the transformer.
4. **Batteries not included.**

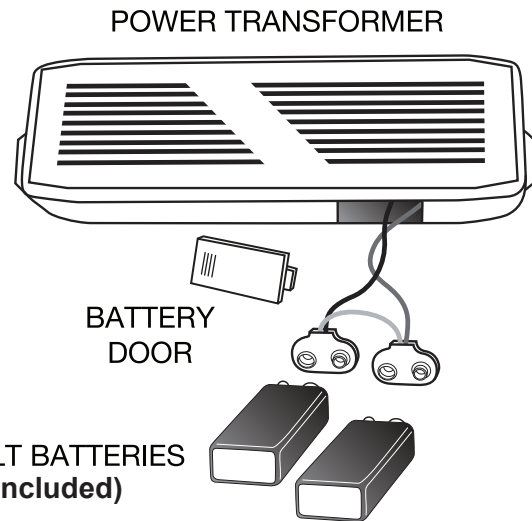

## TROUBLE SHOOTING

PROBLEM	POSSIBLE FACTORS	SOLUTIONS
Chair doesn't recliner or lift	Transformer may not connected well	<ul style="list-style-type: none"><li>• Check the power supply has been correctly connected to socket</li><li>• Confirm the wire from chair to transformer is firmly connected"</li></ul>
Headrest or Lumbar doesn't work	Headrest or lumbar motor may not connected well	<ul style="list-style-type: none"><li>• Check the headrest and lumbar motor has been correctly connected to socket</li></ul>
Headrest and lumbar work oppositely	Headrest and lumbar motor plug	<ul style="list-style-type: none"><li>• Check the headrest and lumbar motor has been correctly connected to socket</li></ul>
The hand wand doesn't work	Hand wand may not connected well	<ul style="list-style-type: none"><li>• Check the hand wand cord has been correctly connected to socket</li></ul>
APP doesn't work	Out of the range of bluetooth	<ul style="list-style-type: none"><li>• Close the chair, the effective bluetooth range is <math>\leq 32.8</math> Feet</li></ul>
APP doesn't work	The version of APP is not newest	<ul style="list-style-type: none"><li>• Update the version and reset the chair</li></ul>

## **Customer Service**

If you have any questions regarding the use of this unit, or find that your unit needs service, please contact your retailer



- **NOTE:** This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.