


# ASSEMBLY INSTRUCTIONS

## WESTON 7DR DRESSER

### Model #12137

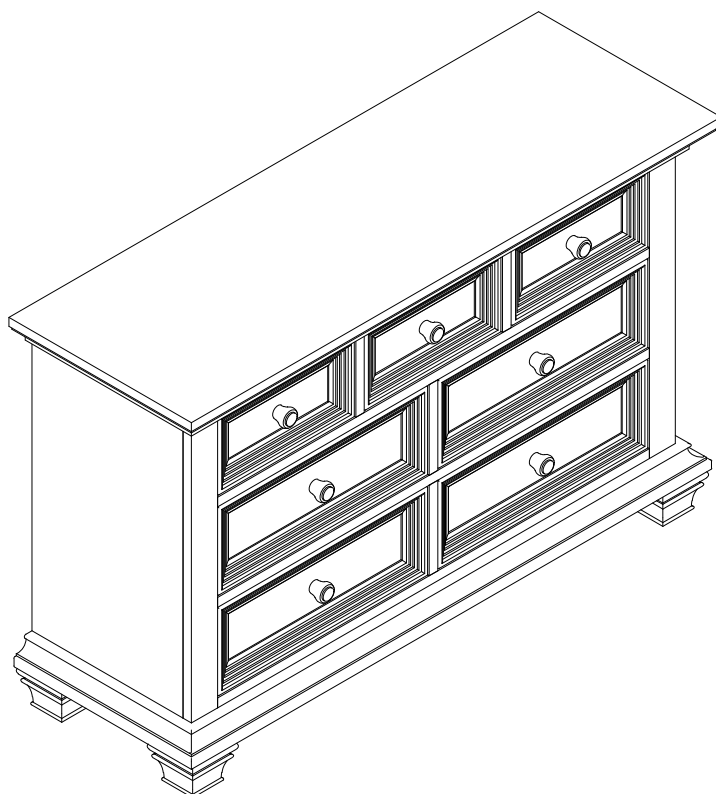

# Thank you for your purchase!

Remove all parts and hardware from the box and lay on a carpeted or scratch -free work surface.  
Do not dispose of any contents until assembly is completed.


## TOOLS REQUIRED:

ALLEN KEY (Included)




## PARTS ENCLOSED IN CARTON

A. Dresser (1 pc)

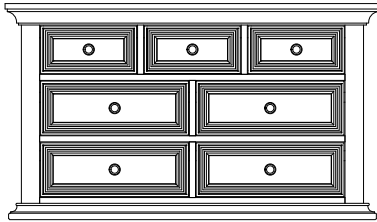

 B. Foot (4 pcs)




C. Center leg (1 pc)



## HARDWARE

 (D) Allen Bolt 3-1/2" (90 mm) (4 pcs)



(E) Spring washer (4 pcs)



(F) Allen key (1 pc) (length may vary)



Do not fully tighten all bolts until all parts are in place.  
(please add an extra 1/2 revolution to the bolts when using spring washer after tightening)



## STEP 1 "ASSEMBLY OF DRESSER"

**THIS STEP REQUIRES :** (F) Allen key (1 pc) (length may vary)

(E) Spring washer (4 pcs)

- A. Dresser (1 pc)
- B. Feet (4 pcs)
- C. Center leg (1 pc)

(D) Allen Bolt 3-1/2" (90 mm) (4 pcs)

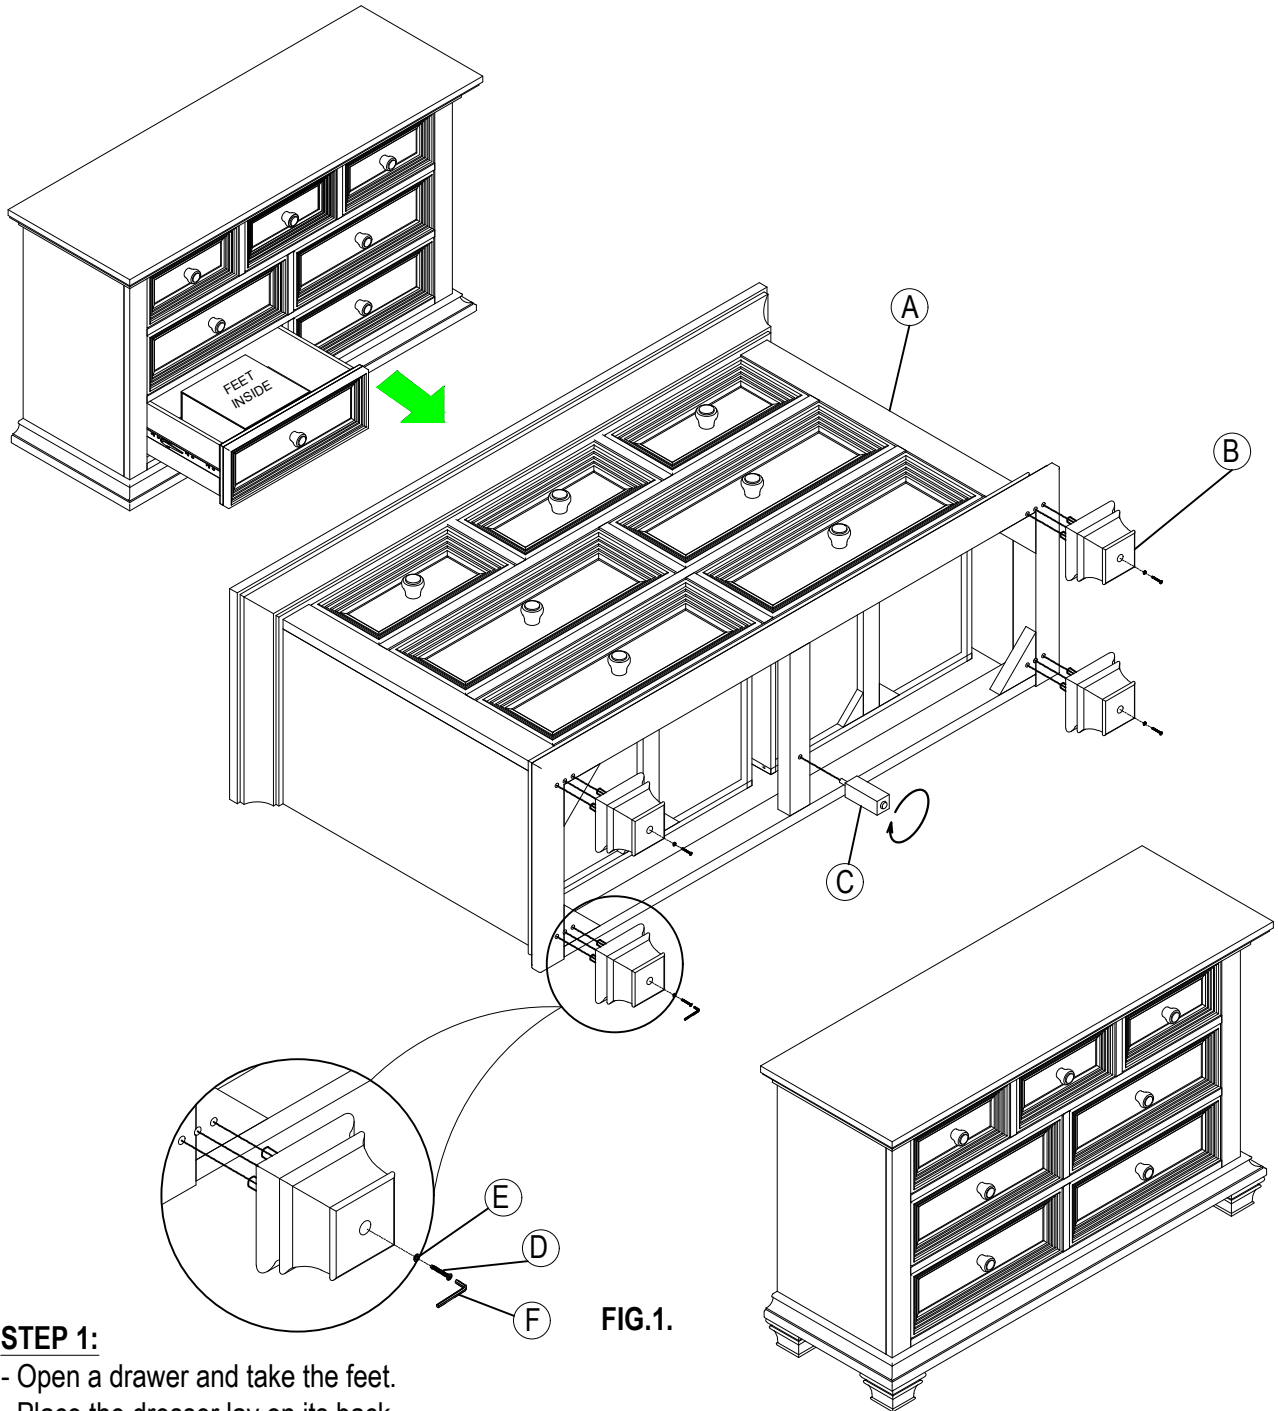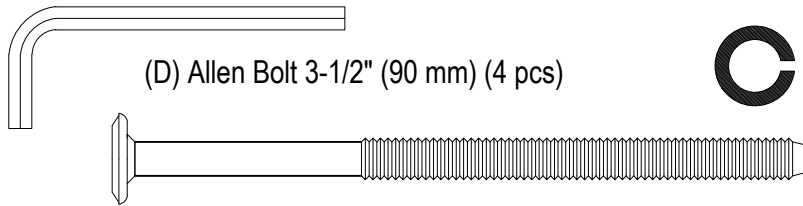

### STEP 1:

- Open a drawer and take the feet.
- Place the dresser lay on its back.
- Attach feet to dresser bottom frame through pre-assembled dowels.
- Secure feet by using Allen bolt (D), Spring washer (E). Tighten all bolt with Allen key (F).
- Attach Center leg (C) to dresser support bar by turning clockwise. Adjust center leg leveler to accommodate for uneven floor. Flip back the dresser. Complete assembly as shown in FIG.1.

FIG.1.