 


# INSTRUCTIONS

## List of Parts:

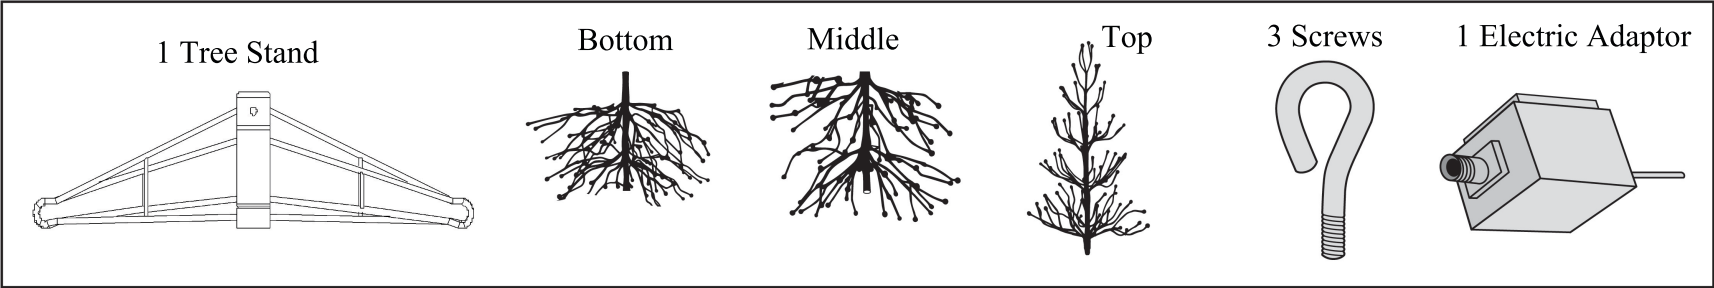

## HELPFUL HINTS

Read instructions completely before you assemble your tree. The model number of your tree is printed on the side of the carton. Always use this number to identify your tree if any question arises.  
Save the carton for storing your tree. Use miniature tree lights.  
The stand shown here may differ from the stand supplied with your tree.

### USE

To operate, plug the adaptor into an electrical outlet.  
Press the button on the control box to control the light functions of the tree.

 
 


Press the button on the control box to operate the light functions.  
Press the button one time for Combination  
Press the button two times for In Waves  
Press the button three times for Sequential  
Press the button four times for Slow Glow  
Press the button five times for Chasing/Flashing  
Press the button six times for Slow Fade  
Press the button seven times for Twinkle/Flash  
Press the button eight times for Steady On

## ASSEMBLY

- Remove the green protective covers from the shafts on parts A and B
- Assemble the sections as shown. Secure parts tightly.
- Shaping – Work from branches closest to pole.  
Fan out branches one to the left, one to the right and one at the center of the main stem. To alternate branches so that they do not line up one behind the other. At the end of the stem, the center branch tip should extend straight out. Curve each branch slightly to provide a nature look.
- Shaping at the top – Pull down branches of lowest layer in an even circular pattern repeat for each layer, working toward the top branch.  
Curve each branch straight up into position. Bend the top branch straight up into position.

Storage tips:  
Remove all lights and ornaments  
DO NOT store the tree in a damp area where the temperature is over 40°

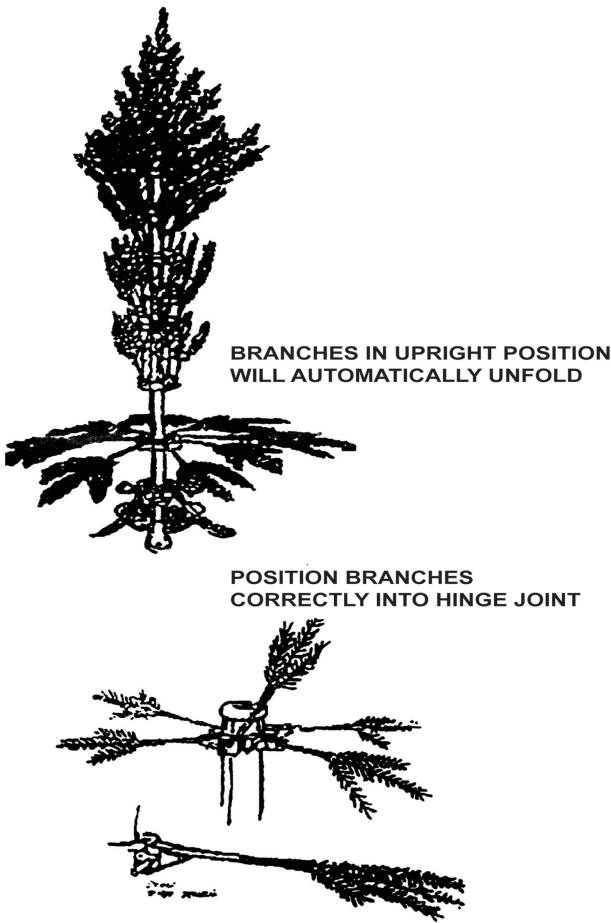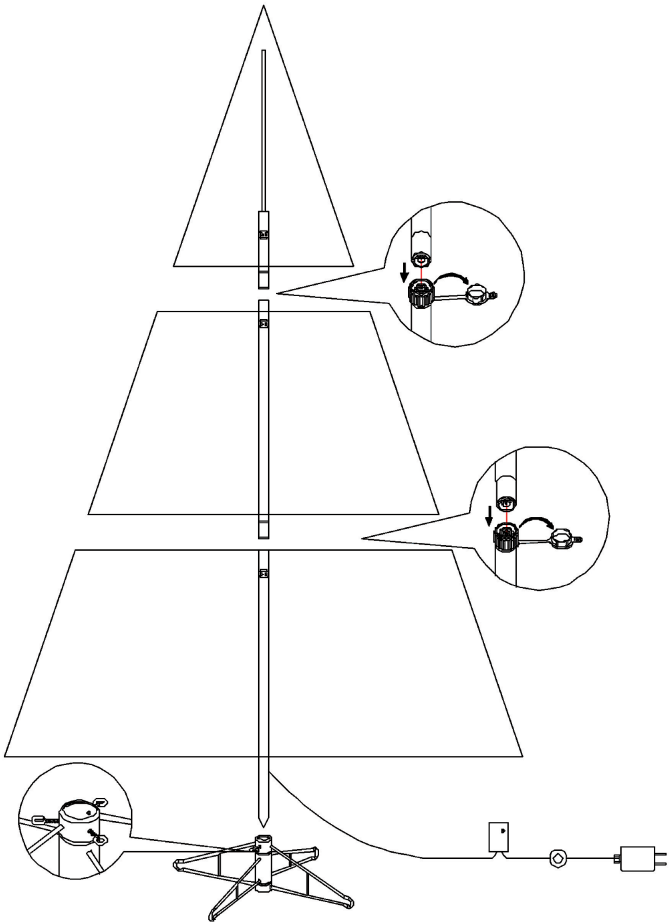

### CARE INSTRUCTIONS:

Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lamp holders, loose connections, or exposed copper wire. Before storing the product, carefully remove the product from wherever it is placed to avoid any undue strain or stress on the product conductors, connections, and wires.  
When not in use, store neatly in a cool, dry location protected from sunlight.

### TROUBLESHOOTING:

- If your tree does not light up, please check the following.
- Check that all plugs are properly connected.
  - Check wall outlet for power.
  - Check for loose, missing, or broken bulbs.

### STORAGE:

Unplug extension cord from the wall outlet and remove all ornaments and decorations. (Except for decorations attached at factory.)  
Unplug each section of extension cord, keep each stack of lights connected together. Gently lift off the top and middle sections, and remove the bottom section from the tree stand. Carefully replace the tree in its box and tape it shut. Store the box at a dry and cool place.

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- When using electrical products, basic precautions should always be followed including the following:
- The product is for indoor use only.
  - To reduce the risk of fire, do not deliberately reposition either bulb or lamp holder contact.
  - Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
  - This seasonal use product is not intended for permanent installation or use.
  - Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
  - Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
  - Do not let lamps rest on the supply cord or on any wire.
  - Unplug the product when leaving the house, when retiring for the night, or if left unattended.
  - Do not use this product for other than its intended use.
  - Do not hang ornaments or other objects from cord, wire, or light string.
  - Do not close doors or windows on the product or extension cord as this may damage the wire insulation.
  - Do not cover the product with a cloth, paper or any material not part of the product when in use.
- Read and follow all instructions that are on the product or provided with the product.