INSTALLATION INSTRUCTIONS

Framed cabinetry
ActiveSmart™ Built-in refrigerator

RS36A80J and RS36A80U models


US CA

Fisher&Paykel

www.fisherpaykel.com

843155 B 08.15

NOTE: PRODUCT IS DESIGNED FOR FLUSH INSET INSTALLATION ONLY

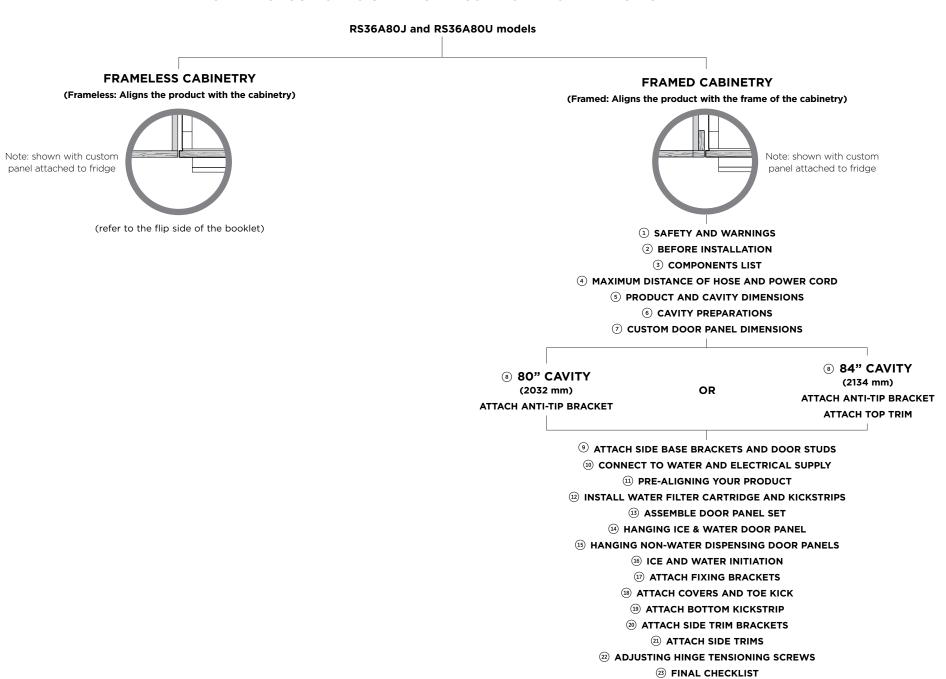

1) SAFETY AND WARNINGS



BEFORE INSTALLATION

A WARNING!



Electric Shock Hazard

Read and follow the safety and warnings outlined in this installation instructions guide before operating this appliance.

Failure to do so can result in death, electric shock, fire or injury to persons.

A WARNING!



Cut Hazard

Take care - panel edges are sharp. Failure to use caution could result in injury or cuts.

A WARNING!



This appliance is top-heavy and must be secured to prevent the possibility of tipping forward.

To ensure that the appliance is stable under all loading conditions, the anti-tip bracket and fittings supplied must be installed according to the following installation instructions by a professional installer.

Please follow the installation steps below to ensure your appliance is installed and operates correctly.

Power

- To ensure that the appliance is not accidently switched off, connect your refrigerator to its own isolating switch. Do not plug in any other appliance at this isolating switch.
- For power requirements, please refer to the information on the serial plate. This is located at the front right-hand side of the drawer when open.
- It is essential that the appliance is properly grounded (earthed).
- Connect the appliance to the electrical supply (115 VAC, 60 Hz) with the fitted plug and lead.
- Follow the National Electrical Code and all local codes and ordinances when installing this
 product.
- Warning: Ground Fault Circuit Interrupters (GFCI) may trip during normal operation of your refrigerator and interrupt the power supply. The use of a GFCI is not recommended with this product.

Location

- Your refrigerator should not be located in direct sunlight or next to any heat generating appliance such as a cooktop, oven or dishwasher.
- Your product is fitted with front and rear rollers designed for moving the product in forwards and backwards direction.
- Avoid moving the product in a sideways direction as this may damage the rollers or the floor covering/surface.

Plumbing

- Your product must be installed by a qualified appliance installer as incorrect plumbing can lead to water leaks.
- Fisher & Paykel Appliances does not accept responsibility for damage (including water damage) caused by faulty installation or plumbing.

Door panel set

 
- The standard appliance does not include a door panel set.
- When designing custom door panels, these are only available for non-Water dispensing models.
- To complete the integrated appliance for non-Water dispensing models the customer should supply their own custom door panel set. All the hardware required to mount the door panel sets to the refrigerator doors is supplied.
- Fisher & Paykel door panel sets are available (EZKleen stainless steel door panels, model numbers: RD3680, RD3680U, RD3684 and RD3684U), and can be purchased through your Fisher & Paykel dealer.

IMPORTANT!


SAVE THESE INSTRUCTIONS




Door panel fittings - Included with standard appliance.



French door hanging bracket (2)

 

Drawer hanging bracket (1)

 

Side bracket (10)



Side strap (10)



M5 x 10 pan head Phillips screw (10)



#8 x 16 mush washer screw (46)



M8 stud (6)



 
M8 washer (6)



M8 nut (6)



Top cover (4)




Side cover (10)

Anti-tip bracket fittings - Included with standard appliance.



 Anti-tip bracket (1)



#10 x 40 pan head Phillips screw (4)




Masonry plug (4)

(3)


Optional accessories - The standard appliance does not include a door panel set.

Fisher & Paykel door panel sets are available (EZKleen stainless steel door panels). To complete the integrated appliance for non-Water dispensing models the customer should supply their own custom door panel set.

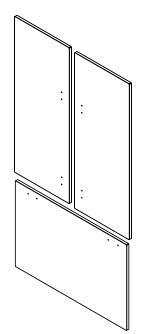

Non-Water dispensing French panels (2) Drawer panel (1) Model number: RD3680 or RD3684

 Non-Water dispensing French panel (1) Ice & Water French panel (1) Drawer panel (1) Model number: RD3680U or RD3684U



Door handle (3)



M5 x 25 pan head socket screw (12)

 


M5 x 14 Mush Phillips SS (34)


Water fittings - Included with the standard appliance




Collet locking key
(1)



 Water filter cartridge (1) Part number: 81099



Filter cartridge tool

 

1/4" (6 mm) Adaptor (1)




 $\frac{1}{4}$ " comp. Stainless Steel braided hose (1)



 
External display module (1) (included with RS36A80U standard appliance)



Product hardware - Included with standard appliance.

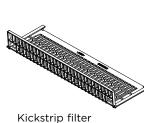










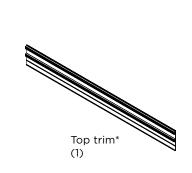

Kickstrip filter (1)




Bottom kickstrip grille (1)

#8 x 5%" (16 mm) pan head screw (3)

 3 8 °






Air divider




Screw cover (4)



 Side trim bracket (6)



Fixing bracket (4)

 

Installation aiders (4) (required for Frameless cabinetry installation)



(2)

 
M5 nut (4)



M5 x 8 pan head Phillips screw (4)



M5 x 8 countersunk Phillips screw (12)




Side base bracket (2)




#8 x 19 twin thread screw (8)



Hinge limiting pin (1)

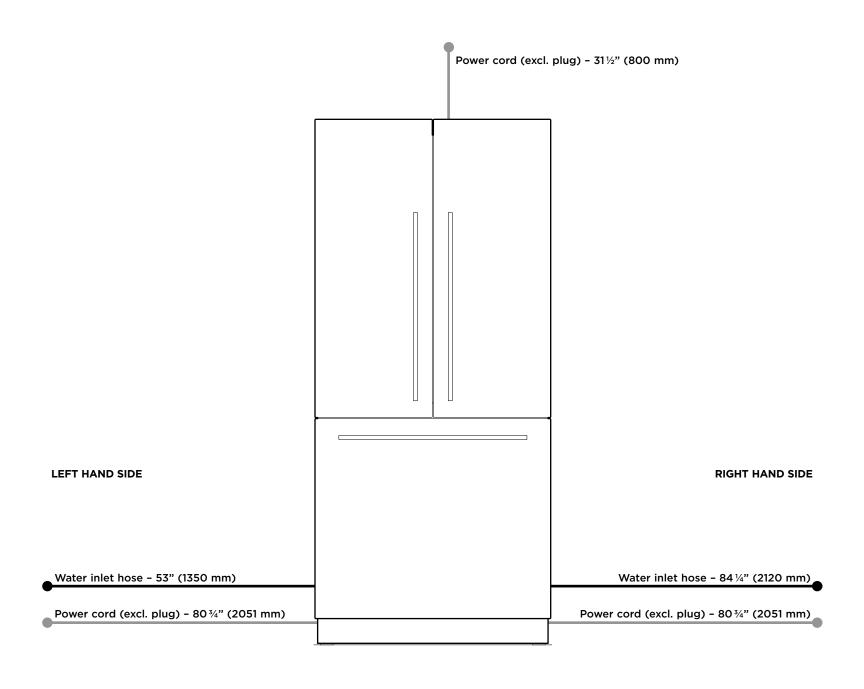

5 PRODUCT AND CAVITY DIMENSIONS

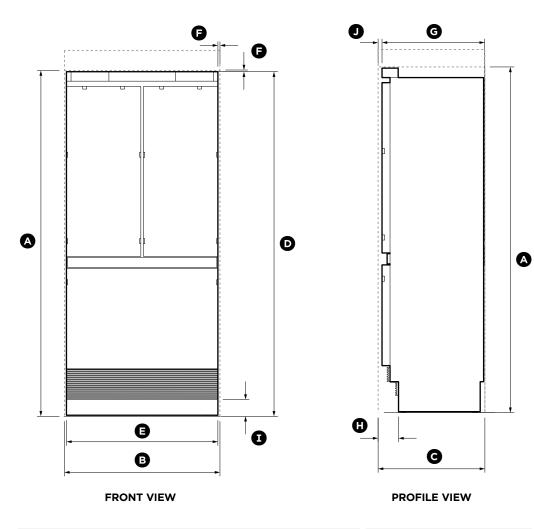


CAVITY DIMENSIONS	inches (mm)
Overall height of cavity	80/84" (2032/2134)
Overall width of cavity	36" (914)
© Overall depth of cavity	24¾" (629)

Total front panel width with required gaps at sides = 36" (914 mm). (Refer custom door panel dimensions section – panel width + $2 \times (\mathbf{F})$ cabinetry gaps).

RS36A80J model shown only.

When designing custom door panels, these are only available for non-Water dispensing models.

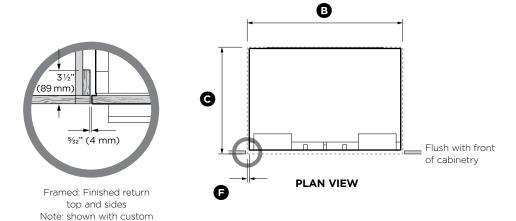

PRODUCT DIMENSIONS	inches (mm)
Overall height of product*	79 27/32" (2028)
© Overall width of product	35 1/32" (890)
F Minimum cabinetry gap clearance from edge of custom panels**	5/32" (4)
Overall depth of product (excluding front door panels)	23¾" (603)
(H) Depth of toe kick (measured from front of door panels***)	4 3/4" (120)
① Height of toe kick*	4 - 6" (102 - 152)
① Depth of product front panels (excludes handles)***	³⁄₄" (19)


^{*} Includes mounted feet.


panel attached to fridge

^{**} Refer to custom door panel dimensions section.

^{***}Door panels and toe kick to be manufactured and fitted by cabinetmaker, maximum thickness ¾" (19 mm).



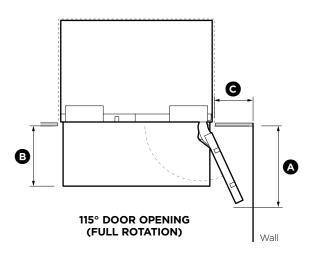

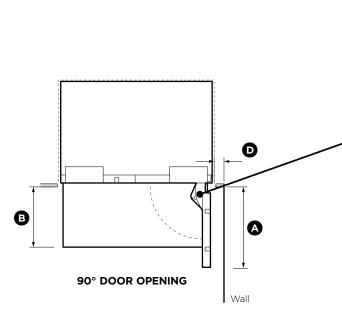

For 90° door swing a hinge limiting pin is supplied with your appliance. This pin fits in the boreholes of the top hinge (refer to \mathbf{Z}).

WARNING!

Before opening doors to the product, ensure the product is on its base packer and the polystyrene stability blocks are still in place. Failure to follow these instructions could lead to serious injury or death.


- 1 Open door to 90°.
- **2** Using a hammer, drive the hinge limiting pin through the boreholes which are now vertically aligned.

DOOR CLEARANCE DIMENSIONS	inches (mm)
Depth of door (widest opening) measured from front of cabinetry	18 2 3 2" (480)
Depth of drawer (open) measured from front of cabinetry*	14 3/16" (360)
© Minimum door clearance** to adjacent wall (115° - full internal access)*	12 13/32" (315)
Minimum door clearance** to adjacent wall (90° - reduced internal access)*	4 11/32" (110)

^{*} Does not include the custom door panels or handles to be manufactured and fitted by cabinetmaker.


^{**} Measured from front cabinetry edge.

5) PRODUCT AND CAVITY DIMENSIONS - WITH RD3680 DOOR PANEL SET

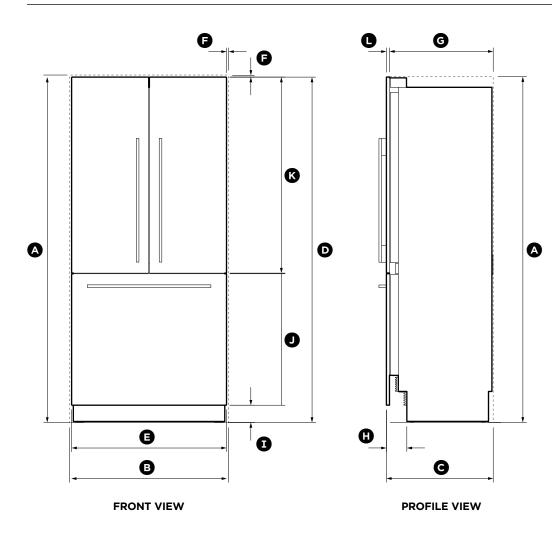

CAVITY DIMENSIONS	inches (mm)
Overall height of cavity	80" (2032)
Overall width of cavity	36" (914)
© Overall depth of cavity	24¾" (629)

Total front panel width with required gaps at sides = 36" (914 mm) ($\textcircled{\textbf{e}}$ product width + $2 \times \textcircled{\textbf{f}}$ cabinetry gaps). Height of front panels with required gap above = 80" (2032 mm) ($\textcircled{\textbf{o}}$ product height + $\textcircled{\textbf{f}}$ cabinetry gap).

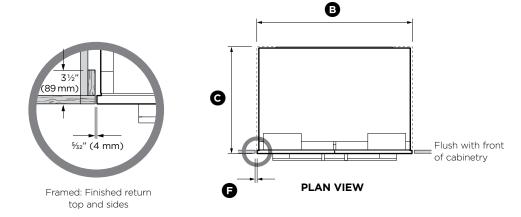


PRODUCT DIMENSIONS	inches (mm)
Overall height of product*	79 27/32" (2028)
© Overall width of product	35 ² / ₃₂ " (906)
F Minimum cabinetry gap clearance from edge of product	5/32" (4)
Overall depth of product (excluding front door panels)	23¾" (603)
(H) Depth of toe kick (measured from front of door panels)	4 3/4" (120)
① Height of toe kick**	4" (102)
Height of bottom drawer panel	30 ¹³ / ₃₂ " (772)
(K) Height of top door panels	45 % 2" (1150)
(L) Depth of product front panels (excludes handles)***	³ ⁄ ₄ " (19)

^{*} Includes mounted feet.

^{**} Does not include custom toe kick to be manufactured and fitted by cabinetmaker.

^{***}Optional EZKleen stainless steel front panels - Model no. RD3680 (non-Water dispensing model) and model no. RD3680U (Ice & Water model).


PRODUCT AND CAVITY DIMENSIONS - WITH RD3684 DOOR PANEL SET

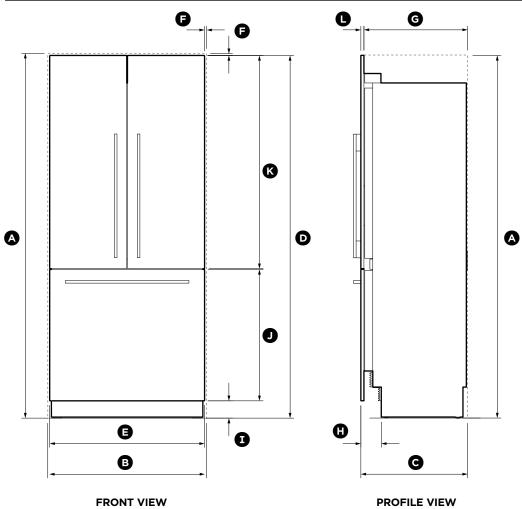

_	3	8	
CAVITY	FRONT VIEW / DIMENSIONS		PROFILE VIEW inches (mm)
	verall height of cavity		84" (2134)
B Ov	verall width of cavity		36" (914)
© Ov	verall depth of cavity		24 3/4" (629)

Overall height of cavity	84" (2134)
® Overall width of cavity	36" (914)
© Overall depth of cavity	24 3/4" (629)

Total front panel width with required gaps at sides = 36" (914 mm) (© product width + 2 x © cabinetry gaps). Height of front panels with required gap above = 84" (2134 mm) (10 product height + 15 cabinetry gap).

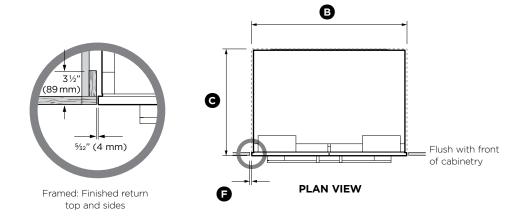



PRODUCT DIMENSIONS	inches (mm)
Overall height of product*	83 27/32" (2130)
© Overall width of product	35 ² / ₃₂ " (906)
F Minimum cabinetry gap clearance from edge of product	5/32" (4)
Overall depth of product (excluding front door panels)	23¾" (603)
(H) Depth of toe kick (measured from front of door panels)**	43/4" (120)
① Height of toe kick*	4" (102)
Height of bottom drawer panel	30 ¹³ / ₃₂ " (772)
(k) Height of top door panels	49 %2" (1252)
(L) Depth of product front panels (excludes handles)***	³ ⁄ ₄ " (19)

^{*} Includes mounted feet.

^{**} Does not include custom toe kick to be manufactured and fitted by cabinetmaker.

^{***}Optional EZKleen stainless steel front panels - Model no. RD3684 (non-Water dispensing model) and model no. RD3684U (Ice & Water model).

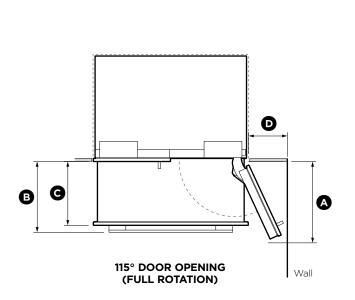

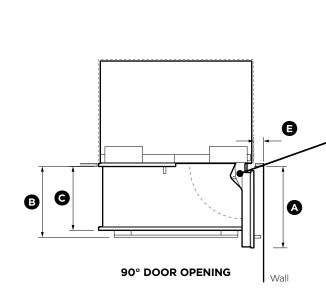

For 90° door swing a hinge limiting pin is supplied with your appliance. This pin fits in the boreholes of the top hinge (refer to \mathbf{Z}).

WARNING!


Before opening doors to the product, ensure the product is on its base packer and the polystyrene stability blocks are still in place. Failure to follow these instructions could lead to serious injury or death.

- 1 Open door to 90°.
- **2** Using a hammer, drive the hinge limiting pin through the boreholes which are now vertically aligned.

DOOR CLEARANCE DIMENSIONS	inches (mm)
Depth of door (widest opening) measured from front of door	18 ²⁹ / ₃₂ " (480)
Depth of drawer (open) measured from front of drawer, including handle	15¾" (400)
© Depth of drawer (open) measured from front of drawer, excluding handle	14 3/16" (360)
Minimum door clearance* to adjacent wall (115° - full internal access)	12 13/32" (315)
Minimum door clearance* to adjacent wall (90° - reduced internal access)	411/32" (110)

^{*} Measured from front cabinetry edge.


6 CAVITY PREPARATIONS

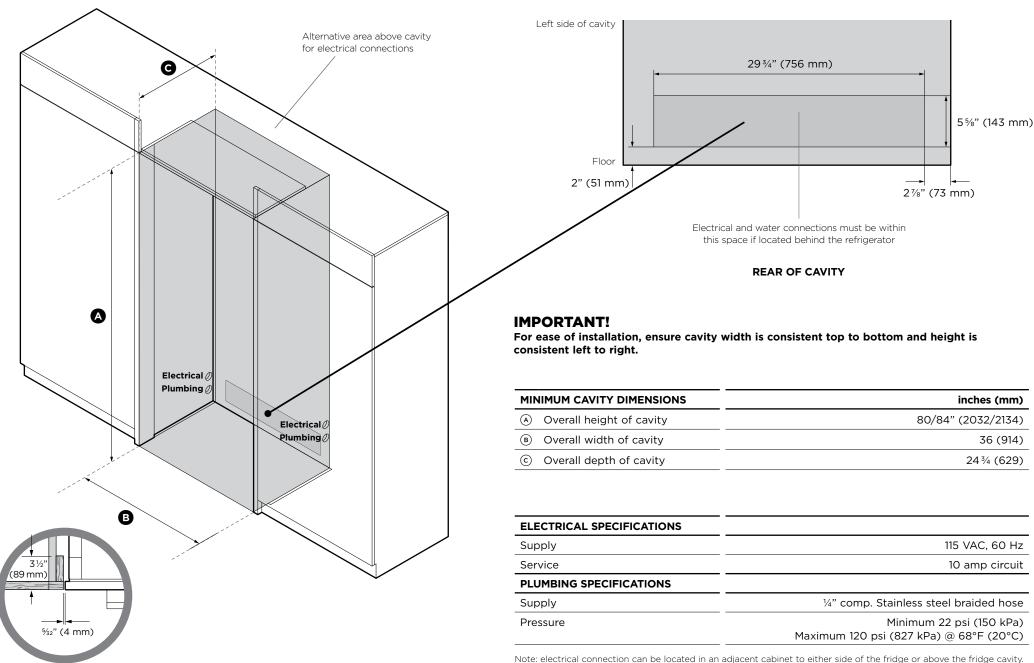

Framed: Finished return top and sides


,



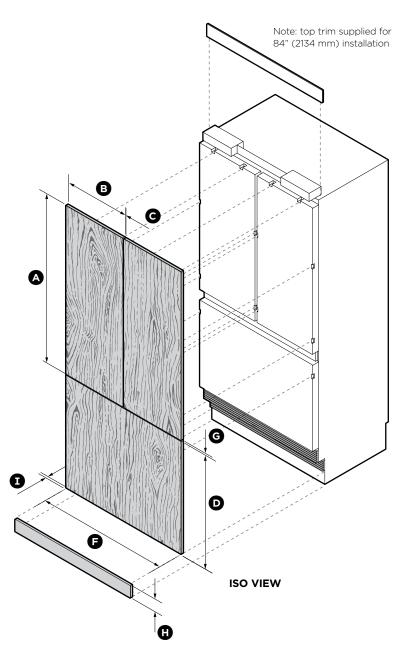

RS36A80J model shown only.

When designing custom door panels, these are only available for non-Water dispensing models.

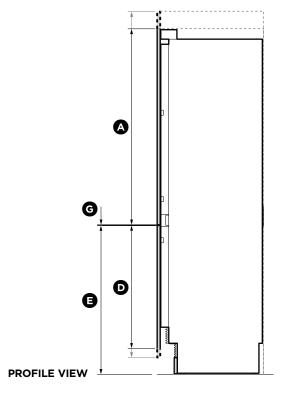

	11111111111		
DIMENSIONS	inches (mm)		
Height of top door panel	min. 45 1/32 - max. 49 1/32" (min. 1150 - max. 1252)		
Width of top door panel	17 ¾" (451)		
© Gap between top door panels	5/32" (4)		
Height of bottom drawer panel*	2813/32 - 3013/32" (722 - 772)		
Height from bottom of product to top of bottom drawer panel	34 13/32" (874)		
F Width of bottom drawer panel	35 21/32" (906)		
Gap between top door panels and bottom drawer panel	5/32" (4)		
Height of toe kick panel*	4 - 6" (101 - 152)		
① Depth of custom panels	min. 5% - 3/4" (min. 16 - 19)		
Maximum weight of an individual top door panel**	22 pounds (10 kg)		
Maximum weight of bottom drawer panel**	24 ½ pounds (11 kg)		

Custom door panels to be manufactured and fitted by cabinetmaker.


Toe kick can be manufactured by cabinetmaker or stainless toe kick can be used.

Door handles available as a separate accessory.

^{*} The bottom grille can be reduced to allow for a higher toe kick. Adjust the height of the bottom drawer panel accordingly.

^{**} Includes weight of handle.

The drawings below apply to non-Water dispensing models only (RS36A8OJ). Dimensions are shown in Imperial (inches) and apply for the preparation and installation of custom door panels. For Dwg and Dxf files of the below panel preparation download the folder on http://thekitchentools.fisherpaykel.com

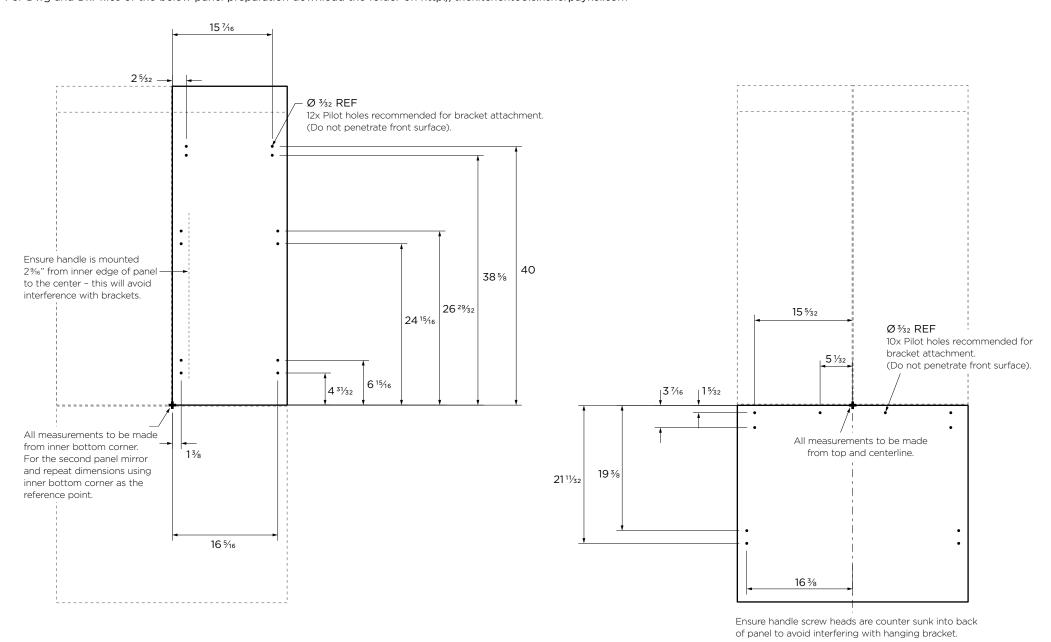

TOP PANEL - REAR VIEW BOTTOM PANEL - REAR VIEW



IMPORTANT!

Safety requires refrigerators be stable when doors and/or drawer, are open. The anti-tip bracket and fittings supplied must be fitted to the wall of the finished enclosure to withstand a 220.5 pound (100 kg) load. This will prevent the possibility of the appliance tipping forward, when doors and/or drawer, are open.

WARNING!

Failure to follow instructions can lead to serious injury or death.

When fastening with masonry plugs and/or screws:

- . Ensure the screws avoid electrical, gas and water conduits.
- Ensure the surface the bracket is fastened to withstands a 220.5 pound (100 kg) load.
- Ensure light-weight masonry material such as cinder block and new concrete (no curing time) are not used in installation.
- . Do not use metallic materials that may corrode, stain and/or damage the enclosure.


For 80" (2032 mm) cavity installation

Wooden/plaster board wall installation

1 Project the end of the above finished enclosure to the center of the back wall and subtract 2 1/16" (62 mm). This will locate the contact surface between the bracket and the appliance (refer to **A**).


Ensure a structural beam/wall stud closest to the center of the wall enclosure is located.

2 Fix bracket to the wall with screws x4 (#10 x 40 pan head Phillips screws). Ensure screws hold tight and the bracket overlaps the appliance when it is positioned (2 3/8" min. (60 mm)) for a secure hold.

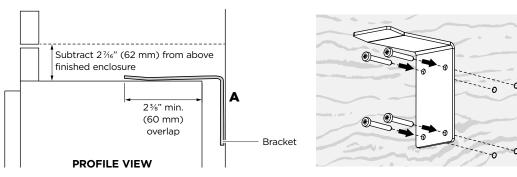

Solid wall installation


- **1** Project the end of the above finished enclosure to the center of the back wall and subtract $2\frac{7}{6}$ " (62 mm). This will locate the contact surface between the bracket and the appliance (refer to **B**).
- 2 Mark screw locations to drill Ø ¼" x 1 ¾" (Ø 6.0 mm x 35 mm) deep holes. Hammer masonry plugs into the wall until flush x4. Fix bracket to the wall with screws x4 (#10 x 40 pan head Phillips screws). Ensure screws hold tight.

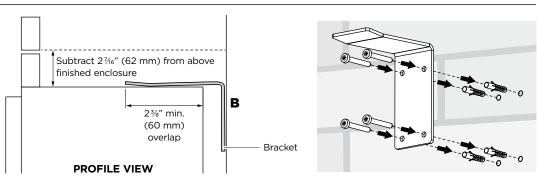

Spacer installation

If a minimum $2\frac{3}{8}$ " (60 mm) overlap cannot be achieved we recommend fastening a solid spacer (wooden beam etc) behind the bracket.

- 1 Ensure the length of the spacer corresponds to the enclosure's width. Always secure the spacer to existing studs on the enclosure wall (refer to **C**).
- **2** Fix bracket to the spacer with screws x4 (#10 x 40 pan head Phillips screws). Ensure screws hold tight and the bracket overlaps the appliance when it is positioned (2%" min. (60 mm)) for a secure hold.

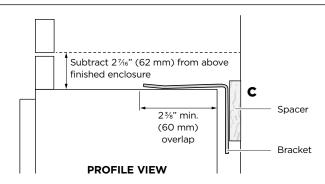

IMPORTANT!

Safety requires refrigerators be stable when doors and/or drawer, are open. The anti-tip bracket and fittings supplied must be fitted to the wall of the finished enclosure to withstand a 220.5 pound (100 kg) load. This will prevent the possibility of the appliance tipping forward, when doors and/or drawer, are open.

WARNING!

Failure to follow instructions can lead to serious injury or death.

When fastening with masonry plugs and/or screws:

- Ensure the screws avoid electrical, gas and water conduits.
- Ensure the surface the bracket is fastened to withstands a 220.5 pound (100 kg) load.
- Ensure light-weight masonry material such as cinder block and new concrete (no curing time) are not used in installation.
- Do not use metallic materials that may corrode, stain and/or damage the enclosure.


For 84" (2134 mm) cavity installation


Wooden/plaster board wall installation

1 Project the end of the above finished enclosure to the center of the back wall and subtract 6 15/32" (164 mm). This will locate the contact surface between the bracket and the appliance (refer to **A**).

Ensure a structural beam/wall stud closest to the center of the wall enclosure is located.


2 Fix bracket to the wall with screws x4 (#10 x 40 pan head Phillips screws). Ensure screws hold tight and the bracket overlaps the appliance when it is positioned (2¾" min. (60 mm)) for a secure hold.

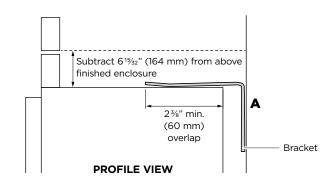


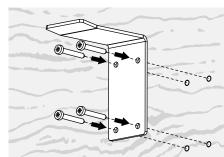

Solid wall installation

- 1 Project the end of the above finished enclosure to the center of the back wall and subtract $6^{15/3}$ 2" (164 mm). This will locate the contact surface between the bracket and the appliance (refer to **B**).
- **2** Mark screw locations to drill $\emptyset \frac{1}{4}$ " x $1\frac{1}{4}$ " (\emptyset 6.0 mm x 35 mm) deep holes. Hammer masonry plugs into the wall until flush x4. Fix bracket to the wall with screws x4 (#10 x 40 pan head Phillips screws). Ensure screws hold tight.

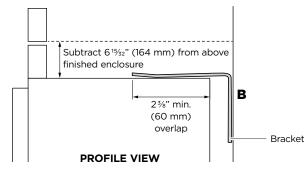


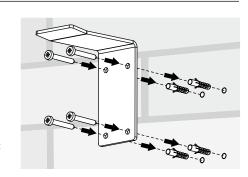

Spacer installation

If a minimum 2 \(\frac{3}{8} \)" (60 mm) overlap cannot be achieved we recommend fastening a solid spacer (wooden beam etc) behind the bracket.

- 1 Ensure the length of the spacer corresponds to the enclosure's width. Always secure the spacer to existing studs on the enclosure wall (refer to C).
- **2** Fix bracket to the spacer with screws x4 (#10 x 40 pan head Phillips screws). Ensure screws hold tight and the bracket overlaps the appliance when it is positioned (2 %" min. (60 mm)) for a secure hold.

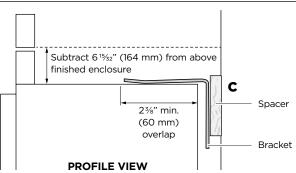


8

WARNING!


Take care when working with the appliance outside of the finished enclosure, as the appliance is not secured and has the possibility of tipping forward. Tipping of appliance can lead to serious injury or death.

1 Ensure all external packaging material is removed from the appliance before installation.

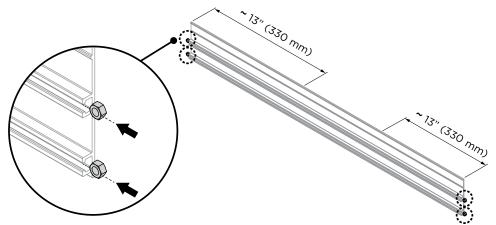


2 On the right side of the top trim, insert M5 nuts x2 onto the top and bottom slide. Slide nuts towards the center of the trim, ~ 13" (330 mm).

Repeat this process on the opposite side.

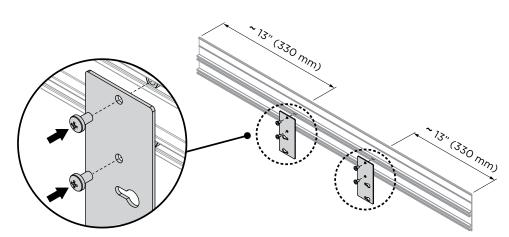


3 Position joining brackets over the M5 nuts. Thread screws x2 (M5 x 8 pan head Phillips screws) through bracket hole and secure.

Repeat this process on the opposite side.

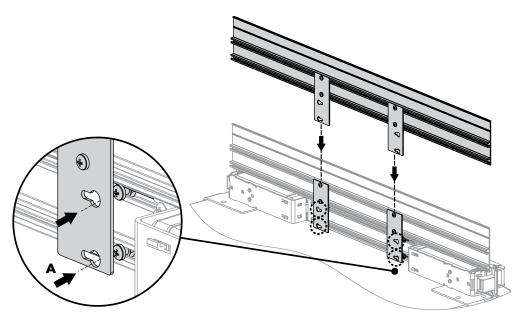

4 At the top of the appliance, place the assembled top trim behind the existing appliance trim. Bring the top trim forward and insert screw heads through the key holes of the joining brackets (refer to A).

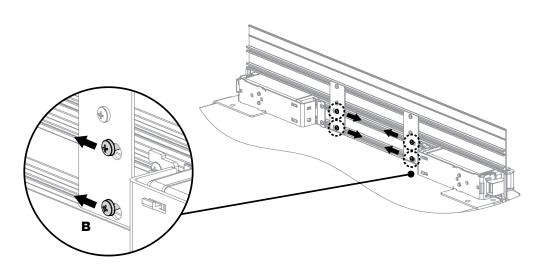

5 Slide the screws located on the appliance sideways towards the narrow side of the key holes on the joining bracket, and tighten screws to lock top trim in position (refer to **B**).


9


WARNING!

Take care when working with the appliance outside of the finished enclosure, as the appliance is not secured and has the possibility of tipping forward. Tipping of appliance can lead to serious injury or death.

- 1 Ensure all external packaging material is removed from the appliance before installation.
- 2 At the base LH side of the appliance attach the LH side bracket to the dedicated threaded holes and secure with screws x2 (M5 x 8 countersunk Phillips screws).

Repeat this process on the RH side of the appliance.

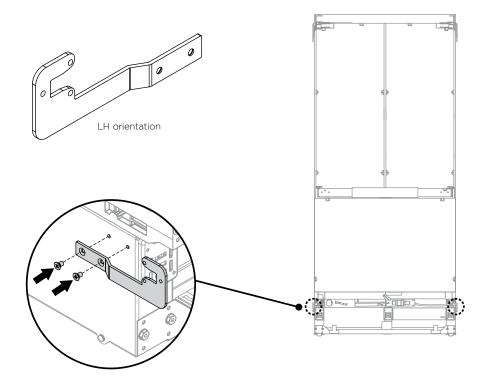

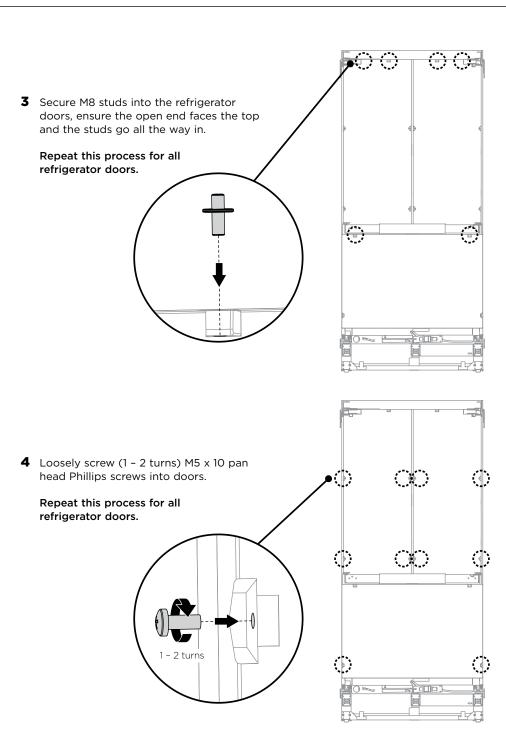




IMPORTANT!


- · The water connection instructions below are intended only for the professional installer.
- . DO NOT use with water that is microbiologically unsafe or of unknown quality.
- WARNING connect to potable drinkable water supply only.
- DO NOT install on line pressure above 120 psi (827 kPa) or below 22 psi (150 kPa).
- DO NOT use on hot water supply (100°F [38°C max.]).
- AVOID contamination of pipes during installation.
- · Old water fittings (hose-sets) should not be reused.
- The standard appliance does not include a water line such as copper or plastic tubing. ¼" copper tubing or ¼" plastic tubing can be used. These parts need to be purchased separately and must comply with local regulations.
- The shut off valve should be accessible.
- **1** Ensure the refrigerator is NOT plugged into a power supply. Locate isolating faucet for water connection cold water supply only. Tee and faucet fittings are not supplied.

Position the appliance 1.5 - 2 ft. (450 - 600 mm) in front of the finished enclosure. This will allow access behind the appliance for power and water connections.

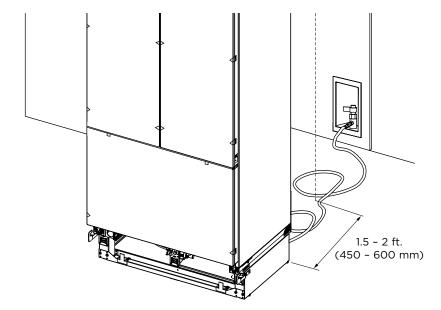


2 At the front of the appliance, fasten the adaptor onto one end of the braided water hose.

 Note: The adaptor is not required for installation, if $\frac{1}{4}$ " PEX plastic tubing is used.



3 Firmly insert the tube end of the adaptor into the PLV, until the end is no longer visible. Once inserted, pull gently on tubing to ensure it is locked in (refer to **A**).

Note: dislodge the PLV from the clips, if required.

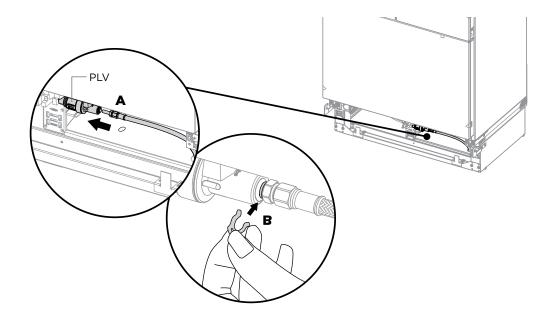


4 Secure connection by attaching the locking key in between the PLV and tube end of the adaptor (refer to **B**).

Note: if PLV was dislodged for installation (3), mount PLV back into clip.

CONNECT TO WATER AND ELECTRICAL SUPPLY


5 Thread the free end of the water hose into the dedicated hole located in the base of the appliance, through to the back of the appliance (refer to **c**).

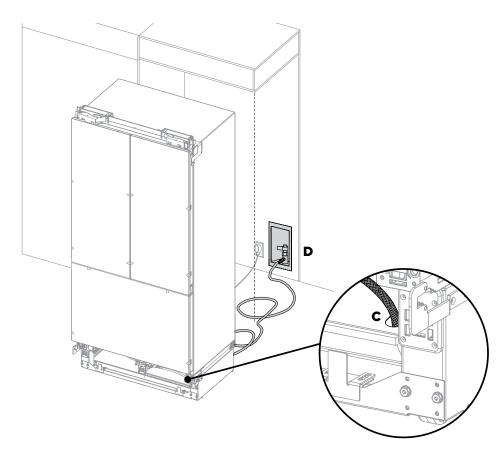

6 At the back of the appliance, loosely coil the water hose (-2 - 3 times) and fasten the end of the hose to the cold water supply (refer to **D**).

Take care not to over-tighten the connection. Turn the isolating faucet on and check that all connections are dry and free of drips.

7 At the back of your appliance, connect the appliance to the electrical supply (115 VAC, 60 Hz) with the fitted plug and lead, and turn on. Ensure the appliance is connected to its own isolating switch (refer to **E**).

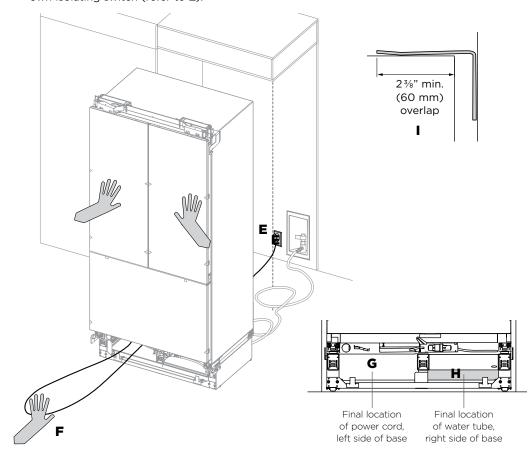

8 In order to push appliance into correct position:

- Stop midway, reach through base to locate power cord. Pull power cord through the front left side of the appliance (refer to **F**), tucking it neatly in the left side of the base (refer to **G**).
- Reach through base to locate water hose coil. Tuck coil neatly into front right side of base (refer to H).

IMPORTANT!

Failure to do this can result in running over the hose causing damage and possible water leaks.

- Push product until doors are in line with the frame. Ensure the appliance is centred.
- Firm contact must be achieved between the appliance and the anti-tip bracket,
 2¾" min. (60 mm) overlap (refer to I).

WARNING!

Failure to follow this instruction can lead to serious injury or death.




IMPORTANT!


- It is important that the doors are in line with the frame and the appliance is centred before following these steps.
- It is important that all four corners of the appliance is supported firmly onto the floor to eliminate any movement.
- . Installing the appliance on a soft, uneven, or not level floor may result in twisting of the product and poor door sealing.
- Raise the appliance using an 1/6" (11 mm) hex socket or 3/6" (4 mm) hex Allen key. One turn of height adjusting nuts is equivalent to 1/6" (1 mm) height travel. Note: maximum travel is 13/6" (20 mm).
- 1 Use the front and rear adjustment nuts (A) to align the front of the doors flush with the adjacent cabinetry top to bottom on both sides. Place a ruler on the front of the product to check flushness top and bottom, left and right. This step will help ensure the refrigerator is level with the adjacent cabinetry.

IMPORTANT!

Failure to achieve flushness top to bottom and/or uneven gaps left to right greater than %6" (1.5 mm) can lead to difficulties achieving final alignment. Final alignment will be achieved once door panels have been installed and the appliance is pushed back to sit flush with cabinetry.


- Turn adjustment nuts clockwise to raise or counter-clockwise to lower (refer to A).
- Check gaps between appliance and adjacent cabinetry are even on both sides (refer to B).
- Gently push the front of the product to check the stability.

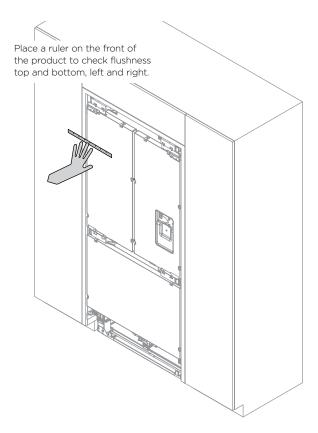

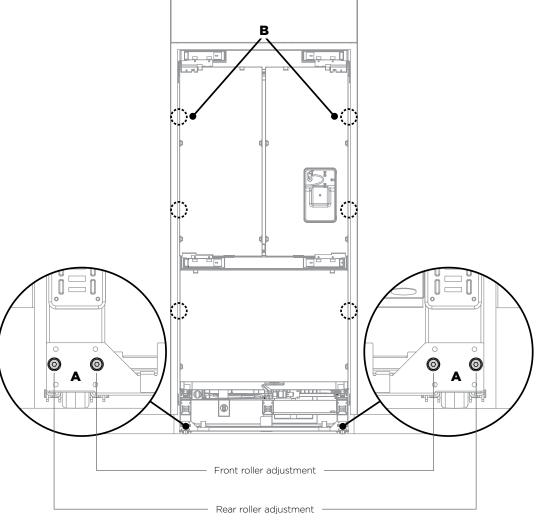


IMPORTANT!


- The water filter head must be firmly pushed into the product and secured, incorrect installation can lead to water leaks.
- . It is not necessary to shut off the water supply when installing the water filter.
- **1** Remove the red protective cap on the spigot head and align the filter cartridge tool over the filter handle

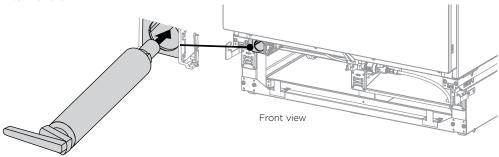

2 Pull the freezer drawer out slightly and insert the filter cartridge and tool into the bottom left of the product. Firmly push the cartridge in until the filter head cannot be pushed any further.

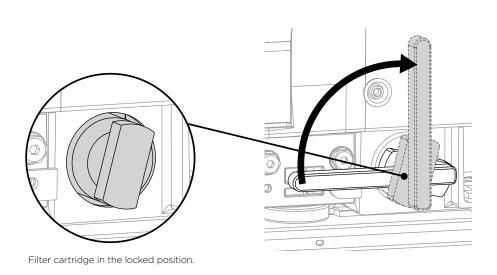


3 Turn 90° clockwise to tighten. Remove filter cartridge tool and close freezer drawer.

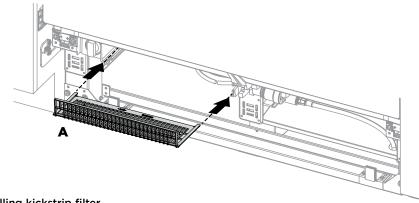

4 Installing kickstrip filter

Remove filter from inside the product. Fit the filter onto the rails and push to the rear until it clips securely (refer to **A**).

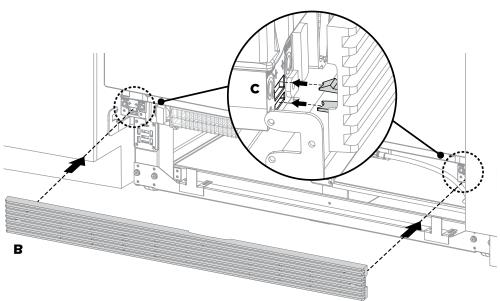

5 Top kickstrip grille

Ensure the top grille is inserted in the correct orientation (refer to **B**). Align the top grille clips to the top plinth slots then firmly push grille onto appliance until the clips engage (refer to **C**).

13)

The assembly of Fisher & Paykel kits (EZKleen stainless steel door panels) and custom door panels are outlined below. For Fisher & Paykel kits, only remove the protective film for handle installation. This will protect the finish of the door panels until installation is complete.

French door panels

1 Mounting handle (refer to **A**)

For Fisher & Paykel door panel sets, remove the plastic plugs from the handle holes x4. Align the handle to the holes and secure with screw handle x4 (M5 x 25 pan head socket screws).

For custom panels, ensure handle is secured 2% (65 mm) from the inner edge of the panel to the center – this will avoid interference with bracket installation.

2 Hanging bracket (refer to B)

For Fisher & Paykel door panel sets, align the bracket to the holes and secure with screws x4 (M5 x 14 Mush Phillips SS).


For custom panels, secure bracket with screws x4 (#8 x 16 Mush washer screws).


3 Side brackets and straps (refer to **C**)

For Fisher & Paykel door panel sets, align bracket and strap to the holes on the side of the panel and secure with screws x2 (M5 x 14 Mush Phillips SS).

For custom panels, secure bracket with screws x2 (#8 x 16 Mush washer screws).

Repeat this process for all brackets and straps, and remaining French door panel.

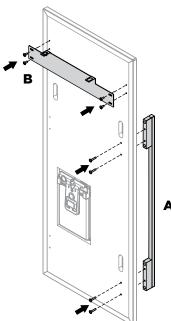

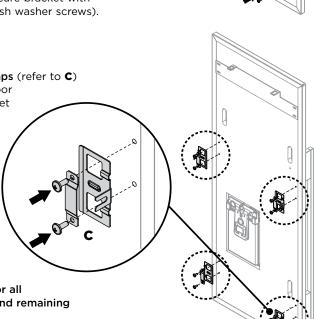

Drawer door panel

4 Mounting handle (refer to **D**) For Fisher & Paykel door panel sets,

remove the plastic plugs from the handle holes x4. Align the handle to the holes and secure with screw handle x4 (M5 x 25 pan head socket screws).

For custom panels, ensure handle screw heads are counter sunk into the back of the panel to avoid interference with hanging bracket.

5 Hanging bracket (refer to **E**)


For Fisher & Paykel door panel sets, align the bracket to the holes and secure with screws x6 (M5 x 14 Mush Phillips SS).

For custom panels, secure bracket with screws x6 (#8 x 16 Mush washer screws).


6 Side brackets and straps (refer to **F**)
For Fisher & Paykel door panel sets,
align bracket and strap to the holes on
the side of the panel and secure with
screws x2 (M5 x 14 Mush Phillips SS).

For custom panels, secure bracket with screws x2 (#8 x 16 Mush washer screws).

Repeat this process for all brackets and straps.

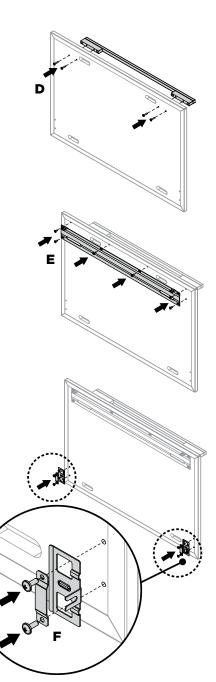


4 HANGING ICE & WATER DOOR PANEL

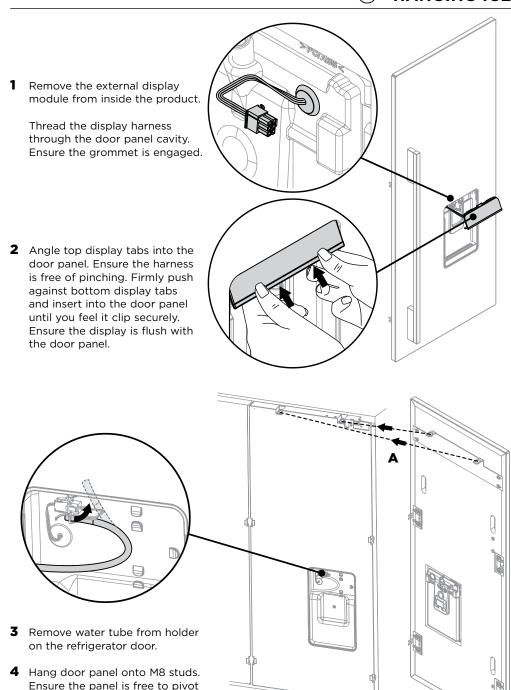

for water connections (refer to A).

5 Connect display harness onto the refrigerator door by inserting firmly until you feel it clip securely (refer to **B**).

On the external display, enable the dispenser lock, this will help prevent any water from dispensing during water connection. To lock, press the button for 4 seconds. The LED above the button will illuminate.

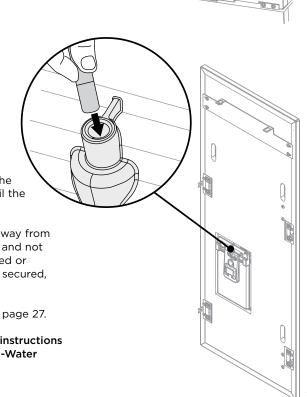

6 Firmly push the water tube into the spigot behind the door panel until the marked line is not visible.

Ensure the water tube is routed away from any sharp objects, sharp corners, and not in a location where it can be kinked or squashed when the door panel is secured, (as this will stop water flow).

Flush water filtration system. See page 27.


To secure door panel, follow the instructions in the next section: 'Hanging non-Water dispensing door panels'.

HANGING NON-WATER DISPENSING DOOR PANELS


- 1 Hang all door panels onto M8 studs and align the side bracket forks onto the refrigerator door.
- Ensure the forks are positioned around the body of the side screws (M5 x 10 pan head Phillips screw).
- Push the product until the door panels are flush with the front face of the adjacent cabinetry. Place a ruler on the front of the product to check flushness top and bottom, left and right (refer to drawing below).
- Ensure the gap between the top of the door panel and the top cabinetry is no greater than 7 mm. To reduce this gap, raise the product by turning all four adjustment nuts the same number of turns.

IMPORTANT!


Failure to follow these steps can lead to difficulties in door panel adjustment and cosmetic cap fitment.

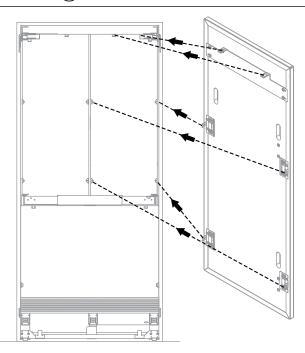



3 All door panels have full axis adjustment to ensure they are flush with adjacent walls. To adjust the height of each panel turn clockwise to raise stud or counter-clockwise to lower stud (refer to **A**).

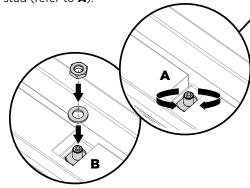

 
4 Once satisfied with all door panels, secure M8 studs with M8 washer and M8 nut (refer to **B**). The top of the stud must remain below the top face of the door panel.

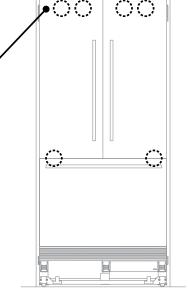



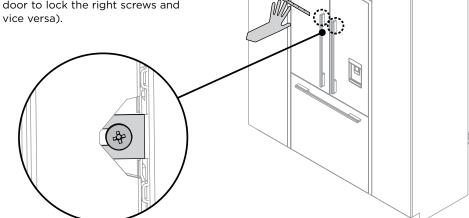

Place a ruler on the front of the product to check flushness top and bottom, left and right.

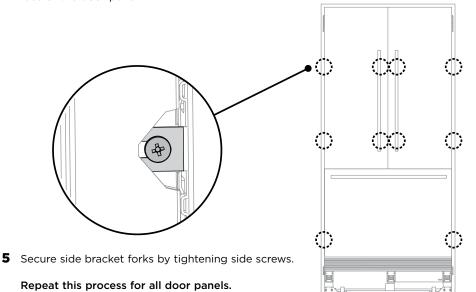

Note: for depth adjustment loosen side screws x4, adjust panels and then retighten once satisfied.

Note: further adjustment of door panels can be achieved by removing door panels then loosening the fixing screws for the hanging bracket and moving the bracket sideways to suit.

Ensure the appliance is switched on and the isolation faucet has been connected and turned on.

Ice maker initiation

To initiate ice maker before use:

- When the appliance is first turned on after installation, the ice maker will be off.
- To activate the automatic ice maker, press the 'Ice On/Off' \mathscr{B} button once. The LED light above the \mathscr{B} button will illuminate indicating the ice maker is on.
- Press and hold the □, and + together for 4 seconds then close the doors. The ice tray
 will flip twice and empty the water into the bin below. The ice tray will flip only after the
 doors are closed.
- Force another cycle, this step helps remove any manufacturing and transportation dust in the ice tray.
- Empty the water and correctly replace the bin, ensuring the scoop is located at the front of the bin.
- Once the ice maker is in operation, discard the first 24 hours of ice. This will flush away any impurities in the water line.

For more information on making ice please refer to the User Guide supplied with this appliance.

Water dispenser initiation (Ice & Water models only)

To flush the water filtration system before use:

- Press the water dispenser pad until water dispenses, this will displace trapped air in the water tank and filter system. This will take at least 2 minutes. Once the water has dispensed, rest the dispenser for 2 minutes.
- Dispense and discard 4 qt (4 L) of water, then rest the dispenser pad for a further 2 minutes.
- Dispense and discard a further 4 qt (4 L) of water. Failure to do this will result in excessive dripping from the dispenser.
- Once installation is complete, a few drips may appear out of the dispenser over the next few days to clear the remaining trapped air.
- Ensure the refrigerator has cooled for at least 2 hours before use.





IMPORTANT!


Do not continually dispense water for longer than 2 minutes at a time.

For more information on water dispensing please refer to the User Guide supplied with this appliance.

TO ATTACH FIXING BRACKETS

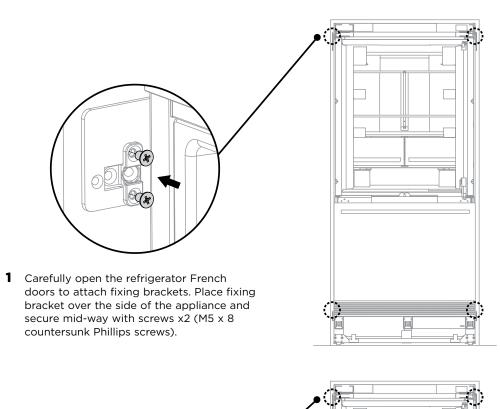

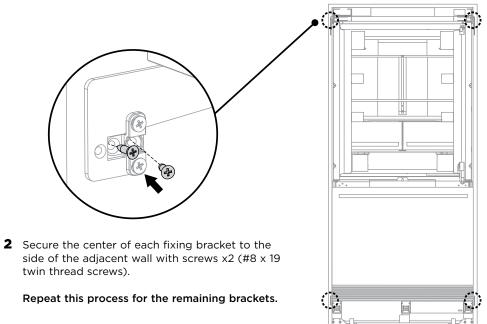


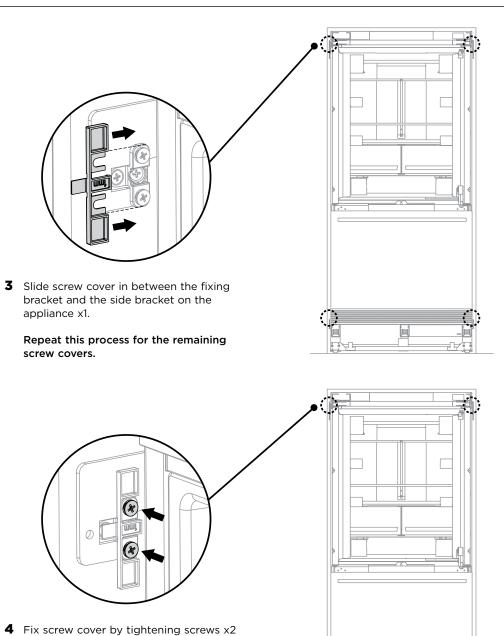


(M5 x 8 countersunk Phillips screws).

Repeat this process for the remaining screw.

ATTACH COVERS AND TOE KICK

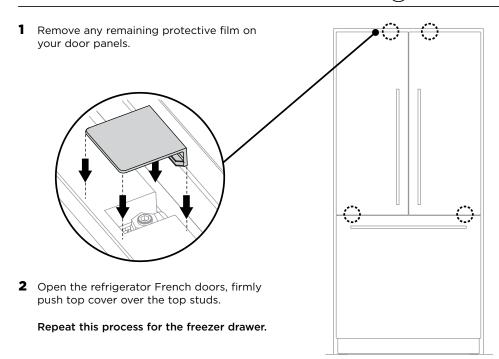



Note: To complete the integrated appliance, the customer should supply their own toe kick for installation. The hardware required to mount the toe kick is supplied.

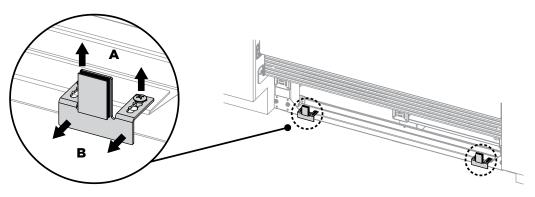

4 Installing toe kick
Unscrew the toe kick bracket screws mid-way, and bring forward (refer to **A** and **B**).

Repeat this process on the opposite side.

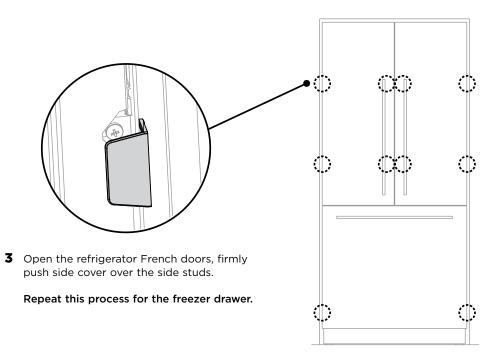

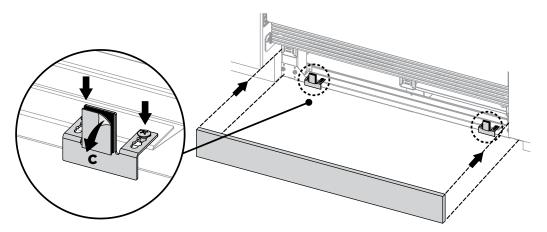


- **5** Place toe kick in front of the brackets and gently push towards the appliance until flush with surrounding cabinetry. Once satisfied, remove the toe kick.
- **6** Tighten the toe kick bracket screws to lock brackets into position and remove the backing from the Velcro strip (refer to **C**). Attach toe kick to the adhesive surface.


19)

For toe kick installation higher than 4" (102 mm)

 - 1 Measure the required height for the bottom grille. On a board, carefully score/cut the un-required vanes from the bottom of the kickstrip grille and discard (refer to **A**).
- **2** Drill \emptyset $\frac{5}{32}$ " (4 mm) holes into the dimples of the grille (refer to **B**).




Cut un-required vanes from the bottom of the grille

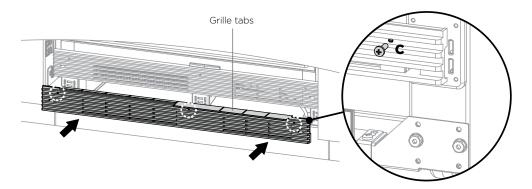


3 With the grille tabs facing upwards, align the grille to the bottom of the plinth where the screw holes are located and secure with screws x3 (#8 x % pan head screws) (refer to **C**).


Align the air flow divider underneath the grille tabs indicator and clip onto the vanes of the bottom grille (refer to **D**).

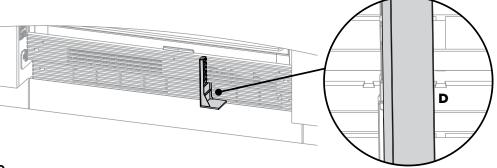

For toe kick installation at 4" (102 mm)

1 With the grille tabs facing upwards, align the grille clips to the bottom of the plinth's slots, then firmly push grille onto the plinth (refer to A).

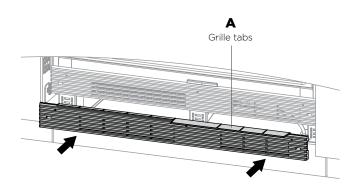

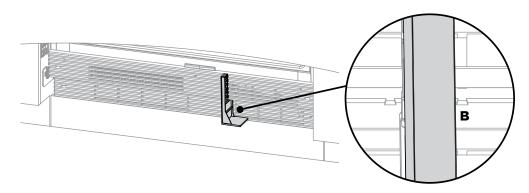

2 Align the air flow divider underneath the grille tabs indicator and clip onto the vanes of the bottom grille (refer to **B**).

IMPORTANT!

Before installing your appliance, ensure the dimensions of the finished enclosure are correct for your appliance following the 'Product and cavity dimensions' sections.

Framed cabinetry installation

1 Break off the datum lip to each side trim bracket and discard.

Repeat for all side trim brackets.

Discard


2 Position three side trim brackets on each side (refer to A for bracket locations). Open the appliance doors. Measure 2" (50 mm) from the front face of the appliance (from behind the doors), to the front of the alcove and accurately mark a vertical line (refer to **B**).

Align the bracket edge with the marked line and using screws x2 (#8 x 16 mush washer) fix the bracket to the cabinetry x3.

Repeat on the opposite side.

IMPORTANT!

Inaccurate positioning of bracket can result in inability to fit side trim or gaps between side trim and appliance.

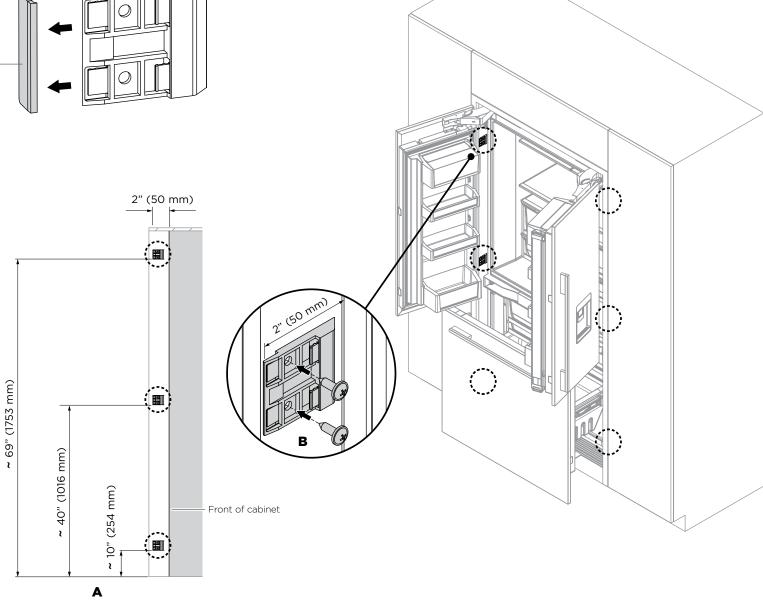


21)

For 80" (2032 mm) cavity installation only

Measure 4" (102 mm) from the top, shorter side trim and carefully cut using a fine tooth hacksaw to a length of 76" (1930 mm). Refer to **A** for orientation of side trim.

Note: ensure cut is straight and square as this is an exposed surface. Also ensure the plastic part does not bend as this can cause visual stress marks.

Repeat this process for the remaining side trim.

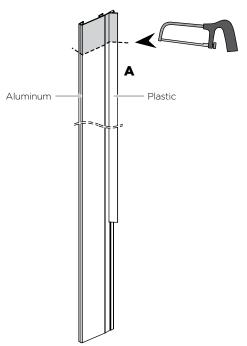

For 80" (2032 mm) and 84" (2134 mm) cavity installations


- 1 Place the side trim against the alcove side wall with the shorter lip facing the bottom (refer to **B**).
- Ensure the side trim is positioned as high as it will go.
- Engage the side trim with the brackets by pushing the trim inwards at the locations of the top and middle side trim brackets. Once the trim has engaged with top and middle brackets, then push and engage the side trim at the location of the bottom bracket (refer to **C**).

IMPORTANT!

- Ensure there are no visual gaps between the product and side trims.
- Each bracket has two engagement points for the trim to locate. Ensure the trim is engaged at both points (refer to D).

Repeat this process for the remaining side trim.

Correct visual gaps by loosening side trim screws and moving trim within clearance. If further adjustment is required, relocate brackets to desired position.

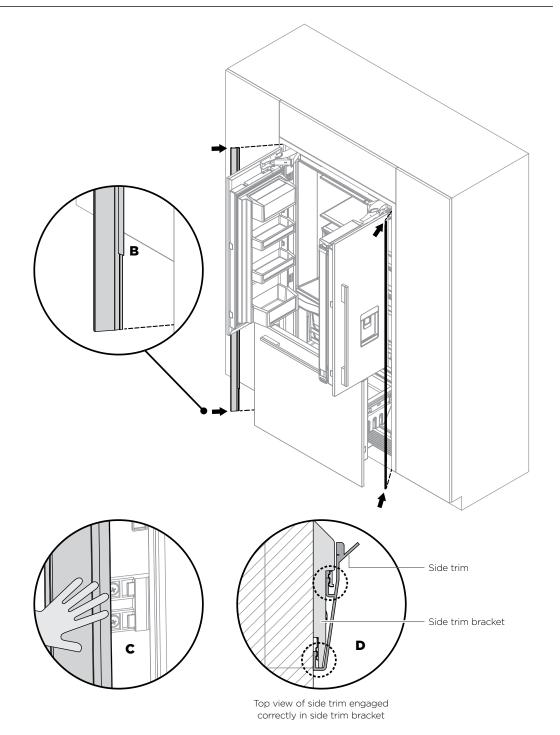




Hinge tensioning screws can be tightened if increased door closing force is required.

1 To ensure the French doors shut on their own, when pushed within the self close activation range, the hinge tensioning screws need to be tightened. The hinge tensioning screw is located in the French door hinges. To tighten the screw, rotate the screw to the right (refer to **A**).

Repeat this process on the opposite side.

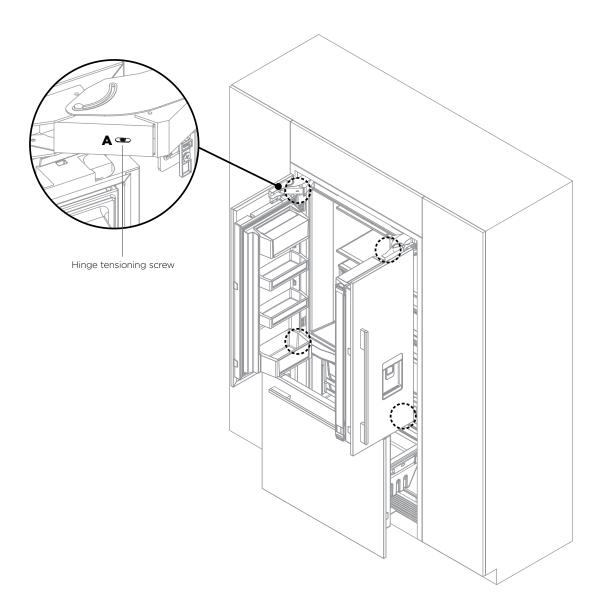

\checkmark	TO BE COMPLETED BY THE INSTALLER					
	All models					
	Check all parts are installed.					
	Ensure the appliance is level.					
	Ensure the appliance is securely fastened to the cabinetry with the supplied anti-tip bracket and fittings.					
	Ensure the doors/drawer can open and close freely with no resistance from surrounding cabinetry.					
	Ensure hinge limiting pin is fitted for 90° door swing.					
	Ensure all internal and external packaging is removed from the appliance before use.					
	Ensure a manual ice maker cycle has been forced.					
	Ice & Water models only Ensure the water filtration system has been flushed.					
Со	Complete and keep for safe reference:					
Мс	odel					
Sei	rial No.					
Pu	rchase Date					
Pu	rchaser					
De	aler Address					
Ins	staller's Name					
Ins	staller's Signature					
Ins	stallation Company					
Ins	stallation Date					

www.fisherpaykel.com

Copyright © Fisher & Paykel 2015. All rights reserved.

The product specifications in this booklet apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time. You should therefore check with your Dealer to ensure this booklet correctly describes the product currently available.

US CA