

UTTERMOST

ASSEMBLY INSTRUCTIONS


THANK YOU FOR PURCHASING THIS FLOOR LAMP.
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

MODEL NUMBER: 30476

1. UNPACK ALL PARTS FROM CARTON CAREFULLY.
2. THREAD THE ASSEMBLY (A) CLOCKWISE INTO THE BODY ASSEMBLY (E).
3. PLACE THE WASHER (B) AND NUT (C) ONTO THE BASE BOTTOM AND TIGHTEN THEM WITH SPANNER (D).
4. PLACE THE SHADE (G) UNDER THE COKET (F) AND SECURE WITH RING (H).
5. THREAD THE BULB (NOT INCLUDED) INTO THE SOCKET (F).
6. THE ASSEMBLY IS COMPLETE.

IMPORTANT SAFETY INSTRUCTION:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN.
NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED.
DO NOT ALTER THE PLUG.

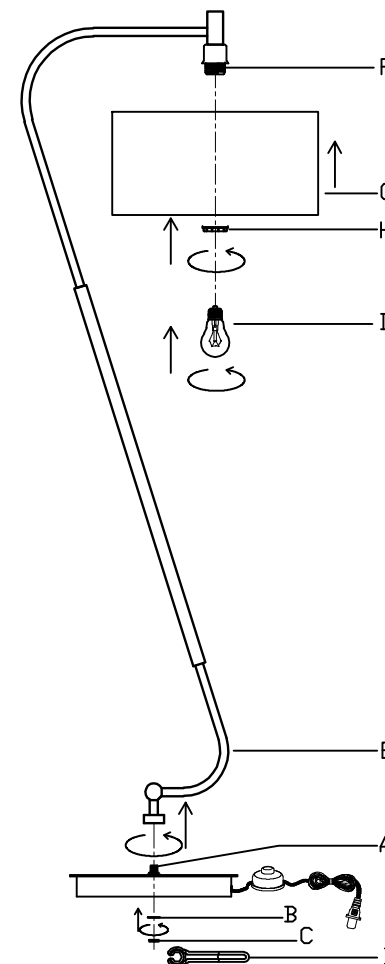

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151
www.uttermost.com