

nickelodeon



Instruction Manual

Light-Up Missions Pup Pad



©2025 Spin Master Ltd. PAW Patrol and all related titles, logos, characters; and Spin Master logo are trademarks of Spin Master Ltd. Used under license. Nickelodeon and all related titles and logos are trademarks of Viacom International Inc.

INTRODUCTION

Thank you for purchasing the **VTech® PAW Patrol Light-Up Missions Pup Pad!** With the PAW Patrol team, this learning pad encourages children to learn letters, phonics, spelling, numbers, logic, memory and more!



INCLUDED IN THE PACKAGE

- VTech® PAW Patrol Light-Up Missions Pup Pad
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.


ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

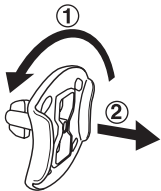

① Rotate the packaging locks 90 degrees counterclockwise.

② Pull out and discard the packaging locks.

GETTING STARTED



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.




ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit and use a screwdriver to loosen the screw, then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (LR6/AM-3) batteries, following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

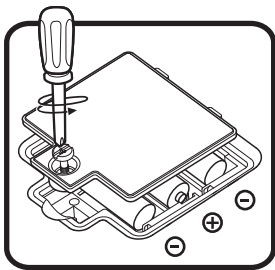

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.


- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. On/Off/Mode Selector

Slide the **On/Off/Mode Selector** to choose one of five game modes.
Slide the **On/Off/Mode Selector** to the **Off**  position to turn **Off** the unit.



2. Letter Buttons

Press the **Letter Buttons** to learn letters, phonics and words or to answer related questions. The **LED Light** will light up when pressing the **Letter Buttons**.



3. Music Button

Press the **Music Button** to play melodies and the **LED Light** will synchronize with it.



4. Volume Button

Press the **Volume Button** to adjust the sound level.



5. Character Buttons

Press the **Character Buttons** to learn phonics, letters, spelling and fun facts about the PAW Patrol Pups.



6. Mission Button

Press the **Mission Button** to learn letters and words, as well as play guessing and memory games.



7. Automatic Shut-Off

To preserve battery life, the unit will automatically shut **Off** after approximately 90 seconds without input. The **Light-Up Missions Pup Pad** can be woken up again by sliding the **On/Off/Mode Selector** to select between game modes. The **Light-Up Missions Pup Pad** will also automatically turn **Off** when battery power is very low.

NOTE: If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES



1. Letters and Sounds

Press the **Letter Buttons** to learn phonics and letters with **Ryder**. Press the **Mission Button** to call out a letter and press the **Letter Buttons** to answer.



2. Word Fun

Press the **Letter Buttons** to learn the words with **Ryder**. Press the **Mission Button** to call out a word and press the **Letter Buttons** to answer.



3. Spelling Guide

Press the **Letter Buttons** to select a word and then press the light-up letters to spell with **Ryder**. Press the **Mission Button** to play the instructions for help.



4. Guess It

Ryder will ask questions about the words and then press the **Letter Buttons** to answer. Press the **Mission Button** to repeat the questions.



5. Path Finder

The **Letter Buttons** will be lit up as a path. Press the **Letter Buttons** to count. Press the **Mission Button** to light up a path and then disappear. Press the **Letter Buttons** to repeat the path.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Slide to any mode. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5824
Product Name: PAW Patrol Light-Up Missions Pup Pad
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.
CAN ICES(B)/NMB(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

