

Press and sing along to fun songs and musical ditties!

Press for fun sound effects and phrases!



Keep these instructions for future reference as they contain important information.




Battery replacement is required. Only adults should replace batteries. Required tool: Phillips screwdriver (not included).



1.5V x 3  
AG13/LR44

Requires three AG13/LR44 button cell batteries (included). Batteries included are for demonstration purposes only.

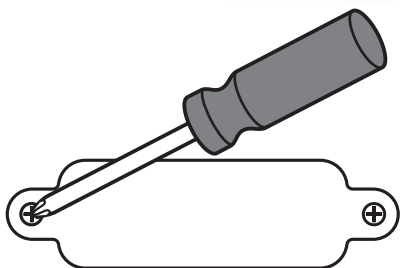

- Loosen the screws in the battery compartment door and remove the door.
- Remove the exhausted batteries and properly dispose.
- Insert three, new AG13/LR44 button cell batteries.
- If this toy begins to operate erratically, you may need to reset the electronics. Remove the batteries and reinstall them.
- When sounds or lights become faint or stop, it's time for an adult to change the batteries.



To clean, wipe with a damp cloth. Do not immerse.

**⚠ WARNING:** This product contains a Button Cell Battery. A swallowed Button Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.



service.fisher-price.com

**Great Britain:** Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk).

Mattel Europa B.V., Godel 1, 1186 MJ  
Amstelveen, Nederland.

**Australia:** Mattel Australia Pty. Ltd., 658 Church  
Street, Locked Bag #870, Richmond, Victoria 3121  
Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive,  
Albany 1331, Auckland.

**Asia:** Mattel East Asia Ltd., Room 503-09, North  
Tower, World Finance Centre, Harbour City,  
Tsimshatsui, HK, China. Tel.: (852) 3185-6500.

**Malaysia:** Diimport & Diedarkan Oleh: Mattel  
Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue  
7, Bangsar South City, No 8, Jalan Kerinchi, 59200  
Kuala Lumpur, Malaysia. Tel: 03-33419052.

**South Africa:** Mattel South Africa (PTY) LTD, Office  
102 I3, 30 Melrose Boulevard, Johannesburg 2196.