




## **30" ELECTRIC BUILT-IN COOKTOP**

### **MODELS:**

WCE55US0HB00 (Black)  
WCE55US0HW00 (White)  
WCE55US0HS00 (Stainless)

# COOKTOP PARTS

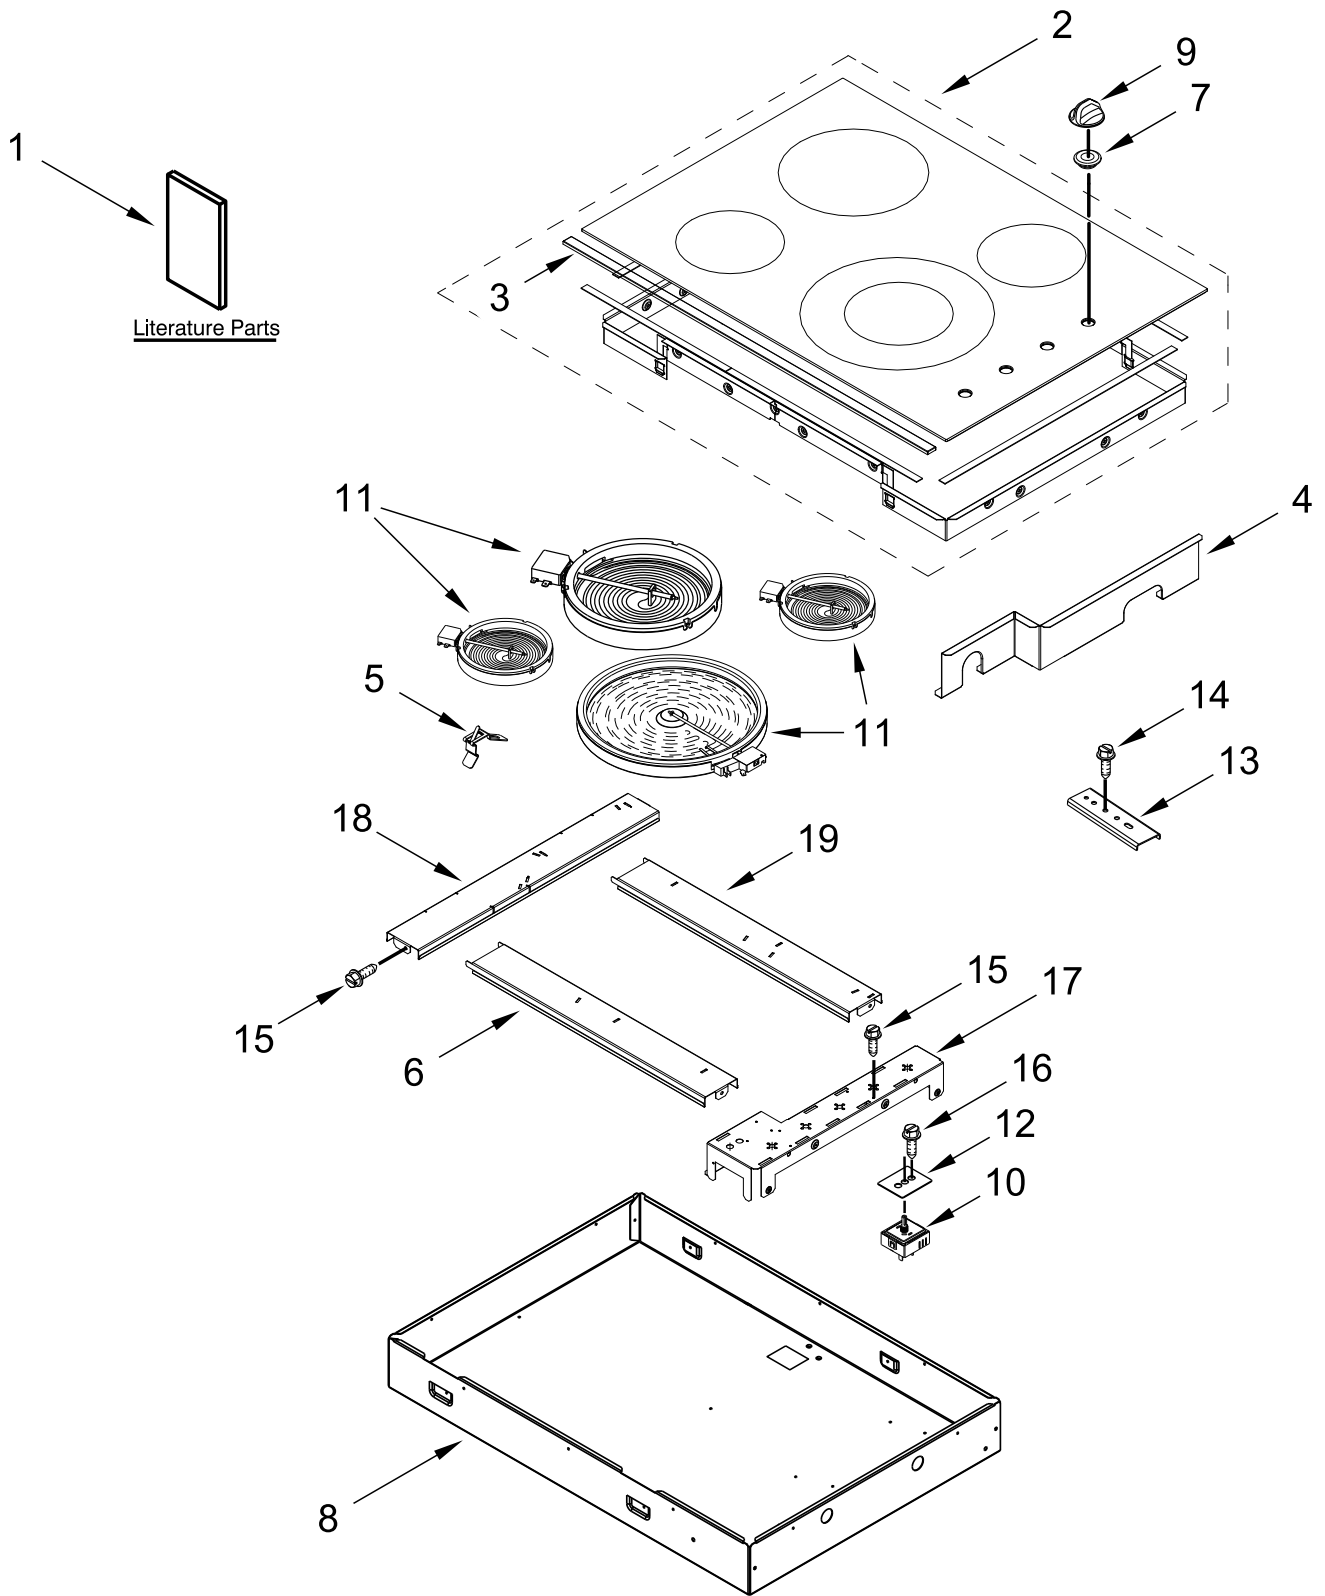

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9		Knob, Control	13	4455917	Bracket, Cooktop Mounting
	W11178304	Instructions, Installation		W11130625	Black			
	W10351318	Instructions, Undercounter Install		W11130629	White	14	3400093	Screw
	W11161549	Guide, Use & Care	10	W11130627	Stainless	15	7101P426-60	Screw
2		Cooktop		W10578768	Switch, Infinite (Left Front & Right Rear)	16	7101P309-60	Screw
	W11120971	Black		W10843843	Switch, Infinite (Left Rear)	17	W11172719	Plate, Switch
	W11120973	White		W10437092	Switch, Infinite (Right Front)	18	W11175477	Rail, Vertical
	W11120972	Stainless				19	W11171776	Rail, Horizontal Rear
3		Trim, Front Stainless (Not Serviced)	11	8273994	Element (1200W) (Left Front & Right Rear)	FOLLOWING PARTS NOT ILLUSTRATED		
4	W11172720	Shield, Switch				W11111805		Harness, Main
5	W10225448	Spring, Element				3400015		Screw, Grounding
6	W11171777	Rail, Horizontal Front		8273993	Element (1800W) (Left Rear)	3192439		Seal, Limiter
7		Grommet		W10275049	Element (2500/1200W) (Right Front)	8008P068-60		Grommet, Wire (Black)
	W10293874	Black				W10324729		Grommet, Wire (Gray)
	W10372006	Grey				8286642		Tape, Foam
8		Box, Burner (Not Serviced)	12	3183956	Seal, Switch Cover	W11161211		Insulation, Cooktop (Knob)

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	WA906B	Scraper, Cooktop
W10355051		Cleaner, Cooktop
	31464	Cleaner, Cooktop
	31463	Protectant, Cooktop
	242905	Kit, Canning Unit
	31605	Kit, Cooktop Care