




30" ELECTRIC SLIDE IN SELF-CLEAN RANGE

MODELS:

WEC310SAGB3 (Black)
WEC310SAGW3 (White)


COOKTOP PARTS

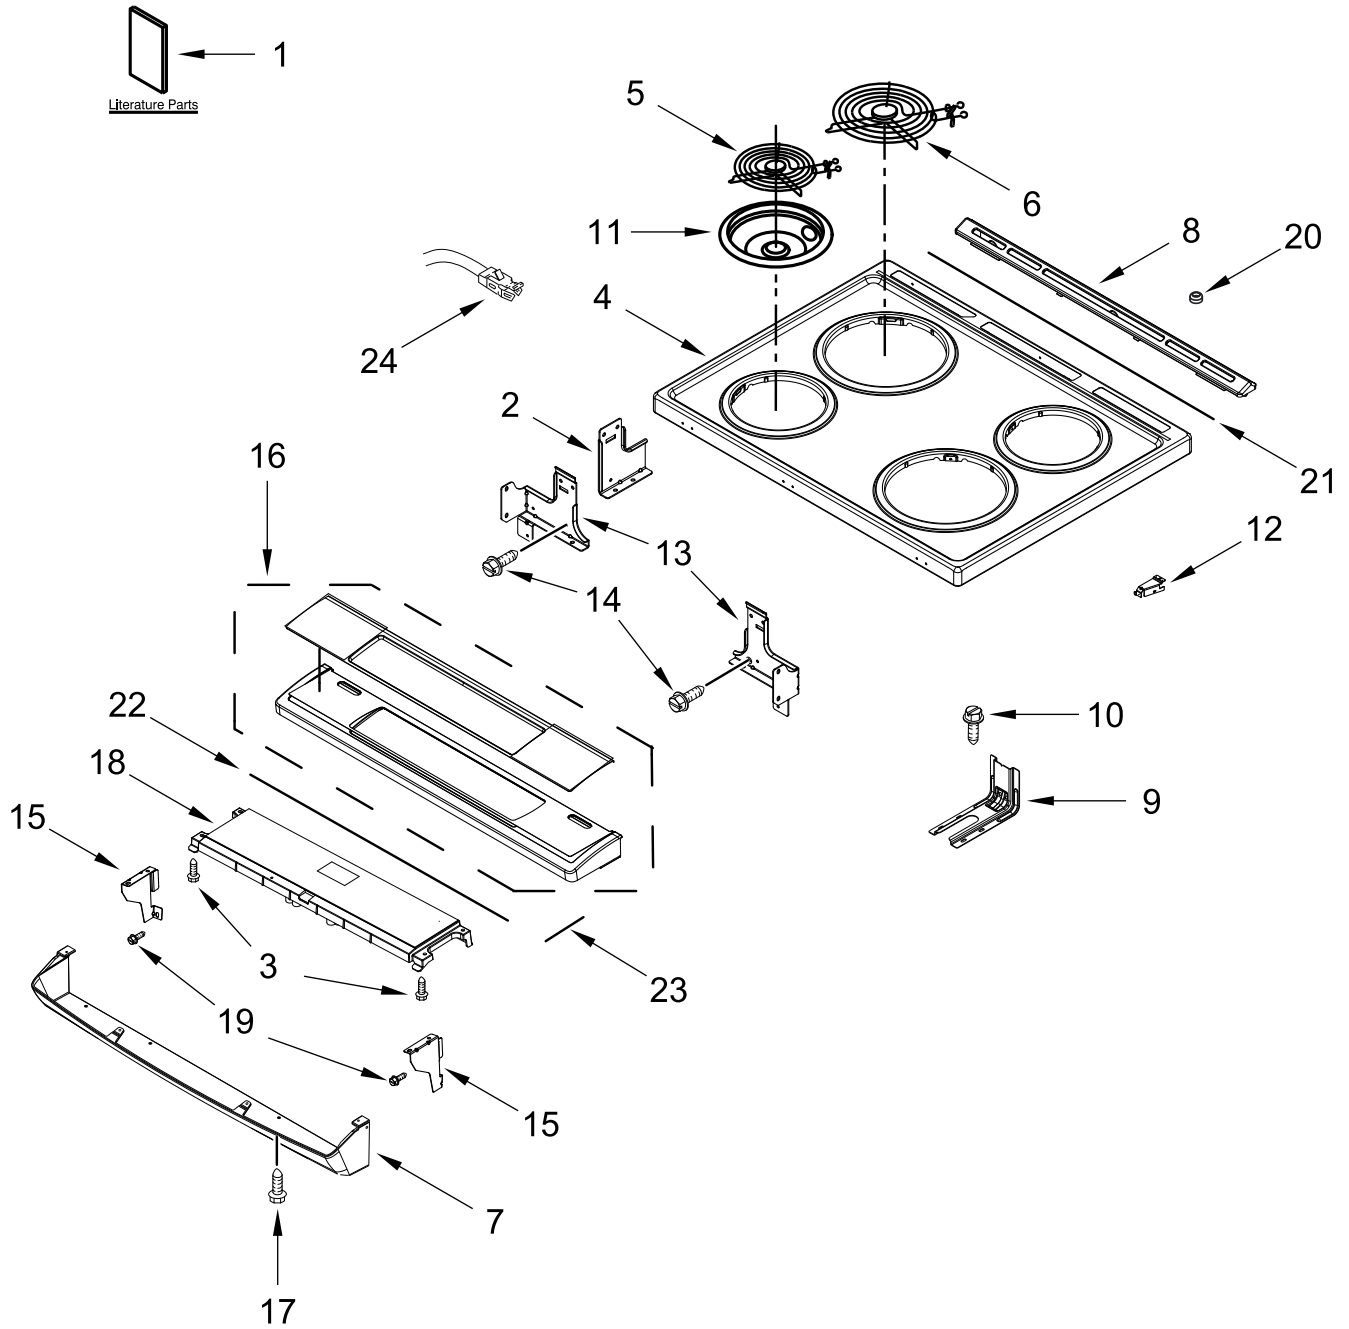

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7		Console, Lower Panel	16		Console
	W11047683	Instructions, Installation		W10816943	Black		W10825354	Black
	W11235903	Use and Care Guide		W10816942	White		W10825351	White
	W11327918	Wiring Diagram	8		Vent, Trim Top	17	W10516115	Screw
2	W10814305	Bracket, Console (Center)		W10636528	Black	18	W10806886	Electronic, Control (LCX)
				W10636527	White			
3	9780274	Screw	9	W10606241	Bracket, Anti-Tip	19	3196178	Screw
4		Cooktop	10	7101P485-60	Screw, Anti-Tip Kit	20	W10854253	Bumper
	W10536327	Black				21	W10612719	Gasket, Console/ Cooktop
	W10536268	White	11	W10196405	Bowl, Drip (8")			
5	W11364018	Element, Coil Heating (1500W)		W10196406	Bowl, Drip (6")	22	W10689101	Gasket, Console
		(Left Front and Right Rear)	12	W10162253	Brace, Corner (Left)	23	W10689102	Gasket, Console Short
				W10162252	Brace, Corner (Right)	24	814399	Receptacle, Element
6	W11364019	Element, Coil Heating (2400W)	13	W10814304	Support, Cooktop (Right)			FOLLOWING PARTS NOT ILLUSTRATED
		(Right Front and Left Rear)		W10814303	Support, Cooktop (Left)		W11134665	Harness, Main
			14	3196169	Screw		W11190435	Harness, Cooktop
			15	W10547960	Bracket, Console (Left)		W11226231	Harness, Console
							313438	Clip, Harness
				W10547961	Bracket, Console (Right)		7111P017-60	Clamp, Wire
							W10664316	Clip, Harness (Cooktop)


CHASSIS PARTS

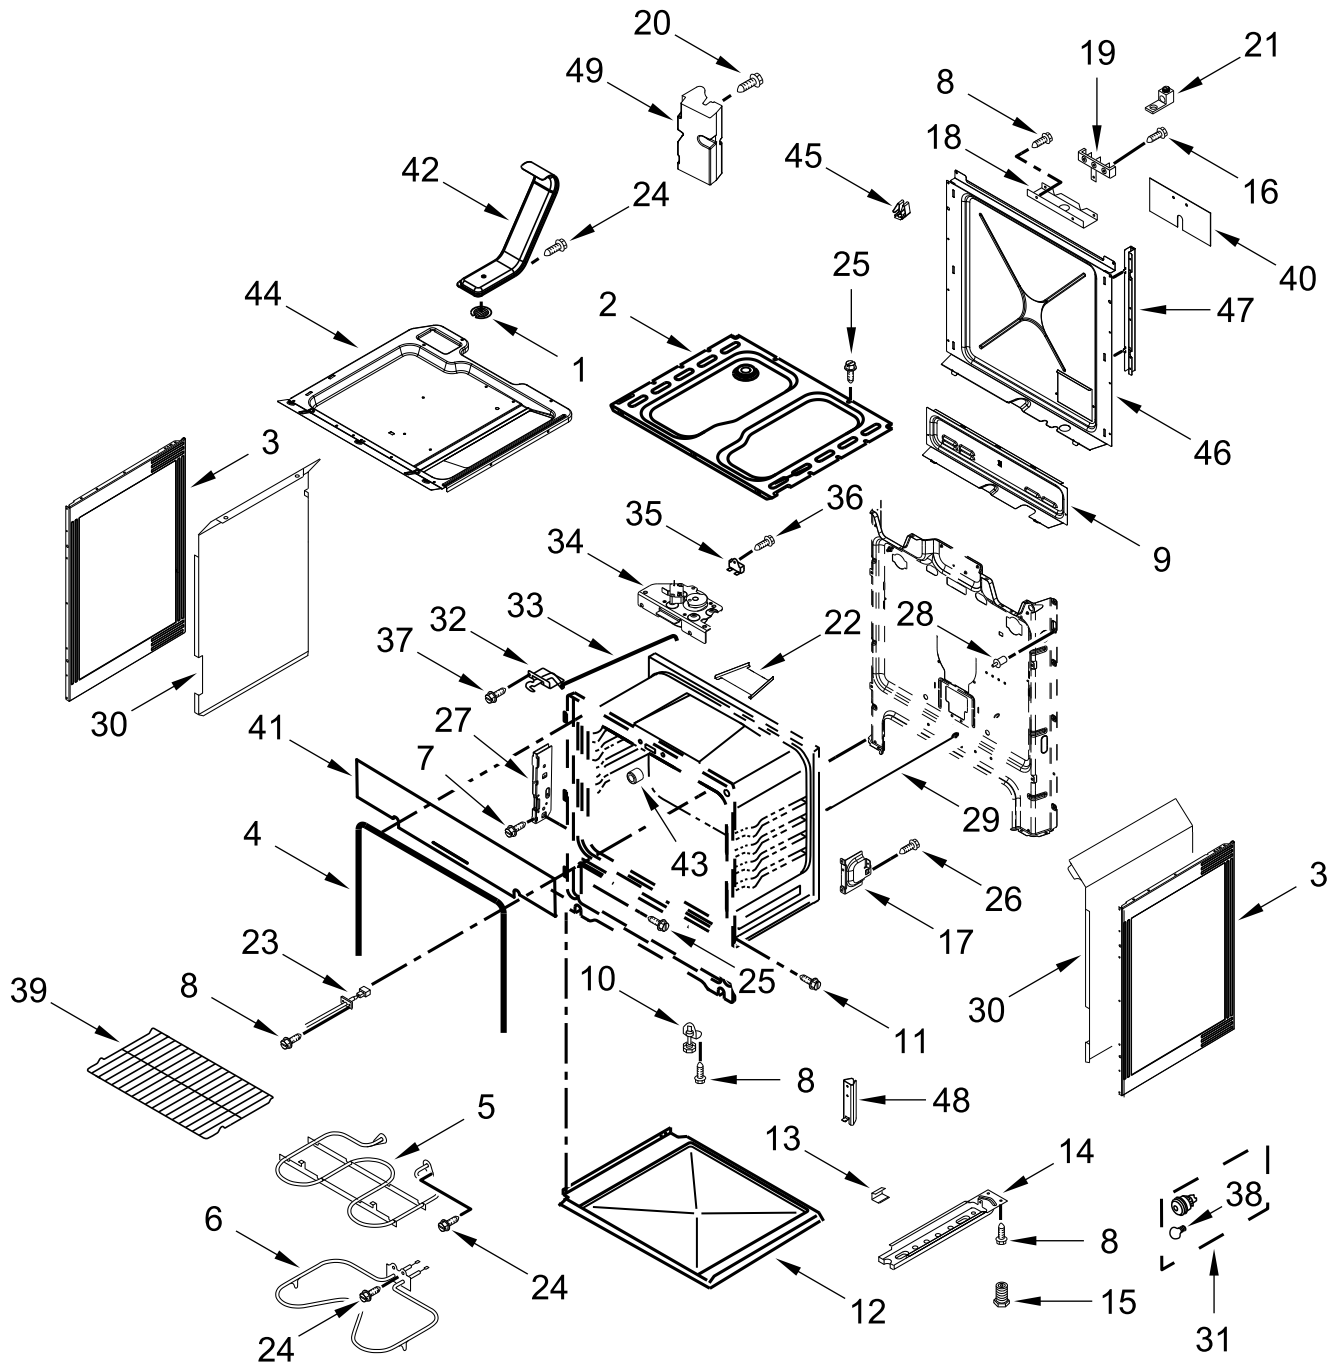

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	20	W11034869	Screw	38	W10571723	Bulb, Halogen 40 Watts
2	W10536273	Burner Box	21	W10281322	Kit, Bare Wire Adapter Block	39	W10268578	Rack, Oven
3		Panel, Side	22	W10853400	Baffle, Upper Chassis	40	W10655441	Shield, Power Cord
	W10162245	Black	23	W10586204	Sensor	41	W10848443	Chassis, Upper Insulation
	W10575396	White	24	W10362924	Screw	42	W11122085	Assembly, Flue
4	W10658354	Seal, Door	25	3400080	Screw	43	9758701	Spacer, Door
5	W10583047	Element, Broil	26	3196169	Screw	44	W10814301	Chassis, Support Upper
6	W10535148	Bake, Element	27	W10289077	Receiver, Hinge	45	W10866583	Clip-Panel, Ratcheting
7	W10031780	Screw	28	W10627802	Switch, Door	46	W10289172	Cover, Back
8	3196178	Screw	29	9757239	Rod, Door Switch	47	W10162241	Channel, Rear
9	W10162248	Cover, Wire	30	9761448	Retainer, Insulation (Right)	48	W11181076	Bracket, Reinforcing
10	W10341186	Assembly, Front Foot		9761449	Retainer, Insulation (Left)	49	W10914589	Counterweight
11	W10067840	Screw	31	W11175594	Assembly, Light			FOLLOWING PARTS NOT ILLUSTRATED
12	W10312471	Tray, Insulation	32	9761013	Assembly, Door Latch (Front)			
13	W10137382	Clip, Panel	33	W10078370	Rod, Push Latch		W10830993	Insulation, Wrap
14	W10390007	Assembly, Base Rail (Right)	34	W10107820	Assembly, Door Latch (Rear)		W10815385	Insulation, Back
	W10390008	Assembly, Base Rail (Left)	35	3196548	Fuse, Thermal		3196520	Clip, Wire
15	W10058460	Foot, Leveling	36	3196172	Screw			
16	3400029	Nut	37	3196560	Screw			
17	W10355173	Bracket, Oven Support						
18	3186034	Bracket, Service						
19	W10245259	Block, Terminal						

DOOR AND DRAWER PARTS

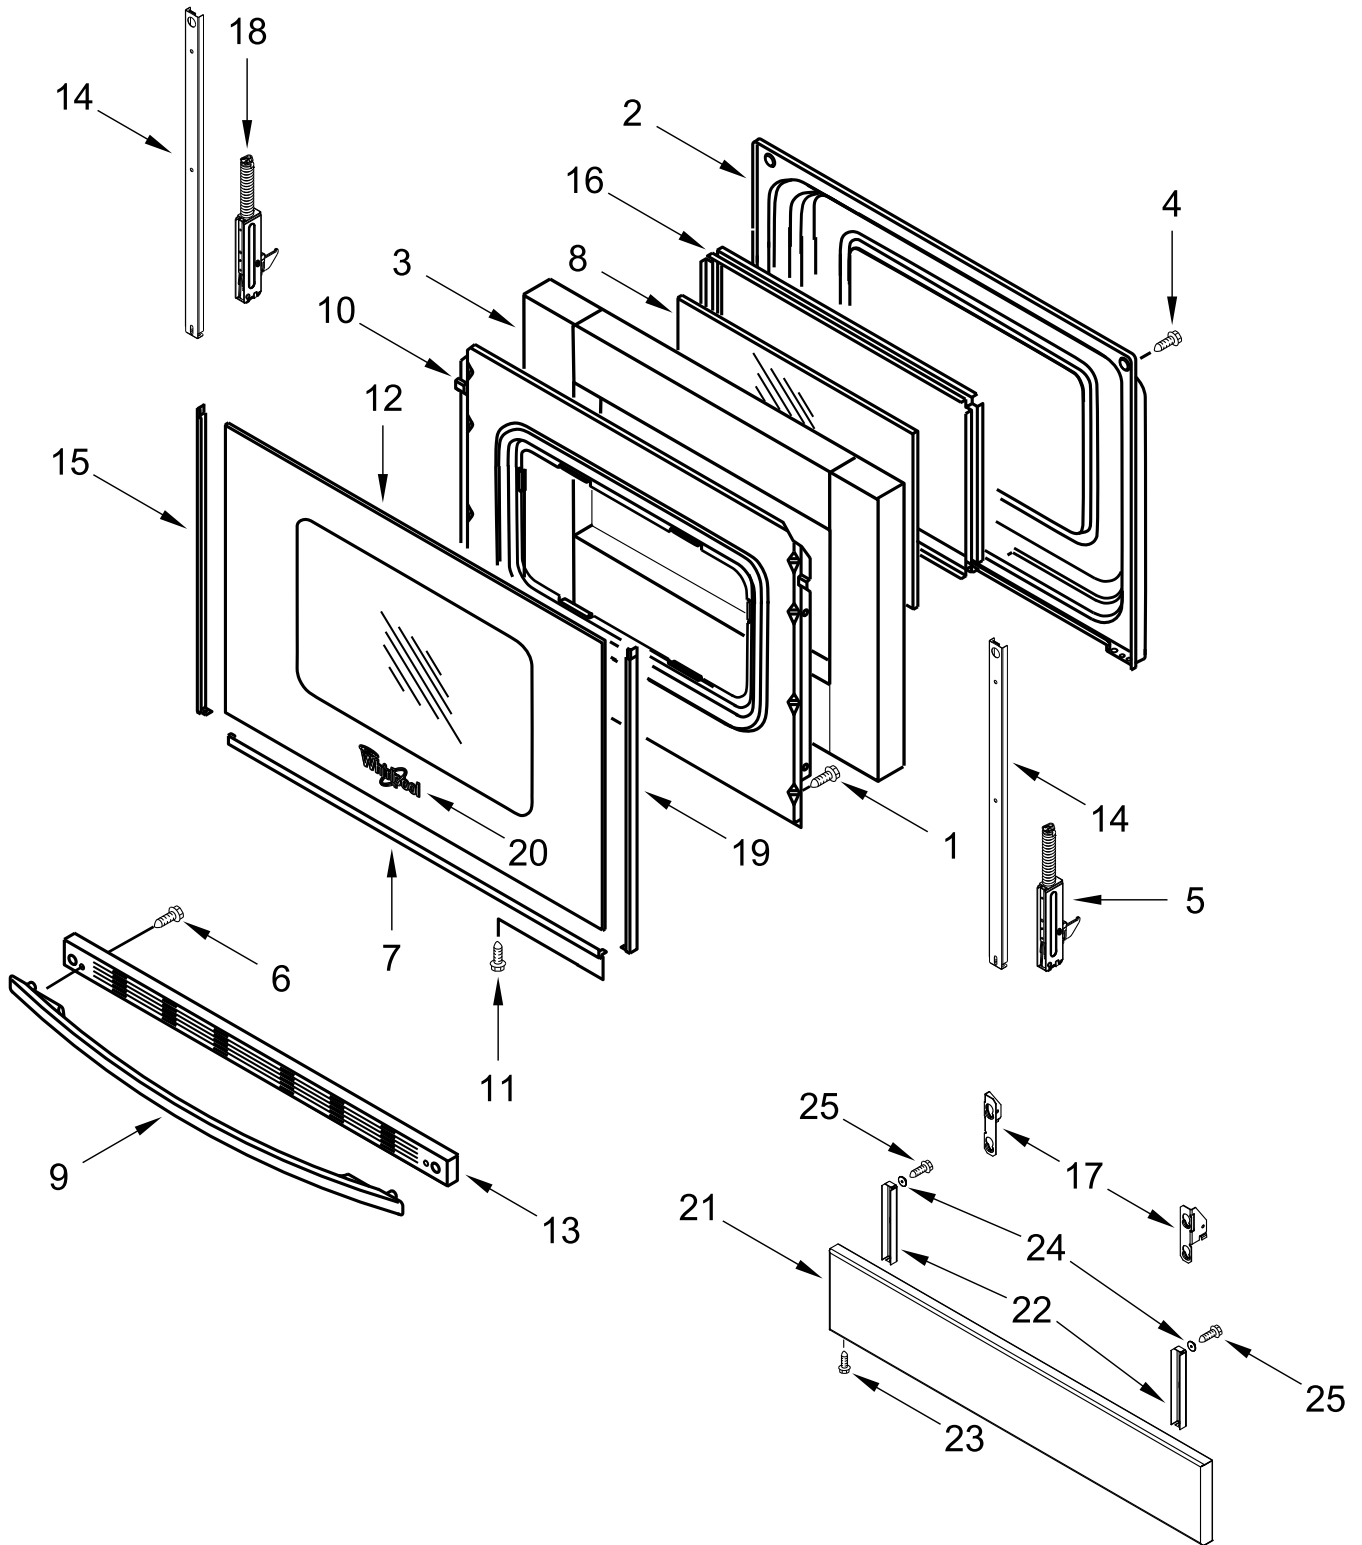

DOOR AND DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw	12		Glass, Window	19		Trim, Door
2	9761344	Liner, Door		W10884159	Black		W10746435	Black (Right)
3	W10278991	Insulation, Door Strip		W10409945	White		8523166	White (Right)
4	W10200660	Screw	13		Trim, Oven Door Vent	20		Badge
5	W10388635	Hinge, Door (Active)		W10310922	Black		W10481433	Grey
6	W10465148	Screw		W10310920	White		W10481434	White
7		Trim, Lower Door	14	W10544179	Strap, Door	21		Panel, Toe
	8523177	Black	15		Trim, Door		W11037793	Black
	8523175	White		W10746436	Black (Left)		W11037792	White
8	9758162	Glass, Inner		8523172	White (Left)	22	W11039147	Bracket, Toe Panel
9		Handle, Oven Door	16	W10316950	Frame, Glass	23	3196169	Screw
	W10300490	Black	17	W11096902	Mounting Bracket, Toe Panel (Right)	24	8004P024-60	Spacer, Side Panel
	W10300489	White		W11096901	Mounting Bracket, Toe Panel (Left)	25	W10673879	Screw
10	9761357	Retainer, Insulation	18	W10440013	Hinge, Door (Active)			
11	W10362924	Screw						

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting