

MAINTENANCE & CARE - EcoDense® FLOORING

Eco Hybrid Resilient Flooring



FLOOR CARE AND MAINTENANCE

EcoDense® Eco Hybrid Resilient Flooring may have some residual wax from the manufacturing process or packaging. To clean this only use a cloth or mop that is slightly dampened with rubbing alcohol, and this will remove the wax.

Regular maintenance should be done through ordinary vacuuming or sweeping. This should be sufficient to keep the floor clean. If needed, use a cloth or mop slightly dampened.

It is approved to use steam-based cleaners that are designed for use on hard surface floors and for residential use.

For tough spots, such as oil, markers, ink, tar, use an acetone-based cleaner on a white cloth and wipe the area clean after with a damp cloth to remove any remaining residue.

IMPORTANT

- Promptly remove all liquid spills, standing water or pet urine.
- Use non-staining felt floor protectors under moveable furniture. Do not drag or slide appliances or heavy furniture across the floor.
- Use a standard hard surface cleaner (preferable pH neutral) for vinyl or wooden floors like Bona hard-surface floor cleaner. Never fully flood the floor with water.
- The use of residential steam mops is allowed on your EcoDense® flooring. Periodic wet or jet mopping is permitted.
- Do not use rotating beater bars, floor scrubbers, buffers, or steel wool. Do not use abrasive cleaners, soaps, waxes, scouring powder, solvents or polishes.
- Use doormats at each entrance to your home to prevent dirt, sand, and other substances such as oil, asphalt, and other oil-based products to attach to your floor.
- We suggest using a hard surface, non-rubber chair mat to protect your floor from office chair casters.
- Make sure to follow the installation instructions.
- To minimize the expansion and contraction of the flooring maintain the indoor humidity level between 40% and 65% all year round.
- Make sure the locking system is fully engaged around all sides of each plank during installation to avoid gaps and the limited warranty being voided.
- Sheen or gloss differences caused by later additions or non-warranty repairs are not covered under this limited warranty.
- Do not refinish, apply wax or urethane finish to increase the gloss of your EcoDense® floor. This will void the warranty.