

# amazon fire tv

Omni Series

**Mini-LED** | QLED  
4K



## User Manual

### Fire TV Omni Series Mini-LED Model Numbers:

55": ML55F700

65": ML65F700

75": ML75F700

85": ML85F700

# CONTENTS

|                                                   |           |
|---------------------------------------------------|-----------|
| <b>What's in the box</b>                          | <b>5</b>  |
| <b>Assemble and set up the TV</b>                 | <b>7</b>  |
| Tools you'll need                                 | 7         |
| Getting your TV out of the box                    | 8         |
| Where to place your TV                            | 12        |
| Installing the TV stand legs                      | 13        |
| Installing the wall mount hardware                | 14        |
| <b>Getting to know your Fire TV</b>               | <b>17</b> |
| Getting to know your Fire TV Omni Series Mini-LED | 17        |
| Using the ports and connections                   | 18        |
| <b>Using the Alexa Voice Remote Enhanced</b>      | <b>20</b> |
| <b>Guided Setup</b>                               | <b>24</b> |
| Power the TV on and off                           | 24        |
| Setup process                                     | 24        |
| Choose your language                              | 25        |
| Connecting to the internet                        | 26        |
| Troubleshooting your internet connection          | 27        |
| Update to the latest Fire TV software             | 28        |
| Log in to your Amazon account                     | 29        |
| Import settings from another Fire TV device       | 30        |
| Set a Parental Control PIN                        | 31        |
| Adding broadcast TV channels                      | 32        |
| Create a Fire TV profile                          | 32        |
| Set up Hands-free with Alexa                      | 33        |
| <b>Using the Fire TV Experience</b>               | <b>35</b> |
| Using the Home screen                             | 36        |
| Settings menu                                     | 38        |
| Quick Settings pop-up menu                        | 40        |

|                                                                      |            |
|----------------------------------------------------------------------|------------|
| <b>Connect to an antenna, cable box, or satellite receiver .....</b> | <b>42</b>  |
| <b>Connecting the TV to Amazon Services .....</b>                    | <b>45</b>  |
| <b>Connecting the TV to non-Amazon streaming services .....</b>      | <b>47</b>  |
| <b>Troubleshooting Quick Reference .....</b>                         | <b>49</b>  |
| <b>Settings .....</b>                                                | <b>54</b>  |
| Inputs .....                                                         | 54         |
| Notifications .....                                                  | 55         |
| Account & Profile Settings .....                                     | 57         |
| Network .....                                                        | 59         |
| Display & Sounds .....                                               | 62         |
| Applications .....                                                   | 74         |
| Equipment Control .....                                              | 80         |
| Live TV .....                                                        | 83         |
| Controllers & Bluetooth Devices .....                                | 85         |
| Alexa .....                                                          | 88         |
| Preferences .....                                                    | 91         |
| Sleep Timer .....                                                    | 95         |
| Devices & Software .....                                             | 96         |
| Accessibility .....                                                  | 100        |
| Help .....                                                           | 103        |
| <b>Fire TV Ambient Experience .....</b>                              | <b>107</b> |
| Background Photos and Artwork .....                                  | 108        |
| AI Artwork .....                                                     | 109        |
| Dynamic Artwork .....                                                | 110        |
| Interactive Artwork .....                                            | 111        |
| Alexa Widgets .....                                                  | 112        |
| Music and Podcasts .....                                             | 113        |
| Alexa in Ambient Experience .....                                    | 114        |
| Things To Try .....                                                  | 114        |
| <b>Two-Way Video Calling .....</b>                                   | <b>117</b> |
| <b>Live View .....</b>                                               | <b>119</b> |
| Picture-in-Picture Setup .....                                       | 119        |
| <b>Smart Home Controls .....</b>                                     | <b>121</b> |


# What's in the box

5


What's in the box ..... 5

# What's in the box


---

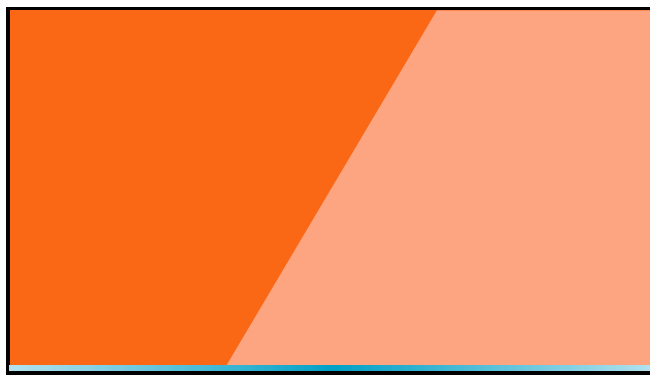


Fire TV Omni Mini-LED Series  
55"/65"/75"/85"

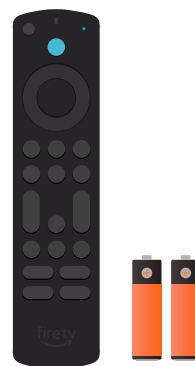


Alexa Voice Remote Enhanced  
& 2 AAA batteries

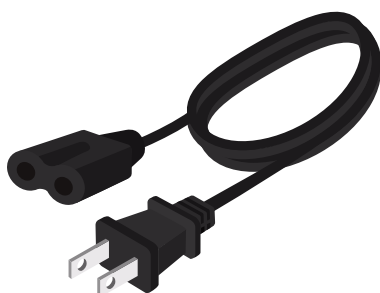

Power cord

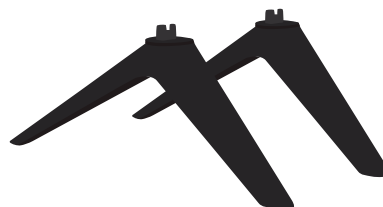

2 TV stand legs  
55"/65"/75"/85"

 

4 mounting spacers  
*only included with the  
85" TV and not preinstalled*



4 preinstalled  
mounting screws

# Assemble and set up the TV

7  
—  
14

|                                          |    |
|------------------------------------------|----|
| Tools you'll need .....                  | 7  |
| Getting your TV out of the box .....     | 8  |
| Where to place your TV .....             | 12 |
| Installing the TV stand legs .....       | 13 |
| Installing the wall mount hardware ..... | 14 |

## Tools you'll need

---



**WARNING:** Do not install while the TV set is turned on. This may result in personal injury from electric shock.



**Philips screwdriver**



**Scissors**

# Getting your TV out of the box


55"

Choose a large, flat surface to lay the TV on with the screen side down after you remove it from the box.




**CAUTION:** Don't tilt the box or lay it on its side to remove the TV.

1

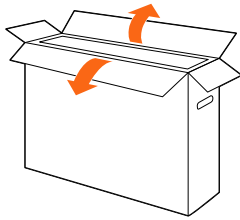


- Stand the box upright.
- Cut off any plastic straps with scissors.
- Cut the tape on the top of the box and open the flaps.

2

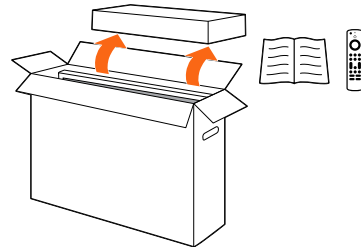


- Remove the foam tray that holds the remote and accessories.

3

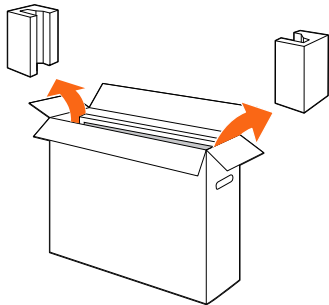

- Remove the additional foam packaging.
- Don't remove the TV from the plastic bag yet. It protects the screen during assembly.

4

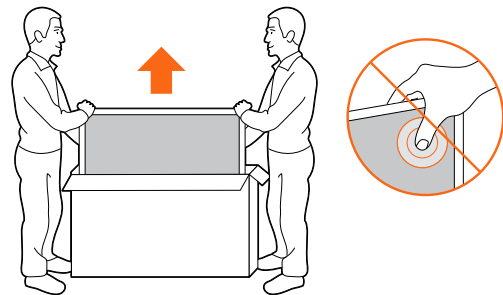

- With a person at each end of the box, grab the TV's back and outer frame. Do not touch the screen.
- Lift the TV straight up and out of the box, then lay it screen side down.
- Before disposing the packaging, make sure you've removed all parts and accessories.



**WARNING:** Lifting the TV requires 2 people.

# Getting your TV out of the box


65"

Choose a large, flat surface to lay the TV on with the screen side down after you remove it from the box.




**CAUTION:** Don't tilt the box or lay it on its side to remove the TV.

1

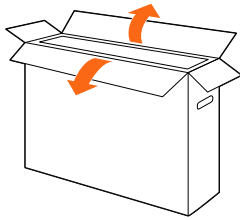


- Stand the box upright.
- Cut off any plastic straps with scissors.
- Cut the tape on the top of the box and open the flaps.

2

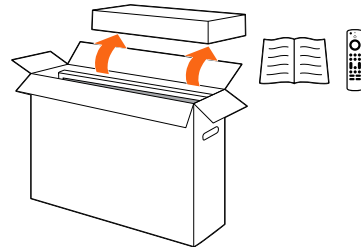


- Remove the foam tray that holds the remote and accessories.

3

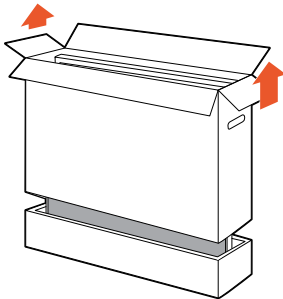

- Lift the top of the box up and off of the TV. The box has two parts. You can remove the top part without moving TV. The bottom tray is where the TV remains standing.
- Don't remove the TV from the plastic bag yet. It protects the screen during assembly.

4

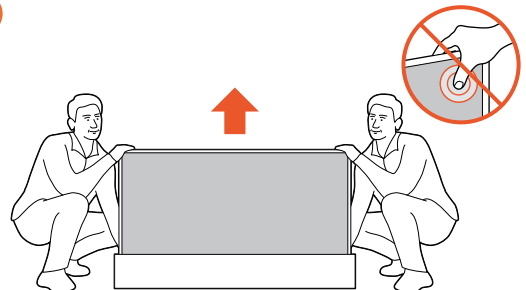

- With a person at each end of the box, grab the TV's back and outer frame. Do not touch the screen.
- Lift the TV straight up and out of the box, then lay it screen side down.
- Before disposing the packaging, make sure you've removed all parts and accessories.



**WARNING:** Lifting the TV requires 2 people.

# Getting your TV out of the box


75"

Choose a large, flat surface to lay the TV on with the screen side down after you remove it from the box.




**CAUTION:** Don't tilt the box or lay it on its side to remove the TV.

1

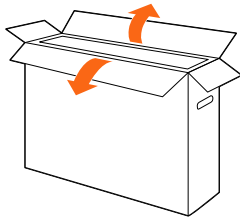


- Stand the box upright.
- Cut the tape on the top of the box and open the flaps.

2

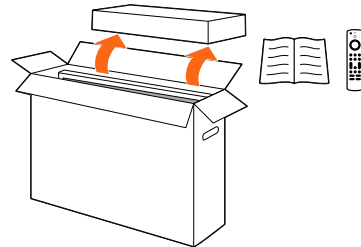


- Remove the foam tray that holds the remote and accessories.

3

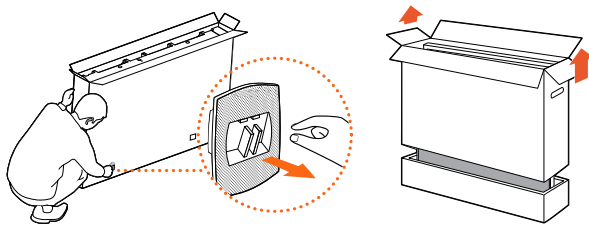

- Unlock the box clips near the bottom of the box.
- Lift the top of the box up and off of the TV. The box has two parts. You can remove the top part without moving TV. The bottom tray is where the TV remains standing.
- Don't remove the TV from the plastic bag yet. It protects the screen during assembly.

4

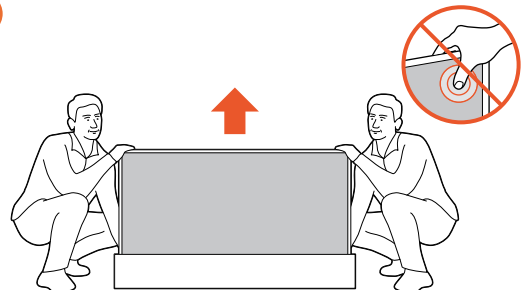

- With a person at each end of the box, grab the TV's back and outer frame. Do not touch the screen.
- Lift the TV up from the bottom tray, then lay it screen-side down.
- Before disposing the packaging, make sure you've removed all parts and accessories.



**WARNING:** Lifting the TV requires 2 people.

# Getting your TV out of the box


## 85"

Choose a large, flat surface to lay the TV on with the screen side down after you remove it from the box.




**CAUTION:** Don't tilt the box or lay it on its side to remove the TV.

1

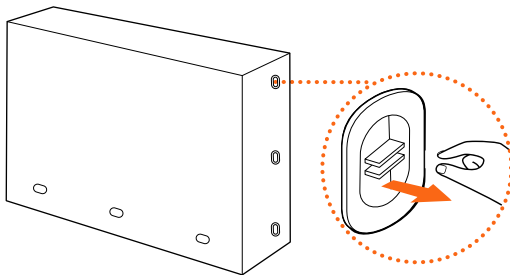


- Stand the box upright.
- Cut the tape on the top of the box with scissors. Unlock the box clips and open the flaps.

2

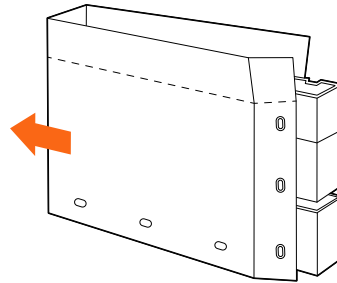


- Slide the TV and tray out of the box.

3

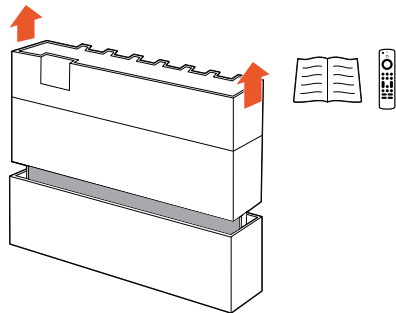

- Lift the cardboard sleeve off of the TV.
- Don't remove the TV from the plastic bag yet. It protects the screen during assembly.

4

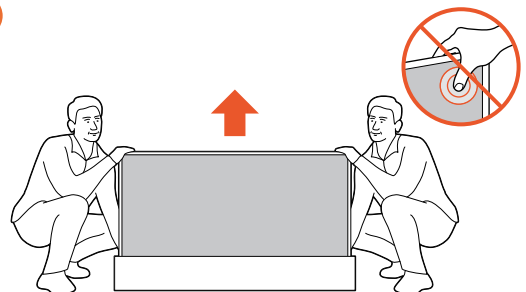

- With a person at each end of the box, grab the TV's back and outer frame. Do not touch the screen.
- Lift the TV up from the bottom tray, then lay it screen side down.
- Before disposing the packaging, make sure you've removed all parts and accessories.




**WARNING:** Lifting the TV requires 2 people.


# Where to place your TV

---

- Don't place the TV on an unstable surface.
- Place the TV somewhere that allows good ventilation.
- Don't use the TV near damp or cold areas.
- To protect the TV from overheating, keep it away from direct sunlight.
- Don't expose the TV to dripping or splashing liquids. Don't place objects filled with liquid, like a vase, on or near the TV.

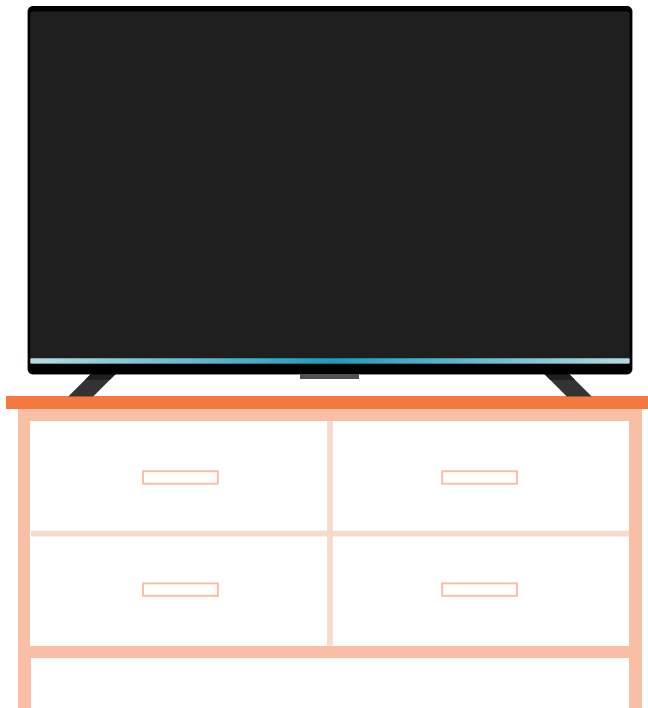

On a table with included  
TV stand legs

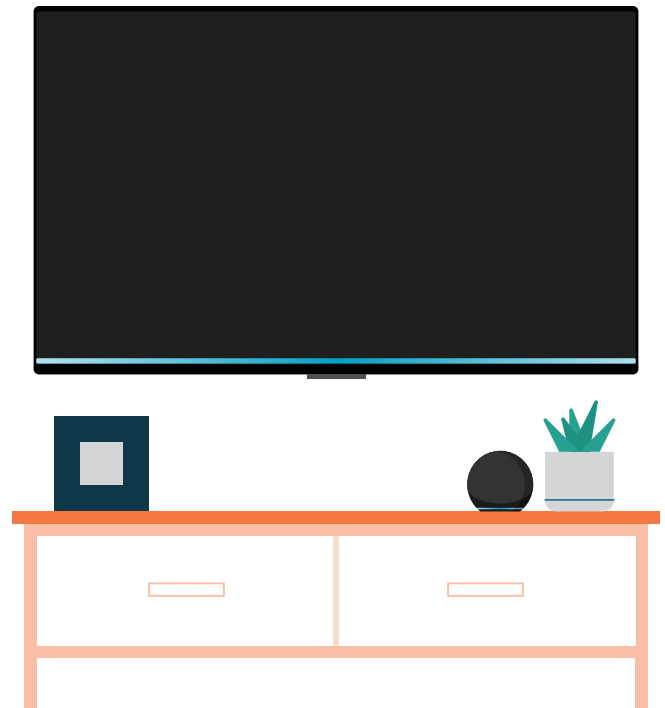

Wall mounted  
(mount not included)

# Installing the TV stand legs



**WARNING:** Never place the TV in an unstable location. The TV may slide or fall and cause serious injury to a child or adult and serious damage to the TV.

## Tools you'll need



Phillips screwdriver

Scissors

**Note:** This requires 2 people.

1. Place the TV with the screen side down on a large, flat surface like a table. You can lay a blanket on the table to protect the screen.
2. Cut open the plastic bag protecting the TV so that the base of the TV is exposed.
3. Attach the 2 TV stand legs to the TV using the 4 included Phillips-head screws.

The legs are interchangeable and can be installed on either side.

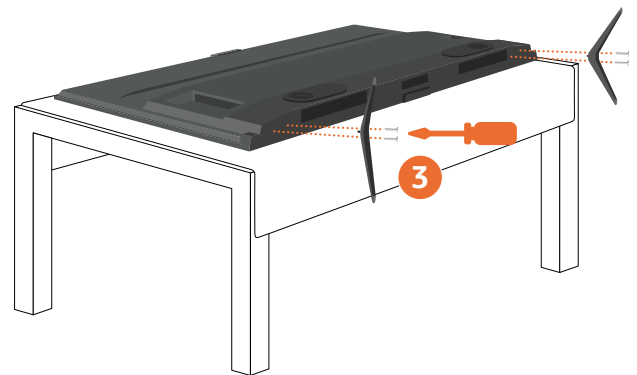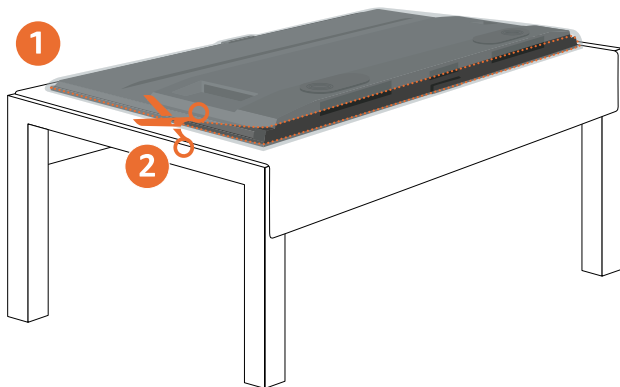

**Note:** Illustrations are provided for reference only and may differ from the actual product appearance.

# Installing the wall mount hardware (sold separately)

---



**WARNING:** If you mount this TV on a wall, follow the instructions exactly as set out in the information provided with the wall mount (sold separately). If it is not correctly mounted, the TV may slide or fall and cause serious injury and serious damage to the TV.

## Tools you'll need

Phillips screwdriver

Scissors

Wall mount hardware kit (sold separately). Check the list below to match the size of your TV with the corresponding hardware kit type.

**Note:** This requires 2 people.

Place the TV with the screen-side down on a large, flat surface like a table or countertop.

Use scissors to cut open the plastic bag that is protecting the TV.

Follow the mounting instructions provided with the wall mount.

### Compatible VESA wall mount patterns:

55", 65", 75" TVs: 400 mm (w) × 300 mm (h)

**Compatible screws:** Type M6 × 15 mm screws

**85" TV:** 500 mm (w) × 200 mm (h)


**Compatible screws:** Type M8 × 16 mm screws.

If the mount doesn't lay flat against your TV, screw in the included mounting spacers first.

To ensure safe installation, follow these safety precautions:

- Check that the wall can support the weight of the TV and wall mount.
- The TV must be installed on a vertical wall.
- Only use screws that are suitable for the wall's material.
- Ensure no one can trip over the TV cables.

**Note:** Illustrations below are provided for reference only and may differ from the actual product appearance.

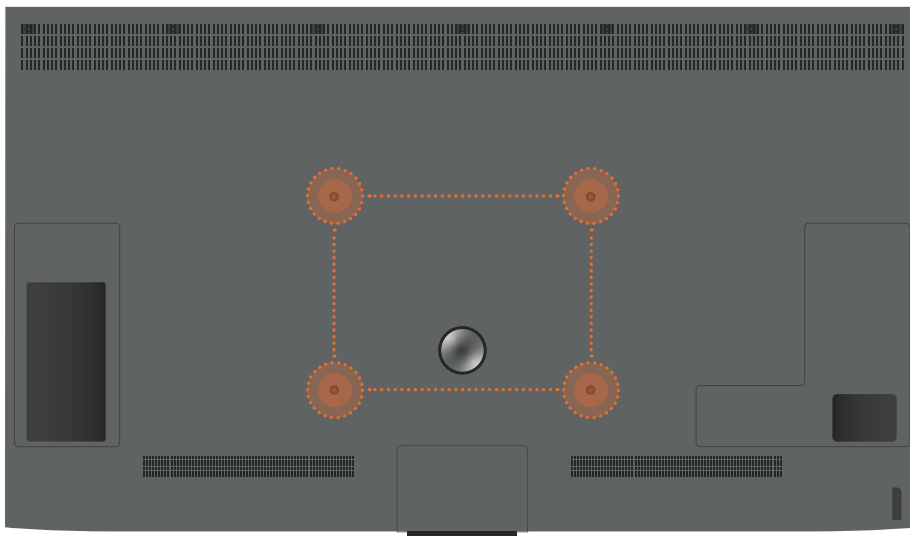


# Getting to know your Fire TV

17  
—  
18

|                                                         |    |
|---------------------------------------------------------|----|
| Getting to know your Fire TV Omni Series Mini-LED ..... | 17 |
| Using the ports and connections .....                   | 18 |


# Getting to know your Fire TV Omni Series Mini-LED

---

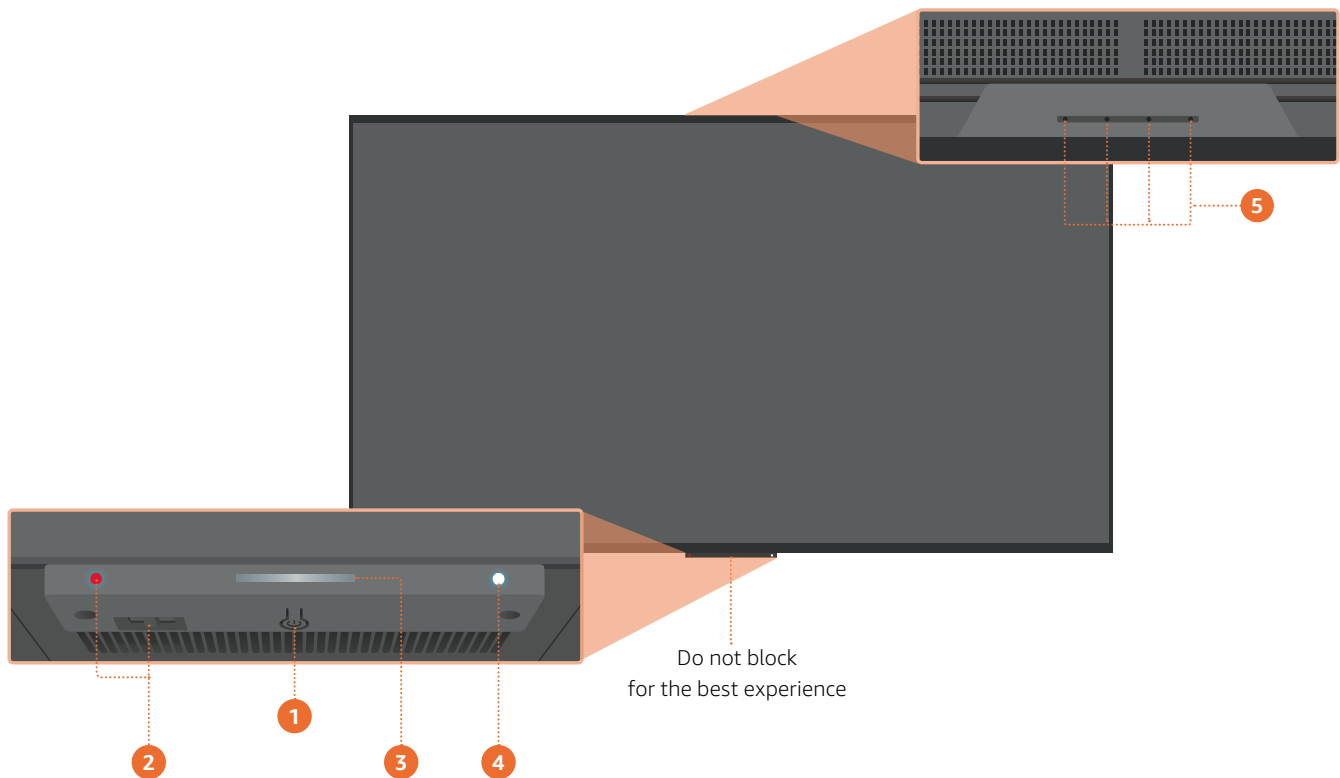

|   |                           |                                                                                                   |
|---|---------------------------|---------------------------------------------------------------------------------------------------|
| 1 | Power button              | Press once to select the input source. Press and hold to turn the TV on or put into standby mode. |
| 2 | Microphones on/off switch | Controls the microphones. When the switch is off, you'll see an LED indicator light.              |
| 3 | Light bar                 | Turns on when your TV is in standby mode.                                                         |
| 4 | LED indicator             | The color indicates what your Fire TV is doing.                                                   |
| 5 | Microphones               | The built-in microphones let you control your TV and content with your voice and Alexa.           |

# Using the ports and connections

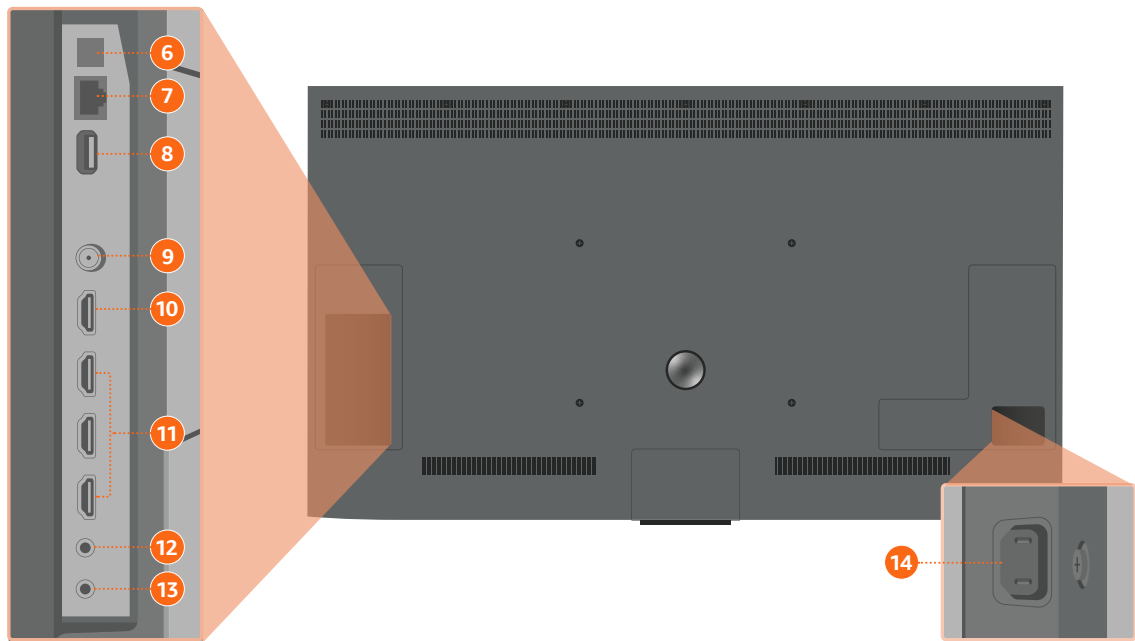

|       |                               |                                                                                                                                                                                                                                                                                |
|-------|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6     | Optical audio output (S/PDIF) | Connect an optical cable (sold separately) from the TV to the optical input on your receiver or soundbar.                                                                                                                                                                      |
| 7     | Ethernet/LAN                  | Ethernet (10/100 Mbps) to connect to your internet modem or home network.                                                                                                                                                                                                      |
| 8     | USB                           | Can be used to connect a USB cable.                                                                                                                                                                                                                                            |
| 9     | Antenna/Cable                 | Can be used to connect a coaxial cable or antenna.                                                                                                                                                                                                                             |
| 10/11 | HDMI ports                    | The HDMI (High-Definition Multimedia Interface) ports 11 can be used to connect devices like gaming consoles or cable and satellite boxes. The HDMI (eARC) port 10 has the additional ability to use the audio return channel to send digital audio to a receiver or soundbar. |
| 12    | IR emitter port (3.5 mm)      | Connect an infrared (IR) emitter cable to control other devices by IR commands from your TV. Cable not included.                                                                                                                                                               |
| 13    | Audio out/ Headphone          | Connect headphones or an analog soundbar (sold separately) to the TV's headphone jack.                                                                                                                                                                                         |
| 14    | AC-in (input)                 | Use to connect the supplied power cord to your TV.                                                                                                                                                                                                                             |

# Using the Alexa Voice Remote Enhanced


20  
–  
22

|                                             |    |
|---------------------------------------------|----|
| Using the Alexa Voice Remote Enhanced ..... | 20 |
|---------------------------------------------|----|


# Using the Alexa Voice Remote Enhanced



**1.** Press and hold your thumb on the arrow to release the latch.

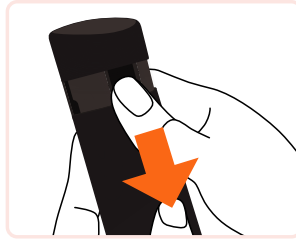


**2.** With one thumb pressing on the arrow, use your second thumb to slide open the cover. Insert included batteries.\*

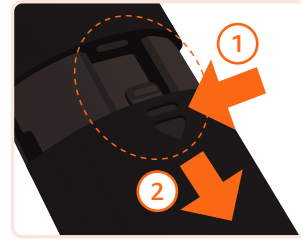


**Tip:** Make sure you **1** press the arrow firmly to release the latch as you **2** slide the cover off.

*\*Always replace used batteries with new 1.5V alkaline or 1.2V NiMH rechargeable AAA batteries.*

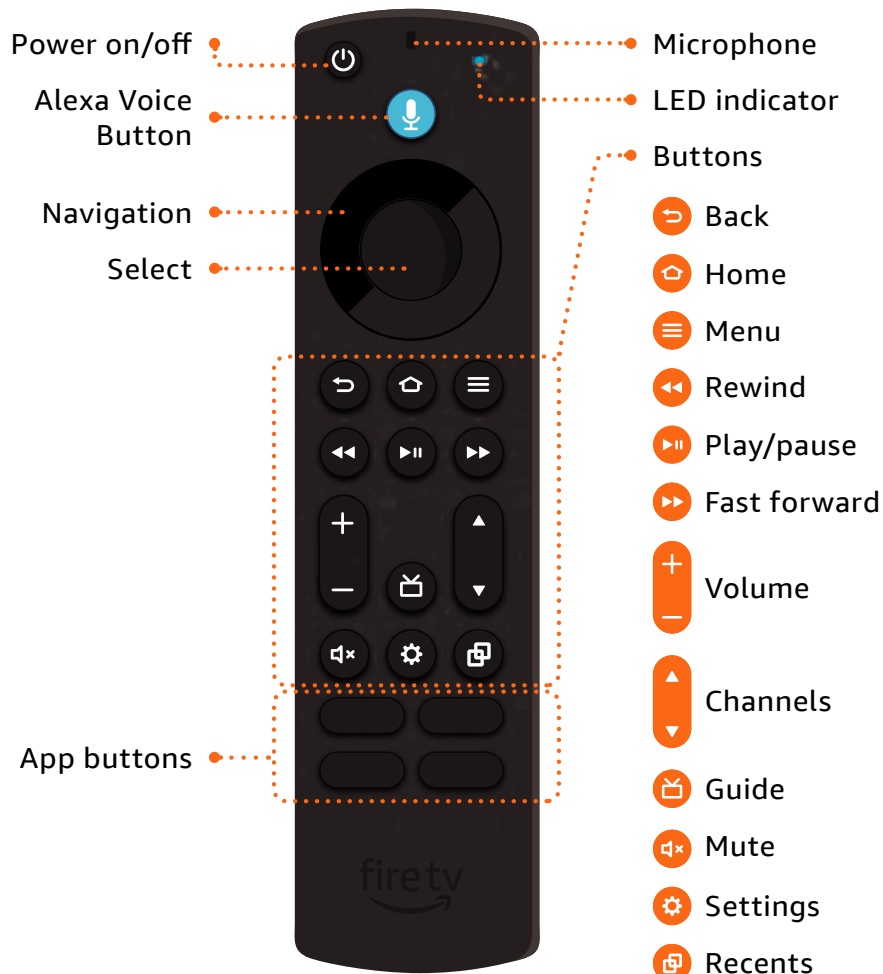

# Using the Alexa Voice Remote Enhanced

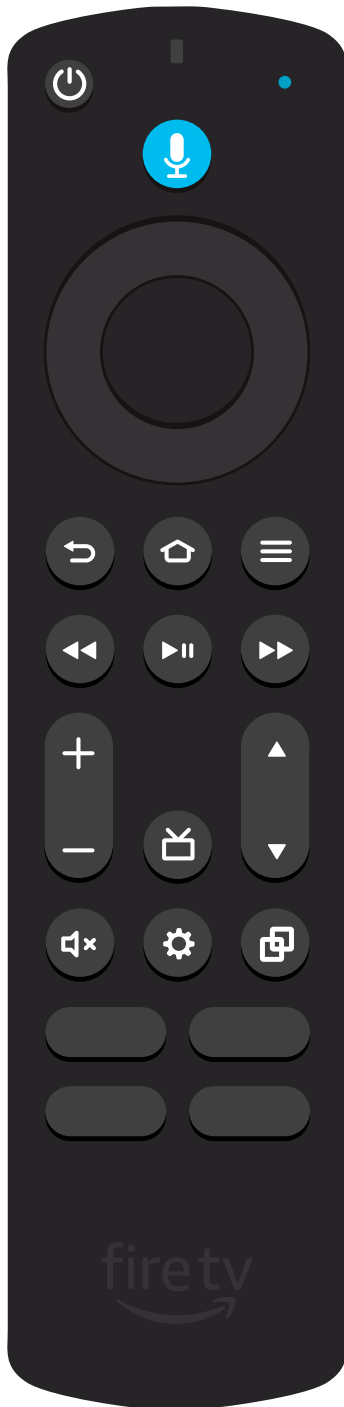

## **Power on/off**

Turn TV power on or off. When your TV is off, the LED indicator on the front of your TV lights up.



## **Alexa Voice Button**

Hold down to turn on the Alexa-enabled microphone and start voice input. Release the button to end voice input. With Alexa, you can use your voice to search for content, control playback, and more. (Internet connection required).



## **Select**

Confirm a selection or action.



## **Back**

Return to the previous screen.



## **Rewind**

Skip back (short press) or rewind (long press).



## **Volume +/-**

Increase (+) or decrease (–) the volume.



## **Guide**

Press to open the live TV Channel Guide.



## **Mute**


Mute or unmute the sound.



## **Settings**

Quickly access the Settings menu from any screen.

# Using the Alexa Voice Remote Enhanced

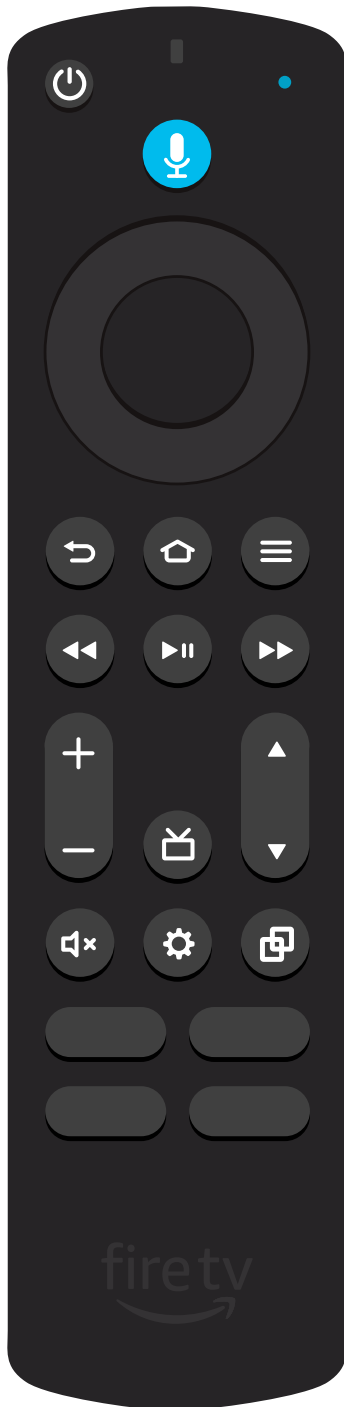

## LED indicator

LED lights up when a button is pressed.



## Microphone

Speak into the microphone when using Alexa Voice services.



## Navigation

Move up, down, left, or right.



## Home

Return to the Home screen (short press) or to open Quick Settings Overlay (long press).



## Menu/Options

Activate onscreen contextual commands.



## Fast forward

Skip forward (short press) or fast forward (long press).



## Play/pause

Start, resume, or pause playback.



## Channel

Press to move to higher channel numbers (from 25 to 26) or lower channel numbers (from 26 to 256) when watching Live TV.



## Recents

Press to display a list of the 5 most recent apps and content.



## App buttons

Launch preset apps from any screen, even when your TV is off.

# Guided Setup

24  
—  
33

|                                                   |    |
|---------------------------------------------------|----|
| Power the TV on and off .....                     | 24 |
| Setup process .....                               | 24 |
| Choose your language .....                        | 25 |
| Connecting to the internet .....                  | 26 |
| Troubleshooting your internet connection .....    | 27 |
| Update to the latest Fire TV software .....       | 28 |
| Log in to your Amazon account .....               | 29 |
| Import settings from another Fire TV device ..... | 30 |
| Set a Parental Control PIN .....                  | 31 |
| Adding broadcast TV channels .....                | 32 |
| Create a Fire TV profile .....                    | 32 |
| Set up Hands-free with Alexa .....                | 33 |

# Power the TV on and off

---

## Power on the TV

Follow the instructions on this page for switching on your TV and the remote before going on to the following pages and the channel setup procedure.

1. Connect the power cord first to the TV's power port, then to an outlet.
2. **Optional:** Connect an outside aerial to the antenna-in port on the back of the TV. This is required to receive broadcast television.
3. Press the power button, located at the bottom center of the screen.
4. You can also use the included remote to power on your TV.

## Turn off the TV

Pressing the power button on the remote or on the TV puts the TV into standby mode. To completely power off the TV, unplug the cord from the electrical outlet.

# Setup process

---

## How it works

The first time you use your TV, you can register your device, connect to your wifi network, and set the language for all the display menus.

You can change any setting selected or skipped during setup process later.

## Before you start

1. Complete assembly of your TV: follow the Table Mount or Wall Mount instructions.
2. Place batteries in your Alexa Voice Remote Enhanced.
3. Install the power cord and follow the instructions to power on your TV.

## To begin Guided Setup

### Begin setup and pair the remote

1. Gather your passwords to accounts like Amazon, your wifi, and favorite streaming services.
2. Prepare to wait 5 minutes or more for some steps in the setup, like loading the newest Fire TV software updates.
3. Press the Power button on the remote.
4. Your Alexa Voice Remote Enhanced should pair automatically with your Amazon Fire TV Smart TV.

**Troubleshooting:** If the remote doesn't pair, press and hold down the Home button for 10 seconds. If this doesn't work, try reinserting or replacing the batteries. If problems persist, visit this [site](#).

5. Using your Alexa Voice Remote Enhanced, follow the onscreen instructions to choose your language, select your wifi network, and register your device.
6. Review details on each setup option in the following pages of this User Manual.

## Choose your language

---

Set your Fire TV to display the main menus and navigation instructions in your preferred language. You can change this setting later if you want to.

1. Use the Navigation button on your remote to highlight the language you want to use.
2. Press the Select button on your remote to confirm your choice and move to the next option in the Guided Setup.

# Connecting to the internet

---

## How to access

Follow the onscreen prompts to connect your Fire TV to the internet. Your TV is internet-ready. You can connect to the internet with wifi or by connecting to a modem with an Ethernet cable. If you only want to watch cable or satellite TV, you do not need an internet connection.

## How it works

Connecting to the internet lets you experience the latest Fire TV features, including accessing your favorite apps, using Alexa, and connecting any compatible smart home devices.

## What you'll need:

- A modem or router with a high-speed internet connection.
- Your wifi password (not the same as your Amazon account password).

**Optional:** An Ethernet cable (not included) long enough to reach your TV.

## Connect to the internet with an Ethernet cable

1. Ensure you have:
  - An Ethernet cable (not included) long enough to reach your TV.
  - A router or modem with an available Ethernet port.
2. Connect one end of the Ethernet cable to the Ethernet port on your Fire TV and the other end to any available Ethernet port on your modem or router.
3. Follow the onscreen instructions to complete your setup.
4. If your network requires a password, enter the password on your TV when you see the prompt onscreen.

## Connect to the internet with wifi

1. Ensure you have:
  - A router broadcasting a high-speed wireless signal.
  - Your wifi password if your network is password protected.
2. Select your wifi network from the networks displayed on the screen.

3. If prompted, add your wifi password with your remote during the onscreen setup. If there is a lock icon displayed next to the wifi network name, a password is required. This is not the same as your Amazon account password.
4. If you bought your Fire TV through Amazon.com, and you have stored your wifi credentials on another Amazon device, your new TV may automatically connect to your wifi.
5. If you bought your Fire TV through another retailer, follow the onscreen prompts to connect to your wifi network and pair your TV.
6. Use the Navigation button on your remote to scroll through the list of available wifi networks. Press the Select button on your remote to sign in to your wifi.

## Troubleshooting your internet connection

---

An Ethernet cable plugged directly into your Fire TV can supply a more stable connection than wifi, in many cases. If a wifi router is located more than 30 feet from your Fire TV, or if multiple wireless devices are using the network at the same time, tiny interruptions in the wireless signal are possible.

If you see an onscreen notification that the network connection has been lost, try the following options:

- If you are using a wifi connection, you can switch to using an Ethernet connection. Plug an Ethernet cable into your modem or router and then into the Ethernet port on your TV.
- If you are using an Ethernet connection, unplug the Ethernet cable from your TV's Ethernet port and your modem or router. Then plug it back in.
- Check the router to see if it is running properly according to its manufacturer's instructions. Look for indicator lights that are turned on.
- Press the Back button on your remote to go to the list of available networks, and choose a different network.

If none of these options work:

1. Turn the TV off using the Power button on your remote.
2. Disconnect the power cable of the TV, then reconnect it.
3. Turn the TV back on with the Power button.
4. Repeat the setup steps for Connecting to the internet with a modem or Connecting to the internet with wifi.

## Troubleshooting your wifi connection

- Make sure you're connected to the correct wifi network. Using your remote, go to Settings > Network from the Main Menu, then select your wifi from the list displayed.
- If you see a lock icon, your wifi network requires a password. This password is not your Amazon account password.
- For best performance, use the 5 GHz band on your wireless router if available. Do not place your router in a cabinet as it may affect wifi signal strength.

## Troubleshooting your Ethernet cable connection

- Check that your Ethernet cable is properly connected to the modem and TV, then restart your TV.
- Unplug the Ethernet cable, wait 90 seconds, and plug it back in.
- Check that the router or modem you're connected to is working properly.
- Press the Home button on your Alexa Voice Remote Enhanced to select a different network.
- If none of these attempts work, disconnect the power cable from the Fire TV, wait 90 seconds, then reconnect it.

## Update to the latest Fire TV software

---

### How to access

Follow the onscreen prompts to begin checking for updates.

### How it works

When your new Fire TV is connected to the internet for the first time, the TV will download the latest software updates to keep your TV working smoothly.

**Note:** Actual settings seen on your Fire TV screen may vary due to software updates.

# Log in to your Amazon account

---

## How to access

Follow the onscreen prompts to begin entering your account username and password.

## How it works

When your new Fire TV is connected the internet for the first time, the TV will prompt you to connect to your Amazon account.

## What you'll need:

- A valid, active Amazon account
- Your account username (usually an email address or cell phone number)
- Your account password

**Note:** If you do not have an Amazon account, go to [amazon.com](https://amazon.com) on a computer, tablet or smartphone and create one before proceeding.

You can log in to your existing Amazon account either with your mobile phone, or directly from the Fire TV.

## Log in with your mobile device

To use your mobile phone, look for a QR code or URL onscreen. Scan the QR code with your phone or enter the URL, and log in to your existing Amazon account on your phone.

## Log in on your TV

1. When prompted to enter your Amazon username, move across the keyboard using the remote's Navigation button. Use the Select button to type each character.
2. Select Next when done to move on to your password.
3. Enter your Amazon password using the Select and Navigation buttons. Note that this is not your wifi password.
4. Select Sign In to log in.

## Create profiles for other users

If you wish, you can connect multiple profiles to a single Fire TV, so everyone can access their favorite entertainment.

# Import settings from another Fire TV device

---

## How to access

Follow the onscreen prompts which will appear if another Fire TV device is detected on your network.

## How it works

When the Fire TV is connected to the internet for the first time, it will scan the network and your Amazon account for other Fire TV devices.

## Use your existing settings on your new Fire TV

- If you are already a Fire TV customer, you can speed through the setup process by restoring all your current apps, privacy settings, and parental controls from your previous device to your new Fire TV.
- If you have multiple Fire TV devices, you will be asked to choose which device to use for restoring settings.
- If you want to add multiple Fire TV users to the list of user profiles, you will see onscreen prompts for this step later in the Guided Setup process. The Fire TV Household setup helps you organize accounts and preferences for multiple users. This is useful if multiple people have their own separate accounts for Amazon or Fire TV.

**Note:** If you skip this step during the Guided Setup, you will not be able to import all your apps in bulk again. However, you can install each individual app at any time in the future by navigating to Settings > Applications and choosing the app from your library or app store.

# Set a Parental Control PIN

---

## How to access

Follow the onscreen prompts during Guided Setup.

## How it works

Create a secret 5-digit Personal Identification Number (PIN) that must be entered before changing select settings.

Fire TV is designed with kids and parents in mind. You can require a PIN before playing content from Amazon Video or over-the-air live TV, launching apps, purchasing digital content, or using the Amazon Shopping app.

## What you'll need:

- A safe place to record your PIN in case you forget it
- Your Fire TV remote or the Fire TV app

**Note:** Parental controls do not restrict content in third-party apps. Parental controls for apps are determined by the app provider.

1. Make sure you are logged in to an adult profile before setting a parental control PIN. Go to Settings > Profiles and select your adult profile.
2. Return to the main Settings menu and go to Preferences > Parental Controls.
3. Using your remote, press the Select button to turn parental controls on or off.
4. Enter your Parental Controls PIN. Your PIN is the same PIN you use for other Amazon services such as Prime Video.
5. After you set a PIN, you can set one or more of the following settings:
  - Require a PIN for all purchases
  - Require a PIN for Prime Video Ratings only
  - Block the ability to view or purchase certain content types, such as games, apps, or photos
  - Change your Parental Controls PIN

**Note:** If you forget your PIN, go to Amazon Instant Video Settings at [amazon.com/video/settings](https://amazon.com/video/settings) to reset your Parental Controls PIN.

# Adding broadcast TV channels

---

## How to access

Follow the onscreen prompts.

## How it works

Your Fire TV will scan local antenna services to identify which TV channels are available in your location.

**Note:** This step is only needed if you use an outdoor or indoor antenna to watch broadcast TV. If you use cable or satellite services, your provider will scan and update channels for you.

To watch over-the-air broadcast TV your Fire TV needs to scan for digital signals.

1. Follow the onscreen prompts.
2. Use the Navigation button and the Select button on your Alexa Voice Remote Enhanced to start the scan.
3. Wait for the confirmation message onscreen that the scan is complete. The channels will be available in Guide and Live tab.

# Create a Fire TV profile

---

## How to access

Follow the onscreen prompts.

## How it works

A Fire TV profile provides a personalized experience for different viewers. For each profile, the home page will show your most used apps, recommendations, and watch progress. You can customize apps, channels, and some device settings for each profile. With kids profiles, you control which apps kids use, and manage access to adult profiles with the Child PIN. You can share purchased apps, videos, and Prime Video content with each child profile, or subscribe to more kid-friendly content with Amazon Kids+.

If you had profiles set up on a previous Fire TV device, you may already have them on your new Fire TV. If you restored settings and signed into your Amazon account during setup, your profiles should be available.

With a new profile you can organize:

- Parental Controls settings
- Streaming services or other apps
- Games
- Favorite movies and TV shows in watchlists

Use the Navigation button and Select button on your Alexa Voice Remote Enhanced to click on the + symbol onscreen. Here, you can create a new profile or add an existing one. Repeat as needed for different members of the household.

# Set up Hands-free with Alexa


---

## How to access

For customers with a Fire TV Omni Series, you have an option to set the TV to receive Alexa voice commands.

## How it works

Turn the microphones on the TV on, or off for privacy.

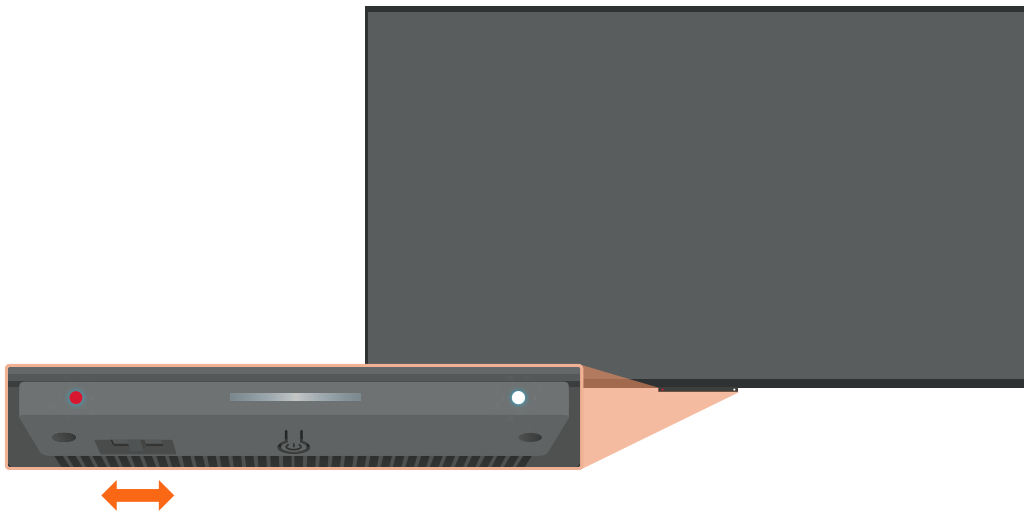

When enabled, Alexa allows you to give voice commands and use features, such as smart home and communications, when your TV is off. Note that your TV will automatically turn on during certain actions, such as when you make or receive a call, drop in, or announcements.

Turn the microphones on to use Hands-free with Alexa. Use the Microphones on/off switch at the bottom of the TV. When the microphones are off, an LED indicator will turn red.

You can now choose your own “wake word” from a list of four options.

- Alexa
- Computer
- Echo
- Amazon

# Using the Fire TV Experience

35  
—  
12

|                                  |    |
|----------------------------------|----|
| Using the Home screen .....      | 36 |
| Settings menu .....              | 38 |
| Quick Settings pop-up menu ..... | 40 |


## Find what you want

### With your new Amazon Fire TV you can:

- Stream movies and shows from your favorite apps
- Watch live cable and satellite TV
- Play video games
- Connect and control your compatible smart home devices
- Make video calls with Alexa Communications
- Control your compatible Fire TV Experience using Hands-free with Alexa

# Using the Home screen

---

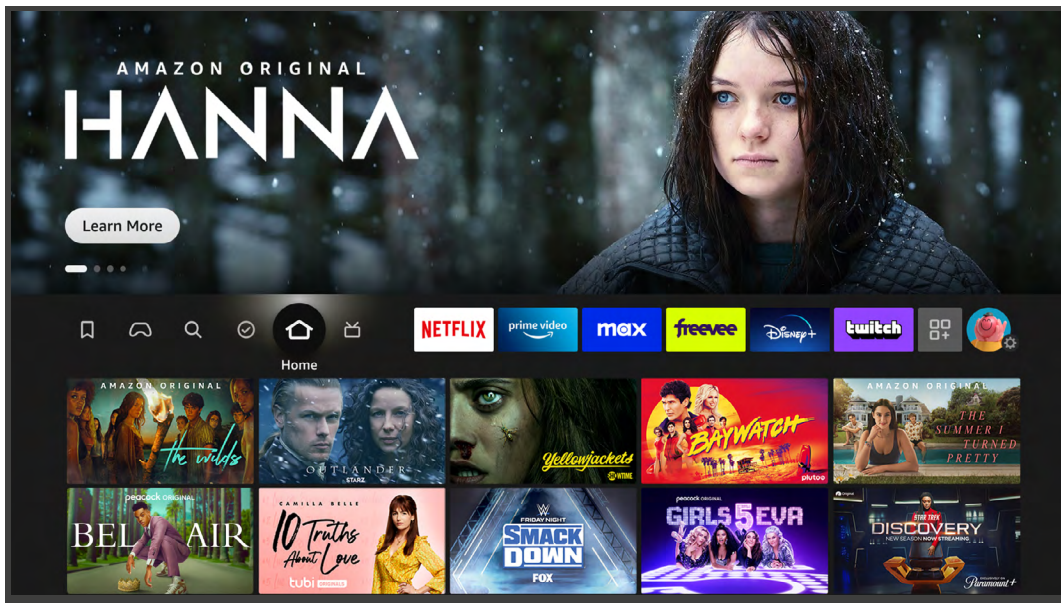

Subscriptions may be required. Content availability may vary.

## How to access


The Home screen is what you see when you turn on your TV. To return to the Home screen, press the Home button on your remote. Or use Hands-free with Alexa and just say:

*"Alexa, Go Home."*

## How it works

Use the Home screen to discover new shows, resume movies you paused in certain apps, and find your favorite apps.

If you have multiple Fire devices connected to the same Amazon account and profile, then the Home screen you see on every device will be tailored to that profile's preference on that device.

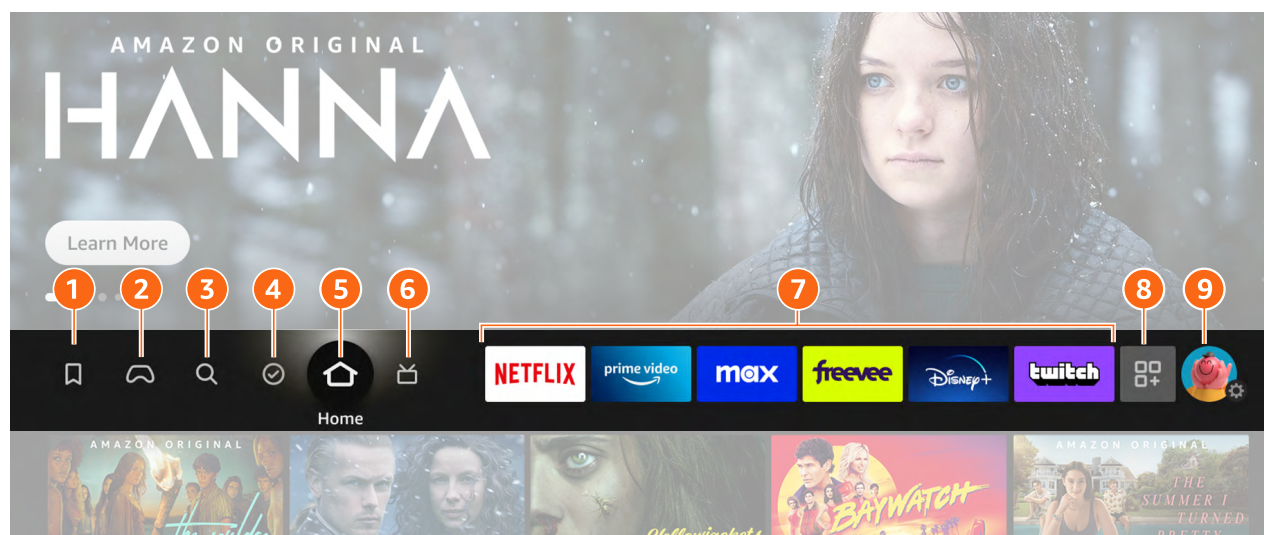


## Menu option

## How to make it yours

- |                                   |                                                                                                                                                                                                                |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1 My Stuff</b>                 | Click here to access your Watchlist, Prime Video Rentals, and Purchases.                                                                                                                                       |
| <b>2 Games</b>                    | Discover and play games on your TV.                                                                                                                                                                            |
| <b>3 Find</b>                     | Search for programs and movies you want to watch, on any service connected to your TV.                                                                                                                         |
| <b>4 Free</b>                     | Find the content that's free for you to watch.                                                                                                                                                                 |
| <b>5 Home</b>                     | Click to return to the original view of the Home screen. Useful if you've explored several carousel displays of featured programming, and want to return to the main starting point to enjoy your programming. |
| <b>6 Live</b>                     | Switch to watch live broadcasts from antennas or streaming services.                                                                                                                                           |
| <b>7 Your Apps &amp; Channels</b> | Apps that are recommended for your Fire TV will appear here for quick access. Navigate to More Apps > My Apps to change these tiles to show your favorite apps.                                                |
| <b>8 More Apps</b>                | View and configure all of the apps on your Fire TV here. To add more apps, go to More Apps > Get More Apps.                                                                                                    |
| <b>9 Profiles/ Settings</b>       | Click this Gear icon to open the Settings portal screen.                                                                                                                                                       |

# Settings menu

---

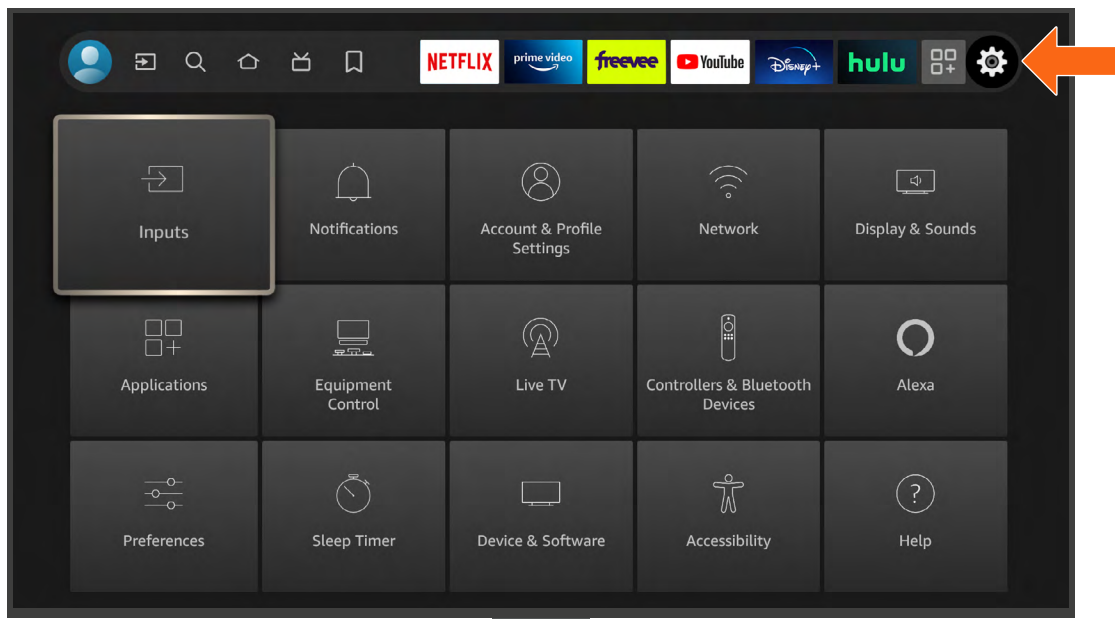

**Note:** Actual settings seen on your Fire TV screen may vary due to software updates.

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight each setting. Press the Select button to display that setting's menu options.

## How it works

The Settings menu organizes access to all the preferences needed to set up and personalize your Fire TV.

| #   | Menu option                                | How to make it yours                                                        |
|-----|--------------------------------------------|-----------------------------------------------------------------------------|
| 54  | <b>Inputs</b>                              | View devices connected to your Fire TV                                      |
| 55  | <b>Notifications</b>                       | View notifications and change preferences for alerts                        |
| 57  | <b>Account &amp; Profile Settings</b>      | Change passwords, login information, profiles for different users           |
| 59  | <b>Network</b>                             | Choose, add, or remove different wireless and wired internet access         |
| 62  | <b>Display &amp; Sounds</b>                | Adjust screen audio and video playback                                      |
| 73  | <b>Apps</b>                                | Add, remove, or manage apps associated with the TV                          |
| 79  | <b>Equipment Control</b>                   | Add, remove, or manage hardware associated with the TV                      |
| 82  | <b>Live TV</b>                             | Choose settings for broadcast TV signals                                    |
| 84  | <b>Controllers &amp; Bluetooth Devices</b> | Add, remove, or manage devices connected to the TV by Bluetooth             |
| 87  | <b>Alexa</b>                               | Manage interaction with Alexa services                                      |
| 90  | <b>Preferences</b>                         | Adjust access, set parental controls                                        |
| 94  | <b>Sleep Timer</b>                         | Set the TV to turn off after a specified time                               |
| 95  | <b>Devices &amp; Software</b>              | Access all the software specifications and legal documents for your Fire TV |
| 99  | <b>Accessibility</b>                       | Adjust displays and controls for specific needs                             |
| 102 | <b>Help</b>                                | Search for answers to frequently asked questions                            |

# Quick Settings pop-up menu

---

## How to access

Long-press (press and hold) the Home button or press the Settings button on your remote until the menu appears along the right-hand edge of your screen.

## How it works

While watching any program or service, you can reach this list of the most-popular settings, without exiting your program to navigate to the complete Settings menu.

| Page # | Menu option       | How to make it yours                                                                            |
|--------|-------------------|-------------------------------------------------------------------------------------------------|
| 57     | Profile           | Change to another user profile                                                                  |
| 32     | Channel Guide     | Access a broadcast schedule for live TV channels                                                |
| 54     | Inputs            | See all the input ports and connections to switch between devices plugged into different ports  |
| 72     | Display Mirroring | Allow guest devices to display their screens on the TV                                          |
| 73     | Apps              | View a list of apps and channels you have installed and a complete list of apps available       |
| 94     | Sleep Timer       | Turn off the TV automatically after a specified time                                            |
| 63     | Picture           | Adjust the display's picture settings. This will vary depending on the type of content playing. |
| 68     | Sound             | Adjust the sound quality and output devices                                                     |
| 106    | Ambient           | Use your TV as an always-on, Alexa-powered smart display when not streaming.                    |


# Connect to an antenna, cable box, or satellite receiver

42  
—  
43

Connect to an antenna, cable box, or satellite receiver ..... 42

# Connect to an antenna, cable box, or satellite receiver

---

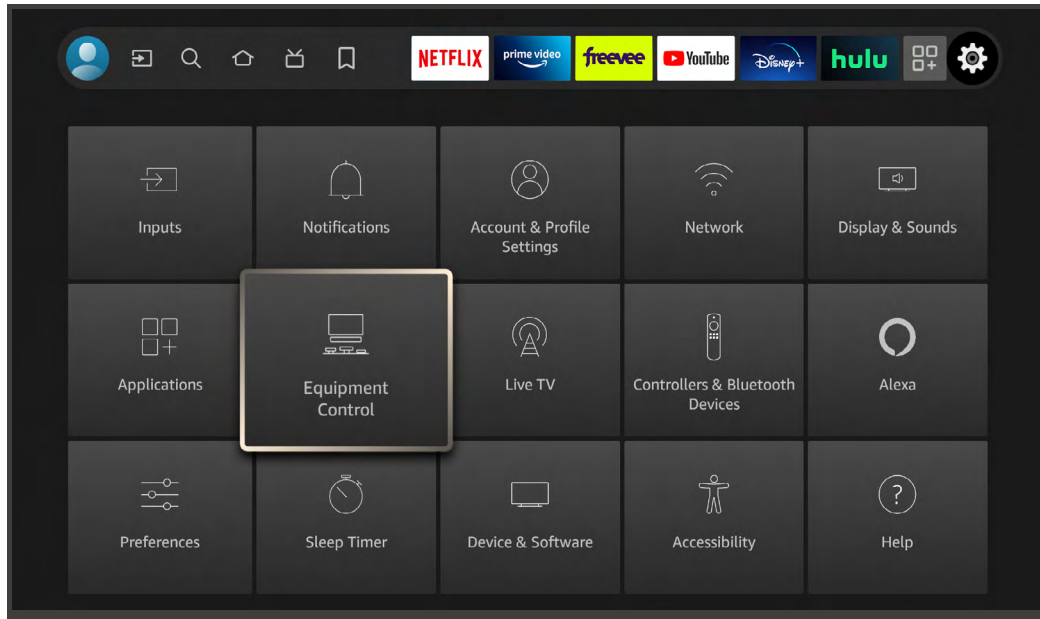

**Note:** Actual settings seen on your Fire TV screen may vary due to software updates.

## How it works

Expose the back of your Fire TV so you can reach all the ports. Connect the cables for your external antenna or satellite receiver to the Fire TV. Adjust the settings for the connection by following onscreen prompts in the Settings menus.

## What you'll need:

- Cable box or Satellite receiver (not included)
  - HDMI cable (not included)
- OR**
- Coaxial cable (not included)

**Note:** Review the manufacturer's instructions that came with your equipment before connecting to your Fire TV.

## **Connect a cable box or satellite receiver**

1. Find the HDMI ports on the back of the Fire TV.
2. Plug the HDMI cable into an HDMI port on your Fire TV.
3. Plug the other end of the HDMI cable into the cable box.
4. Use the remote that came with your Fire TV (not a third-party remote) to select Settings > Equipment Control.
5. Finish setup using the Equipment Control menu.

## **Connect an antenna with a coaxial cable**

1. Find the Antenna/Cable input port on the back of the Fire TV.
2. Line up the pin on the end of the coaxial cable with the hole in the port.
3. Tighten the nut on the end of the antenna coaxial cable onto the port's threads.  
Do not overtighten.
4. Connect the other end of the coaxial cable to your antenna.
5. Use the remote that came with your Fire TV (not a third-party remote) to select Settings > Equipment Control.
6. Finish setup using the Equipment Control menu.

# Connecting the TV to Amazon Services

45

|                                            |    |
|--------------------------------------------|----|
| Connecting the TV to Amazon Services ..... | 45 |
|--------------------------------------------|----|

# Connecting the TV to Amazon Services

---

## How to access

Get to the Settings menu in two ways: from the Home screen, click the Gear icon in the lower-right corner or press and hold the Home button on your Alexa Voice Remote Enhanced from any screen. Once you are in Settings, click Account and Profile Settings > Sync Content.

## How it works

Connect your Fire TV to Prime Video and other content you've purchased from Amazon.

Your Amazon Fire TV can also access content from third-party apps, games, music, videos, and more. There are several ways to access and remove content from your Amazon Fire TV. Go to Settings > Applications > Manage Installed Applications.

To find content, such as movies, TV shows, games, and apps, use the main menu on your home screen.

## Submenus

### Sync Amazon Content

## How to make it yours

Choose this menu and Follow the onscreen prompts to allow your Fire TV to play content you've purchased from your Amazon account on any other device.

### Prime Video

Choose this menu to manage subscriptions through Prime Video to different TV streaming services, or to movies and TV shows you've purchased.

# Connecting the TV to non-Amazon streaming services

47

|                                                          |    |
|----------------------------------------------------------|----|
| Connecting the TV to non-Amazon streaming services ..... | 47 |
|----------------------------------------------------------|----|

# Connecting the TV to non-Amazon streaming services

---

## How to access

Use the main menu on your Fire TV to search for apps. You can also use your voice to search for specific apps. Just press the Alexa Voice Button on your Alexa Voice Remote Enhanced or speak to Alexa hands free with your Fire TV Omni Series.

## How it works

To add a new streaming service to your Fire TV menu:

1. Press the Home button on your Alexa Voice Remote Enhanced.
2. Use the Navigation button to select the Find icon on the Home screen.
3. On the Search screen, use the Navigation button to select the Appstore.
4. Search for the streaming service.
5. Follow the onscreen prompts to add the service. Enter your user ID if needed by the app.
6. When you have completed that app's registration process, the streaming service will be ready to use on your Fire TV.
7. You will see the app's logo on your Fire TV Home screen. It will either appear in the first six logos displayed, or you can select the More Apps icon (three squares and a + plus sign) to display all the apps that are available on your TV. Newly installed apps appear at the end of the list of More Apps.

**Note:** After you have registered the app for the streaming service you want to use, you can use your voice to search for specific apps.

# Troubleshooting Quick Reference

49  
—  
52

|                                       |    |
|---------------------------------------|----|
| Troubleshooting Quick Reference ..... | 49 |
|---------------------------------------|----|

# Troubleshooting Quick Reference

---

**Note:** If these troubleshooting steps do not solve the issue, disconnected the power cord and plug it back in.

## Wifi network

### Can't find or connect to your wifi network

- If your wifi network is password protected, have your wifi password ready to connect your TV to the internet.
- If your network is hidden, select Join Other Network from the Network menu. To access the Network menu, go to Settings > Network.

## Video and audio

### Picture does not fill the screen and there are black bars around the picture

- Press Home on your Alexa Voice Remote Enhanced. Click the Gear icon to open the Settings menu screen. Select Display & Sounds > Picture Settings. Adjust the dimensions of the picture.
- **Auto:** the TV will average out the dimensions to suit most programming.
- **16:9 ratio:** best for cinema-format movies. You will see black bars at the top and bottom of the picture, but you will see more imagery in the wide-format edges of the picture. For movies, this will reflect more of the theater experience.
- **4:3 ratio:** traditional format for TV broadcasts and photos. The picture will be stretched to fill the TV screen completely, with no black bars. Movies may have portions of a widescreen image not visible.

### No picture (black screen) and no sound

- Press the Power button on the TV or the remote.
- Make sure that the power cord is plugged into a working outlet.
- Make sure that the video cables are connected correctly and securely to your TV.
- Press Home, and select Inputs from the main menu. Select the input you want to use.
- Try another channel. The station may be experiencing problems.
- Make sure that the incoming signal is compatible.
- Make sure that the antenna or cable TV is connected correctly and securely.

### **Good picture, but no sound**

- Make sure the TV isn't muted or volume isn't turned down.
- Make sure that headphones aren't connected to the TV. When headphones are connected, the TV speakers are muted.
- Make sure that the TV Speakers option is on. Press and hold Home until the Quick Settings menu opens. Select Sound > TV Speakers > On.
- If you are using a home theater system, soundbar, or external speaker system, make sure it is turned on and is not muted.
- If the TV is connected to a soundbar or speakers with an optical cable, change your Digital Audio Format setting to PCM. From the main menu, go to Settings > Display & Sounds > Audio Output > Digital Audio Format and select PCM.
- Make sure that the optical cables are connected correctly and securely to your TV.
- Make sure that your antenna, cable box, or satellite receiver is connected correctly and securely.
- The optical cables you are using may be bad. Try a new set.

### **Good sound, but poor color**

- Try resetting your picture settings. Press and hold Home until the Quick Settings menu opens. Select Picture > Picture Reset. To learn more about picture settings and how to adjust them, see the Settings chapter in this manual.

### **Audio noise**

- Other devices may interfere with your TV's sound, such as surround sound receivers, external speakers, fans, or hair dryers. Try turning off nearby devices one at a time. If you find a device that is causing the noise, try moving it further from the TV.

### **No output from one of the speakers**

- Adjust the audio balance. Press and hold Home until the Quick Settings menu opens. Select Sound > Balance and adjust the setting.
- Make sure that the audio cables are connected correctly and securely to your TV.

### **Image burned on the screen**

- Do not display a still image, such as a logo, game, or computer image, for an extended period of time. This can cause a permanent image to be burned into the screen. This type of damage is not covered by your warranty.

### **Remote does not work**

- Make sure that the TV's power cord is plugged into a working outlet.
- Make sure that there are no obstructions between the remote and the infrared (IR) sensor on the front of the TV near the light bar.
- If you have not paired your TV to the remote, point the remote directly at the infrared (IR) sensor on the front of the TV near the light bar.
- Make sure that the batteries are installed correctly.
- Replace dead batteries with new batteries.
- The supplied batteries are wrapped tightly in clear plastic. Make sure that you removed this plastic from the batteries.

### **No power**

- Make sure that the power cord is plugged into a working outlet.
- Unplug the power cord, wait 60 seconds, then plug the cord back in and turn on your TV.

### **A no signal error message is displayed**

- Go to the Settings menu and select Inputs. Choose the input you want to use.

### **After Auto Channel Search, there are no channels**

- Reception can vary by channel depending on the broadcast power level of a given station. Contact your cable or satellite TV provider.
- Make sure that the antenna or cable/satellite TV box is connected securely to your TV.
- Try replacing the cable between the antenna/cable and your TV.

### **One or more channels do not display**

- If you are using a cable box or satellite receiver, try using the remote that came with it to change the channels.
- Go to the Settings menu and select Inputs. Choose the input you want to use.

### **Some settings cannot be accessed**

- If a setting is grayed, the setting is not available in the current video input mode (for example TV mode). Change to a different video input source. Go to Setting > Inputs and select the input you want to watch.

### **The Input button does not work**

- Unplug the power cord, wait a few seconds, then plug the cord back in and turn on your TV.

### **TV keeps turning off**

- Make sure that the sleep timer is not turned on. Press and hold Home until the Quick Settings menu opens and select Sleep Timer.

## **Password and PIN**

### **Forgot PIN for Parental Controls**

- If you are having trouble with your password (PIN) for Parental Controls and viewing restrictions, try resetting your PIN from your Prime Video Settings on the Amazon website. Go to the Parental Controls section, enter a new 5-digit PIN under Prime Video PIN, then select Reset Your PIN.

### **Forgot PIN and TV isn't registered**

- If you need to reset a forgotten PIN and your TV has not been registered, perform a factory reset. Go to Settings > Device & Software > Reset to Factory Defaults.


# Settings

54  
—  
103

|                                       |     |
|---------------------------------------|-----|
| Inputs .....                          | 54  |
| Notifications .....                   | 55  |
| Account & Profile settings .....      | 57  |
| Network .....                         | 59  |
| Display & Sounds .....                | 62  |
| Applications .....                    | 74  |
| Equipment Control .....               | 80  |
| Live TV .....                         | 83  |
| Controllers & Bluetooth devices ..... | 85  |
| Alexa .....                           | 88  |
| Preferences .....                     | 91  |
| Sleep Timer .....                     | 95  |
| Devices & Software .....              | 96  |
| Accessibility .....                   | 100 |
| Help .....                            | 103 |

# Inputs

Use the Inputs settings to switch between devices that you connected to your Fire TV's ports. You can rename each input and adjust its settings.

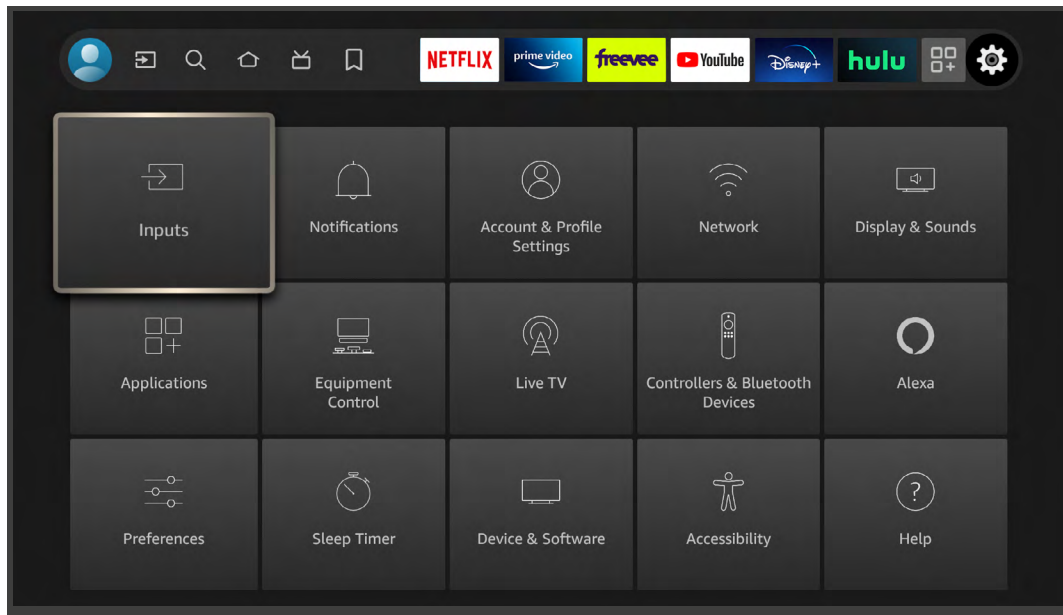

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight each setting. Press the Select button to display that setting's menu options.

## Switching inputs

If you want to play content from any device that's plugged into your Fire TV, like a disc player, music device, or video game controller, use the Navigation button and Select button on your remote to choose the input source.


## Renaming inputs

To use Alexa voice controls to change devices hands-free, rename the input ports. This step lets you say things like: "Alexa, switch to PlayStation" or "Alexa, switch to Blu-ray." Use the Navigation button and Select button on your Alexa Voice Remote Enhanced to choose a name for each input port from the drop-down menu. You can also rename ports to make it easier to remember which device is active on that port, instead of relying on the default names like HDMI-1 and HDMI-2.

# Notifications

---

Use the Notifications menu to view and dismiss notifications about new programs and software updates.

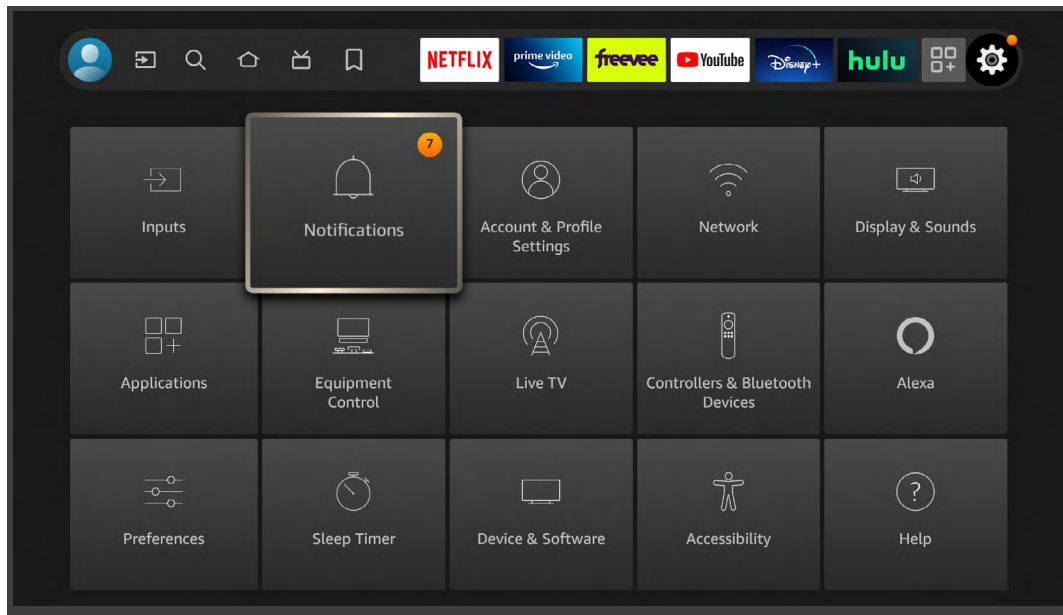

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Use the Navigation button to highlight a setting. Press the Select button to display that setting's menu options.

## Managing your notifications

Go to Settings > Preferences > Notification Settings to change which Notifications are displayed.

Notifications may include:

- Apps that need you to sign in to your account
- New program releases in movies or video games
- Account administration like fees for streaming services

Use the Navigation button and Select button on your Alexa Voice Remote Enhanced to highlight each Notification. Use the menu on the right of the screen to act on each Notification.

When new notifications are ready for you, an orange dot will appear in 2 places: in the main menu on the Settings icon, and in the Settings menu on the Notifications option. Once you have looked at the notification and dismissed it, the orange dot will disappear.

## Submenus

---

## How to make it yours

---

### Dismiss

Removes the notification from the list. Your cursor then moves to the next Notification.


### Dismiss All

Permanently removes all current notifications from the list.

# Account & Profile Settings

---

Use the Account & Profile Settings to manage your Amazon account preferences, account profiles, and purchased content. Preferences that you chose during setup, or that you imported from another Fire TV device, can be changed here.

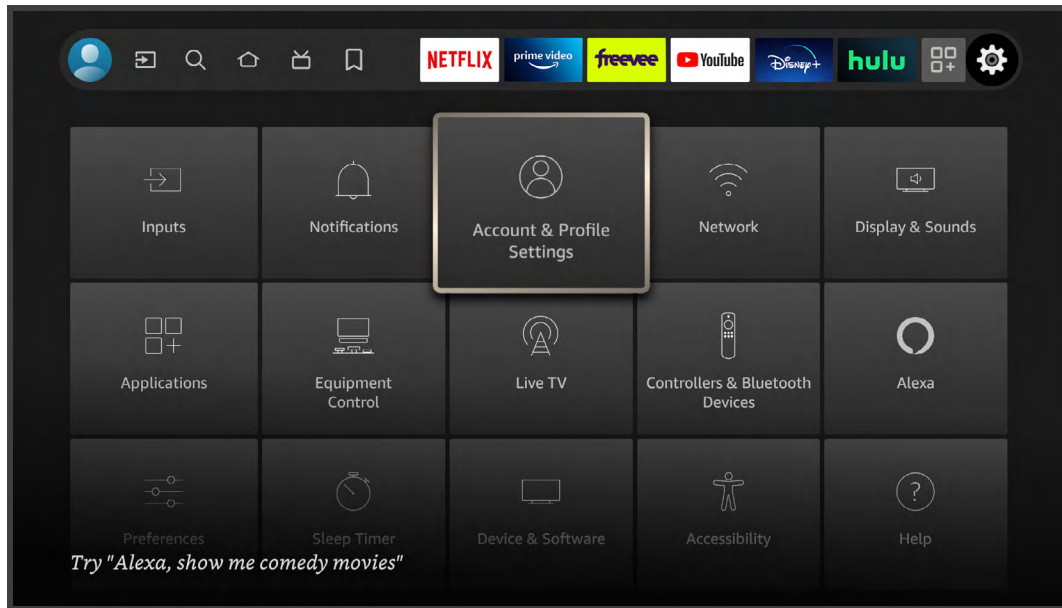

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight each setting. Press the Select button to display that setting's menu options.

## Submenus

---

## How to make it yours

---

### Amazon Account

If your Fire TV is connected to an active Amazon account you can deregister the account, or register a new account here.

### Sync Amazon Content

After you purchase content (movie downloads, streaming subscriptions, music) from Amazon on another device, use this menu to synchronize your purchased content and make it visible on your Fire TV. If you purchase an app on amazon.com, you can make the new app visible on your Fire TV with this menu setting.

### Prime Video

See a list of all the subscriptions and transactions you have made through Prime Video inside your Amazon account.

### Parental Controls

Restrict access to videos, programming, purchases, and content. Manage Parental Control PINs.

### Profiles

Manage User Profiles on your Fire TV: add, remove, and change preferences.


### Profile Sharing

Change this setting to allow adults in a household to select one another's profiles, for Fire TV and for Prime Video. To change this setting visit: [amazon.com/manage-your-profiles](https://amazon.com/manage-your-profiles)

# Network

---

Use the Network settings to set up your TV's internet connection using your wifi network or an Ethernet cable, or to connect to broadcast TV networks.

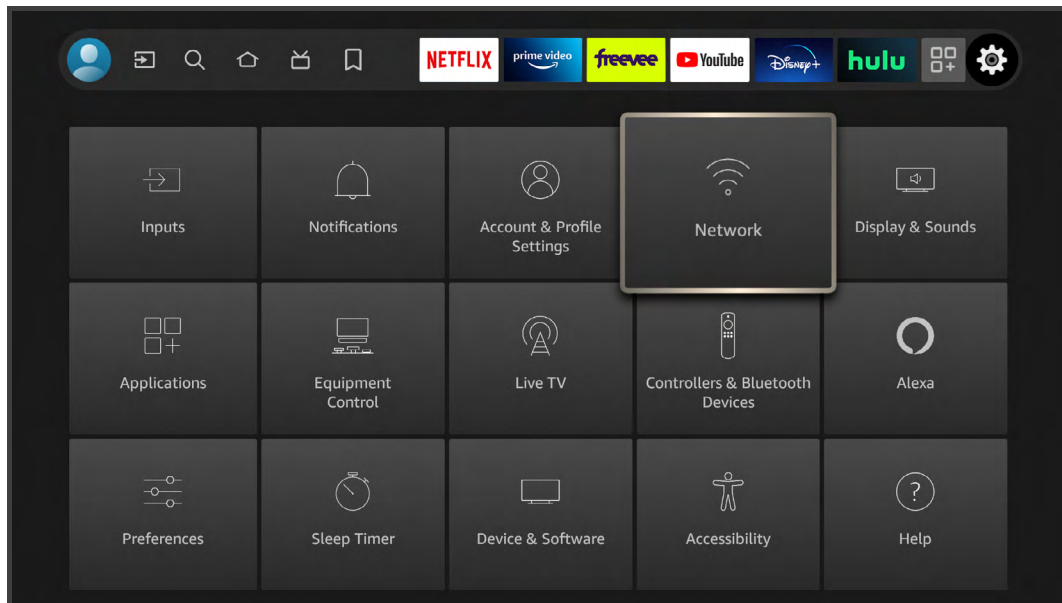

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Select the Setting icon in the main menu.

## Menu Option

---

### View and check status of Connected Network

## How to make it yours

---

If your Fire TV is not responding to wireless signals, you can see a list of all the networks operating in range of the TV. Click on the name of each network.

An icon displays the current signal strength.

Press the Play/Pause button on your Alexa Voice Remote Enhanced to check the network status and troubleshoot any network-related issues.

Press the Menu/Options button (three horizontal lines) on your Alexa Voice Remote Enhanced to forget network access.

**Optional:** Display the security type used on that network. Devices that use different security protocols may have difficulties connecting.

- WPA2-PSK is normal for homes and small businesses
- WPA3 encrypts data on the connection without needing a password
- WPA2-Enterprise limits every user to a single password, and limits access to only certain parts of a network

### See All Networks

To choose the wireless network you want to connect to your Fire TV, allow the TV to scan and list all the networks operating in range of the TV. Then click on the name of the network you want to join.

### Join Network using WPS (Button)

If the wifi network you want to use is not showing up in a scan (View all available Networks) but you do know the name of the network, also called its SSID, use this option. This is frequently useful in hotels, restaurants, or similar public spaces, where you'll get a card or a sign with the name of the guest network.

### Join Network using WPS (PIN)

When your wireless router lets you enter PIN numbers directly on the router, use this option to connect your Fire TV to a wireless network.


### Join Other Network

If the wifi network you want to use is private or has extra security settings, it may not broadcast its name, or SSID. Use this option to locate a private network. To join a private network, you will need to provide your SSID, choose a security type from the drop-down menu, and enter your password.

|                                        |                                                                                                                                                                                                                                                                                                                       |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Configure Network</b>               | If you are using an Ethernet network connected by cables and wires, use this option.                                                                                                                                                                                                                                  |
| <b>Save wifi Passwords to Amazon</b>   | Wifi passwords will be saved to Amazon to help you connect other devices without needing to enter a password. Turning this feature off will permanently delete any passwords saved to Amazon from this device.                                                                                                        |
| <b>Turn wifi on/off</b>                | <ul style="list-style-type: none"><li>• Turn wifi on to use any Alexa features</li><li>• Turn wifi on to use screen mirroring, displaying the screen from a laptop, phone, or other devices on the screen of your Fire TV</li><li>• Turn wifi off and on again, to troubleshoot or to install a new network</li></ul> |
| <b>Basic wifi Troubleshooting Tips</b> | Built-in tips help you check if the wifi is involved when you're setting up new devices.                                                                                                                                                                                                                              |

# Display & Sounds

Use the Display & Sounds settings to adjust the TV's picture and audio. Here you can also adjust things like the TV's power on/off behavior, Ambient Experience, and HDMI-CEC Device Control.

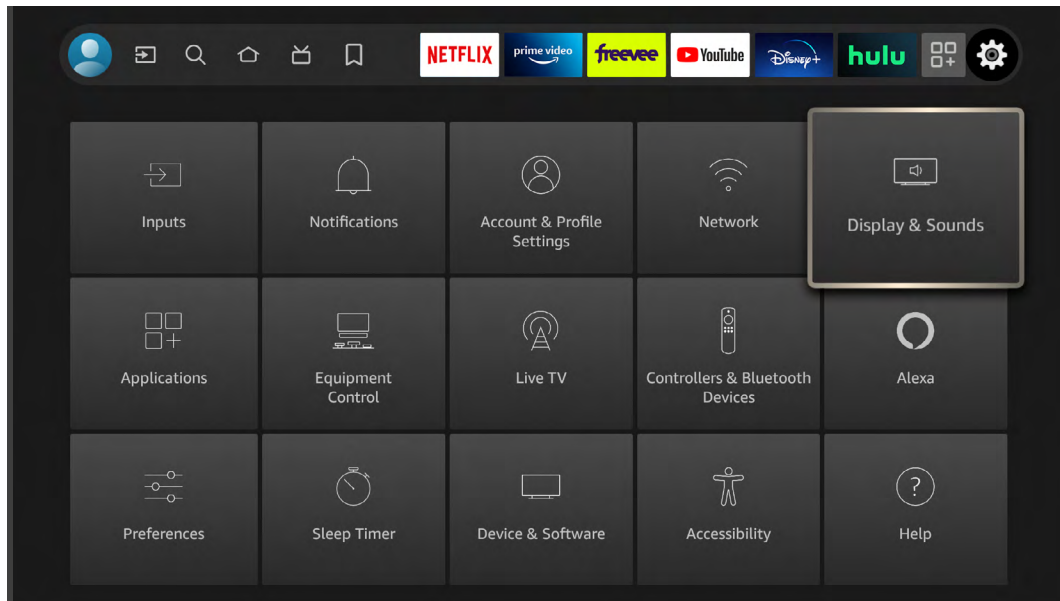

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Use the Navigation button to select Display & Sounds. Press the Select button to display that setting's menu options. Select the Input that you would like to adjust.

To access the Quick Settings sidebar: Long press (1-2 seconds) then release the Home button on your Alexa Voice Remote Enhanced, or press the Gear button (if available), then select "Picture".

**Note:** Picture Settings are saved for different input sources (Apps vs HDMI 1, for example) and different signal types (SDR vs HDR10, for example). You can have settings that apply to movies on DVD, and different picture settings that apply to watching the local news from an over-the-air broadcast.

# Adjust the picture or sound for each input device on your Fire TV

Picture Settings can be adjusted for each input source (HDMI 1–4) and for over-the-air tuner channels (when the TV is connected to an antenna). From the main menu, select Settings > Display and Sounds > Picture Settings, then select an input source. These settings are retained for each input source type, as well as each signal type, including SDR, HDR10, HDR10+ and/or Dolby Vision.

To adjust the settings for apps and video (such as Prime Video or Netflix), launch the app and start playing content. Then long-press and the remote's Home button (or the Settings button, if available) to access settings.

## Picture Settings

### Submenus

### How to make it yours

#### Picture Mode

- |                                         |                                                                                                                                                                                                                                         |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| » Standard                              | A balanced setting for the widest range of programming types. Good in both day and night lighting conditions.                                                                                                                           |
| » Dolby Vision IQ                       | Automatically adjusts to the brightness of the room. Dolby Vision IQ more closely represents the image as the filmmaker intended. Makes the picture appear redder, dimmer, and more film-like.                                          |
| » Movie Bright (or Dolby Vision Bright) | More closely represents the image as the filmmaker intended. The picture will appear redder, dimmer, and more film-like, but still good for bright rooms.                                                                               |
| » Movie Dark (or Dolby Vision Dark)     | More closely represents the image as the filmmaker intended. The picture will appear redder, dimmer, and more film-like. However, if your TV is in a bright room, consider Movie Bright, Dynamic, or Standard.                          |
| » Vivid                                 | Creates the smoothest, most colorful image. This mode is good for public spaces or retail locations with fluorescent lighting.                                                                                                          |
| » Sport                                 | Provides sharp contrasts, bright colors, and smooth motion.                                                                                                                                                                             |
| » Game                                  | Activates Variable Refresh Rate (up to 144 Hz) and Auto Low Latency in game consoles. Disables Picture Quality enhancements to reduce input lag for faster gaming response. This mode requires an HDMI connection to your game console. |

## Picture Mode

- » **FilmMaker Mode** Turns off additional effects, like motion smoothing. Colors, contrast, and aspect ratio are true to the original picture for an authentic viewing experience.
- » **PC** Ideal for gaming if you use your Fire TV as a monitor for your personal computer, rather than a stand-alone game console. This mode requires an HDMI connection to your PC.
- » **Custom** Requires that you adjust each picture setting individually.
- » **Energy Saving** Adjusts brightness and other settings to use less power. This mode saves energy and can extend the life of your TV. The screen may appear dimmer.

## Backlight

Controls how much light the screen emits. Adjust this setting in the light conditions you normally watch TV in. Adjust the strength of the backlight up or down until it's comfortable to watch. If the backlight is too low, picture details aren't easy to see. If it's too high, black areas become gray, contrast is reduced, and the image appears flat and washed out. Dolby Vision IQ needs to be turned on to adjust this setting.

## Local Dimming

Turn on to improve the picture contrast. The backlight dims in dark areas and brightens in light areas of the image. Reduce the setting if halos, or blooms of light in dark areas, appear around bright objects.

## Color Temperature

Controls the overall warmth or coolness of the picture. A cooler setting adds a bluish tint, making the image look crisper. A warmer setting adds a reddish tint, making the image look softer and more natural.

## Advanced Settings

### Intelligent Picture

- » **AI Picture** AI Picture automatically adjusts settings for each scene. Content is analyzed and the TV's settings adapt to what you're watching in real time. Settings like brightness, contrast, and color are fine-tuned while you watch.
- » **Adaptive Brightness** Automatically adjusts the image's brightness based on your room's lighting conditions, using the TV's built-in light sensor. Adaptive brightness improves the visibility of dark images in a bright room. Turn off Adaptive Brightness if blacks become gray or noisy.

## Intelligent Picture

- » Adaptive Color Automatically adjusts the image based on the room brightness, improving visibility of dark images in a bright room. Disable if blacks become gray or overly noisy.
- » Intelligent HDR Boosts the contrast and color saturation of standard dynamic range (SDR) content to simulate the quality of high dynamic range (HDR) content. This setting doesn't affect HRD content when turned on.

## Brightness

- » Contrast Changes the level of white in the image. Adjust the contrast while looking at the whitest areas on the screen, like snow or a white ruffled shirt. Ideally, the image is as bright as possible without losing detail in the white areas.
- » Brightness Changes the level of black in the image. Adjust the brightness while looking at deep black areas on the screen, like a black suit or the night sky. Ideally, the image is as black as possible without losing details in the dark areas.
- » Gamma Adjusts how the image transitions from darker to lighter areas. To make the mid tones of the image brighter, turn down the Gamma in a bright room. To make the image darker, turn up Gamma in a dark room. For most rooms, choosing 0 is best.
- » Dynamic Contrast Dynamic Contrast automatically adjusts the brightness and contrast of the picture. This setting makes dark scenes darker and bright scenes brighter, for a more vivid image. However, it sometimes causes details in darker or brighter areas to be lost.
- » Local Contrast Enhancement Increase to improve contrast in certain areas of the image.
- » HDR Tone Mapping Adjusts the brightness and contrast to improve picture quality for high dynamic range (HDR) content. HDR content with bright highlights and deep shadows appears more natural and detailed with HDR Tone Mapping turned on.

## Color

- » Saturation Adjusts the intensity of colors. Turn up Saturation for more vivid colors, or turn it down if the image doesn't look natural.
- » Tint Adjusts the hue, or amount of green and red. If skin tones look purple or orange, increase the green tint until colors look more natural. If sunlit scenes look gloomy, or like they are viewed through sunglasses, increase the red tint.
- » Color Space (Auto, Native) Color Space adapts content to the range of colors that your TV supports. The Auto option works best for high dynamic range (HDR) content, taking advantage of HDR's accurate colors and brightness. The Native option expands the available colors of standard dynamic range (SDR) content, making it more vivid. However, Native may make SDR content appear less natural.
- » Dynamic Color The Dynamic Color setting enhances the intensity of colors, making the image appear more vibrant. Note that Dynamic Color may make colors look less natural. Use Dynamic Color to get eye-catching saturated colors.
- » White Balance Emphasizes red, green, or blue tones in images to make white objects look more natural.

### 2-Points Calibration

Adjusts the color temperature or balance of the red, green, and blue tones in dark (bias) and bright (gain) levels to make white more neutral. Best used by trained technicians with test equipment.

### 11-Points Calibration

Adjusts the color temperature or balance of the red, green, and blue tones across multiple luminance levels to make white more neutral. Best used by trained technicians with test equipment.

### Color Grading

Adjusts the individual color points of the image. Best used by trained technicians with test equipment.

## Motion

- » **Natural Cinema** Restores film-like frame rates. Enable if the image seems artificial or too smooth. Ideal for movies created for theatrical release. Natural Cinema disables Action Smoothing when turned on.
- » **Action Smoothing (Smoothness, Clarity)** Improves details in motion for a clearer image. Best for watching content with a lot of movement, like sports. Turn on Action Smoothing if the image seems to judder or vibrate. When Natural Cinema is turned on, Action Smoothing automatically turns off.

## Clarity

- » **Sharpness** If objects in the picture appear soft or blurry, increase the sharpness. If images appear grainy, or if objects have a halo or vibrating line around them, decrease the sharpness.
- » **Super Resolution** Boosts picture sharpness, especially for higher resolution formats. If objects have a line or halo around them, turn down Super Resolution.
- » **Edge Enhancer** Smooths jagged edges in images. If Edge Enhancer is turned too high, fine details get lost.
- » **MPEG NR** MPEG NR (Noise Reduction) improves the clarity of streamed content that's grainy. This setting reduces noise in the signal of low-resolution videos, like broadcast TV. Use for older or compressed content. For modern HD or 4K content, turn off to keep the picture crisp and detailed.
- » **Noise Reduction** Reduces picture noise in low-resolution content. If watching content through a streaming service, or other high-resolution media like a DVD or a game, turn off Noise Reduction. Fine details are lost if this setting is turned too high, or if it's used with higher resolution content.
- » **Banding Reduction** Smooths out light to dark gradients. Turn up this setting when the gradients appear stepped or banded. If turned up too high, this setting reduces fine details.

## Input Settings

### Game

- » ALLM (Auto Low Latency Mode) Automatically switches your TV to a low-lag mode when you start playing a game. ALLM makes your controls feel more responsive.
- » VRR (Variable Refresh Rate) Smooths out game play by adjusting the TV's refresh rate to match the game's frame rate, reducing screen tearing and stuttering.
- » DIG (Dynamic Image Gaming) Refines the TV's picture settings specifically for gaming, enhancing visuals while keeping the response time fast for a better gaming experience.

### Picture Reset

Choose Picture Reset to clear all settings and return the current picture mode to the factory defaults. Use this to start over in adjusting Picture Settings to your preferences.

### Screen Settings

Adjusts the dimensions of the picture.

- » Auto The TV adjusts dimensions to suit most programming.
- » 16:9 ratio Best for cinema-format movies and modern TV content. This ratio is the full, wide-format picture shown in theaters.
- » 4:3 ratio The format for TV broadcasts and photos. If the picture looks stretched to fill the TV screen, this setting restores the original ratio.
- » Zoom Expands the image to hide black bars at the edges. Best for widescreen content in a 4:3 format, such as a movie played with a legacy DVD player.
- » Native Shows content in its original aspect ratio, without any stretching, cropping, or distortion. Ideal for preserving the original look of content, especially if the video was filmed in an unusual or nonstandard aspect ratio.

### HDMI Input

- » Mode 1 (1.4) Use for older, legacy HDMI sources if the TV can't auto detect them.
- » Mode 2 (2.0) Use for first generation HDR sources, if the TV can't auto detect them.
- » Mode 3 (2.1) Use with devices that support HDMI 2.1, like the latest gaming consoles. Supports the highest-quality video, including 10k resolution and frame rates up to 120 Hz, and features like dynamic HDR and eARC.
- » Auto Detects the correct format for most newer sources.
- » Reset Resets the HDMI input setting to default.

# Sound Settings

## Submenus      How to make it yours

---

### Sound Mode

**Standard:** A moderate sound profile, suitable for a wide range of programming.

**Music:** Projects more sound at the treble and bass ends of the scale, to enhance your ability to hear detail in music clearly.

**Movie:** An enhanced stereo experience, with more bass, to separate the sound into different speakers and emphasize soundtracks and movie special effects.

**Clear Voice:** Prioritizes speech and narration, to understand conversations and dialog more clearly, and de-emphasize background music or sound effects.

**Enhanced Bass:** Produces a deep, booming effect to the sound, ideal for gaming or music.

**Custom:** Fine-tune all treble and bass controls to your liking.

### Reset

**Use with caution.** To delete all personalized settings from your Fire TV, choose the Reset option. Be careful! This option resets your Fire TV to the factory default settings. It is useful if you are selling your used TV and want to remove any personal information. Or, if you have had errors, perhaps from attaching multiple external devices or some outdated apps, resetting to the factory defaults may allow you to start fresh.

### Balance

When your sound system has more than one speaker, adjust the balance so that sound comes evenly out of each speaker.

### TV Speakers (on/off)

If you have a soundbar or other external sound system, turning the TV speakers off may produce a richer, more balanced sound experience.

If your Fire TV is not audible, check to ensure the TV Speakers are turned on.

### Equalizer (EQ)

Allows you to fine-tune the sound output by adjusting the levels of different frequency ranges, customizing audio to your personal preferences. You can boost the bass, enhance the treble, or sculpt the midrange.

## Sound > Advanced Settings

### Submenus

---

### How to make it yours

---

#### Dialog Enhancer

**Off:** A moderate sound profile, suitable for a wide range of programming.

**Low:** Ideal for standard TV broadcasts, a Low setting enhances speech slightly, while keeping all background music and sound effects audible.

**High:** Ideal for noisy areas and programming where the spoken track is the most important detail.

#### Volume leveler

**On/off setting.**

**Off:** Default setting. In broadcast TV, commercials or introductions are often broadcast at a much louder volume than regular programming.

**On:** If commercials are significantly louder than the program you are trying to watch, turn this setting on so there is less need to adjust the volume with the Alexa Voice Remote Enhanced while watching.

## Apple AirPlay & HomeKit

Watch content from your Apple devices on your Fire TV using AirPlay. Enable voice control of your Fire TV with Siri and HomeKit. Follow the manufacturer's setup instructions to pair your Fire TV with your Apple equipment to control it with Siri and HomeKit.

## Power Controls

### Submenus

---

#### Power On

### How to make it yours

---

Adjust this setting to suit the way you prefer your Fire TV to look after it powers on.

**Home:** Each time the TV turns on, the Home screen will display, and Fire TV content is highlighted. This setting allows you to start from a familiar fresh screen each time, and navigate to the programming you want to watch.

**Last Input:** Each time the TV turns on, the screen will show the programming or equipment that was in use when it was turned off. This could be external game controllers, DVD/Blu-Ray players, broadcast TV, or Prime Video. This allows you to use the same programming repeatedly without making navigation changes.

#### Voice Commands When TV Screen is Off

On/off setting.

**On:** Default setting, and necessary for Alexa or Apple HomeKit devices to work properly. Even if your TV screen is off, it will respond to your voice commands to power the TV on, access entertainment, and control smart home devices.

**Off:** Uses less power. If you do not use Alexa voice commands, this setting can be turned off.

# Audio Output

## Submenus

## How to make it yours

---

### TV Speakers

If you have a soundbar or other external sound system, turning the TV speakers off may produce a richer, more balanced sound experience.

If your Fire TV is not audible, check to ensure the TV Speakers are turned on.

### Audio Output Jack

**Fixed:** The audio is fixed at one volume level. It doesn't change when using the volume buttons on the Alexa Voice Remote Enhanced.

**Variable:** The audio volume level varies and changes when using the volume buttons on the Alexa Voice Remote Enhanced.

### ARC Mode

Connects HDMI ports to Auto, ARC, eARC

### Digital Audio Format

**PCM:** Uncompressed audio is sent through HDMI ARC or optical output

**Dolby Digital:** Uses enhanced multichannel sound if available, most often with movies

**Passthrough:** Uses the audio settings of source content or source device

**Auto:** Adjust audio settings to Fire TV standard settings for each device, service, or connector port

### AC4 Dialog Enhancer

Increase the quality and clarity of the dialog. Choose Low, Medium, or High and test with your own sound systems.

### Bluetooth Audio Sync

Connect Bluetooth Audio devices to the Fire TV. Rescan when new Bluetooth devices are added.

## Enable Display Mirroring

To allow a guest to wirelessly connect the display of their mobile device or laptop to the Fire TV screen, turn this setting on.

**Note:** The mobile device and the Fire TV must be on the same wifi connection. Display Mirroring will not work if the Fire TV is connected to an Ethernet cable.

**Note:** All Alexa functions will be disabled while Display Mirroring is active.

To turn off Display Mirroring, press any button on your Alexa Voice Remote Enhanced.

## Navigation Sounds

On/off setting.

Your Fire TV can play a sound that emphasizes movement when you navigate or select items onscreen using your remote.

**On:** Beeps, clicks, or similar sounds will play when moving or selecting. Good for supporting the visual cues.

**Off:** The TV will be silent when moving or selecting. Good for minimizing disruption to viewers and people nearby the TV.

## Screensaver

Your Fire TV can use personal photo albums from your Amazon Photos app to display as a screensaver. Using a screensaver when the screen is on but no one is watching programming helps prevent images from burning into the screen, and minimizes power consumption.

Change albums, display order, slide style, and slide speed in this setting.

**Note:** Set up the Amazon Photos app on your mobile device before using the Screensaver setting. Your Photos account should be set to back up and store your phone's photos automatically.


## HDMI-CEC Devices

Connect your Alexa Voice Remote Enhanced to other equipment and devices that use the HDMI-CEC (Consumer Electronics Control) interface. This allows you to control those devices from the Alexa Voice Remote Enhanced instead of one remote control for each device.

# Applications

---

Your Fire TV can play content from all the apps in your Amazon account. Use the Applications settings to synchronize your accounts, preferences, and purchases across devices. Here, you can manage the settings of individual apps as well as the Appstore. Appstore settings include Automatic updates of apps, In-App purchase, settings and Appstore Notifications.

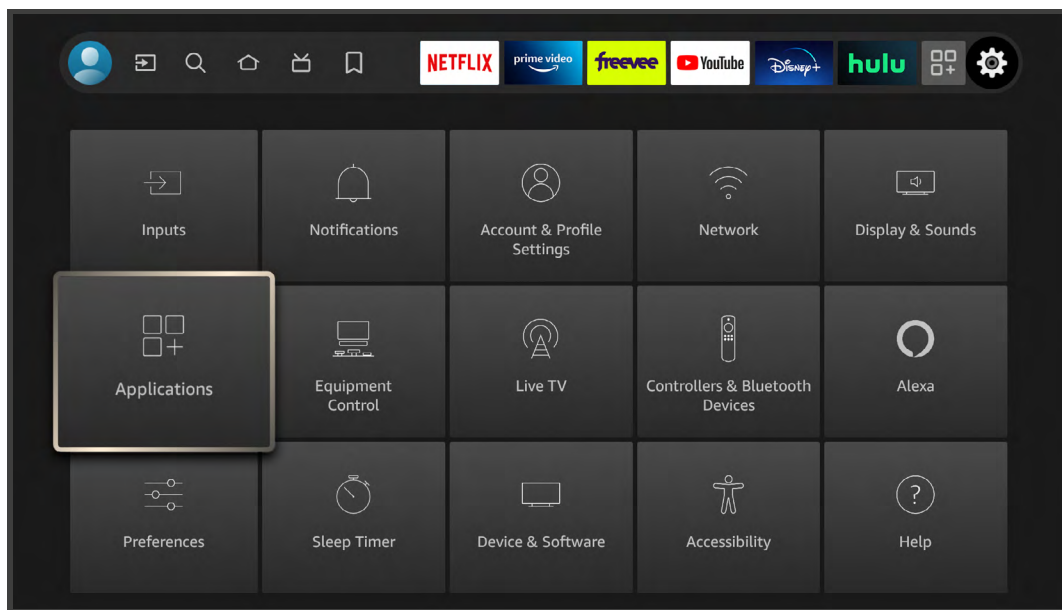

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight each setting. Press the Select button to display that setting's menu options.

## Amazon Photos

### Submenus

### How to make it yours

---

#### Allow Guest Connections

On/off setting.

Default setting is off. If you want to allow someone to use their own device to cast photos and videos to your screen, turn this setting on.

#### Access Amazon Photos

Enabled/Disabled setting.

Default setting is Enabled. If you have personal photos and videos saved in an Amazon Photos account, your Fire TV will download all those files regularly. You can view photos at large sizes, or set them to display as a screen saver.

Set to Disabled to stop downloading photo and video data for display on your Fire TV.

## Silk Browser

Amazon Silk is the web browser for the big screen. Silk brings limitless content from the internet to your TV, for an immersive experience that's easy to navigate. Go to your favorite websites to watch videos, view live events, browse pictures, and shop. Easily control videos and music with Alexa or your Alexa Voice Remote Enhanced.

To use the Silk browser, look for the app on your Fire TV that says "INTERNET" with the Amazon smile underneath.

# Appstore

## Submenus

---

### Automatic Updates

## How to make it yours

---

On/off setting.

**On:** All apps that are available through your Fire TV and Amazon Account can be updated automatically, with no extra action from you.

**Note:** If there is a change to the permissions an app has, the update will not happen automatically. Instead, you will see a notification on your Fire TV and can review the new list of permissions before installing the update.

**Off:** No updates will happen automatically. You will need to remember to review each app regularly to see if there have been changes to the programming, content, or permissions. App designers make regular and frequent updates to improve the functionality of the app, and to respond to technical changes that might affect the way your Fire TV works.

### External Market Links

Apps can be purchased from many different services. Some are verified marketplaces where you have already checked security settings and entered your personal information. You can protect the security of your data by managing how your Fire TV responds when new services are offered.

**Open with the Amazon Appstore:** Links to any external marketplace will be opened only inside the Amazon Appstore, not on a third-party service. Some links will not work as intended inside the Appstore.

**Don't Open:** The most restrictive option. This offers complete security, but also may prevent using services as they are designed.

**Ask Before Opening:** Gives you the most control. You will see an onscreen alert asking if you want to open a link directly.

## **In-App Purchases**

On/off setting.

Some apps offer items for individual purchase within the app. Examples include additional levels in video games, newspaper subscriptions, premium content, or extra functionality.

**On:** Any additional purchase can be made in the app using your Fire TV controls.

**Off:** Extra purchases will be prevented until this setting is changed.

## **Manage My Subscriptions**

Displays the current URL for the Amazon Appstore. Visit that URL to cancel repeated charges, adjust services, or add new app capabilities. Use [www.amazon.com/appstoresubscriptions](http://www.amazon.com/appstoresubscriptions)

## **Simple Sign-In**

On/off setting.

You can turn the setting on and off directly on your Fire TV. To make any other adjustments, follow the onscreen prompts to go to your Amazon account and change the Preferences settings for Simple Sign-in.

**On:** Use this method if you have multiple third-party apps with their own account credentials (for example, if you subscribe to multiple paid streaming services). When Simple Sign-in is turned on, you can use your Fire TV to sign in to any other account that also uses the Simple Sign-in agreement.

**Off:** You will need to enter your username and password to activate each app, using your Alexa Voice Remote Enhanced. As well, if you have signed in to an app on another Fire device, you will need to sign in on your Fire TV separately.

**Note:** Simple Sign-in allows you to sign into supported apps using your accounts from your other Fire devices so that you won't need to re-enter your app passwords on each device. This does not store or share your app credentials with Amazon and any third party.

## **Notifications**

On/off setting.

**On:** The Home screen of your Fire TV will display information on apps, such as updates, expiry notices, or new features. Pop-up notices may also appear on any screen when an app updates.

**Off:** You will only get information about changes to apps by visiting the Amazon Appstore through an internet browser.

# Manage Installed Applications

## Submenus

## How to make it yours

### Main Menu

See how much total space is being used on your Fire TV: both internal (in the TV's memory) and external (on a USB storage drive plugged into the TV's USB port).

If your TV is slow to load apps, or if you are seeing error messages when trying to install new apps, check this information. If the memory is full, navigate to the Manage Installed Applications menu to delete apps, or adjust their storage settings for better TV performance.

### Manage Installed Applications

Press the Select button on your Alexa Voice Remote Enhanced once to open a list of all the apps that are operating on your TV.

Use the Navigation button to scroll to an app's name.

Press the Play/Pause button to quickly uninstall an app.

Press the Rewind button to clear the cache of an app.

**Version:** If some data is not synching between devices where you have this app installed, check to see that the Version Number is the most current version, and that it matches on all your devices. Consider updating the app through the Amazon Appstore.

**Size:** Displays the total size of the app installed on your TV.

**Storage:** Displays the storage size of the application and data portion of the applications installed on your TV.

**Cache:** Display the storage consumed by the cache portion of the application installed on your TV.

## Show

Change this setting when needed, to help locate specific apps more quickly.

**All Applications:** By default, an alphabetical list of every application available to your TV is displayed.

**Internal Only:** To check the usage of your TV's internal storage space. This setting displays a list of applications installed on the TV's internal storage space, sorted by application size from largest to smallest.

**USB Only:** If you use an external USB stick plugged into one of the Fire TV USB ports. This setting displays the list of applications installed on the USB drive connected to your TV, sorted by application size from largest to smallest.

## Sort


Change this setting when needed to sort apps by name or app size.

**Alphabetically:** If you know you want to adjust a specific app, sort by Name and scroll quickly through the apps in alphabetical order.

**App size:** If your TV is running low on storage or if you want to manage the app that uses the most space, sort by App size so you can see which apps are taking up the most storage.

# Equipment Control

Use the Equipment Control settings to customize how your Alexa Voice Remote Enhanced controls connected devices like soundbars and audio receivers. Use the Alexa button on your remote to control devices through voice. If you have an Omni Series Fire TV, you can also control these devices using Alexa built-in.

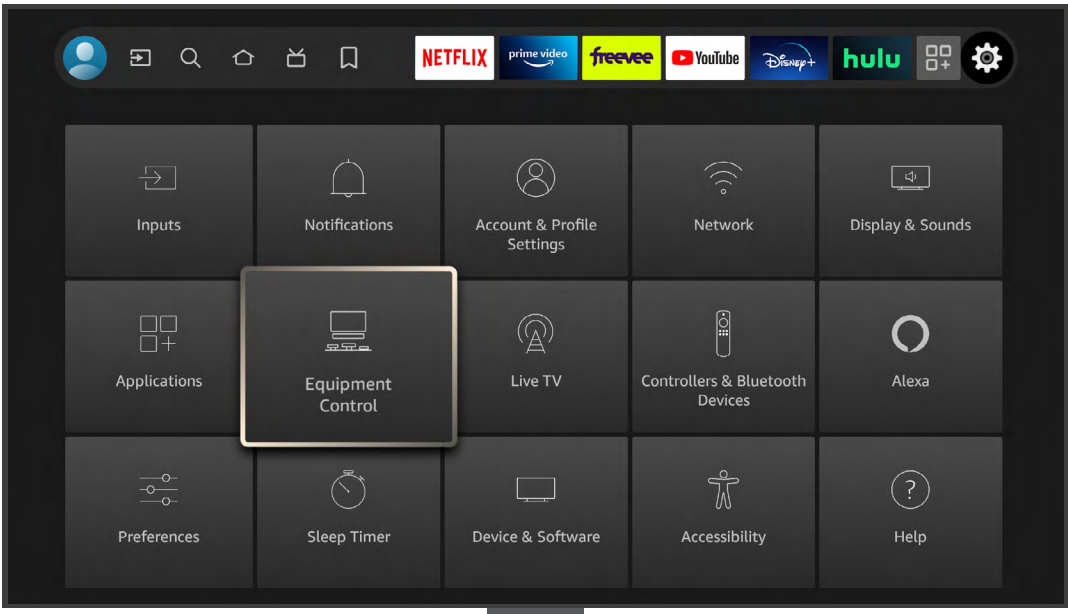

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight each setting. Press the Select button to display that setting's menu options.

## Add Equipment

| Menu option | How to make it yours                                                         |
|-------------|------------------------------------------------------------------------------|
| Cable       | Control your cable box with Alexa. Setup will take 5 to 10 minutes.          |
| Satellite   | Control your satellite receiver with Alexa. Setup will take 5 to 10 minutes. |

## Soundbar/Receiver

You can fine-tune how the Fire TV controls your soundbar or A/V receiver anytime after adding it.

| Menu option | How to make it yours |
|-------------|----------------------|
|-------------|----------------------|

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Volume Increments</b> | <p>Some devices have extremely precise volume control. If you have placed your TV in a noisy environment, it may take 10 to 15 clicks on the volume scale before you can notice the difference.</p> <p>In a very quiet environment, you may prefer to adjust the volume very slightly, to avoid disturbing those around you.</p> <p>To simplify the control with Alexa or the remote, select how many increments the sound will increase or decrease when you say, <i>"Alexa, turn up the volume."</i></p> |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Infrared Options</b> | <p>Different devices will have slightly different response times for their infrared (IR) signals.</p> <p>Place your soundbar or A/V receiver in an open location, not inside a cabinet or shelf that will block the IR signals.</p> <p>Follow the onscreen prompts to test the response times for your soundbar or A/V receiver with the Alexa Voice Remote Enhanced, then adjust the settings.</p> <p>Update the software that controls your soundbar, and change the IR profile to match newer equipment if your soundbar is not responding as you expect.</p> <p><b>Alexa Voice Remote Enhanced/IR extender:</b> Choose which receiver will respond to the signal from buttons on your Alexa Voice Remote Enhanced or your Alexa voice commands.</p> |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power Controls</b> | <p><b>Power On Delay:</b> The delay changes the time difference between the TV and the audio device being turned on. If you are able to turn your soundbar or A/V receiver on with the Alexa Voice Remote Enhanced, but then the device does not respond to additional signals from the remote, increase this delay. This allows the IR signal to reach the equipment promptly.</p> <p><b>Power Command:</b> Power Toggle makes the soundbar switch to the opposite setting to the on/off state it is currently in. As long as all your equipment is powered on or off simultaneously, this setting can help your whole entertainment system respond to the Power button on your remote more simply. If any device in the group is powered on or off independently, however, the soundbar may get out of sync.</p> <p><b>Discrete On/off:</b> If the soundbar turns off when you turn the TV on, change this setting to the Discrete on/off option.</p> |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**Power Control (On/off Setting):** Normally, this setting should be on. This allows your Fire TV to automatically turn your soundbar on and off. If the soundbar is not responding as you expect, turn this setting off to reset the connections. Repeat the setup process to connect your soundbar to the Fire TV and Alexa. After setup, this setting will be on again.

### Fire TV Input

Most soundbars allow you to cast sound from Bluetooth devices like cell phones and MP3 players, and let you play sound from devices like your Fire TV that are connected by cables. Select the input channel to be the default sound source when you are watching Fire TV.

### Change Soundbar

If you are switching soundbar or audio equipment, use this setting to make the Fire TV “forget” your existing soundbar and run the Guided Setup process to recognize your new equipment.

**Note:** Setup can take at least 5 to 10 minutes or more. Be prepared to be patient, and do not use your TV or touch the remote while setup is in process.

## Advanced Settings

Fine-tune how the Fire TV controls all attached equipment.

### Menu option

### How to make it yours

---

#### Power Timing

If you have multiple audio or video equipment types such as a cable box or soundbar connected to your Fire TV, and they are not powering on and off at the same time, adjust this setting. The default setting is 180 milliseconds (ms).


Increase the interval 5 to 10 ms at a time. Test if equipment is powered on/off at the same time every time you change the interval.

Decrease the interval.

# Live TV

---

Use the Live TV settings to watch broadcast TV channels after connecting your Fire TV to an antenna or cable service provider. This is separate from on-demand streaming services.

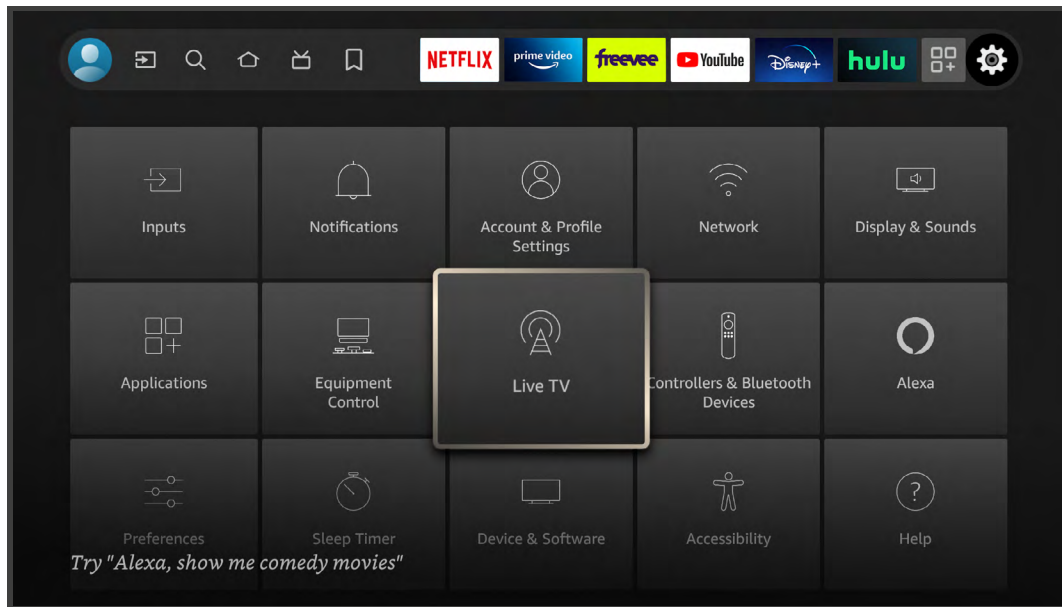

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight each setting. Press the Select button to display that setting's menu options.

## Menu option

## How to make it yours

---

### Channel Scan

Allow the Fire TV to scan and create a list of all the channels available in your service area.

### Favorite Channels

You can choose to mark the channels you prefer to watch most often. They will appear prominently in a display on the Home screen. This saves you from having to scroll through every channel in numerical order.

### Manage Channels

Add and remove channels from your Favorite list. You can sort Favorites into groups that make sense to you. You can also choose to hide channels that are available on your broadcast service if you don't want them to appear on your TV.

### Parental Controls

This is another path to set limits on when and how specific channels appear. You can control channels by age, by user, or keep them from airing on your Fire TV entirely.


### Sync Sources

Sync your live TV sources to refresh the data on this device. This can include apps that deliver live TV as well as broadcast antennas. Your cable provider will automatically scan for new channels being added or dropped from the lineup.

# Controllers & Bluetooth Devices

---

Use the Controllers & Bluetooth Devices settings to connect remotes other than your Alexa Voice Remote Enhanced. You can also manage all Bluetooth wireless peripherals, including game controllers, keyboards, and mice.

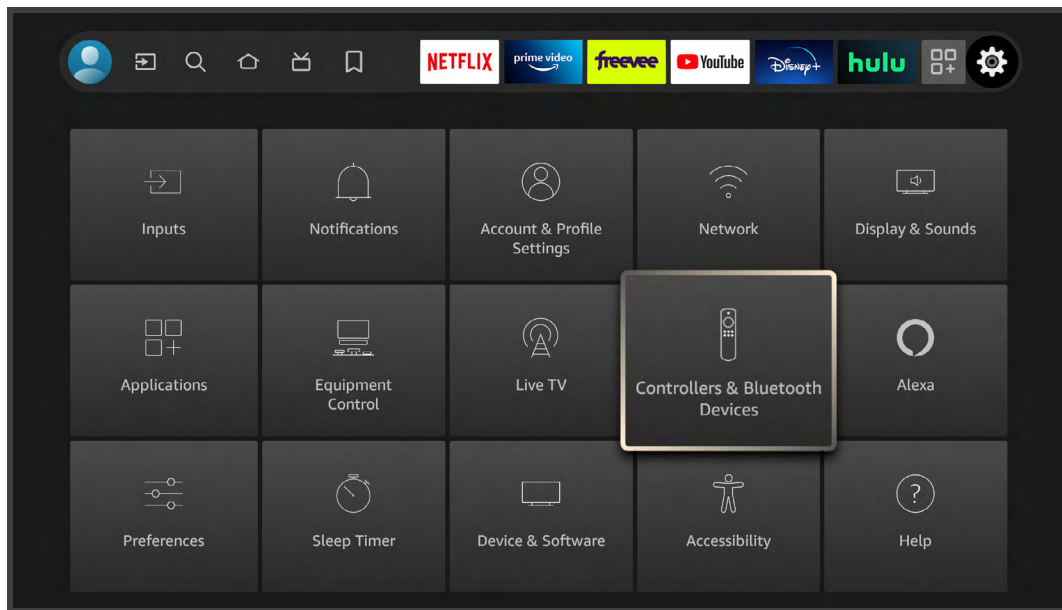

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight each setting. Press the Select button to display that setting's menu options.

## What you'll need:

Instruction manual from the manufacturer of your device, with instructions on making the device Bluetooth settings discoverable by your Fire TV.

## Alexa Voice Remote Enhanced

### Review existing Fire TV Alexa Voice Remotes

1. Use the Navigation button and the Select button on your remote to click on the Alexa Voice Remote menu option.
2. Each remote that is paired with the Fire TV will display onscreen. This includes a remote control or a set of microphones in the TV.
3. Review the Battery information to understand if the battery is fully charged or may need replacement.
4. Review the Version and Serial Number information to understand which device is active. This information will help you manage software updates and pair the remote with newer equipment.

### Add new Alexa Voice Remote Enhanced

1. Use the Navigation button and the Select button on your Alexa Voice Remote Enhanced to click on the Add New Remote menu option.
2. Press and hold the Home button for 10 seconds on the new remote.
3. Wait while your Fire TV searches for nearby signals for all discoverable Bluetooth devices. Once it discovers the new remote, the device will appear in the list.
4. Each Alexa Voice Remote Enhanced that is near the Fire TV will display onscreen.
5. Use the Select button on your Alexa Voice Remote Enhanced to choose the new Alexa Voice Remote Enhanced you want to pair with your Fire TV.

## Game Controllers


1. Consult your manufacturer's instruction manual to set the game controller in Bluetooth pairing mode.
2. Wait while your Fire TV searches for nearby signals for all discoverable Bluetooth devices.
3. Using the Navigation button on your Alexa Voice Remote Enhanced, scroll through the list of active Bluetooth devices.
4. Use the Select button on your Alexa Voice Remote Enhanced to choose the new game controller you want to pair with your Fire TV.
5. You will see a pop-up confirmation in the lower right of your Fire TV screen that says the game controller device is now connected to the Fire TV.
6. If your device is not in the list, or you want to stop searching, click on Cancel and repeat Step 1.

## Other Bluetooth Devices

1. Consult your manufacturer's instruction manual to set the Bluetooth device to be discoverable by other users.
2. Click on Other Bluetooth Devices > Add Bluetooth Devices.
3. Wait while your Fire TV searches for nearby signals for all discoverable Bluetooth devices.
4. Using the Navigation button on your Alexa Voice Remote Enhanced, scroll through the list of active Bluetooth devices.
5. Use the Select button on your Alexa Voice Remote Enhanced to choose the new device you want to pair with your Fire TV.
6. You will see a pop-up confirmation in the lower right of your Fire TV screen that says the Bluetooth device is now connected to the Fire TV.
7. If your device is not in the list, or you want to stop searching, click on Cancel and repeat Step 1.

# Alexa

Use the Alexa settings to adjust how your Alexa devices work with your Fire TV.

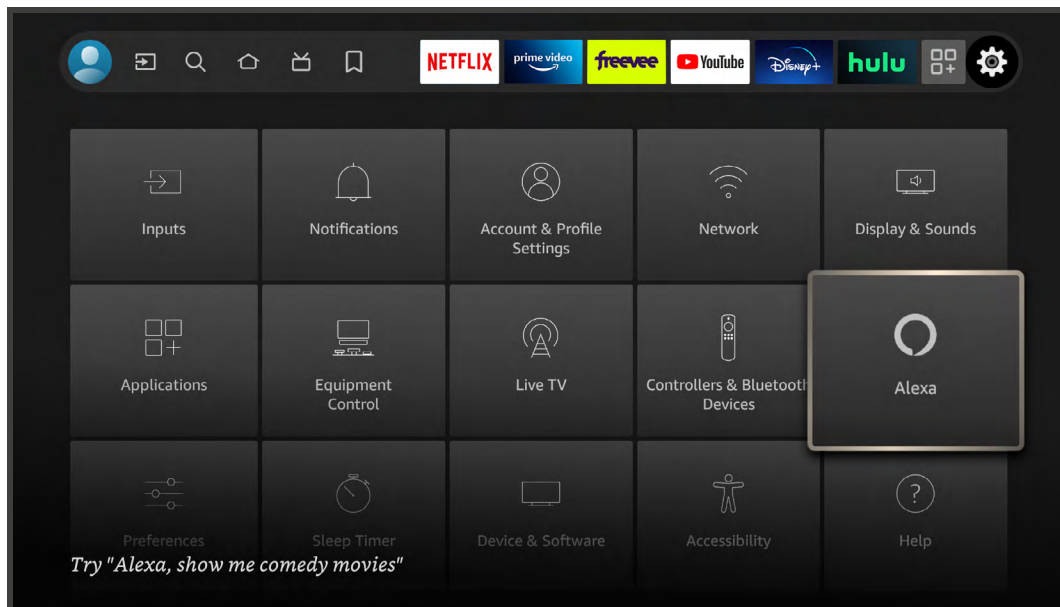

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight each setting. Press the Select button to display that setting's menu options.

## Amazon Alexa app

Within the Alexa settings section choose Alexa app to review the most current instructions for downloading and setting up the Amazon Alexa app on your personal mobile devices. After you've set up the Alexa app on your mobile device or computer, then you can use your Fire TV to interact with the Alexa app.

Explore all the features that help you get the most out of your Alexa Voice experience.

- Set up your music services to play on Alexa and Fire TV devices
- View to-do lists and shopping lists on your mobile device
- Manage Alexa settings like whether to allow voice purchases
- Review a history of Alexa voice requests in your household

## Things to Try

Press the Select button on your Alexa Voice Remote Enhanced to review the most current list of tasks the Alexa app can perform. This list changes when new software updates are installed on your Fire TV.

## Favor This Device

On/off option

If you have more than one Alexa device using the same Wake Word (a wake word must be one of: Alexa, Amazon, Computer, or Echo), adjust the Favor This Device setting.

**Off:** By default, your Fire TV will look for the Alexa device that is closest to the TV when it hears the wake word.

**On:** To prompt your Fire TV to favor the device you choose, and disregard other Alexa devices that might be closer to the TV, turn this setting on.

## Fire TV Omni Series Communications

### Incoming Call Ringer

On/off option

When you set up your Fire TV Omni Series to enable Two-Way Calling, you can decide whether to have your TV emit a ringing sound, as well as your telephone.

**Off:** The Fire TV will wake from sleep mode and play 2 quiet rings. Answer the call Hands-free with Alexa by saying,

*"Alexa, answer the call."*

**On:** The Fire TV will play an audio ring when telephone calls come in. A voice alert will announce: "You have a call from <Contact Name>." Answer the call Hands-free with Alexa by saying,

*"Alexa, answer the call."*

### Dialer

The Dialer tool displays a familiar telephone keypad. Use the keypad and your Alexa Voice Remote Enhanced to dial phone numbers and to enter key prompts ("press 9 to hear more options").

## Messages

When enabled, your Fire TV can show transcripts of up to 50 voice messages from the last 30 days. To see more messages, visit the Alexa app on your mobile phone or computer.

## Contacts

When enabled, your Fire TV can display the contacts list from your mobile phone and send messages to other Alexa devices.

Using a feature called Drop In, you can use other Alexa devices in your home such as an intercom or walkie-talkie.

## How Does Drop In Work?

Drop In is an optional feature that lets you connect instantly to supported Alexa-enabled devices, like an intercom.

Use Drop In to open an instant conversation between your devices or with your Alexa contacts. When you receive a Drop In, the light indicator on your Echo pulses green and you connect to your contact automatically.

Use Drop In to:

1. Have a two-way conversation by connecting to one of your Alexa-enabled devices ("drop in on Kitchen").
2. Connect to a specific device group ("drop in on living room").

**Note:** Only one Alexa-enabled device from the device group connects.

3. Have a group conversation with all supported Alexa-enabled devices under your Amazon household (unless they are set to Do Not Disturb). To start a group conversation, ask Alexa to Drop In everywhere.

**Note:** All supported Alexa-enabled devices under your Amazon household account will connect regardless of their physical location.


4. Drop In on a contact who granted you Drop In permissions.
5. Receive a Drop In from a contact whom you granted Drop In permissions.

**Group Drop In Tip:** Reduce audio feedback by having Drop In enabled on only one Alexa enabled device per room.

# Preferences

---

Use Preferences to manage all settings related to data, privacy, and use of your Fire TV, including parental control settings.

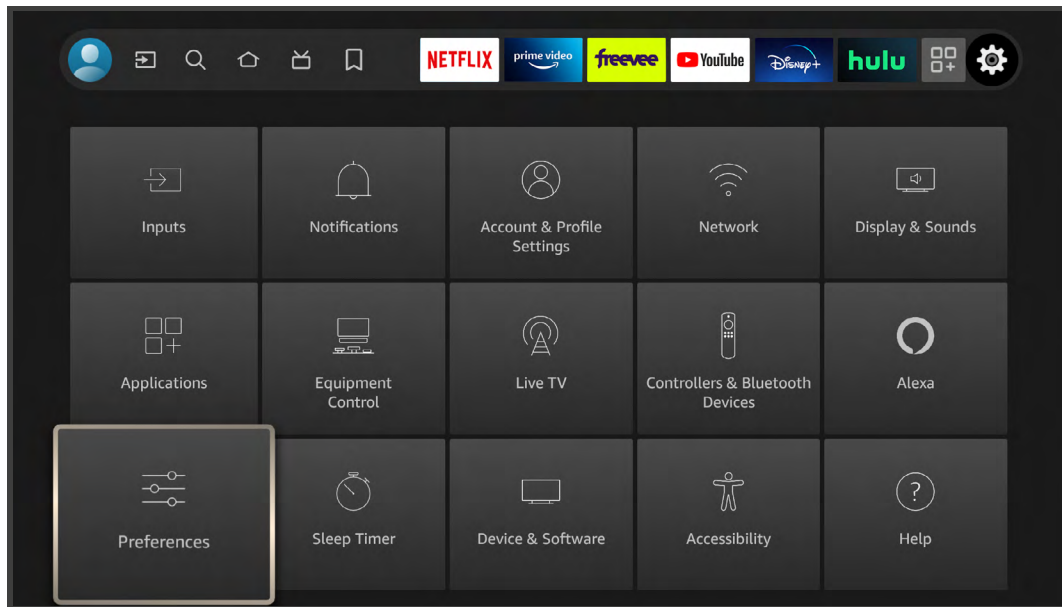

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight each setting. Press the Select button to display that setting's menu options.

## Parental Controls

Use these settings to restrict access on your Fire TV to videos, purchasing, and some types of content. The Parental Controls work in conjunction with User Profiles and individual device settings for protective PIN security numbers.

# Privacy Settings

## Submenus

## How to make it yours

---

### Device Usage Data

On/off setting.

**On:** Default setting. We use data about your use of this device to provide customized marketing offers you might enjoy and to improve our products and services for all users.

**Off:** You can opt out of allowing us to use personal data collected by the operating system of this device for these purposes by turning this setting off. Turning this setting off will not affect:

- your ability to use the features of this device, as we continue to collect and process your data to deliver those features to you;
- whether you receive marketing offers, though those offers may be less relevant to you or;
- the processing of data related to your use of Amazon services such as Prime Video, on this device.

### Collect App and Over-the-Air Usage

On/off setting.

**On:** Default setting. Amazon collects information relating to your use of over-the-air TV content and the frequency and duration of your use of third-party apps.

**Off:** Opt out of allowing us to collect this information.

### Interest-based Ads

On/off setting.

**On:** Allow apps on this device to use your personal advertising ID to build profiles or show you ads based on your interests.

**Off:** Apps will not use your advertising ID to build profiles for advertising purposes or show you ads based on your preferences on this device.

### Your Advertising ID

Your advertising ID is displayed here. It is a user-resettable, unique, random identifier we make available to apps on certain devices for advertising purposes. When you reset your advertising ID, you create a new advertising ID for your device.

# Data Monitoring

Track the amount of data your Fire TV is consuming with apps, streaming, and file downloads. Use this information to help troubleshoot if your Fire TV is slow or unresponsive.

# Notification Settings

| Submenus          | How to make it yours                                                                                                                                                                                                                                                                  |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Do Not Interrupt  | <p>On/off setting.</p> <p><b>On:</b> All pop-ups for any kind of notification from apps will be blocked or hidden from view.</p> <p><b>Off:</b> The default setting, which allows notifications to appear onscreen as soon as they are pushed out by the app that generates them.</p> |
| App Notifications | <p>To choose which apps can show notifications, and what types of notifications to show, use this setting to block or unblock notifications from individual apps.</p>                                                                                                                 |

# Featured Content

| Submenus             | How to make it yours                                                                                                                                                                                                                                                                                                                                                          |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Allow Video Autoplay | <p>On/off setting.</p> <p><b>On:</b> On the Home screen of your Fire TV, programs that might be of interest to you will be highlighted in the Featured Content area of the screen. Videos in this area will autoplay when this setting is on.</p> <p><b>Off:</b> Only still images will appear in the Featured Content area of the Home screen.</p>                           |
| Allow Audio Autoplay | <p>On/off setting.</p> <p><b>On:</b> On the Home screen of your Fire TV, music, podcasts, and audio programs that might be of interest to you will be highlighted in the Featured Content area of the screen. Audio in this area will autoplay when this setting is on.</p> <p><b>Off:</b> Only still images will appear in the Featured Content area of the Home screen.</p> |

## Sync Recent Content

**On:** If you watch Prime Video content on devices other than your Fire TV, this option will highlight those Prime Video titles in the Recent area of the Fire TV Home screen.

**Off:** Prime Video programs watched on other devices will not be added to the Recent area of the Fire TV Home screen.

## Location

In the U.S., adding your ZIP postal code to the Fire TV or your Alexa app allows you to customize the weather display information for your area.

## Time Zone

### Submenus

---

#### 24-Hour Time

### How to make it yours

---

**On:** Display time on your TV will show in 24-hour format, so 2:00 PM is 14:00.

**Off:** Display time on your TV will show in AM/PM format, so 2:00 AM and 2:00 PM.

#### Time Zone

Change time zone settings to allow your Fire TV to show the correct time on the clock, respond to standard and daylight savings time, and push software updates at times your TV is usually off.

## Language


Choose the language for the Fire TV displays and menus. You can choose U.S. English, U.S. Spanish, Canadian English, or Canadian French.

## Metric Units

Display distance and temperature in metric units (meters, Celsius). You can also change this setting in the Alexa app.

# Sleep Timer

Use Sleep Timer to automatically turn off your TV when the timer runs out.

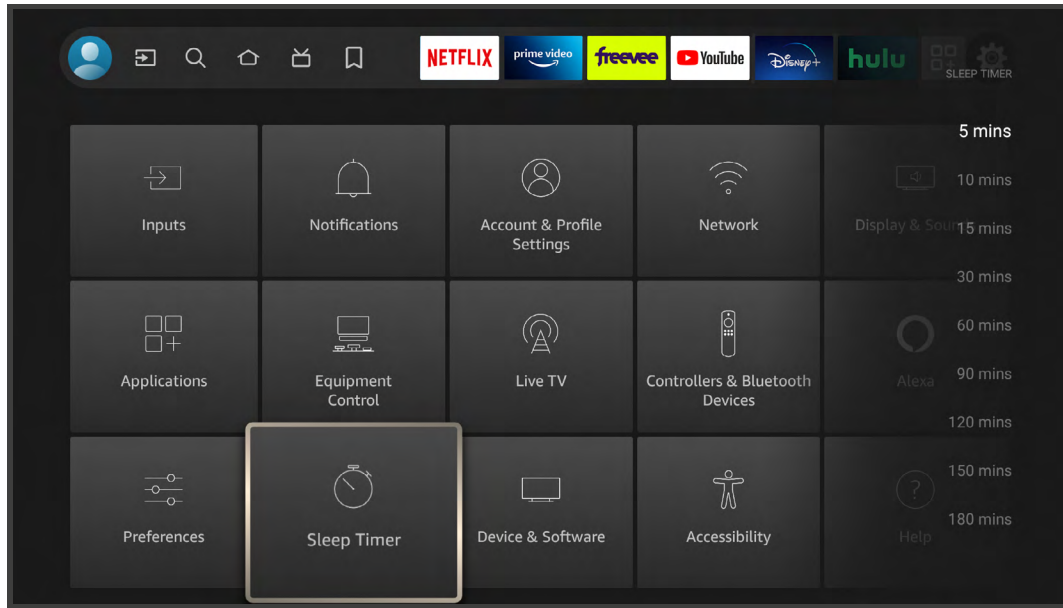

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight each setting. Press the Select button to display that setting's menu options.

## Setting up the Sleep Timer

The sleep timer is designed to allow you to fall asleep with the TV on and have the TV turn off automatically after a set amount of time.


It can also be used to limit screen time to an agreed interval, without distractions.

1. Using the Navigation button and the Select button on your Alexa Voice Remote Enhanced, select Sleep Timer.
2. A pop-up menu appears on the right-hand side of the screen.
3. Press the Select button on the amount of time you want the Fire TV to remain playing from that moment.
4. After you select a length of time, press the Back or Home button on your remote to return to your programming.
5. **Note:** You can also activate the Sleep Timer using the Quick Settings menu. Long-press (press and hold) the Home button on your Alexa Voice Remote Enhanced until a pop-up menu appears at the right of your screen. Select the amount of time you want the Fire TV to remain playing from that moment. Press the Back or Home button on your remote to return to your programming.
6. To cancel a Sleep Timer, follow steps 1 through 4 or 5, and choose the off option in the menu.

# Devices & Software

---

Use the Device & Software option to access software specifications and legal information for your Fire TV.

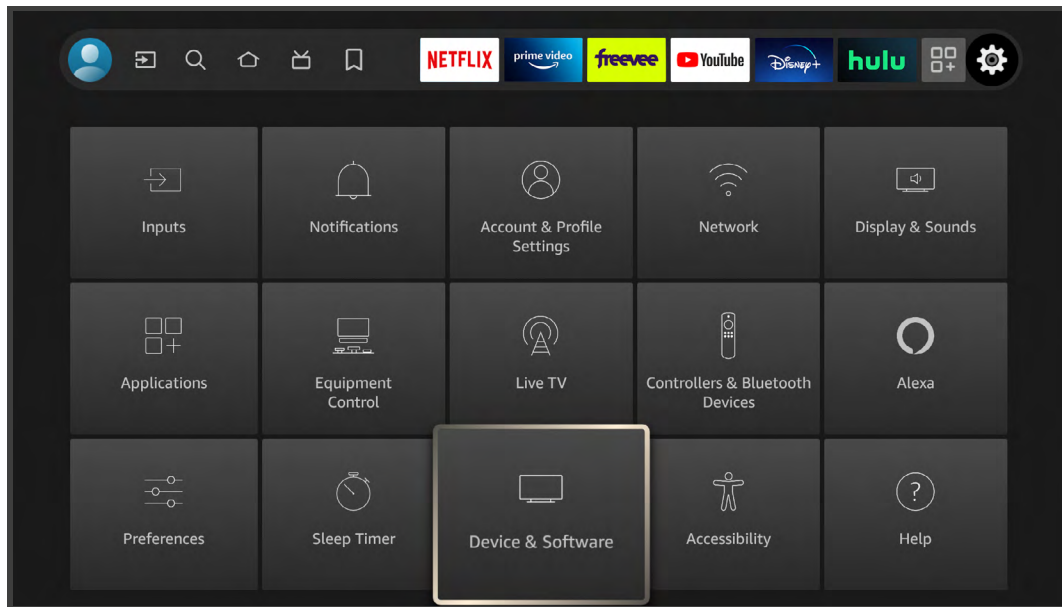

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight each setting. Press the Select button to display that setting's menu options.

## About

### Submenus

### How to make it yours

---

#### Your TV

See a summary of all the model and serial numbers for your Fire TV hardware. See when the software was last updated and the amount of data storage in use on your TV. If the TV is running slowly or not as expected, upgrading your software or removing unneeded stored programs may help.

#### Storage

See how much data is stored on your Fire TV's memory, compared to capacity. If you use external storage, such as a hard drive connected to your Fire TV through a USB port, the data capacity of that drive is also visible.

#### Network

See the IP address and DNS address for your Fire TV. This information is useful to troubleshoot connections with other devices you are operating.

#### Check for Updates/ Install Update

Prompt your Fire TV to check for software updates immediately, instead of waiting for a prescheduled time to check.

If your TV is not using the most current software, you can press the Select button on your Alexa Voice Remote Enhanced to download and install the newest software package.

**Note:** Be prepared to wait while the software is being downloaded. You should not use your TV and should avoid touching the remote until a confirmation message appears to tell you the download is complete. This update could take 10 to 15 minutes or more, depending on how long it has been since the TV was last updated.

## Developer options

### Submenus

---

#### ADB debugging

### How to make it yours

---

On/off option

The Android Debug Bridge (ADB) allows program developers to connect the Fire TV to the USB port on a computer. It allows users to copy files back and forth, install and uninstall apps, and run shell commands.

**WARNING:** Anyone on the network can install applications from untrusted sources, when this option is turned on.

---

#### Install unknown apps

On/off option

A more limited approach, turning this setting on allows a single user to install applications that do not come from the Appstore. Developers installing apps from reliable sources may prefer this option over the ADB option.

## Legal & Compliance

### Submenus

---

#### Legal Notices

### How to make it yours

---

Access all legal notices that apply to the Fire TV.

#### Terms of Use

View the updated Terms of Use for all Fire TV software.

#### Safety & Compliance

View the most current safety regulations for the Fire TV.

#### Privacy

View the most current privacy notices on the Fire TV.

## **Sleep**

Select this option to put the TV to sleep immediately. The TV screen and sound will shut off, and the TV will consume less power. It can be restarted instantly by pressing any button on the Alexa Voice Remote Enhanced.

## **Restart**

Restart the TV completely, to reboot software as a troubleshooting measure.

## **Reset to Factory Defaults**


Selecting this option will remove all your personal data from the Fire TV device permanently.

This is useful if you are selling or giving your TV to a new user. If you are disposing of your Fire TV safely at the end of its lifespan, you should also restore the Factory Default settings and remove all your personal information.

As a troubleshooting measure, if all other efforts have failed and your Fire TV is not operating as expected, you can restore the Factory Default settings. You will need to go through the Guided Setup process described in this User Manual, and reconnect all your preferred apps, accounts, and equipment.

# Accessibility

Use the Accessibility settings to access assistive technology and other features like Closed Captions and VoiceView.

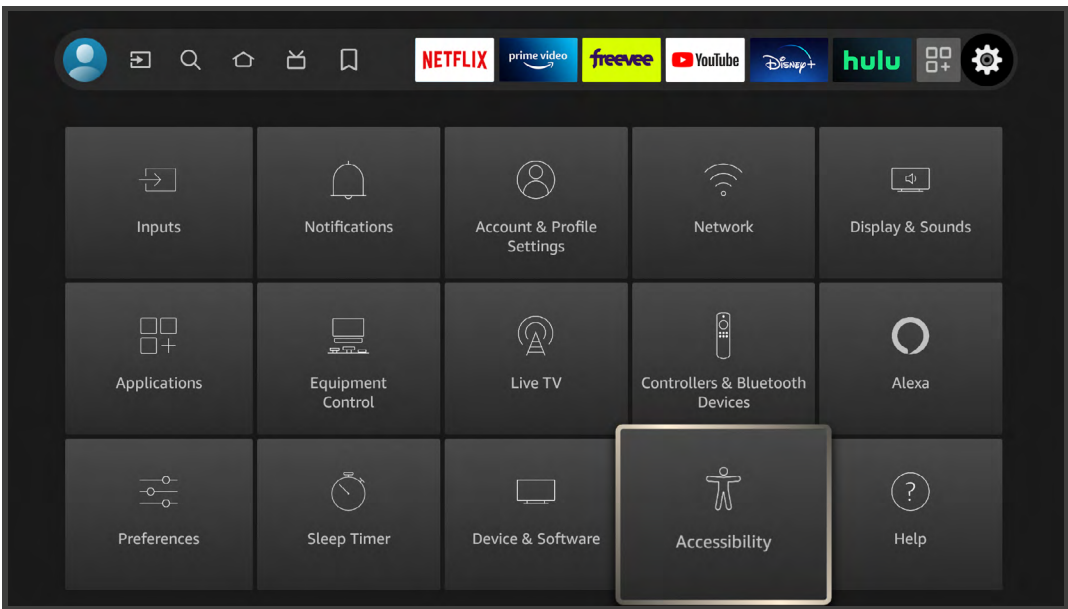

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight each setting. Press the Select button to display that setting’s menu options.

| Menu option | How to make it yours |
|-------------|----------------------|
|-------------|----------------------|

**Closed Captions**

On/off option

For videos that have Closed Captioning available, a text version of the audio track will appear at the bottom of the screen. Good for TV users who are deaf or hard of hearing and for use in noisy environments like public spaces. Allows any viewer to enjoy the programming without raising the volume of the audio. Not all videos have Closed Captioning available.

**Alexa Caption**

On/off option

A text version of Alexa responses will appear onscreen, when available. Good for TV users who are deaf or hard of hearing, these captions provide viewers with visual confirmation that Alexa is responding to voice commands.

## VoiceView

On/off option

VoiceView is a screen reader for Fire TV devices. It speaks onscreen text out loud as you navigate menu options and settings. You can also use VoiceView to help you set up your device. While you navigate your Fire TV device, a green box highlights your current onscreen selection or location. VoiceView automatically speaks and/or describes what you've selected. Good for users who are blind, have low vision, or have difficulty reading text.

To activate the VoiceView screen reader, press and hold the Back and Menu buttons at the same time for two seconds.

**Explore Your Remote:** If VoiceView is turned on, you can also use the Explore Your Remote audio feature. This allows the Fire TV to announce the names of the Alexa Voice Remote Enhanced buttons when you press them.

**On:** Press and hold the Play/Pause button first. While holding it down, press Select. Wait until you hear the announcement "Explore Remote" then release both buttons. Press any button on your Alexa Voice Remote Enhanced to hear the button's name spoken.

**Off:** Press and hold the Play/Pause button first. While holding it down, press Select. You will no longer hear announcements when the remote's buttons are pressed.

## Text Banner

On/off option

Text Banner is a box that gathers information from graphics displayed on different parts of the screen and presents descriptive text in one spot that doesn't move. It's designed to assist people who have a narrow field of vision. This block of plain text on a solid-colored background can display information like the title, plot, and ratings for a TV show. You can choose the font, box size, color setting, and position for the text banner.

**Note:** Some apps may not be compatible with Text Banner.

**Text:** Change the Size and Color of the text that displays on the magnifying banner.

**Show Indicator:** Show or hide an indicator (like a mouse cursor) on the focus control.

Play/pause long-press = Show/Hide Banner temporarily

Rewind + Fast Forward long-press = Turn Banner on or off by holding both buttons down for 2 seconds

Rewind = Pan Left (scroll sideways on Banner to see more text)

Fast Forward = Pan Right (scroll sideways on Banner to see more text)

## Screen Magnifier

On/off option

The Screen Magnifier allows you to use your Alexa Voice Remote Enhanced and several button combinations to zoom in on certain areas of your screen. The effect is as if you were holding a magnifying glass in front of the screen. The expanded area can be moved around the screen with the remote.

Press and hold two buttons at the same time to produce the effect.

Back + Fast Forward = Enable/Disable Screen Magnifier

Menu + Play/Pause = Enable/Disable Zoom effect

Menu + Fast Forward = Zoom In the whole screen

Menu + Rewind = Zoom Out the whole screen

Menu + Up = Pan Up (move upwards on the screen)

Menu + Down = Pan Down (move downwards on the screen)

Menu + Left = Pan Left

Menu + Right = Pan Right

## High Contrast Text (Experimental)

On/off option

This option is in development and may change with new software updates. It can make text easier to read compared to colored or stylized designs.

Most onscreen text is changed to either black text surrounded by a white border, or white text surrounded by a black border.

## Audio Description

Audio Description narrates details about actions, characters, scene changes, onscreen text, and other visual content while a movie or TV show is playing.

It is intended for blind and visually impaired viewers, but audio description makes movies more enjoyable for anyone who might not be looking at the screen.


Audio Description can also be turned on and off by pressing the menu button on your remote and then selecting audio. You can set Audio Description as a default on Prime Video while browsing from thousands of available titles.

**Note:** Streaming services other than Prime Video may have a different setup for Audio Description.

# Help

---

Use Help to find videos, tips, and customer service information.

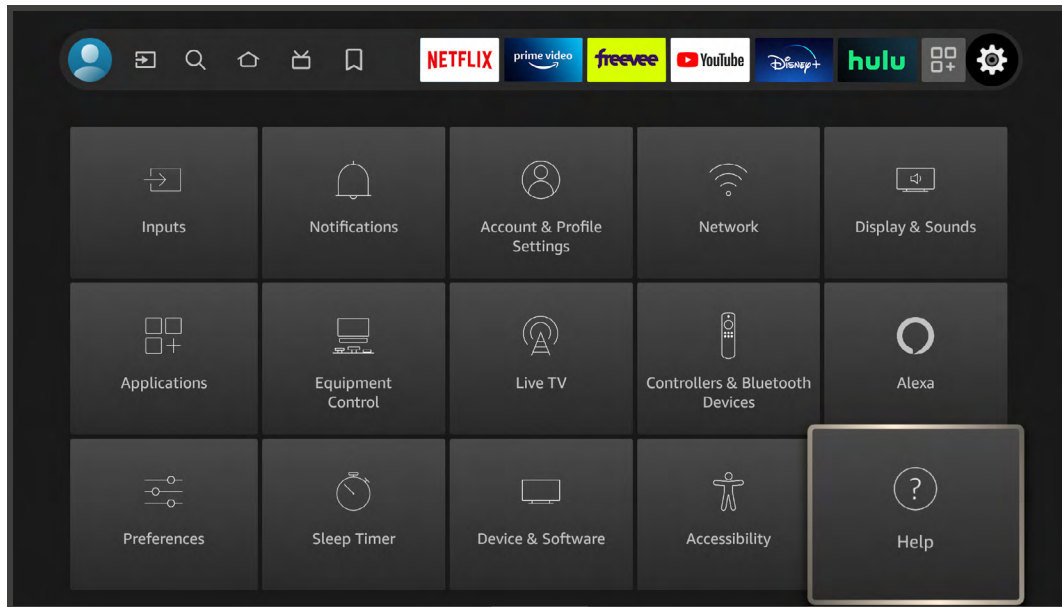

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight each setting. Press the Select button to display that setting's menu options.

## Help Videos

Choose from a list of multiple video explanations of common questions about your Fire TV. New videos may be released with software updates to your Fire TV. Videos exist on subjects like setup, attaching the support base, creating user profiles, and other topics that enhance your Fire TV Experience.

## Quick Tips

Choose from a list of quick, standard troubleshooting techniques for common situations, including:

- Troubleshoot Common Issues
- Blank Screen Troubleshooting
- Set Up Live TV
- Use Your Phone as a Remote
- Connect Multimedia Devices

## **Troubleshoot Common Issues**

To solve most issues, try these steps:

1. Check that your equipment is using the correct input
2. Update your TV's software. Go to "Settings" > "Device & Software" > "About" > "Check for System Update"
3. Restart your modem and router
4. Unplug your TV. Wait 3 minutes, and then plug it back in

## **Blank Screen Troubleshooting**

To troubleshoot issues with connected devices, like Blu-Ray players and game consoles:

1. Unplug the device from your TV. Then plug it back in and turn it on
2. Go to "Settings" > "Inputs" on your TV and select the input for that device
3. If available, use different cables to connect your device

## **Set Up Live TV**

To watch live TV using a live TV source (antennas, broadcast, cable, satellite, or certain streaming apps):

1. Use a coaxial cable to connect your live TV source to your TV's cable input
2. Go to "Settings" on your Fire TV
3. Select "Live TV"
4. Select "Channel Scan"

## **Use Your Phone as a Remote**

1. Download the Amazon Fire TV app on your phone
2. Select the Fire TV you want to control
3. Enter the code displayed on your Fire TV screen
4. Use your phone to do things like control playback, use voice commands, and navigate your Fire TV

## **Connect Multimedia Devices**

To use multimedia devices, like Blu-Ray players and game consoles:

1. Plug your device into one of your TV's input ports
2. Go to "Settings" on your TV
3. Select "Inputs"
4. Select the input port for that device

## Contact Us (Customer Service)

### Submenus

### How to make it yours

---

#### Setup

Click here to choose the dropdown menu option that best describes your issue. Your question will be sent to a service specialist. You'll need an open phone line available and provide the phone number so we can call you directly.

More options are available at [amazon.com/firetvsupport](https://amazon.com/firetvsupport)

#### Watch & Play

Click here to choose the dropdown menu option that best describes your issue. Your question will be sent to a service specialist. You'll need an open phone line available and provide the phone number so we can call you directly.

More options are available at [amazon.com/firetvsupport](https://amazon.com/firetvsupport)

#### Manage Your Account

This screen will update regularly to provide the most current URLs to change your Amazon and Fire TV account settings. On the website, you can manage your Prime subscription or set up a new payment method.

#### Having Trouble?

More options are available at [amazon.com/firetvsupport](https://amazon.com/firetvsupport)

## Feedback

Provides the most current email address for you to share feedback on your Fire TV Experience. We read all feedback carefully, but are unable to respond to any specific comments.


# Fire TV Ambient Experience

107  
—  
114

|                                     |     |
|-------------------------------------|-----|
| Fire TV Ambient Experience .....    | 107 |
| Background Photos and Artwork ..... | 108 |
| AI Artwork .....                    | 109 |
| Dynamic Artwork .....               | 110 |
| Interactive Artwork .....           | 111 |
| Alexa Widgets .....                 | 112 |
| Music and Podcasts .....            | 113 |
| Alexa in Ambient Experience .....   | 114 |
| Things To Try .....                 | 114 |

# Fire TV Ambient Experience

---

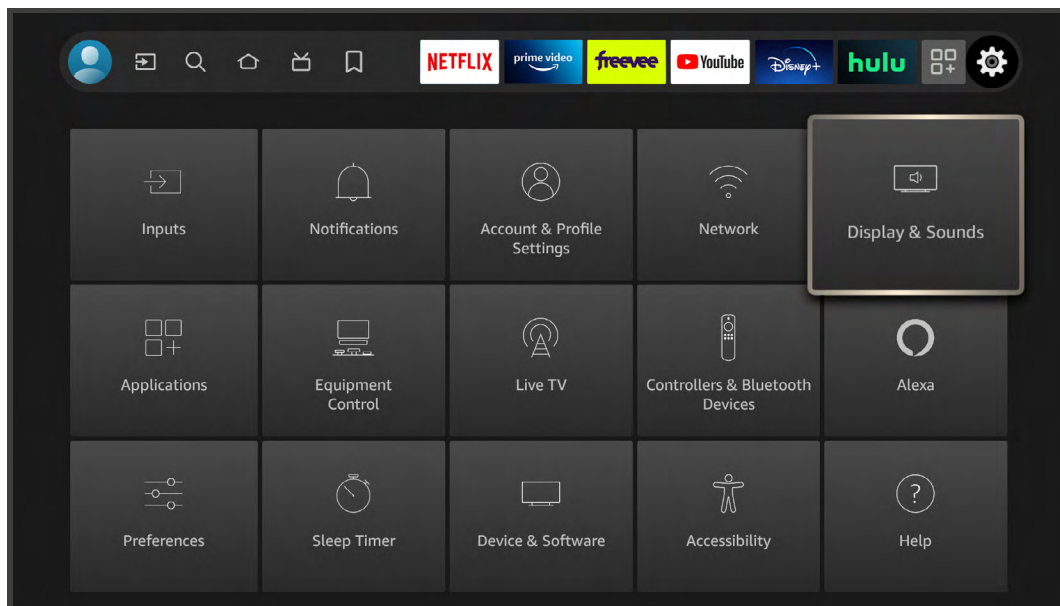

## How to access

Press the Home button on your Alexa Voice Remote Enhanced to display the Home screen. Click on the Gear icon at the right of the screen. The Settings menu will appear. Press the Navigation button to highlight the Display & Sound setting. Press the Select button to display that setting's menu options and then select Ambient Preferences. You can also short press the Alexa button on the remote and select Ambient Experience.

## How it works


Fire TV Ambient Experience allows you to view and customize photo albums, artworks, and useful Alexa widgets while listening to music and podcasts.

**Note:** Short press the power button to switch between Ambient Experience and Fire TV Home, or use Alexa voice controls and say, *"Alexa, launch Ambient Experience."* Ambient Experience also launches when your TV is idle for 5 minutes.

Your Ambient Experience comes with a set of customizable, default Alexa widgets that appear at the bottom of the screen. You can interact with widgets by using the remote or by using Hands-free with Alexa and saying *"Alexa, open my calendar."*


## Background Photos and Artwork

In Ambient Experience you can display your favorite artworks or personal photographs. While in Ambient Experience, select Menu (3-line icon) > Change Background > Art and Photo Collections, or Change Background > Amazon Photos, for access to your personal photos.

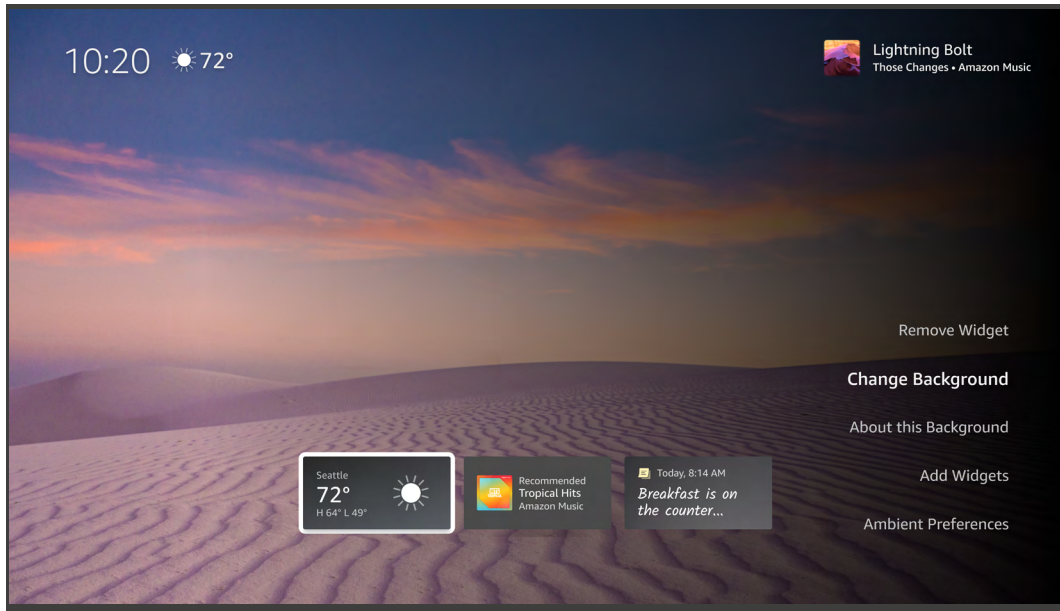

## AI Artwork

AI Art helps you create artwork generated by AI using your Fire TV Omni Mini-LED. This new feature brings the magic of creating AI artwork to the TV screen using the simplicity of your voice with Alexa. Create a personalized image by opening the Ambient Experience and giving Alexa an imagination-driven prompt, such as “Alexa, create a background of a medieval castle on Mars” or “Alexa, create an image of cherry blossoms in the snow.” Then watch as the prompt is translated into a unique display on the Fire TV screen. You can even personalize your creations by selecting additional modifiers in a range of artwork styles, such as pixel art, oil painting, watercolor, colored pencil, Cubist, and others.

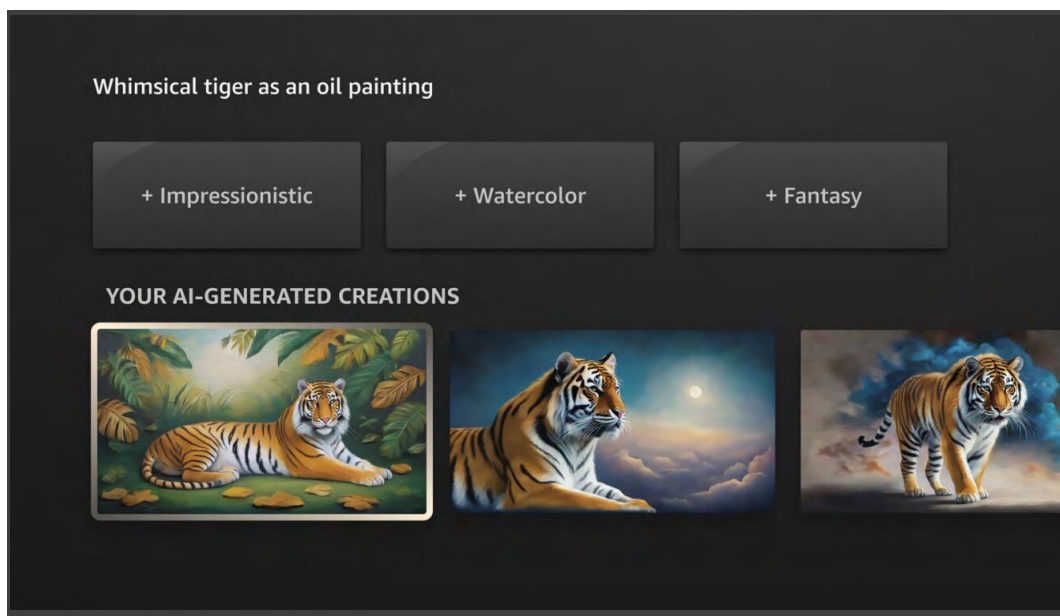

*Results may vary.*

## Dynamic Artwork

Dynamic Art uses an algorithm to adapt to your current environment to create personalized pieces of artwork that are always evolving and responding to real-time environmental cues like ambient light, weather patterns, and time of day. Using your TV as a canvas, the result is unique, ever-changing artwork that provides a window into the future of digital art and interior design. To access, press the Menu button on your Alexa Voice Remote Enhanced and select Change background > Art and Photo Collections > Dynamic Art.




## Interactive Artwork

Interactive Art is a new artwork feature where artwork dynamically changes in response to your presence. Interactive Art transforms motion into artwork, starting with unique styles like fluttering butterflies, relaxing koi fish, and beautiful tactile tiles. It leverages the TV's radar sensor to bring the artwork to life in response to a customer's presence or casual movements in front of the TV. For example, the butterflies—mimicking real life—flutter away as you walk by, while koi fish will dynamically swim and flow, following you across the screen. This fusion of intelligent sensor technology and dynamic artwork transforms motion in your home into an interactive onscreen experience. To access, press the Menu button on your Alexa Voice Remote Enhanced and select Change background > Art and Photo Collections > Interactive Art.




## Alexa Widgets

Alexa widgets make useful information like weather and schedules easy to see. You can add, remove, or customize widgets displayed in Ambient Experience by going to Menu ≡ > Add Widgets.

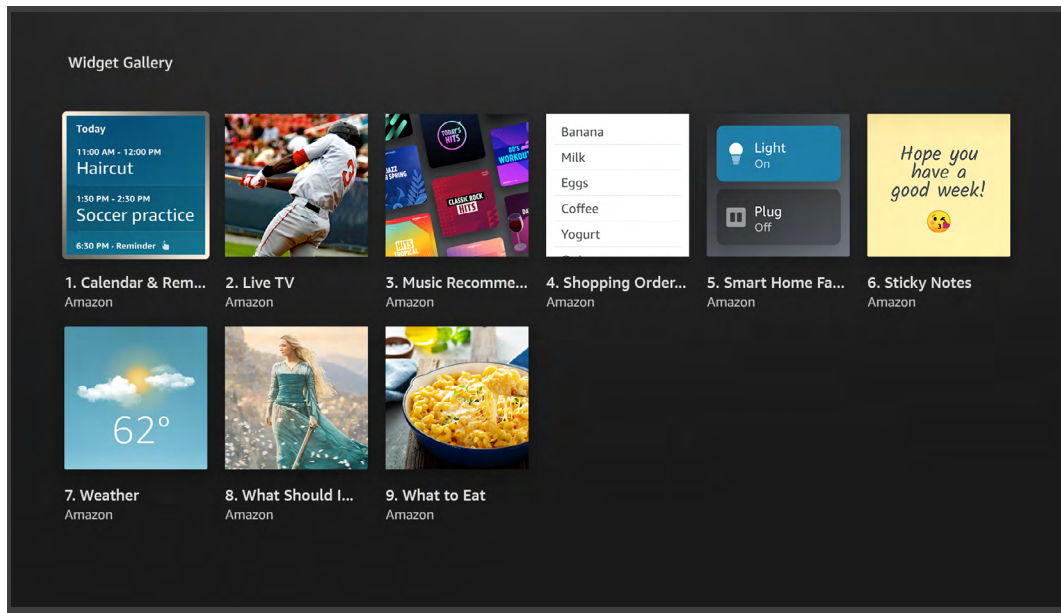

## Music and Podcasts

Enjoy music, podcasts, and radio streamed inside of the Ambient Experience. Just ask Alexa to play your favorite artist. Artist information, track information, and album art will appear in the top-right corner. Change the song by saying, *“Alexa, next track.”* Or say *“Alexa, full screen music.”*

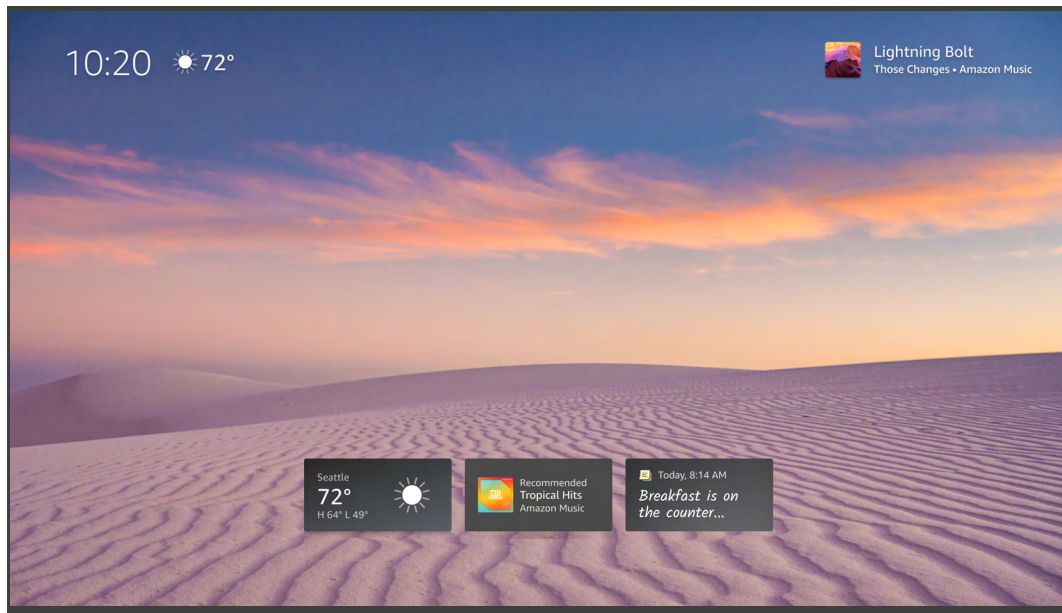

## Alexa in Ambient Experience

Say, *"Alexa, launch the Ambient Experience"* if your TV is turned on or in standby. Alexa can also control playback, play different types of audio, or customize widgets by saying things like *"Alexa, hide widgets."*

## Things To Try

**Explore these features to get the most out of your Ambient Experience:**

- Hide or make widgets larger by pressing up or down on the navigation button.
- Play music or a podcast in Ambient Experience by pressing the Alexa voice button and saying, *"Alexa, play Jazz."*
- Get more information about a photo by saying, *"Alexa, tell me more about this photo."*
- Return to an application that was previously active when your Ambient Experience session began by short pressing the power button or pressing the Back button. **Note:** It may take several Back button presses to exit Ambient depending on what is onscreen at the time.

### Submenus

### How to make it yours

#### Widget Size

Make widgets larger to see them more clearly, or smaller to cover less of the photos and artworks you choose to display.

#### Widgets at Start

Customize how widgets appear on the screen when in Ambient Experience. You can set widgets to always show in Ambient Experience, or set them to appear at start and disappear unless prompted by the remote or Alexa.

#### Border

Set the border style that you prefer for your photographs and chosen artworks.

#### Background

Show a black background instead of an image behind widgets while in Ambient Experience.

#### Background Rotation

Set how fast your background photos or artworks cycle, or choose just one image to display in Ambient Experience.

#### Background Shuffle

Set your images to shuffle as they cycle through their rotation, or turn Background Shuffle off to have your images cycle in order.

#### Clock

Add or remove a clock from the Ambient Experience.

#### Weather

Add or remove the weather from the Ambient Experience.

## Advanced Settings

Customize how you access Ambient Experience and other settings.

**Power Button:** Set with a long or short press to customize how you access Ambient Experience and turn your TV off and on.

**Motion Detection:** Set your Ambient Experience to turn off and on when motion is detected in the room.

**Idle Timeout:** Set Ambient Experience to launch when your TV is idle after a certain amount of time.

**Turn Off in Dark Room:** Set your TV to turn off if no light is detected in the room while in Ambient Experience.

**Quiet Hours:** Set times when Ambient Experience will automatically turn off.

# Two-Way Video Calling

117

|                             |     |
|-----------------------------|-----|
| Two-Way Video Calling ..... | 117 |
|-----------------------------|-----|

# Two-Way Video Calling

---

## How to access

Connect a compatible USB webcam to your Fire TV.

## How it works

You can make and receive video calls using your Fire TV and a webcam (sold separately).

## What you'll need:

- A webcam (sold separately). Webcams with 1080p resolution and 60-to-90 degree field of view from 8.5 feet (3 m) are recommended. Minimum 720p resolution is required.
- Fire TV Omni Series Mini-LED.
- Amazon Alexa app downloaded to your mobile device.
- Adapter

## Set Up Alexa Two-Way Video Calling on Your Fire TV Device

1. To make video calls, connect a compatible webcam to your Fire TV device.
2. Plug a compatible webcam into the USB port on your Fire TV device.
3. If you want to use Ethernet, make sure to use an adapter that has a port for USB and Ethernet.
4. Complete setup for Alexa Calling and Messaging in the Alexa app.
5. To make a call, say, *"Call [contact's] Echo."*

## Using Two-Way Video Calling

When your Fire TV receives a call while you are watching any streaming program, or a show from satellite, cable, or a DVD, the show will automatically pause. When the call ends, the show will resume automatically.

|                                |     |
|--------------------------------|-----|
| Picture-in-Picture Setup ..... | 119 |
|--------------------------------|-----|

# Picture-in-Picture Setup

---

## How to access

Use the Amazon Alexa app on your mobile phone to connect compatible smart cameras to your Fire TV.

## How it works

Your Fire TV can display a small picture onscreen from doorbell cameras or security monitors, so you can watch for a package delivery while enjoying your TV programming.

## What you'll need:

- The Amazon Alexa app downloaded to your mobile device
- Manufacturer's instructions or user manuals for your live video cameras

## To set up picture-in-picture

1. Link your smart home camera using the Alexa app.
2. Open the Alexa app.
3. Open the More menu.
4. Select Add a Device.
5. Select Camera.
6. Select the brand and follow the onscreen instructions.

You can now use voice commands to view and manage your camera feed. Say things like:

*"Alexa, Show my camera."*

*"Alexa, Switch to full screen."*

*"Alexa, Switch to picture-in-picture."*

*"Alexa, Minimize to picture-in-picture."*

*"Alexa, End picture-in-picture."*

If you have a Ring Video Doorbell, picture-in-picture automatically appears onscreen when you receive a Ring notification.

# Smart Home Controls

121

|                           |     |
|---------------------------|-----|
| Smart Home Controls ..... | 121 |
|---------------------------|-----|

# Smart Home Controls

---

## Connecting devices to Alexa and Fire TV

### How to access

Use the Amazon Alexa app to connect compatible devices throughout your home to your Fire TV.

### How it works

Control devices like speakers, cameras, lights, and plugs using your voice and Alexa.

Stay entertained and connected with smart TVs, streaming devices, speakers, and gaming systems you can control with your voice. Have Alexa start your music, a movie, or a game for you. To control Alexa-compatible smart home devices like smart bulbs and smart plugs with your voice, connect them to Alexa.

Make sure your smart home device is compatible with Alexa. For a list of compatible devices, go to the Devices tab in the Alexa app. Before you connect your device to Alexa, complete the setup process for your device using the manufacturer's companion app or website.

**Note:** Some devices need a skill to connect to Alexa. A skill is a software program that makes your device perform a function, similar to an app for a smartphone. If your device requires a skill, enable the skill in the Amazon Alexa app first.

**WARNING:** Please read Safety Information for Using Smart Home Devices with Alexa before you enable a smart home skill.

### What you'll need:

- The Amazon Alexa app downloaded to your mobile device
- Manufacturer's instructions or user manuals for each smart home device you want to connect

### Set up Smart Home devices

1. Open the Alexa app on your mobile device.
2. Select the Devices tab, press the + button in the upper right hand corner and select Add a Device.
3. Select the type of smart home device you want to connect.
4. Select the brand and follow the onscreen instructions.
5. Certain devices may automatically connect to Alexa using Amazon's Frustration-Free Setup technology.

To learn more about new smart home devices as they become available, visit [amazon.com/smarthome](https://amazon.com/smarthome)

©2024 Amazon.com, Inc. or its affiliates. Amazon, Fire, Prime, Alexa, and all related marks are trademarks of Amazon.com, Inc. or its affiliates.

