

Capresso

12-Cup Touchscreen Coffee Maker with Glass Carafe



Model #496.01
1100W / 120V / 60Hz

- Operating Instructions
- Warranty

Read all instructions before operating the appliance

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using the coffee maker.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when either the appliance or display clock is not in use, and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. The use of accessories not recommended by Capresso may result in fire, electric shock or injury to persons.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. The carafe is designed for use with this appliance. It must never be used on a range top.
11. Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
12. To disconnect, turn any control to "Off", remove plug from wall outlet. Always hold the plug, never pull the cord.
13. Scalding may occur if the cover is opened or removed during the brewing cycles. Be careful not to get burned by the steam.
14. Some parts of appliance are hot when operated, do not touch with hands. Use handles or knobs only.
15. Never leave the empty carafe on the heating platform otherwise the carafe can crack.
16. Never use the appliance if the carafe shows any signs of cracks or carafe has a loose or weakened handle. Only use the carafe with this appliance. Use carefully as the carafe is very fragile.
17. Do not set a hot carafe on a hot or cold surface.
18. Do not operate the coffee maker without water.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.
21. Do not use outdoors.
22. Do not use appliance for other than intended use.

FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THIS COVER. NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.

SPECIAL CORD SET INSTRUCTIONS

Regarding your cord set:

- A. A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- B. Extension cords may be used if care is exercised in their use.
- C. If an extension cord is used,
 - 1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance,
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord, and
 - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- D. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

CAUTION

This appliance is for household use. Any servicing other than cleaning and user maintenance should be performed by an authorized service representative.

- Do not immerse base in water or try to disassemble.
- Never use warm or hot water to fill the water tank! Use cold water only!
- Keep your hands and the cord away from hot parts of the appliance during use.
- Never clean with scouring powders or hard implements.

WELCOME AND THANK YOU

Thank you for choosing the Capresso 12-Cup Coffee Maker. **Please read all operating instructions before using your Capresso Coffee Maker.** Understanding and complying with these directions is essential to ensure that the machine is utilized without risk and to ensure safety during operation and maintenance.

HOW TO CONTACT CAPRESSO CUSTOMER SERVICE

Should you require further information or if particular problems occur that are not covered in this manual, please

- CALL our toll free HELP LINE: 1-800-767-3554 Monday-Friday 8:00AM to 8PM, and Saturday 9AM to 5PM Eastern Time Zone. Feel free to call at any time. If you are connected to our voicemail, PLEASE DO NOT HANG UP. Leave your name, telephone number, time to call back and the machine Model #496.
- FAX us at 1-201-767-9684
- E-MAIL us at contact@capresso.com
- VISIT our website at www.capresso.com

Fig. 1



Fig. 2


 
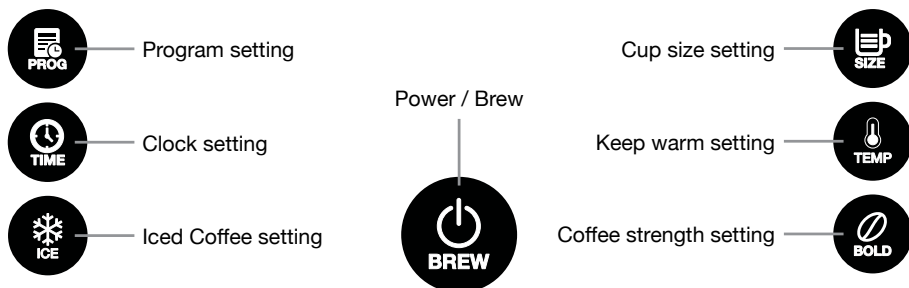 


Fig. 3

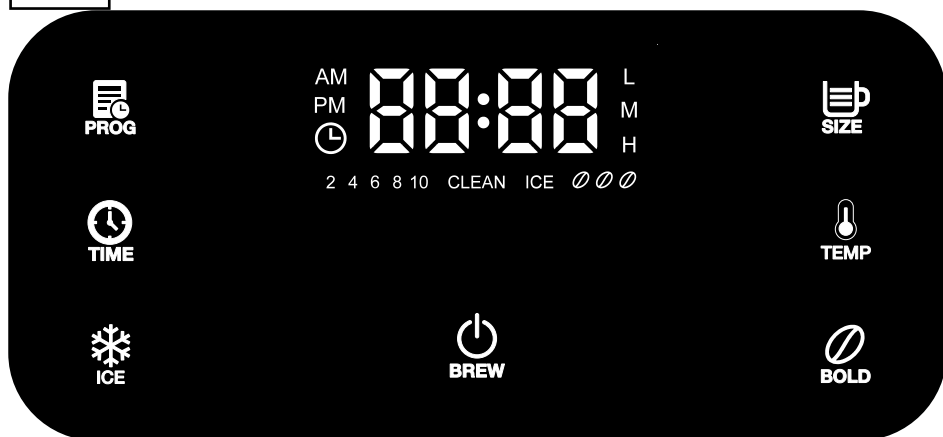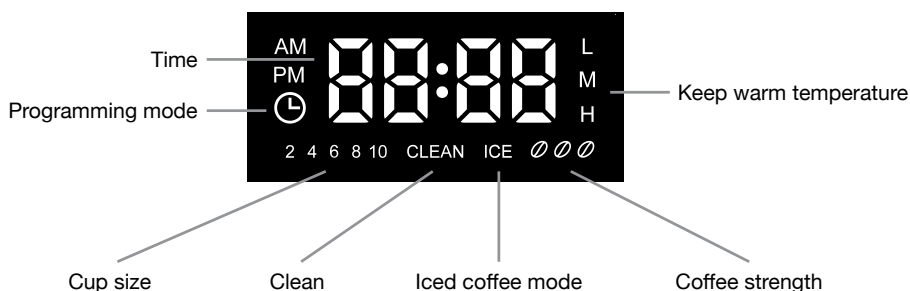 

Before First Use

After unpacking your coffee maker clean all the loose parts with warm water and make yourself familiar with the different functions. After reading these instructions, clean the internal parts of the machine by making two carafes using only water, without any ground coffee inside the filter.

Using Your Coffee Maker

Coffee makers produce very hot water. If you follow the sequence as described below you will avoid possible accidents which might cause severe injuries and burns.

1. Remove carafe from machine and fill carafe with desired amount of water.
Note: Water will be absorbed during brewing process. The brewed coffee will be slightly less than markings on carafe.
2. Open the lid (Fig. 1, A) and fill the water tank (Fig. 1, E) with water
Caution: The water level should not exceed MAX level marked on the water level indicator on the side of the machine. If you fill too much water into the water tank the carafe may overflow with hot coffee.
3. Make sure the filter holder (Fig. 1, D) sits firmly into the filter holder housing. Then place filter (Fig. 1, C) into the filter holder and ensure it fits correctly.
Note: A size #4 paper filter can also be used instead of the filter. Do not use a paper filter inside of the filter.
Caution: If the filter holder is not engaged correctly into the housing, the drip stop in the filter holder might not open during brewing. Hot water and grinds could overflow and leak from the machine.
Caution: When you push against the drip stop from the bottom, and the filter holder lifts up, re-insert the filter holder. Otherwise the drip stop will not open during brewing. Hot water could overflow from the filter causing injuries.
4. Add medium coarse ground coffee into the filter. Use approximately 1 level tablespoon of ground coffee per cup of coffee according to the personal taste. Then close the top lid. DO NOT exceed 14 level tablespoons of coffee in the filter.
5. Make sure the carafe lid sits properly on the glass carafe. Insert the carafe into the machine. The inner part of the lid will push the drip stop up to let the coffee brew through.
6. Plug the power cord into the outlet.
7. Follow the “function setting” to set the function, and finally press the BREW icon to start making coffee.
8. The brewing process can be interrupted by pressing the BREW icon once at any time during operation. The appliance will continue brewing once the BREW icon is pressed again. **Note:** You can remove the carafe from the platform during the brewing process for approximately 30 seconds to pour a cup before brewing is finished.
9. Immediately after brewing is finished there could still be hot water in the filter passing through the ground coffee. This can take 1 to 3 minutes to pass through depending on how much coffee you used and how fine the coffee was ground. Wait until all brewed coffee is in the carafe before serving.
10. If you want to make another carafe of coffee immediately after the first pot, make sure the machine is off and allow it to cool down for three minutes before refilling the water tank. **Important:** Make sure the carafe is empty before brewing.

11. Always turn the coffee maker off and unplug the power cord from the electrical outlet when the coffee maker is not in use.

Important: Always use caution when opening the lid directly after brewing, or when the heating platform is on. Hot steam can rise from inside the machine and cause injury.

Function Setting

Setting the Clock

1. Press the TIME icon to set the time. The hour will flash while the “.” and “minute” will flash.
2. Quickly press the TIME icon once to increase by one hour. If you press the TIME icon and hold, the hour will increase rapidly. After setting the “hour,” leave the panel idle for 3 seconds and “hour” will stop flashing and the “minute” number will start flashing.
3. Each time you press the TIME icon, the minute will increase by a minute. Pressing and holding the TIME icon will increase the minute rapidly. When the minutes are set and the panel is idle for 3 seconds, the clock setup is now complete.

Important: other functions cannot be selected while setting the time or while in the time setting mode.

Programming Function

1. Press the PROG icon to set the programming. The hour will flash and the “.” and “minute” parts will not flash.
2. Quickly press the TIME icon once to increase by one hour. If you press the TIME icon and hold, the hour will increase rapidly. After setting the “hour,” leave the panel idle for 3 seconds and “hour” will stop flashing and the “minute” number will start flashing.
3. Each time you press the TIME icon, the minute will increase by a minute. Pressing and holding the TIME icon will increase the minute rapidly. When the minutes are set and the panel is idle for 3 seconds, the program setup is now complete.

Coffee Strength setting

1. The initial default setting is $\emptyset$ standard which will give you the fastest brewing time.
2. Touch the Bold icon once to choose $\emptyset \emptyset$ the medium setting.
3. Select $\emptyset \emptyset \emptyset$ strong for the maximum flavor.



Cup size setting



1. Each time you touch the cup size icon, different cup sizes will appear on the screen.
2. Available cup size options are: 2, 4, 6, 8, 10, 12. **Note:** The initial default setting is 12-cup, which won't be displayed on the screen.
3. Once the cup size is set, it will remain as the default until the next setting change.

Keep warm setting



1. The initial default setting is M (medium) which keeps the coffee at approximately 170°F.
2. Other available temperature options are L (low) which keeps the coffee at approximately 165° F and H (high) which keeps the coffee at approximately 175°F.
3. The last temperature setting will be saved as the default until the next setting change.

Iced coffee function



1. This feature is to be used when making iced coffee.
2. When making iced coffee, you must brew over ice and add ice to the carafe.
3. When the iced coffee icon is on, the keep warm and the cup size setting will be disabled.
4. The iced coffee function will only brew up to 7 cups of coffee.
5. Fill water less than 7 cup level in order to brew smaller number of cups.

Caution: do not fill ice above the “max ice cubes” line of the glass carafe.



do not add ice
above this line




do not add water
above this line

Tips for great Iced Coffee:

- We recommend using a medium roast coffee ground at a medium coarse setting
- Use strong coffee strength setting on your machine

Note: Too fine a grind may lead to over-extraction and increased bitterness of your coffee, while too coarse a grind can leave your coffee tasting weak or under-extracted.

 Fig. 4

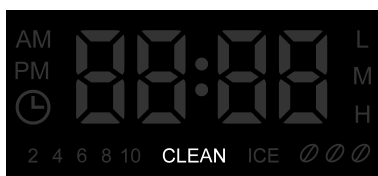

Cleaning & Maintenance

Caution: Be sure to unplug the appliance and allow it to cool down before cleaning. To protect against electrical shock, do not immerse cord, plug, or unit in water or in liquid.

1. Clean all detachable parts after each use in warm, soapy water. Make sure the drip stop in the filter holder is free of any coffee particles; otherwise, it might not close properly when removing the carafe. Clean the filter and carafe after each use to ensure best tasting coffee every time.
2. Wipe the product's exterior surface with a soft, damp cloth to remove stains. Never use scouring agents or harsh abrasive cleaners.
3. Water droplets may buildup in the area above the filter and drip onto the heating platform during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
4. Use a damp cloth to gently wipe the heating platform. Never use abrasive cleaner to clean the heating platform.
5. Dry all parts fully before placing back into the machine.

Cleaning (Descaling) function

1. Cleaning reminder feature: After 80 brew cycles, the text "CLEAN" will appear on the LCD screen indicating that the coffee machine needs a cleaning(descaling).
2. Before cleaning(descaling), remove the filter from the machine.
3. Dissolve 1-oz(28g) of Capresso Cleaning Solution (or other descaling agent) with 32-oz (1L) of water and pour mixture into the water tank.
4. Place the empty carafe with the lid closed underneath the filter holder.
5. Press and hold the Power icon for 3 seconds to start the cleaning (descaling) process.
6. Once the cleaning solution in the water tank is completely used and the cleaning cycle is over, the coffee maker will beep three times.
7. Turn the coffee maker off, remove the carafe, empty, and rinse a few times with fresh cold water.
8. Rinse the filter holder thoroughly with fresh water and place it back in the filter holder housing.
9. Fill the water tank with fresh cold water and brew through machine to fully rinse.
10. Turn off the coffee maker and empty carafe.
11. Repeat steps 9 and 10 at least two times before brewing coffee again.

Manual Cleaning (Descaling) function

You can also manually initiate the cleaning(descaling) function by following the above step 2 through 11.



Power cord storage function

There is a space for storing the power cord on the back of the machine body, and the remaining cord can be stored inside the machine after the exposed length of the power cord is reserved.

Memory

If the power supply has been disrupted or machine was unplugged from the outlet unintentionally during operation, the appliance will continue operation automatically from the point when the disconnection occurred provided that the pause does not exceed 15 seconds. In the event the paused time exceeds 15 seconds, the display shows the default setting, the appliance must be reset and restarted.

Hints for Great Tasting Coffee

1. A clean coffee maker is essential for making great tasting coffee. Regularly clean the coffee maker as specified in the “Cleaning & Maintenance” section. Always use fresh, cold water in the coffee maker.
2. Store unused ground coffee in a cool, dry place. After opening a package of ground coffee, reseal it tightly or place into an airtight container. DO NOT store ground coffee in the refrigerator or freezer.
3. For optimum coffee taste, buy whole coffee beans and grind them just before brewing. Keep unused whole beans in an airtight container in a cool dry place.
4. DO NOT reuse ground coffee since this will greatly reduce the coffee’s flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.

Troubleshooting

What to do if...

...Coffee drips from the filter, when the carafe is removed.

- Ground coffee sits in the drip stop and does not allow the drip stop to close properly. Immediately replace the carafe and wait until all the coffee has been filtered in the carafe. Now remove carafe and remove the filter holder. Clean filter holder under running water. Push the drip stop several times to remove coffee particles. Over the sink fill some water into the filter holder and check if the drip stop closes properly.

...Ground coffee is flowing over the filter.

- Coffee is ground too finely. Use a coarser ground.
- Too much ground coffee was placed in filter. Use less ground coffee next time.
- Use a size #4 paper filter instead of the filter.

LIMITED ONE-YEAR WARRANTY

This warranty covers your CAPRESSO machine, model #496.01 Touchscreen Coffee Maker. The model # can be found on the bottom of the machine. This warranty is in effect for one year from the date of the first consumer purchase. This warranty covers all defects in materials or workmanship (parts and labor).

EXCEPT THE BREAKAGE OF GLASS!

This warranty does not cover:

- Any machine not purchased from an Authorized Dealer.
- Commercial use of machine.
- Damage caused by accident, abuse, negligence, misuse, improper operation or failure to follow instructions contained in this manual.
- Damaged caused to pump or ThermoBlock by running the machine without water.
- Any service or alteration performed by an unauthorized person, company, or association.
- Carafes (Glass or Thermal)

Other limitations and exclusions: Any implied warranties including fitness for use and merchantability are limited in duration to the period of the express warranty set forth above and no person is authorized to assume for JURA any other liability in connection with the sale of the machine. JURA expressly disclaims liability for incidental and consequential damages caused by the machine. The term “incidental damages” refers to the loss of the original purchasers’ time, loss of the use of the machine or other costs relating to the care and custody of the machine. The term “consequential damages” refers to the cost of repairing or replacing other property which is damaged when this machine does not work properly. The remedies provided under this warranty are exclusive and in lieu of all others. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Customer Service

1-800-767-3554

Mon-Fri 8AM – 8PM • Sat 9AM – 5PM

Eastern Time Zone

contact@capresso.com

JURA Inc.

20 Craig Road, Montvale, NJ 07645

201-767-3999 • Fax: 201-767-9684

www.capresso.com