 
 


Product Instruction

 
 
N707P476024

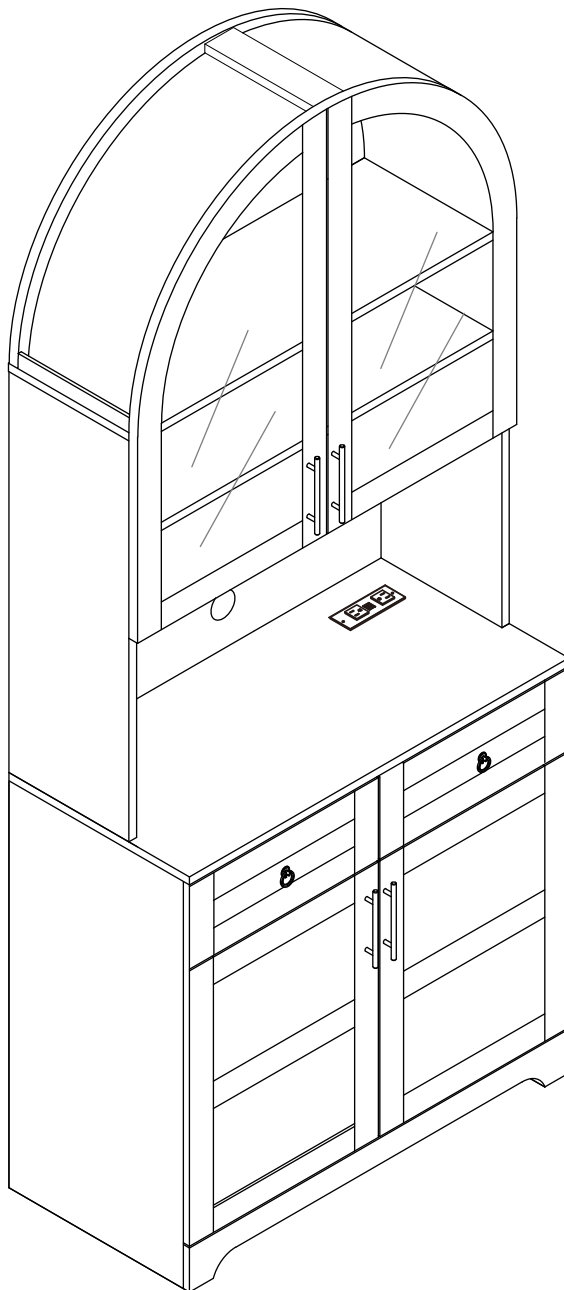

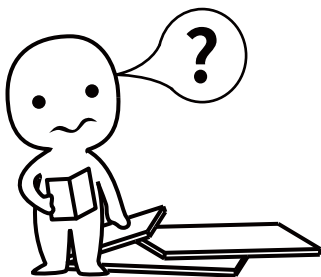


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

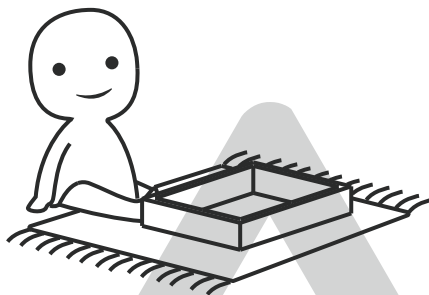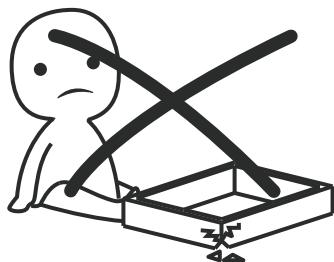



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

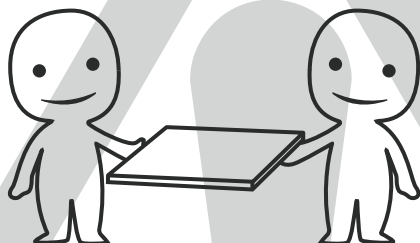

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

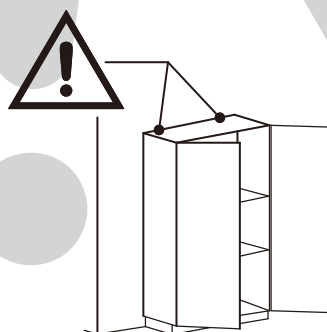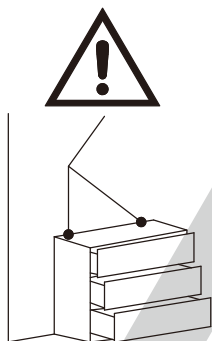

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fits your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

 
IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability throughout the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

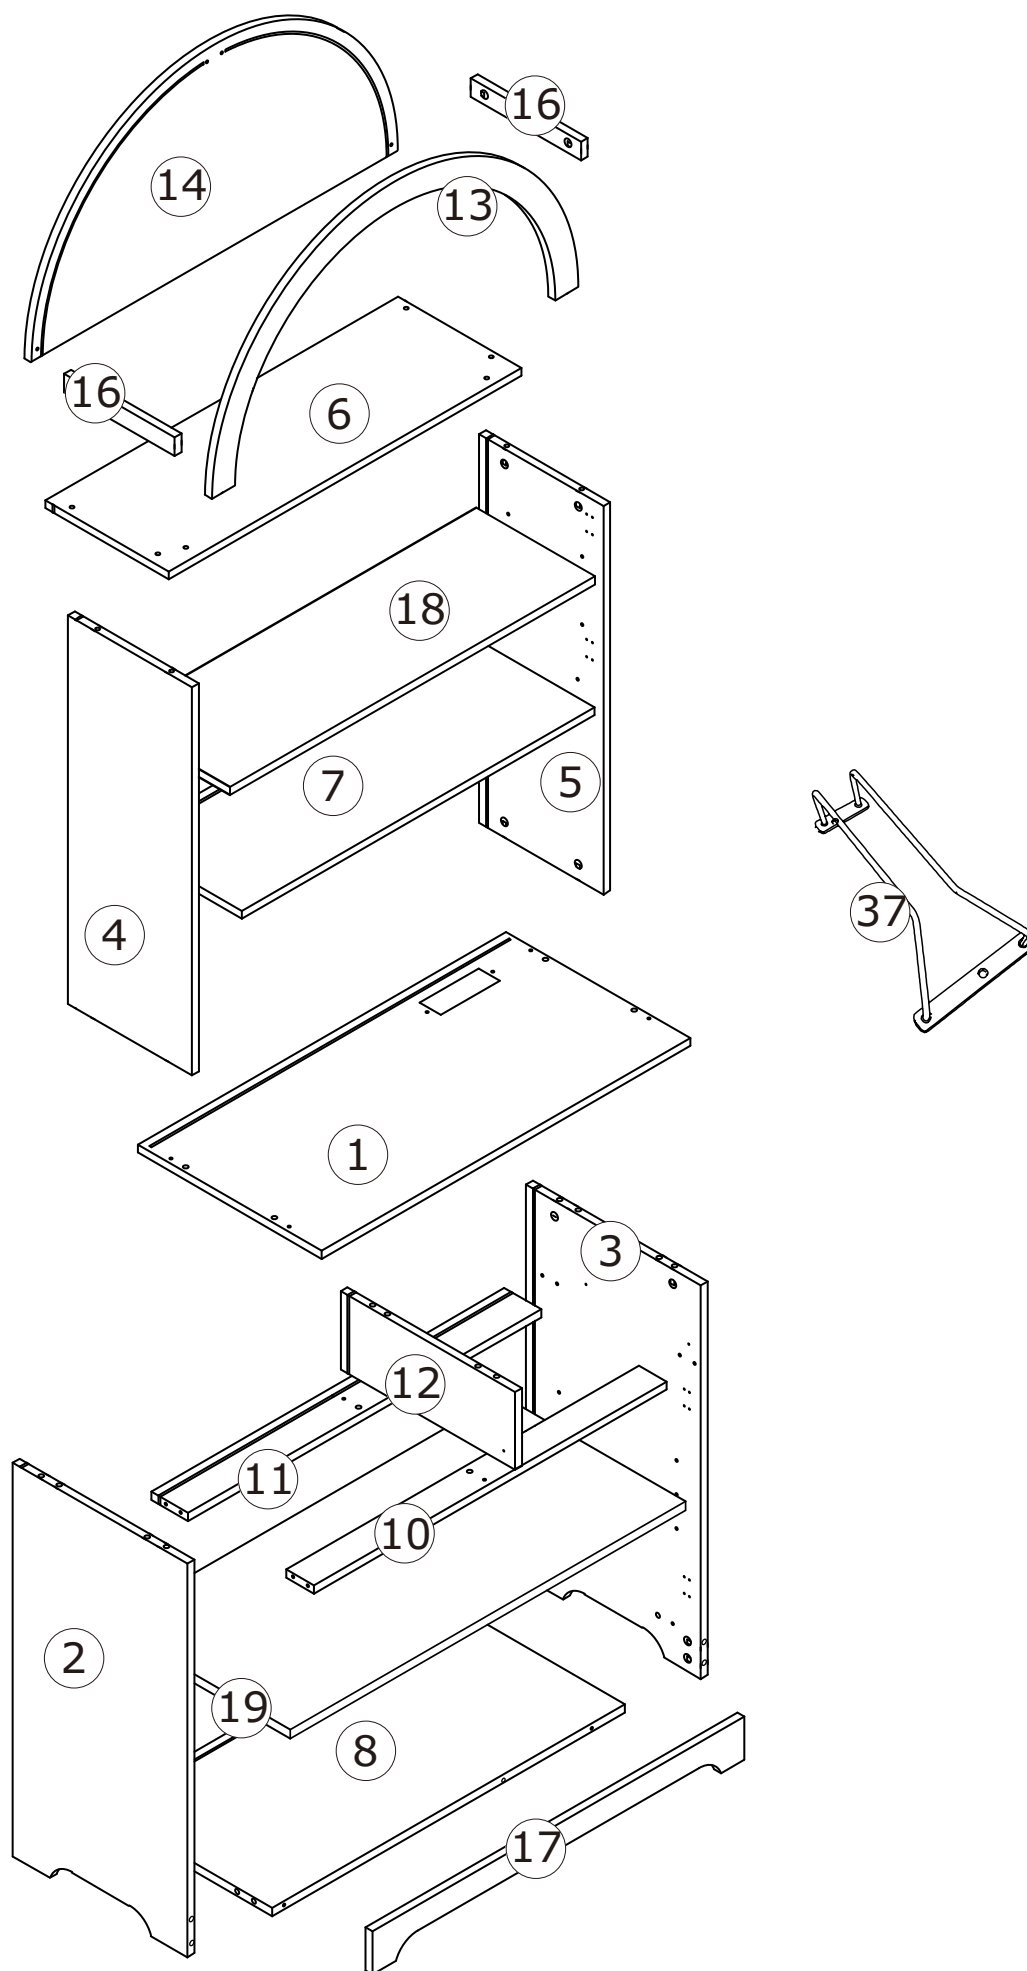

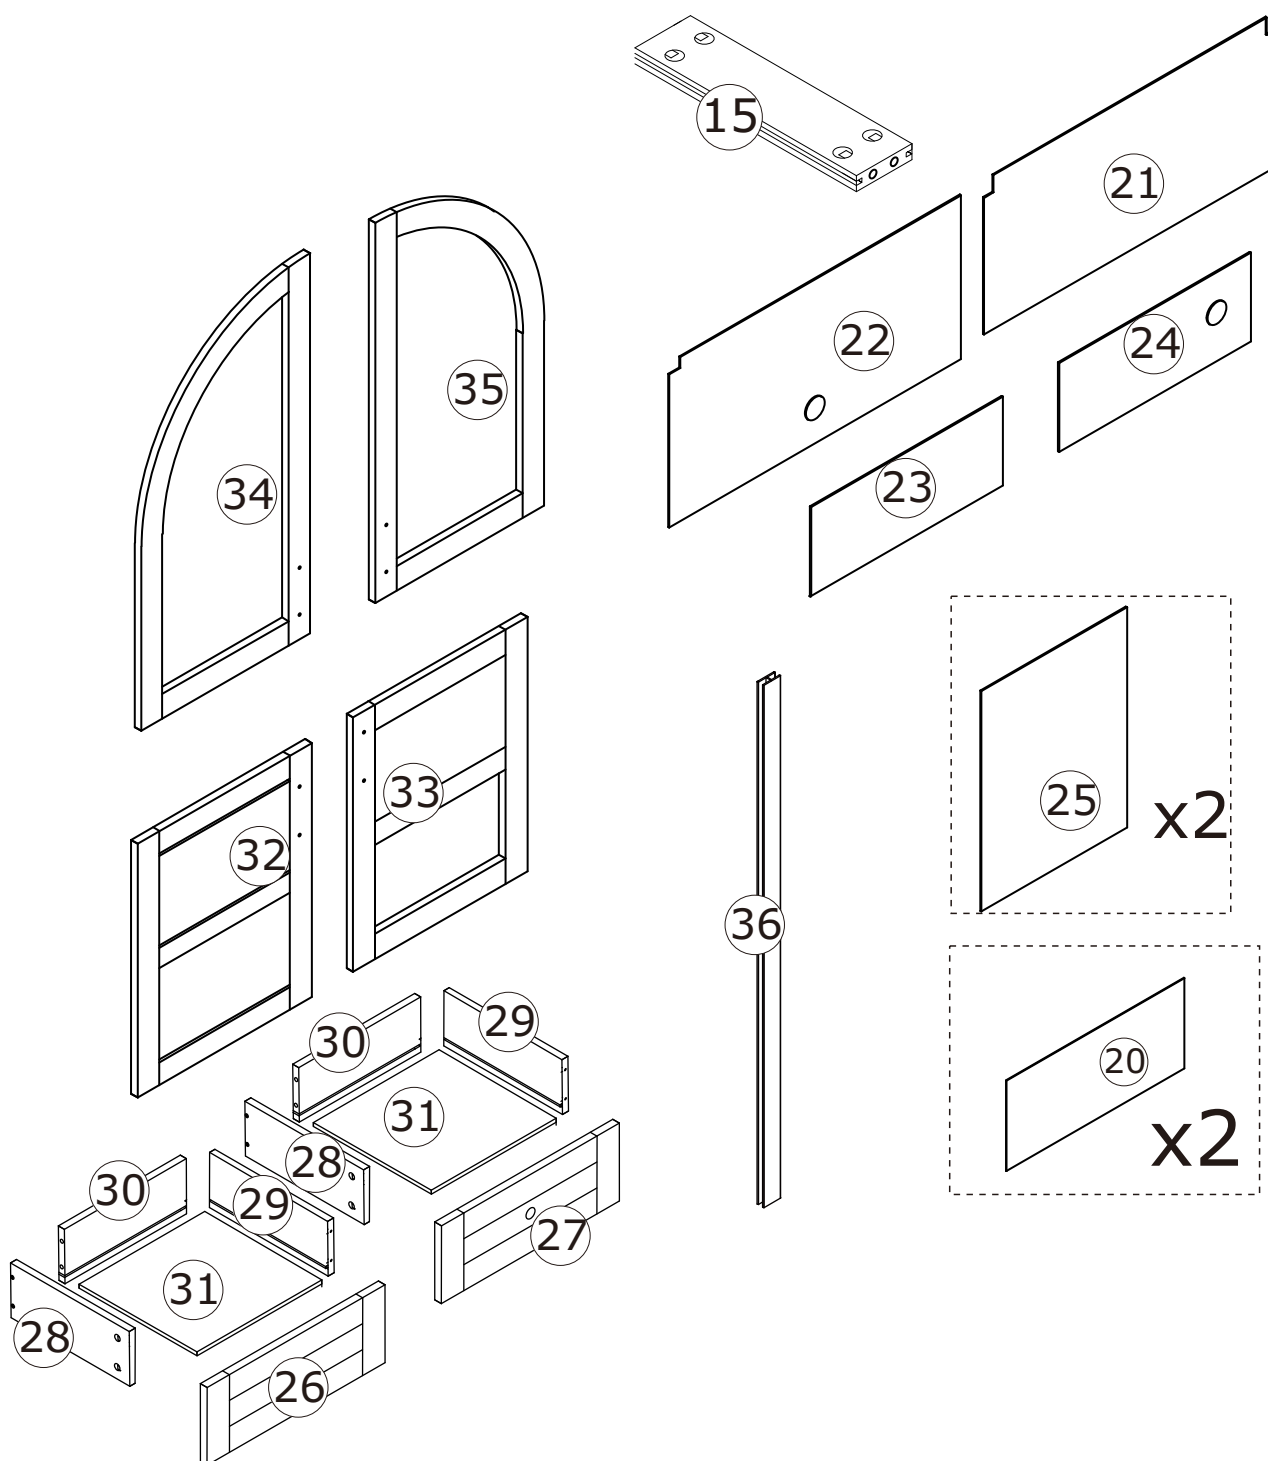


Note:

 
1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screw with tools gradually.
4. If screw are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all screws, adjust it on a flat ground and tighten up all screws again.
6. Note: If one or some screws are fully tighten during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

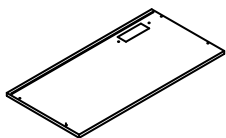


① x1

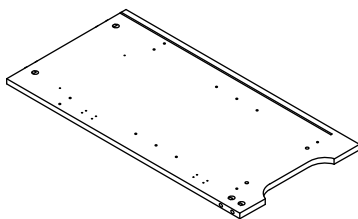 


② x1

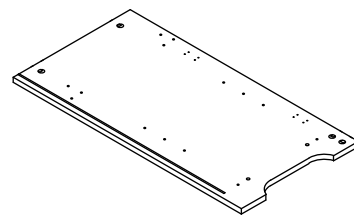 


③ x1

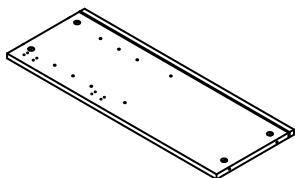 


④ x1

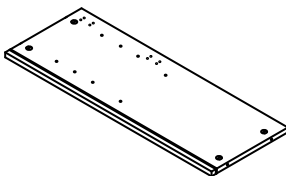 


⑤ x1

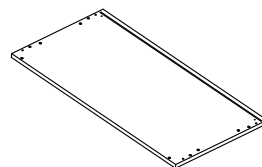 


⑥ x1

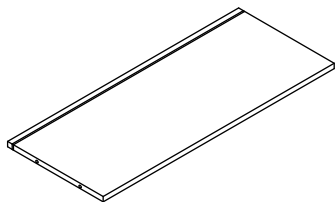 


⑦ x1

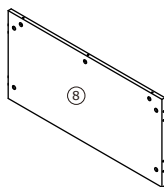 


⑧ x1

 


⑩ x1

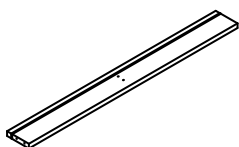 


⑪ x1

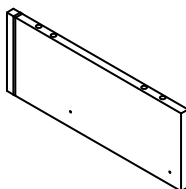 


⑫ x1

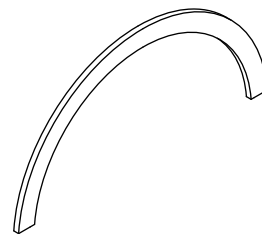 


⑬ x1

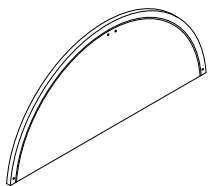 


⑭ x1

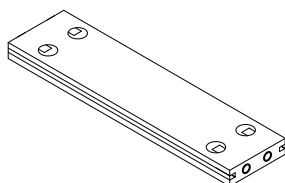 


⑮ x1

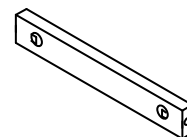 


⑯ x2

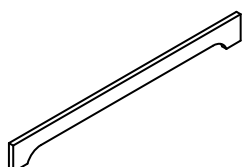 


⑰ x1

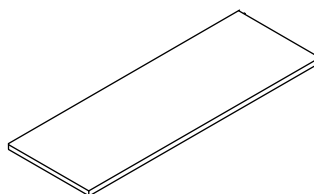 


⑱ x1

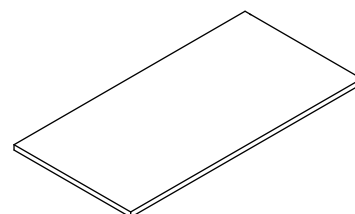 


⑲ x1

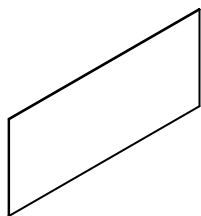 


②0 x2

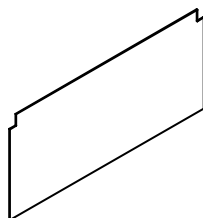 


②1 x1

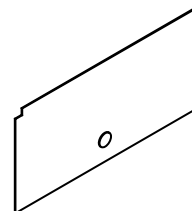 


②2 x1

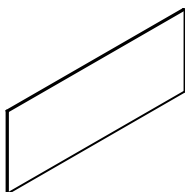 


②3 x1

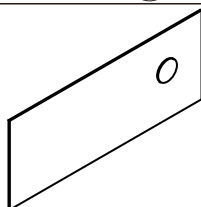 


②4 x1

 


②5 x2

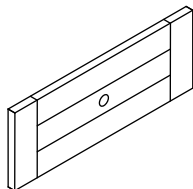 


②6 x1

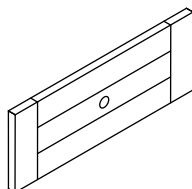 


②7 x1

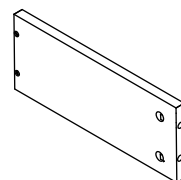 


②8 x2

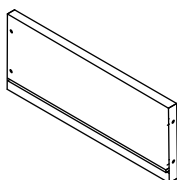 


②9 x2

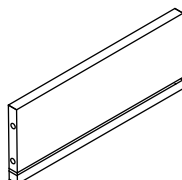 


③0 x2

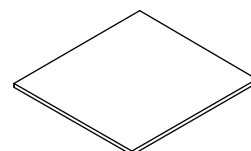 

③1 x2

 


③2 x1

 

③3 x1



 
③4 x1



③5 x1



 
③6 x1

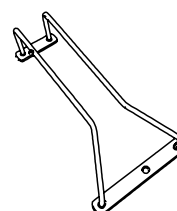


③7 x1



 
Hardware Kit x2

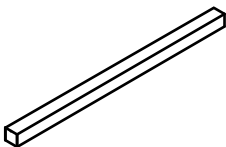

Drawer slide rail

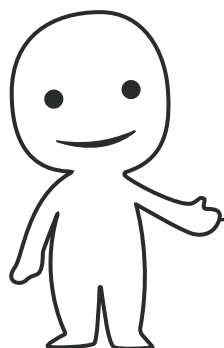 


Please prepare the following tools

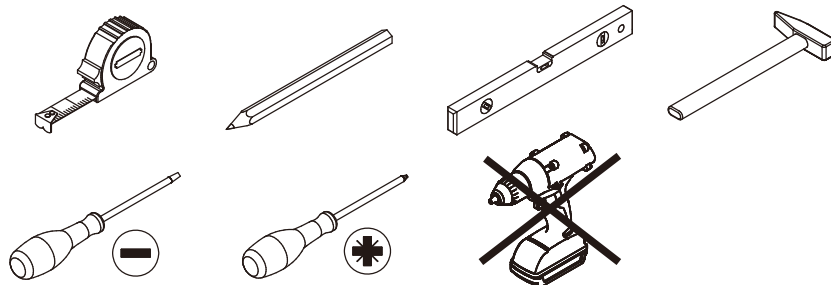 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 58+5 Ø 6 x 35 mm	B x 46+4 Ø 15 x 11 mm	C x 12+1 Ø 8 x 30 mm	D x 2 L= 300mm	E x 42+4 Ø 3 x 12 mm
F x 6+2 M5*40mm	G x 48+4 Ø3. 5X14mm	H x52+5	J x 6+1	K x 8
L x 8+1 Ø4 x30mm	M x4	N x 2+1 Ø3. 5X12mm	P x 2 Ø4 x10mm	R x 1
Sx 26+2	T x 12 Ø 15 x 9,5 mm	U x 8	V x 4 96 Ø4 x28mm	Wx1
X x 2 Ø3. 5X14mm	Y x 1 750	Z x 2 Ø4X30mm Ø4X12mm Ø4X12mm		

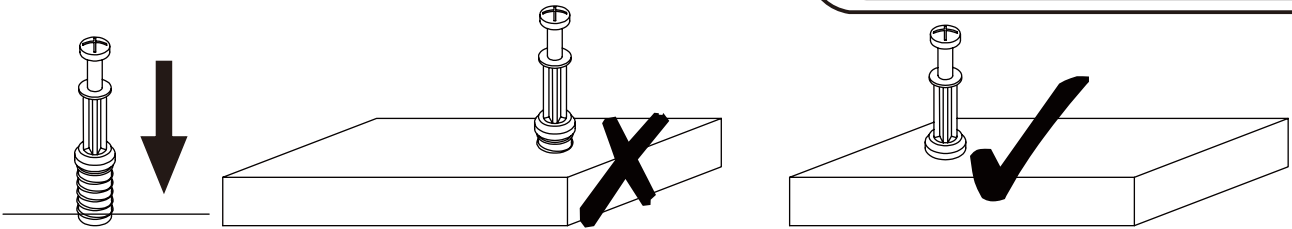 


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

FR_RACCORD RAPIDE: Faites serrer le raccord rapide jusqu'à ce que l'épaule soit parfaitement encastré dans le panneau. Il ne faut ni trop serrer ni insuffisamment serrer.

ES_QUICKFIT: Apriete quickfit hasta que el hombro se descargue con el panel. NO lo sobreapriete ni lo apriete poco.

DE_QUICKFIT: Ziehen Sie den Quickfit fest, bis die Schulter mit der Platte bündig ist. Bitte nicht zu fest oder zu schwach anziehen.

 IT_MONTAGGIO RAPIDO: Stringere il montaggio rapido fino a quando la spalla è a filo con il pannello, non stringere troppo o troppo poco.

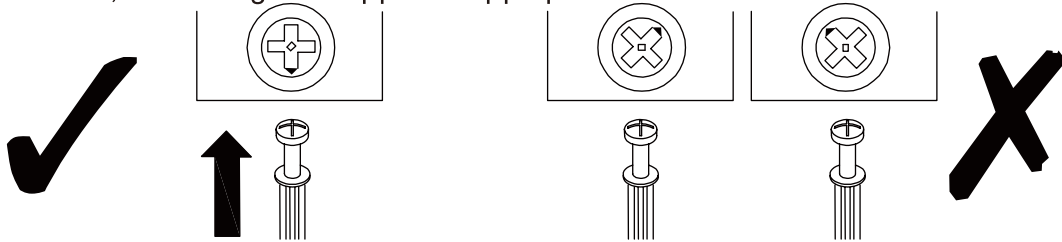


EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

FR_SERRURE BATTEUSE: Avant d'insérer la serrure batteuse, veillez à la bonne orientation avant d'insérer le raccord rapide.

ES_CIERRE DE LA CÁMARA: Cuando instale el cierre de la cámara, asegúrese de que la posición de inicio es correcta antes de que inserte el quickfit conector.

DE_CAM-LOCK: Achten Sie bei der Montage des Cam-Locks auf die richtige Ausgangsposition, bevor Sie den Quickfit einsetzen.

 IT_BLOCCAGGIO A CAMMA: Quando si monta il bloccaggio a camma, assicurarsi che la posizione iniziale sia corretta prima di inserire il montaggio rapido di collegamento.

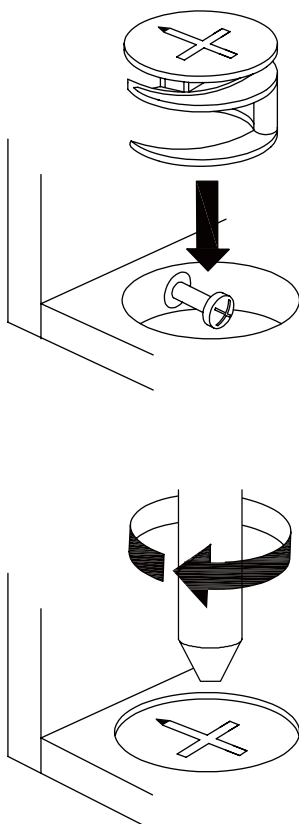

EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

FR_Lorsque les deux panneaux sont assemblés, la tête du raccord rapide doit reposer au centre de la serrure batteuse.

Il faut insérer la serrure batteuse avant le raccord rapide.

ES_El cabezal del quickfit debe estar en el centro del cierre de la cámara cuando se unan los dos paneles.

Se debe insertar el cierre de la cámara antes que el quickfit.

DE_Der Quickfit-Kopf sollte sich in der Mitte des Cam-Locks befinden, wenn die beiden Platten zusammengefügt sind.

Der Cam-Lock sollte vor dem Quickfit eingesetzt werden.

IT_La testa del montaggio rapido deve trovarsi al centro del bloccaggio a camma quando i due pannelli sono uniti.

Il Bloccaggio a Camma deve essere inserito prima del montaggio rapido.

EN_Turn cam lock clockwise to tighten.

FR_Faites tourner la serrure batteuse dans le sens des aiguilles d'une montre pour la resserrer.

ES_Gire el cierre de la cámara en sentido horario para apretarlo.

DE_Drehen Sie den Cam-Lock im Uhrzeigersinn, um ihn festzuziehen.

IT_Ruotare il bloccaggio a camma in senso orario per stringere.

 
EN It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

FR Il est parfois nécessaire d'ajuster les charnières pour un meilleur alignement des portes. Servez-vous des instructions ci-dessous comme guide.

ES Puede que sea necesario ajustar los quicios de forma que se alineen las puertas. Use las instrucciones que aparecen debajo como guía.

DE Möglicherweise müssen Sie die Scharniere so einstellen, dass die Türen ausgerichtet sind. Verwenden Sie die nachstehenden Anweisungen als Leitfaden.

IT Potrebbe essere necessario regolare le cerniere in modo che le porte siano allineate. Per fare ciò attenersi alle istruzioni sottostanti.

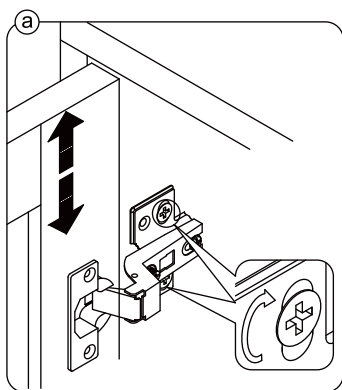


EN To adjust the door vertically loosen the screw as shown and move up and down as needed.

FR Si vous souhaitez régler la porte **verticalement**, desserrez la vis comme indiqué et déplacez la porte de haut en bas selon les besoins.

ES Para ajustar la puerta **verticalmente** afloje el tornillo tal y como se muestra y muévelo hacia arriba o hacia abajo según sea necesario.

DE Um die Tür **vertikal** auszurichten, lösen Sie die Schraube wie abgebildet und bewegen Sie sie nach Bedarf nach oben oder nach unten.

 IT Per allineare la porta **verticalmente** allentare la vite come mostrato e spostarla in alto o in basso secondo necessità.

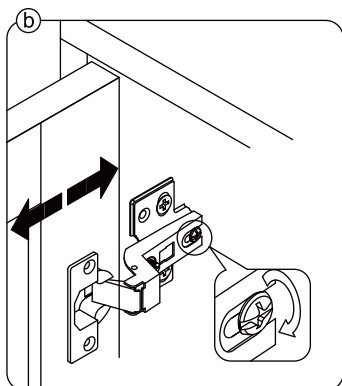


EN To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

FR Si vous souhaitez ajuster l'**écart** entre la porte et le cadre principal, tournez la vis dans le sens des aiguilles d'une montre ou dans le sens inverse, si nécessaire.

ES Para ajustar el **espacio** desde la puerta al marco principal, gire el tornillo en sentido horario o antihorario, según se necesite.

DE Um den **Abstand** von der Tür zum Hauptrahmen auszurichten, drehen Sie die Schraube je nach Bedarf im oder gegen den Uhrzeigersinn.

 IT Per regolare lo **spazio** tra la porta e il telaio principale, avvitare o svitare la vite secondo necessità.

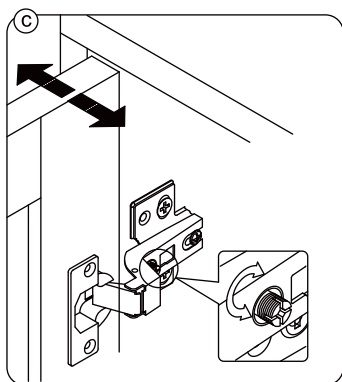


EN To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise.

FR Si vous souhaitez ajuster la porte **latéralement**, ajustez la vis comme indiqué en tournant dans le sens des aiguilles d'une montre ou dans le sens inverse des aiguilles d'une montre.

ES Para ajustar la puerta **lateralmente** ajuste el tornillo tal y como se muestra girándolo en sentido horario y antihorario.

DE Um die Tür **seitlich** auszurichten, stellen Sie bitte die Schraube wie abgebildet durch Drehen im oder gegen den Uhrzeigersinn ein.

 IT Per allineare la porta **lateralmente** regolare la vite come mostrato, avvitandola o svitandola.

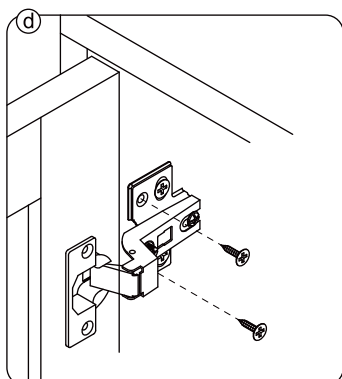

EN Please fix other screws

FR Merci de serrer les autres vis.

ES Fije los demás tornillos

DE Befestigen Sie bitte die anderen Schrauben

IT Fissare le altre viti

1

D x 2

 
 
 
 


L = 300 mm

E x 4



Ø3 x 12 mm

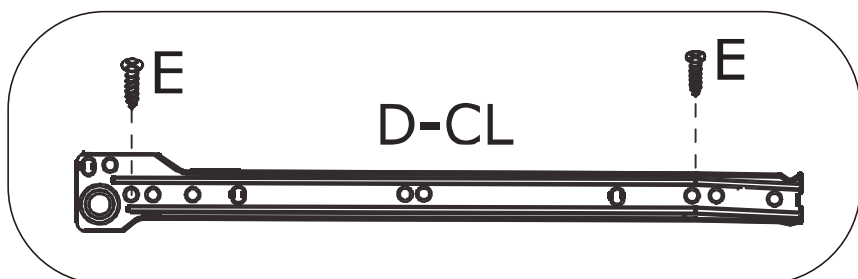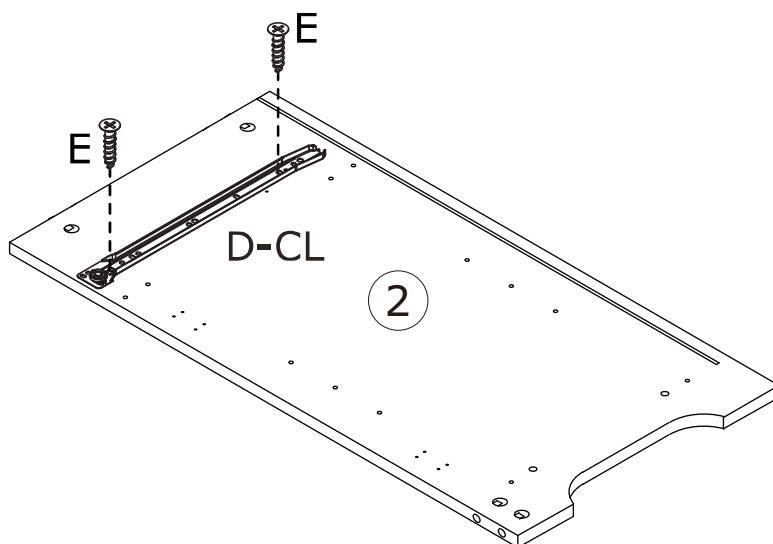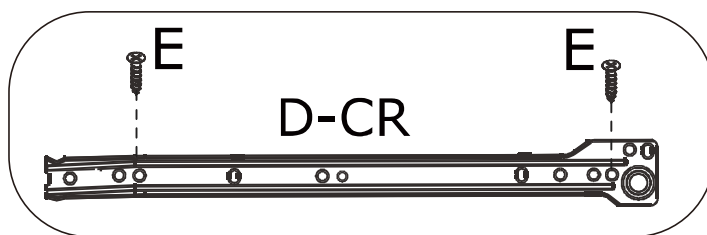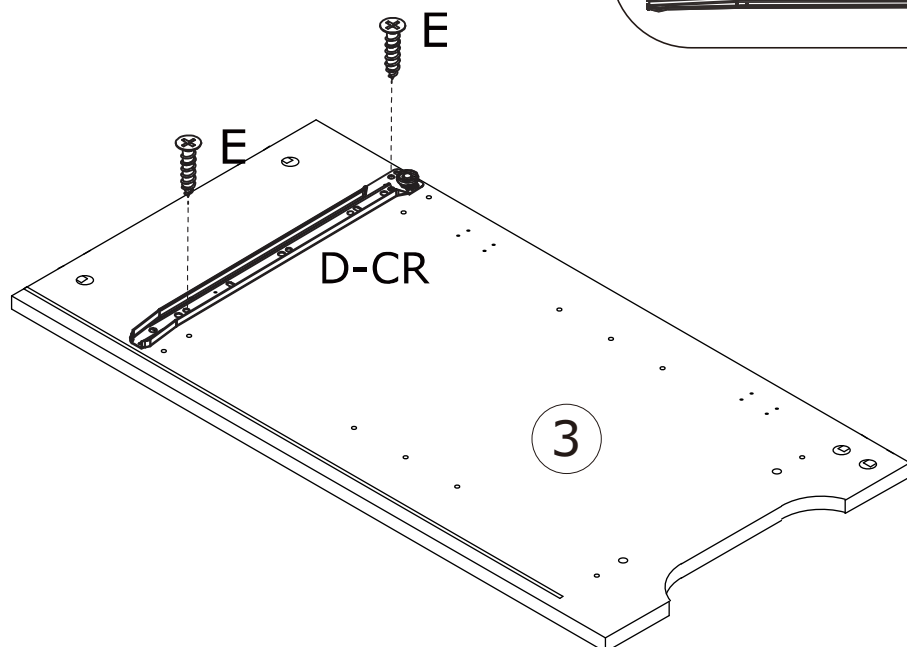




2

A x 12

Ø6 x 35 mm

C x 4

   
Ø8 x 30 mm

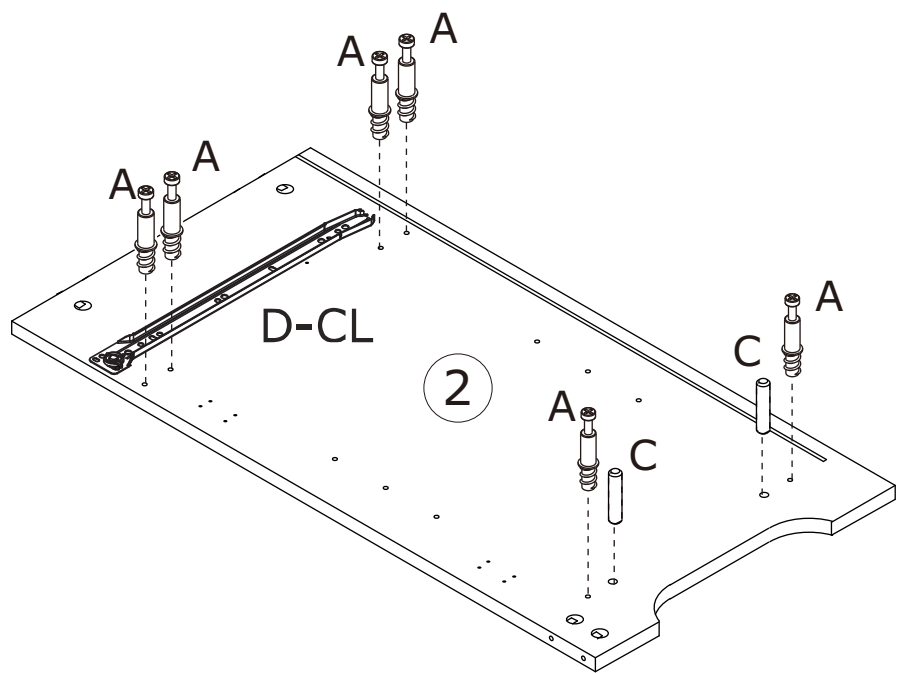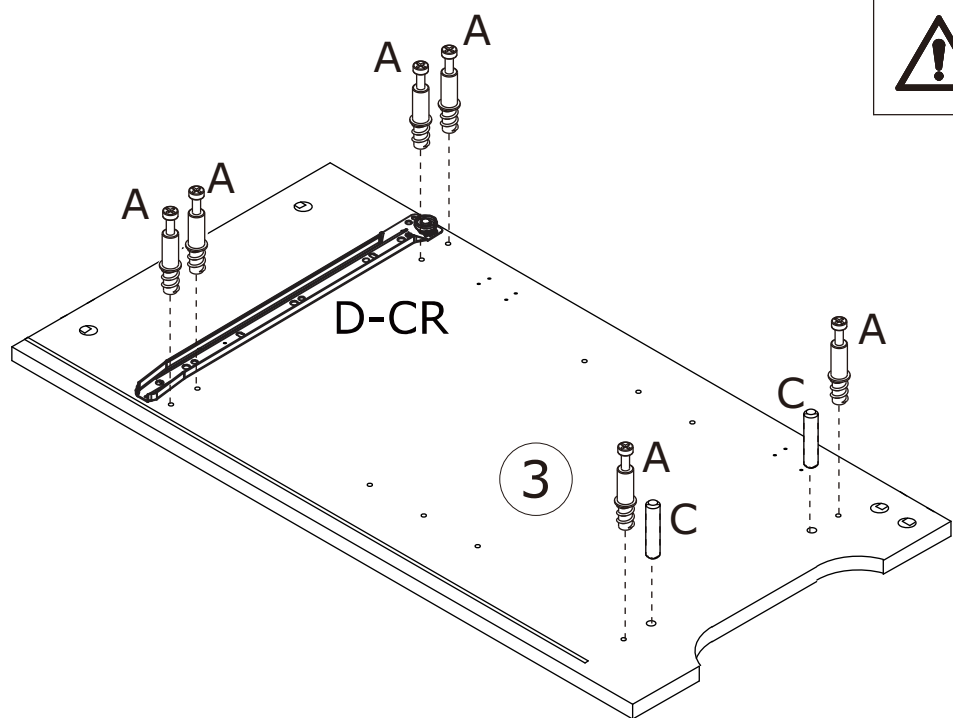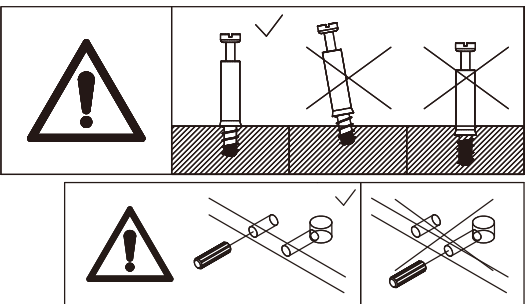

3

D x 1
CR
L = 300 mm



 
E x 2
 $\varnothing 3 \times 12$ mm

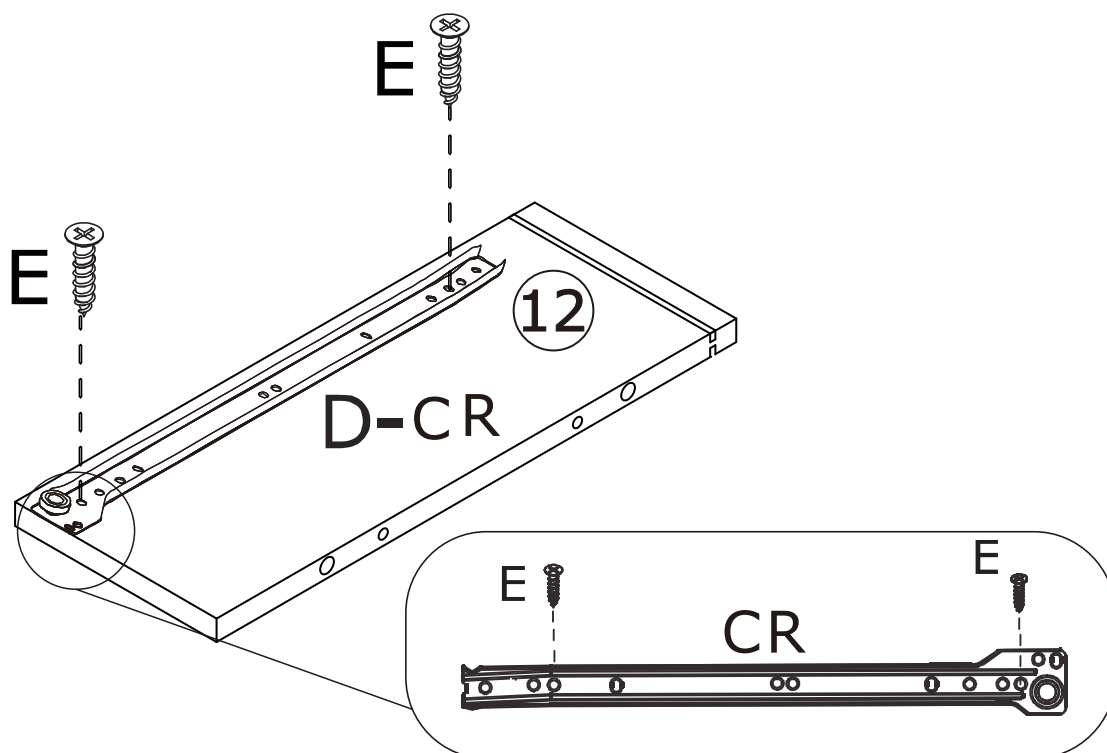

4

A x 2
 $\varnothing 6 \times 35$ mm

   C x 2
 $\varnothing 8 \times 30$ mm

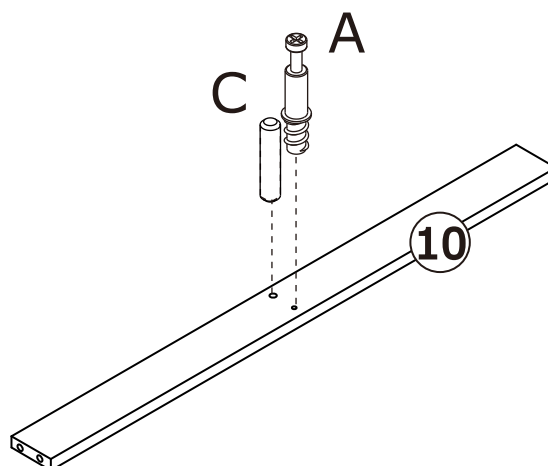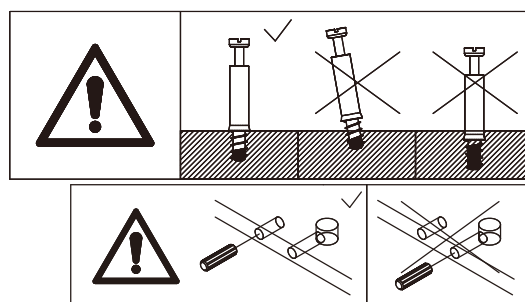
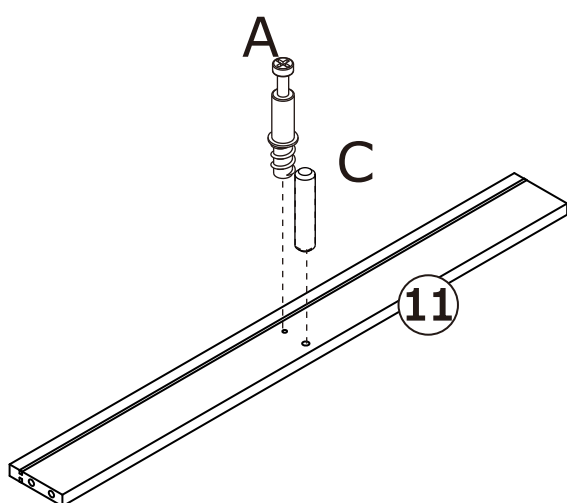


5

B x 2



  Ø 15 x 11 mm

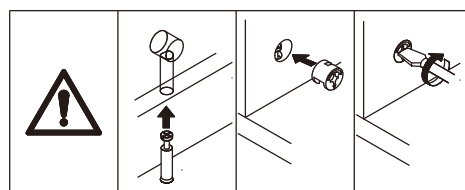
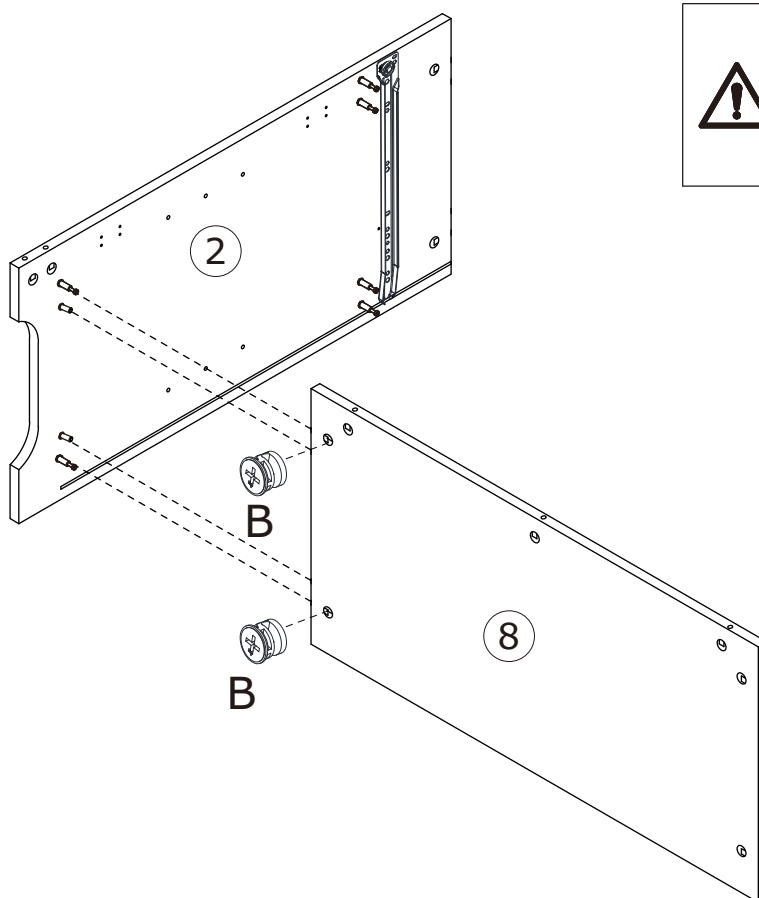


6

B x 2



  Ø 15 x 11 mm


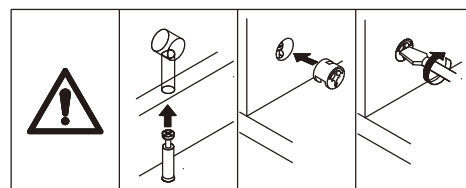
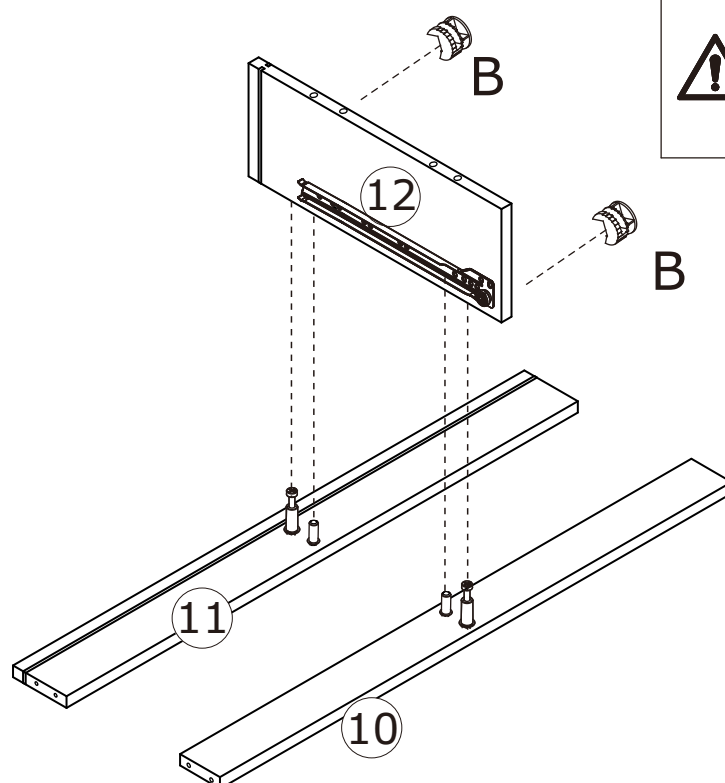


7



B x 4



   Ø15 x 11 mm

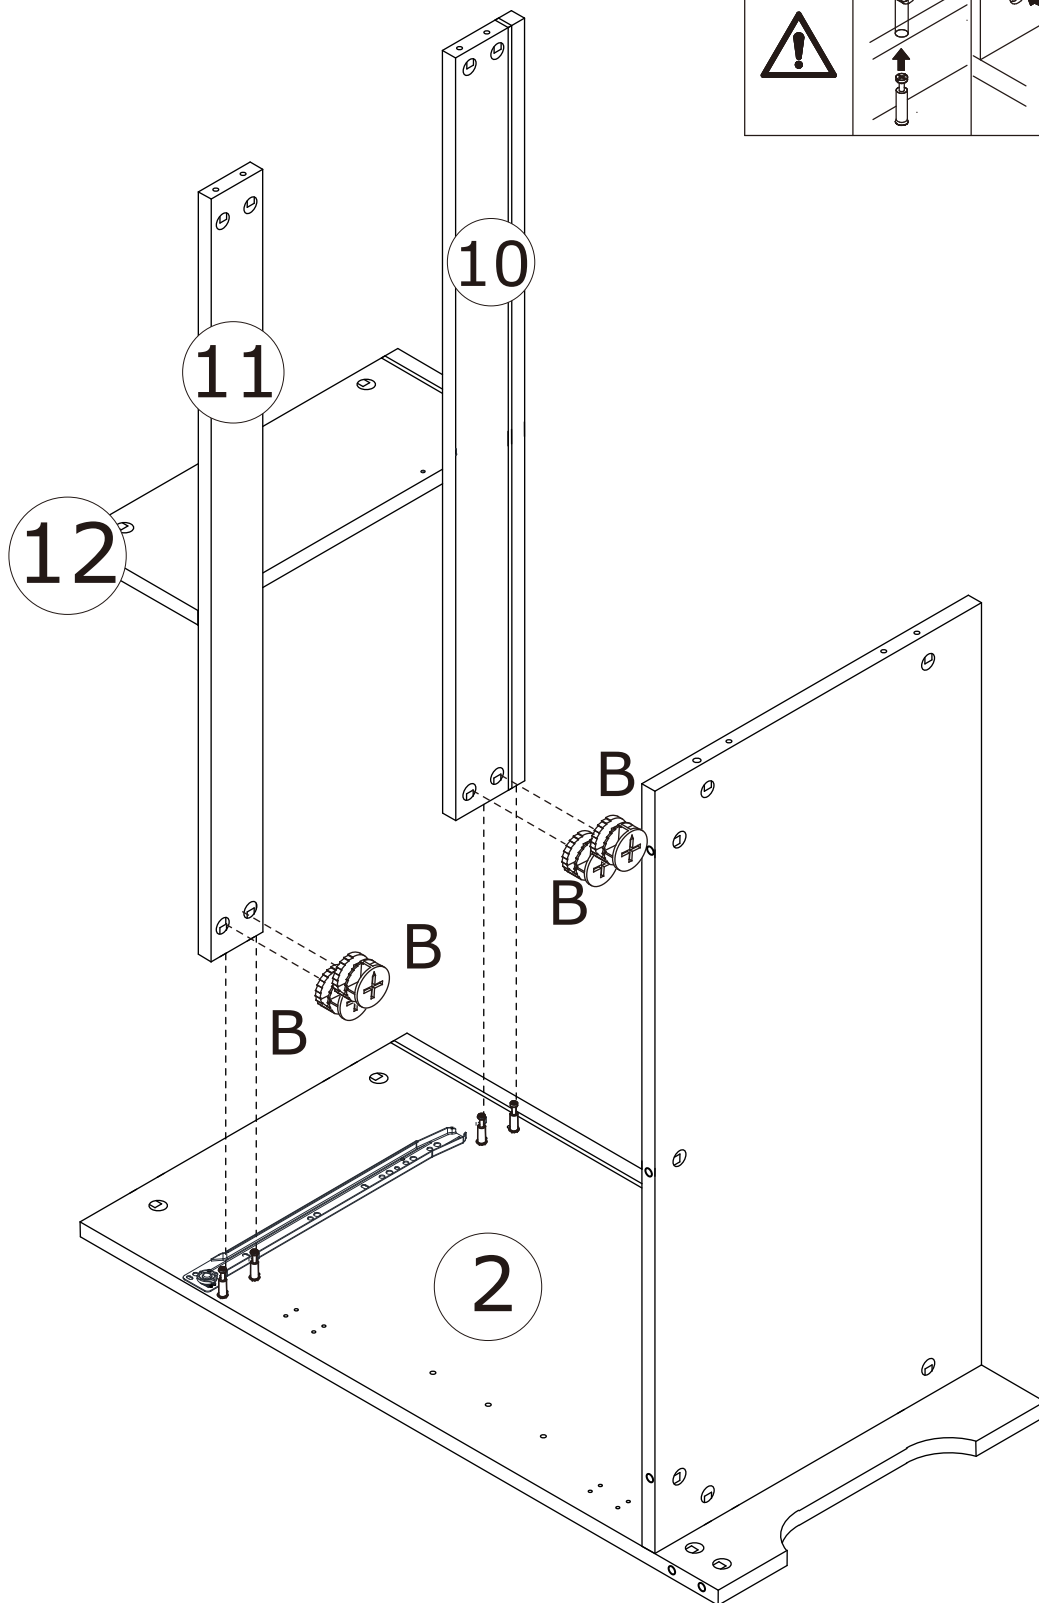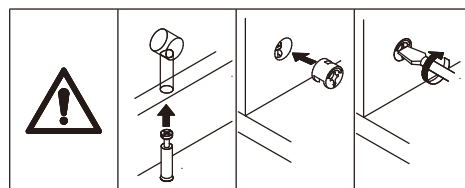

8

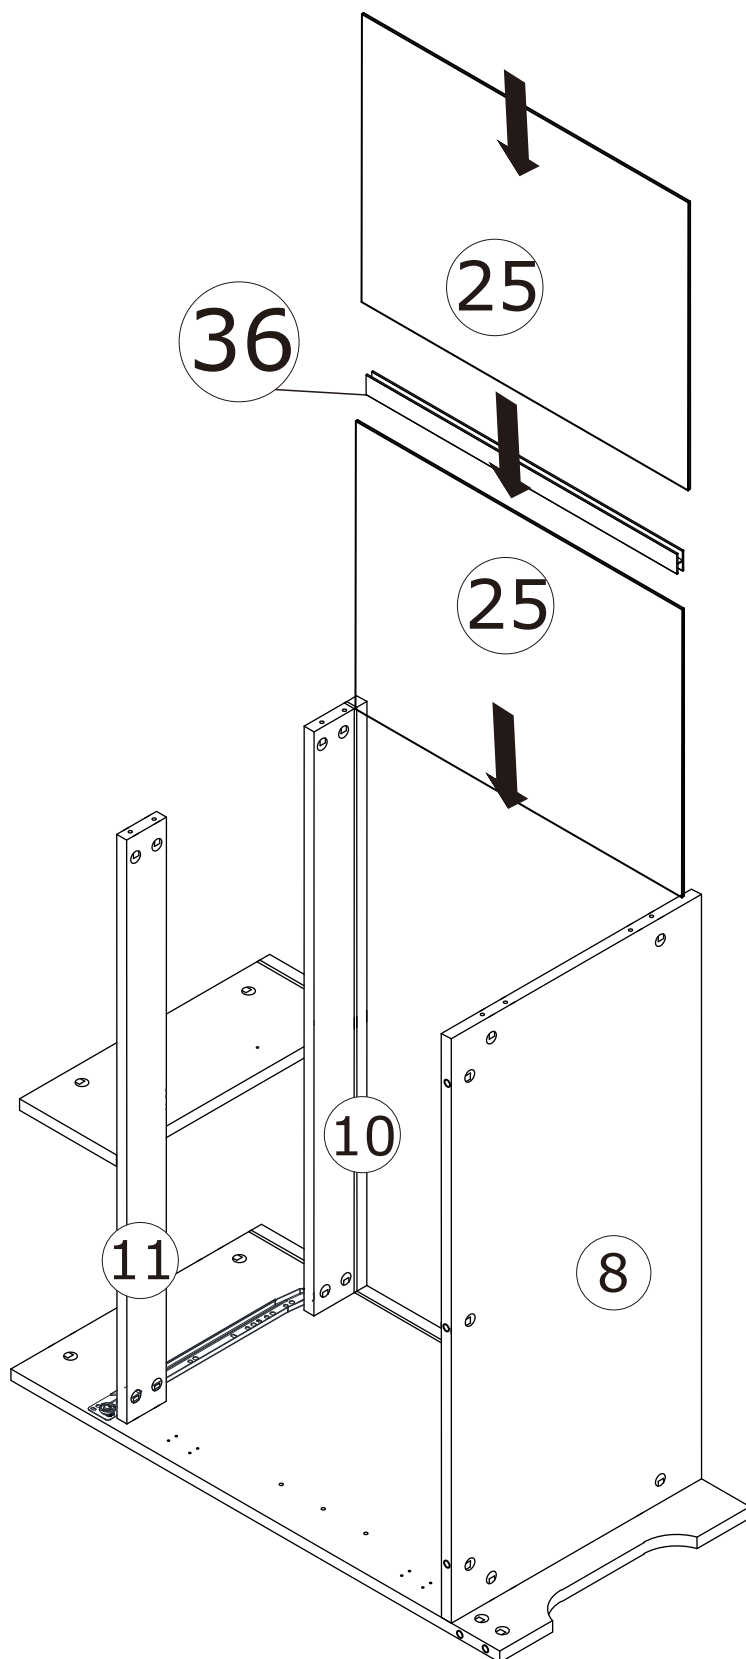 
 


9


B x 6





  Ø 15 x 11 mm

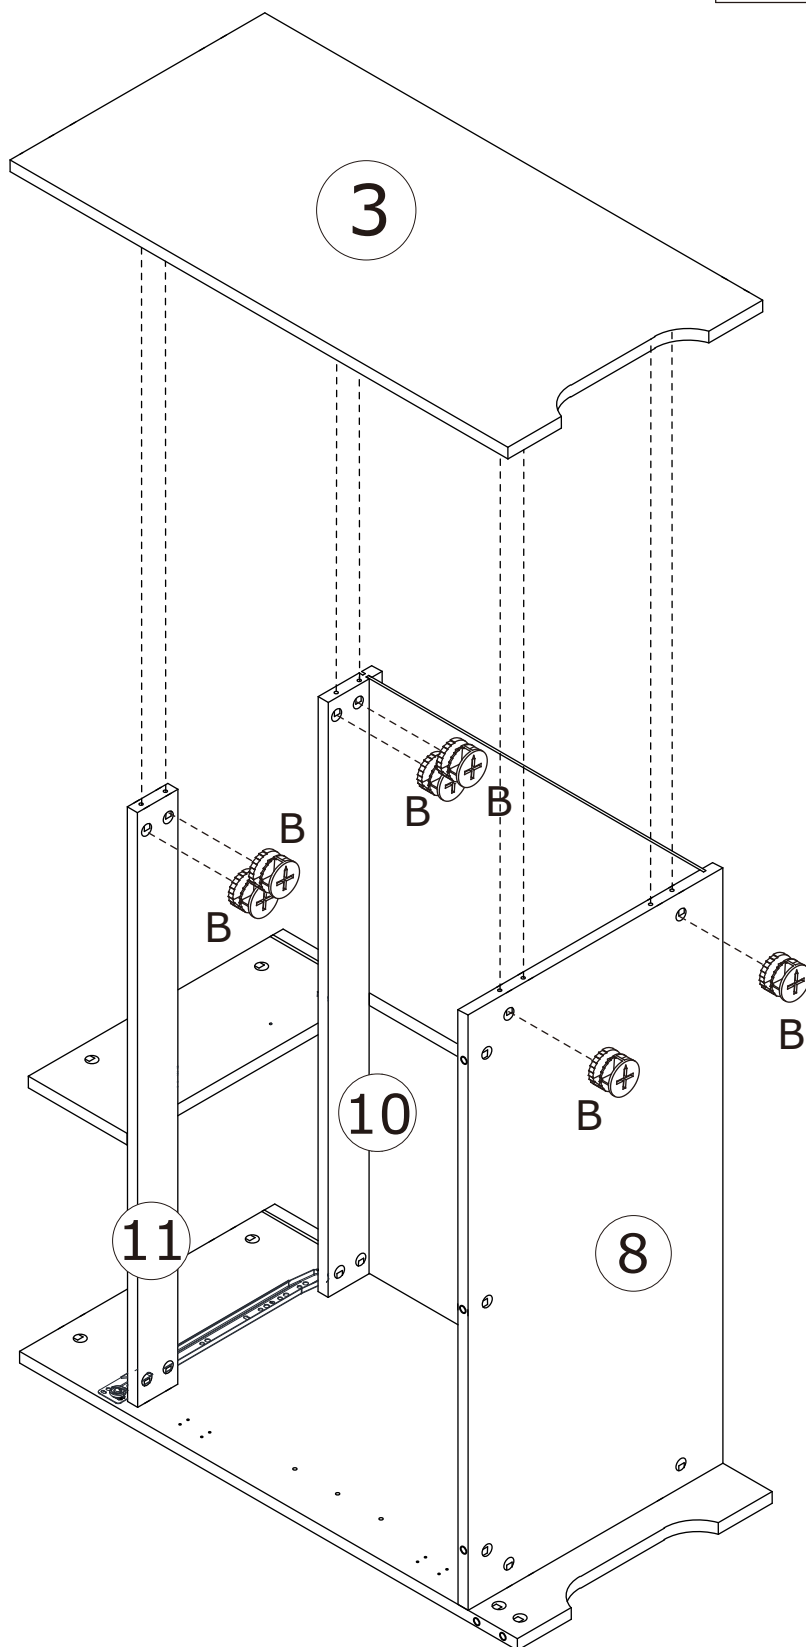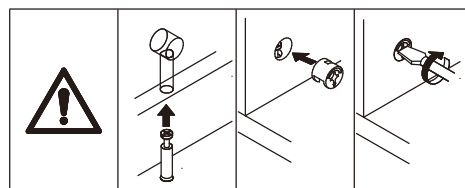




10

 A x 7  Ø6 x 35 mm	
--	---

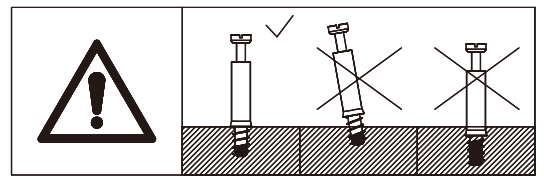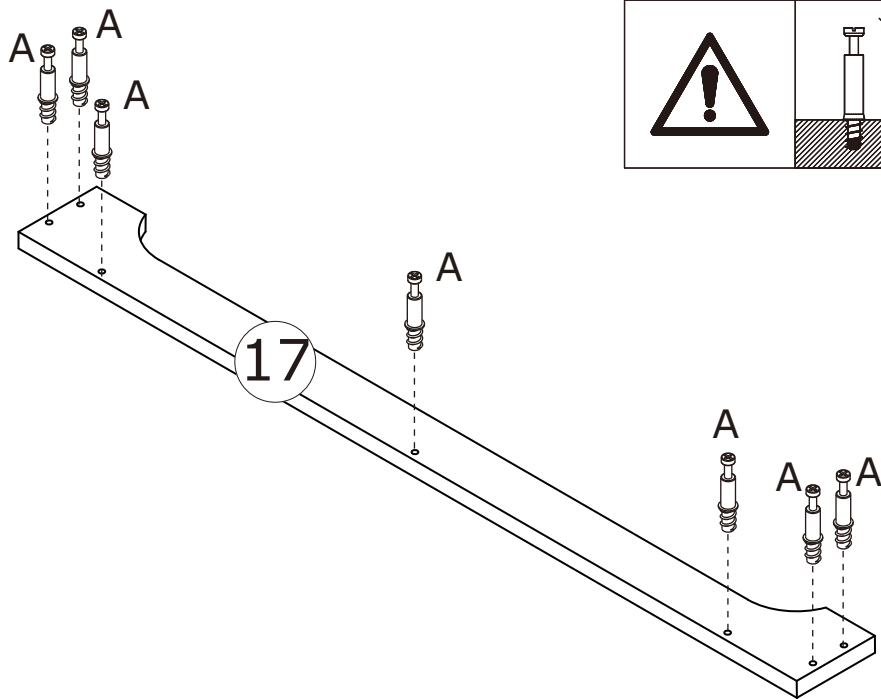  

11

 B x 7  Ø15 x 11 mm	J x 6 	
---	--	---



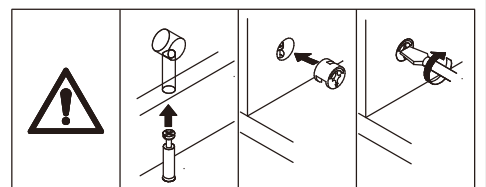 
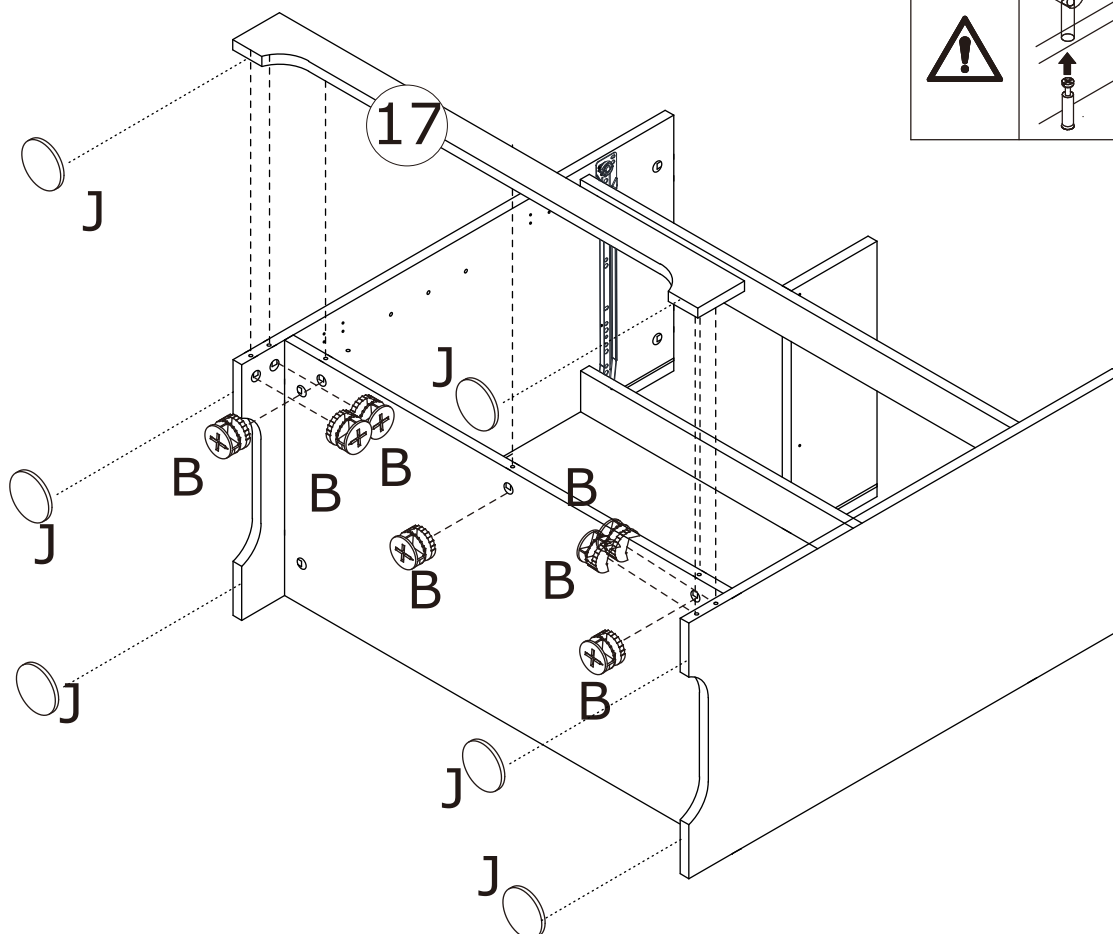 


12

C x 6



  
 
 
Ø8 x 30 mm

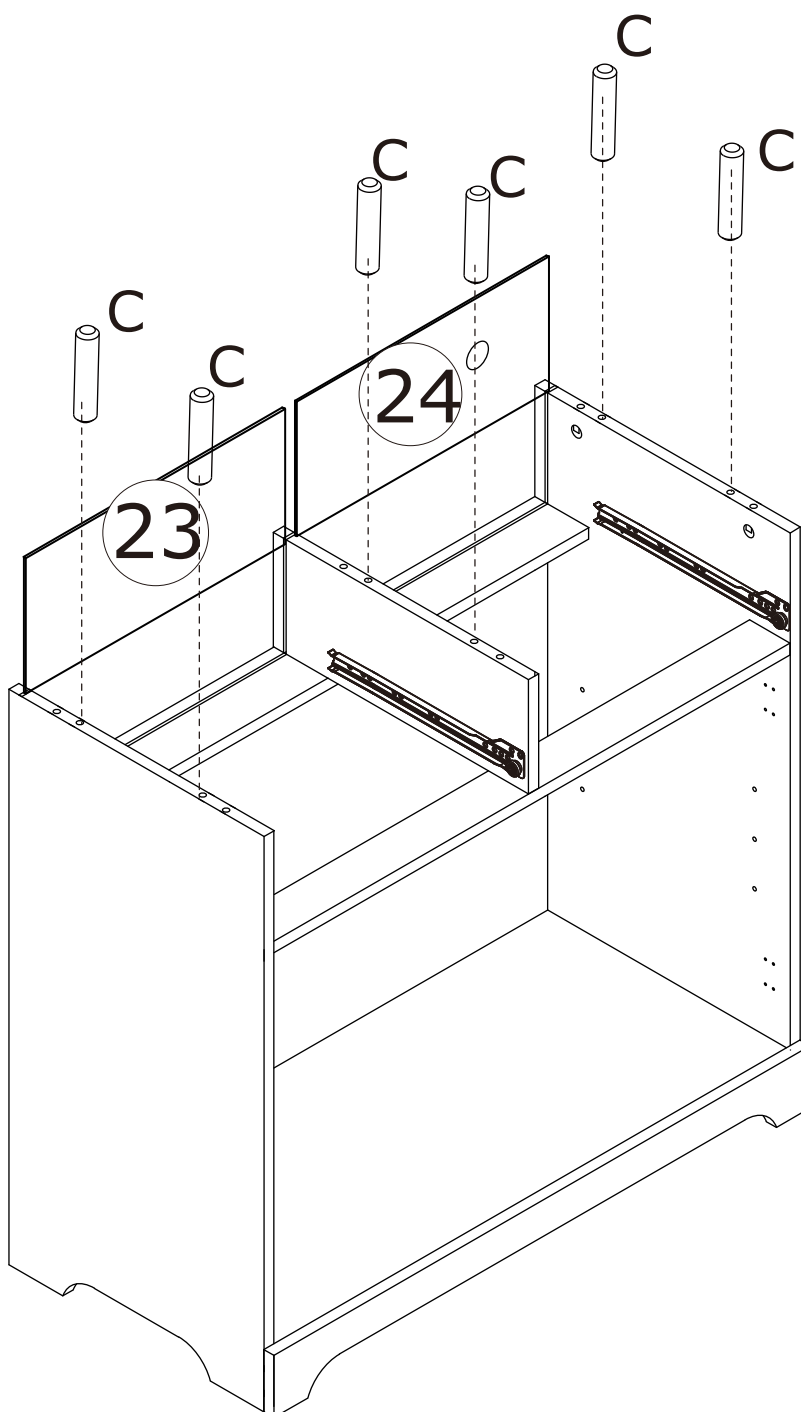

13


D x 1
CL
L = 300 mm

   N x 2
 $\varnothing$ 3,5 x12 mm

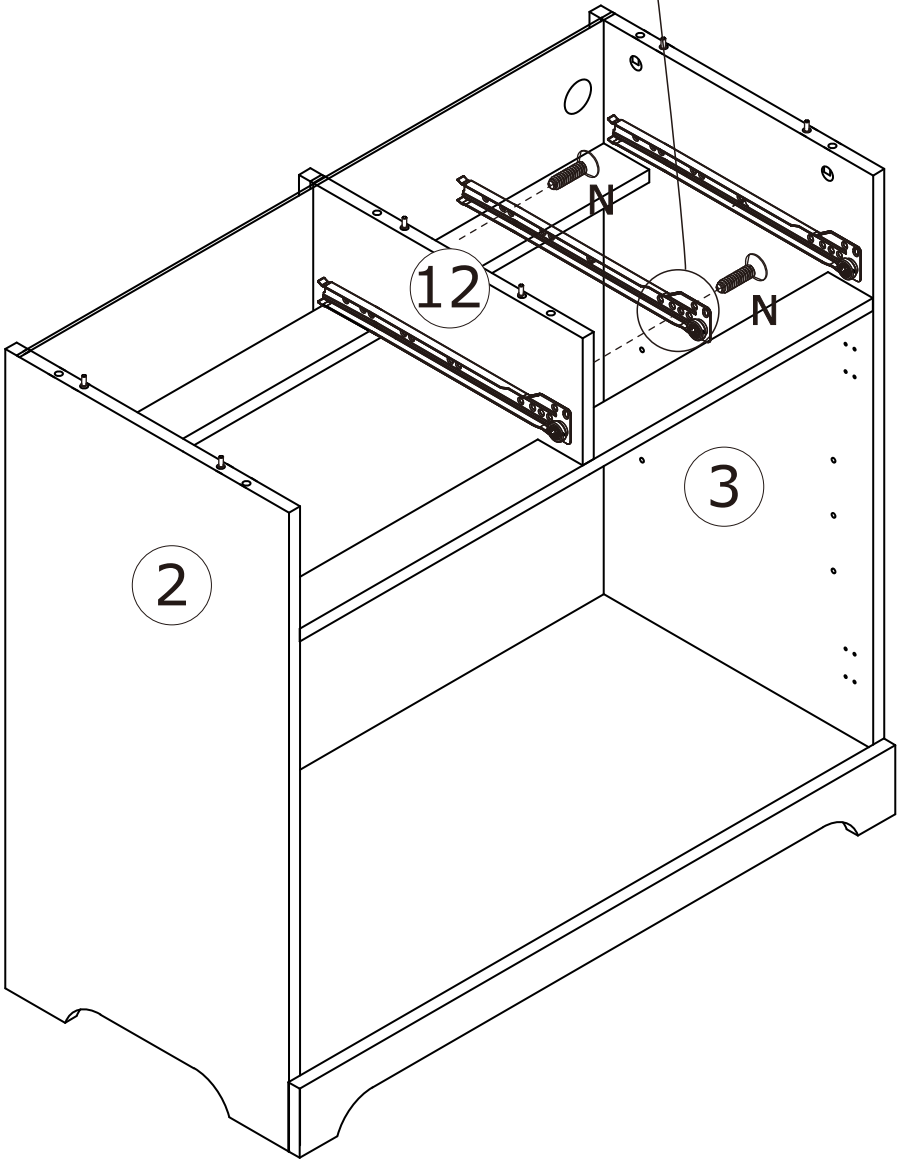
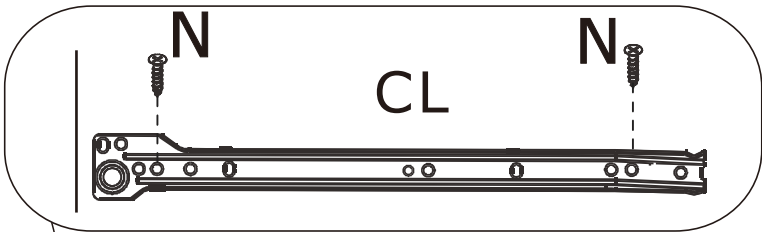



14

 A x 4




Ø6 x 35 mm

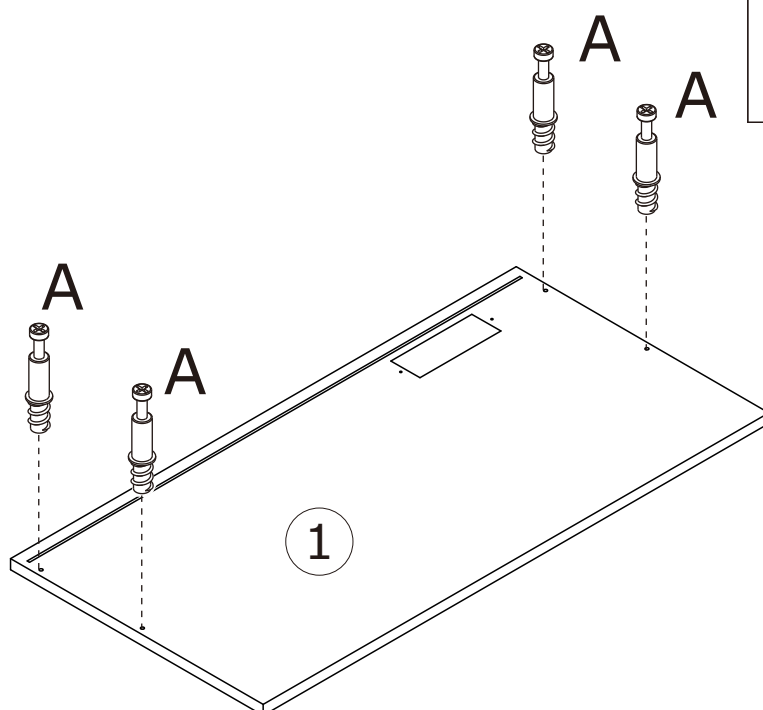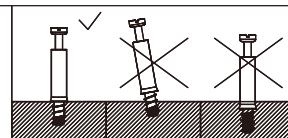  
 


15

 A x 4




Ø6 x 35 mm



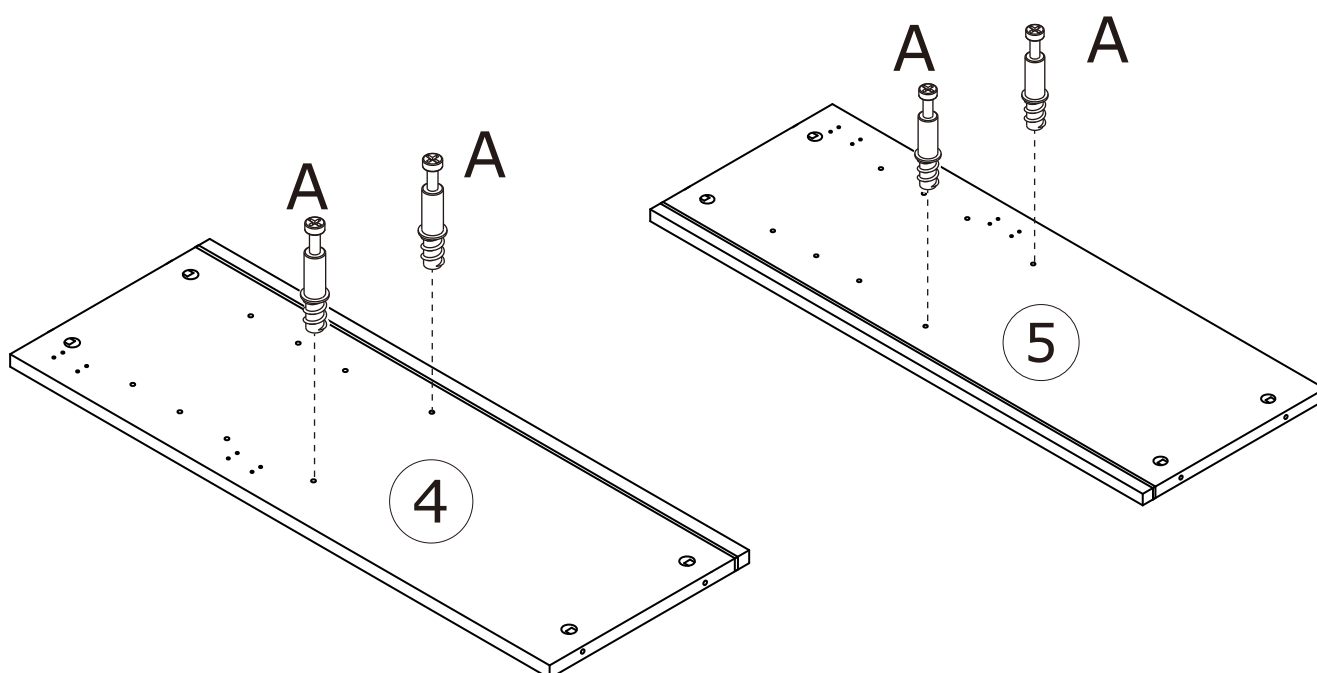 
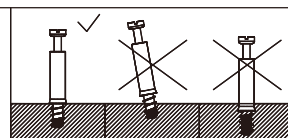 


16



 
Y x 1






M x 4

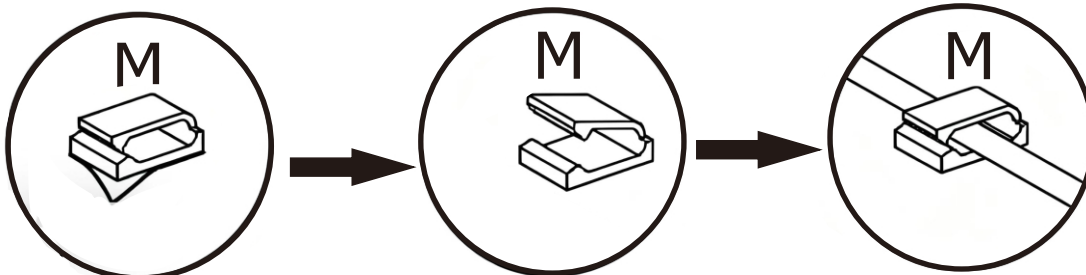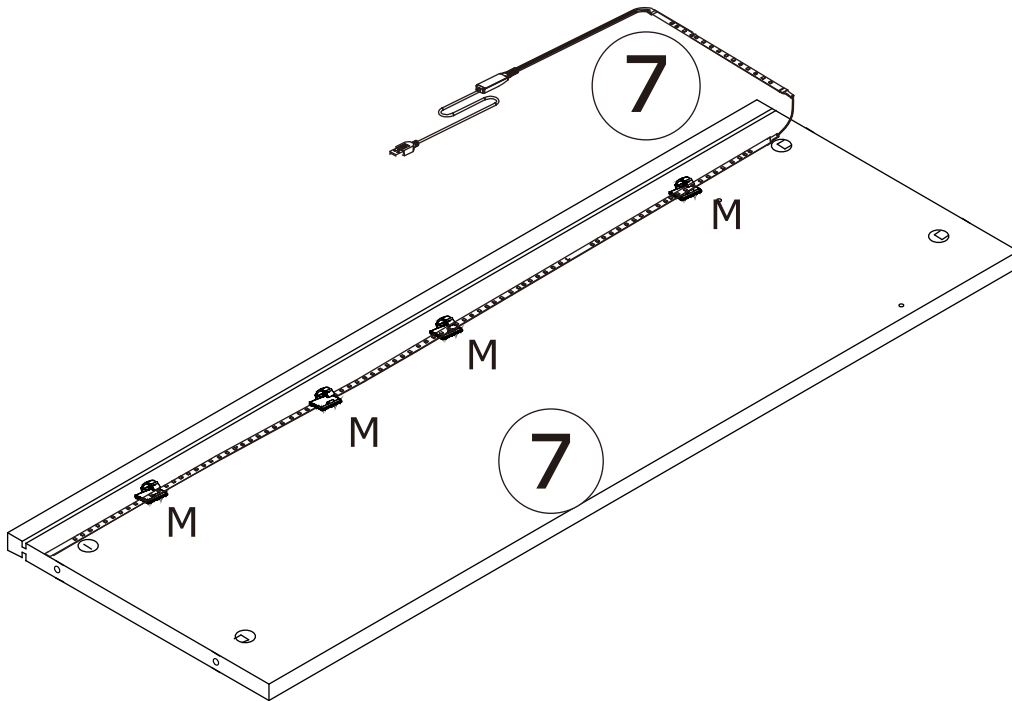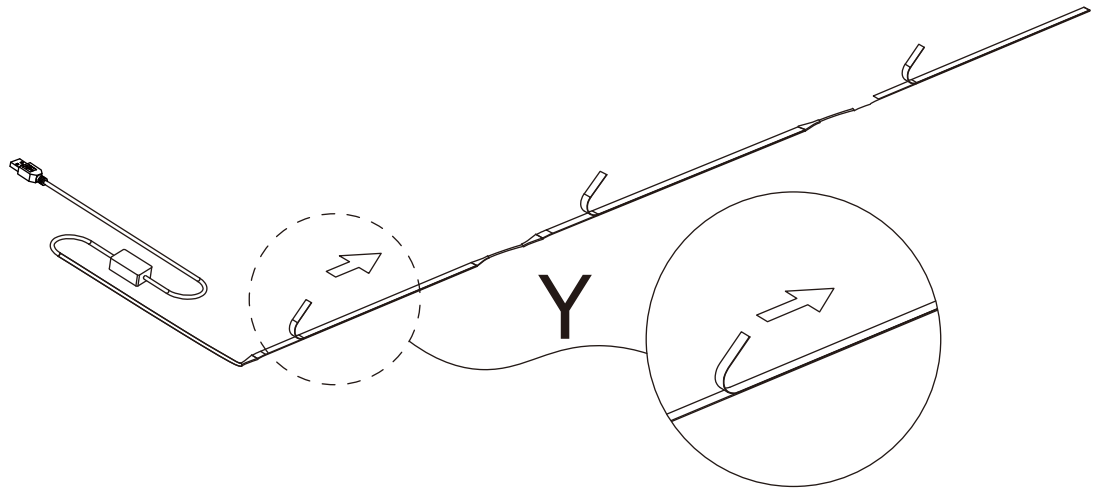    

17

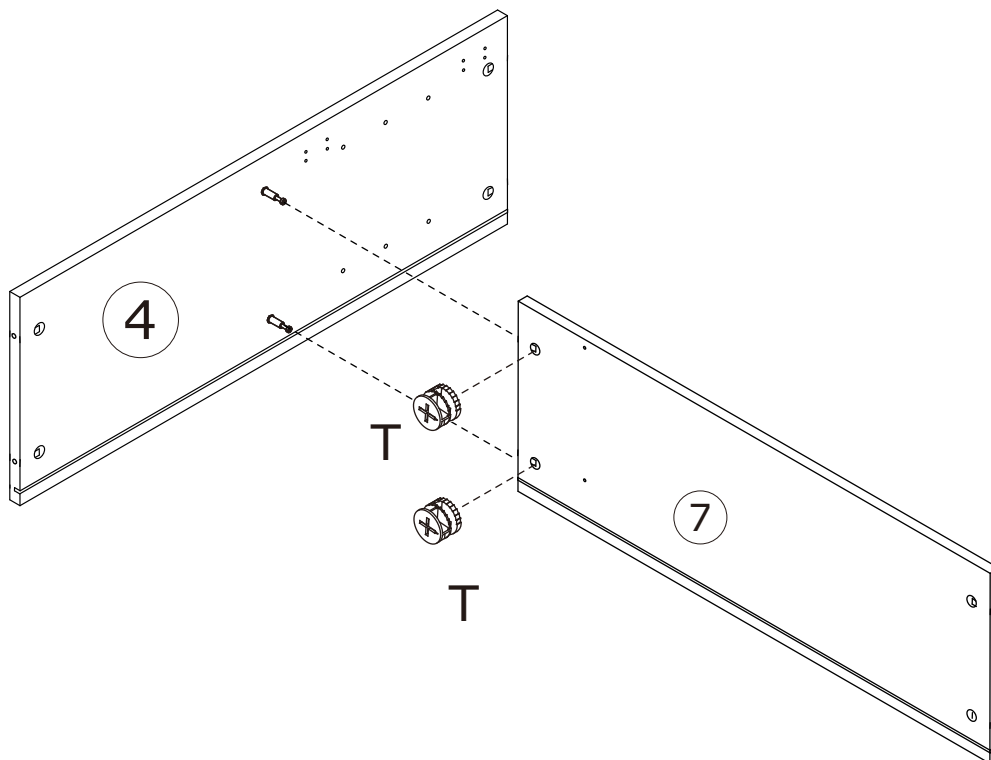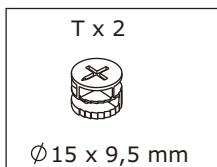   




18

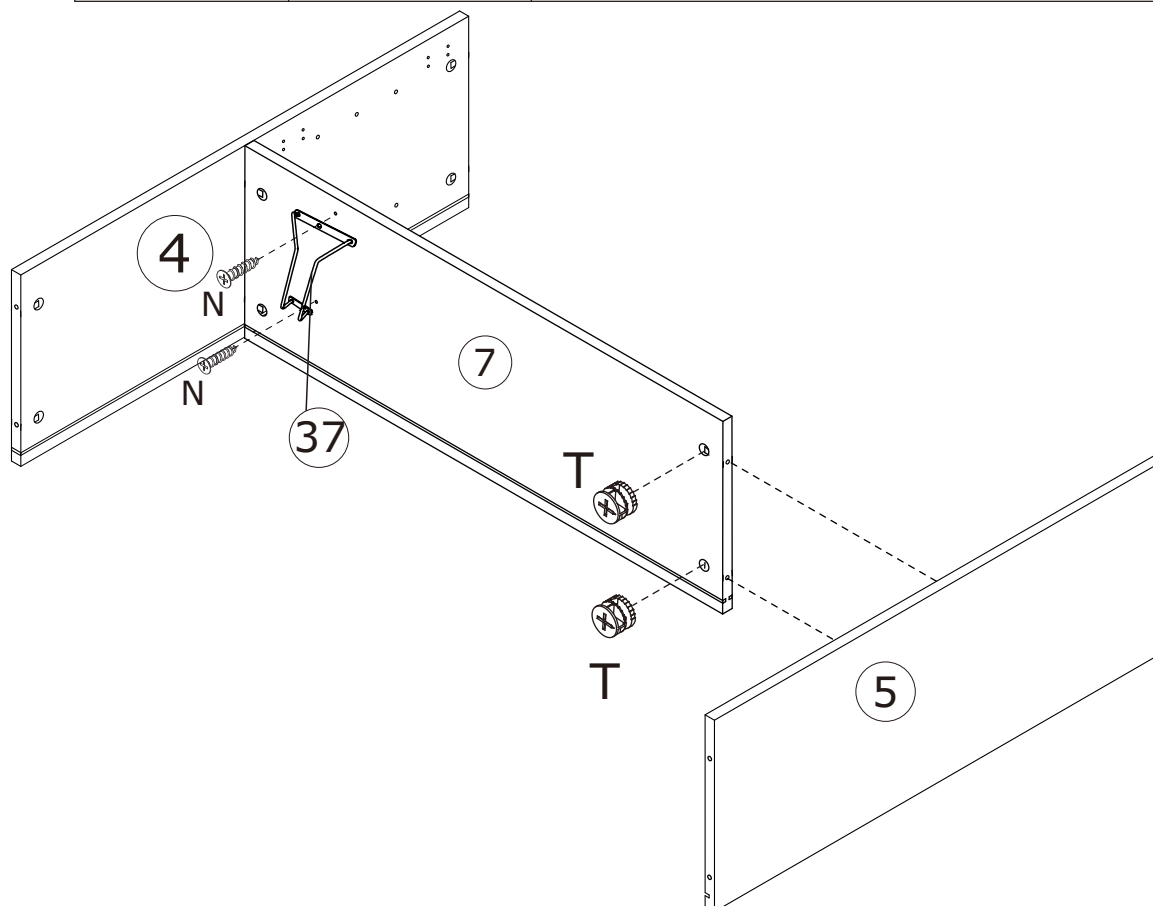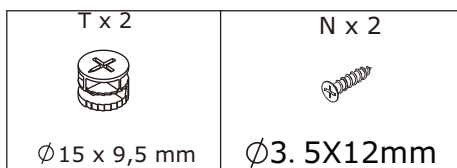   

19


B x 4

   Ø 15 x 11 mm

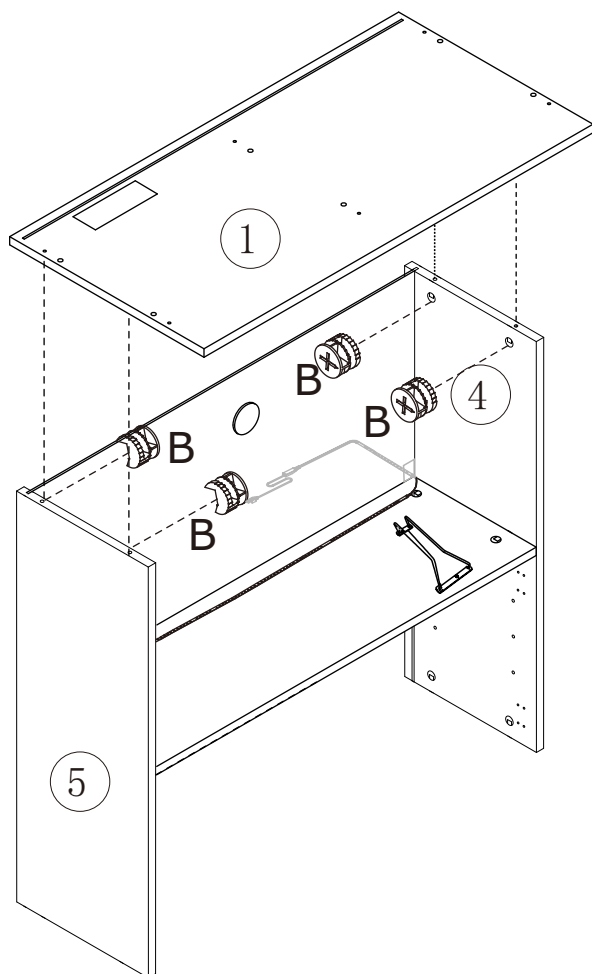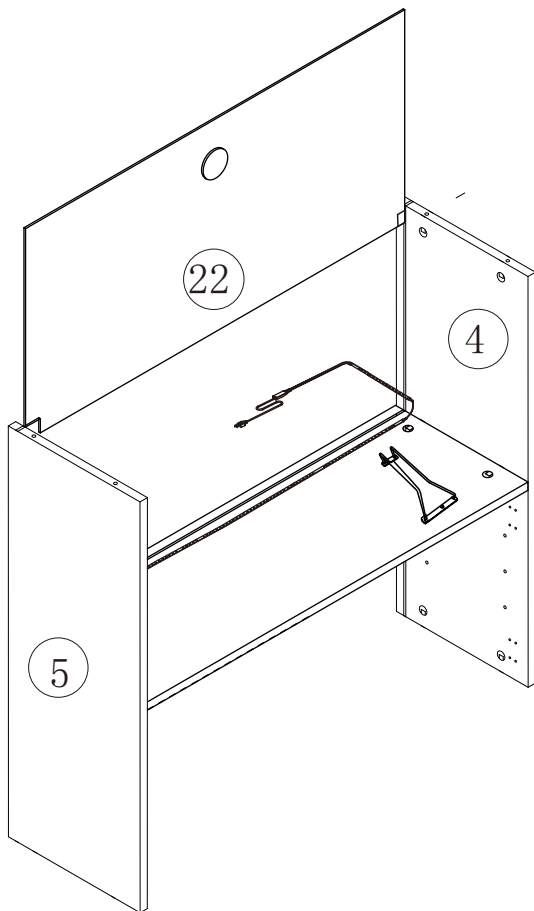



20

 A x 6



Ø6 x 35 mm


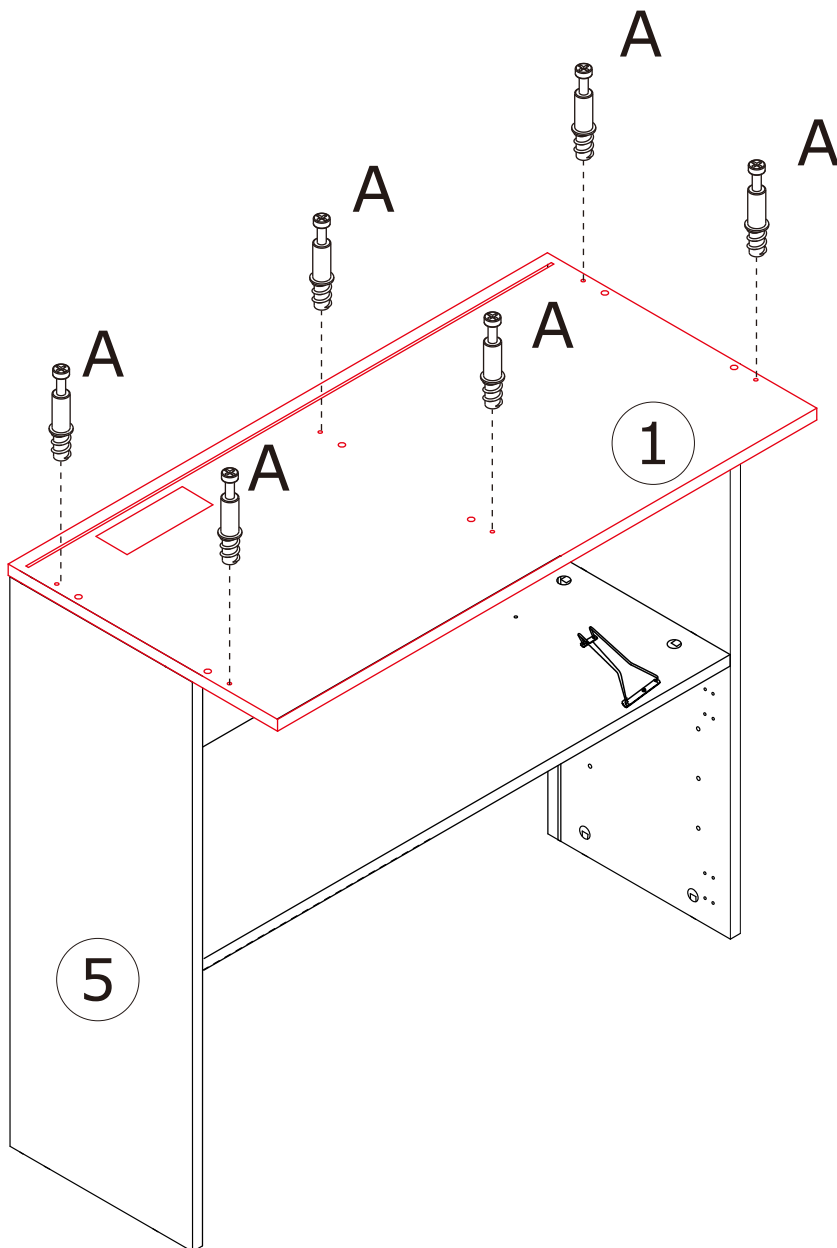 
 


21



B x 6



   Ø 15 x 11 mm

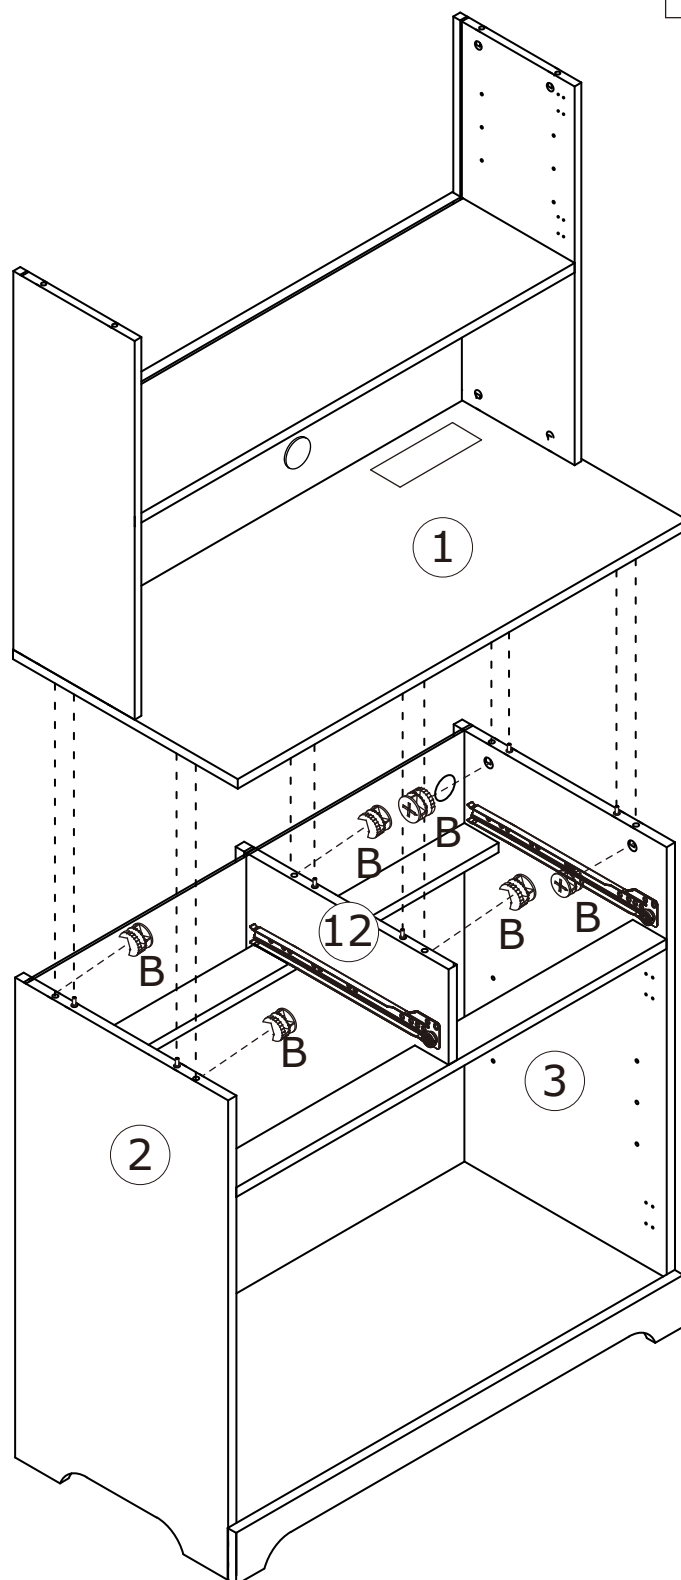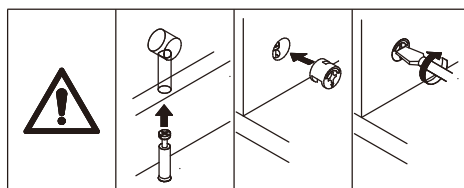

22

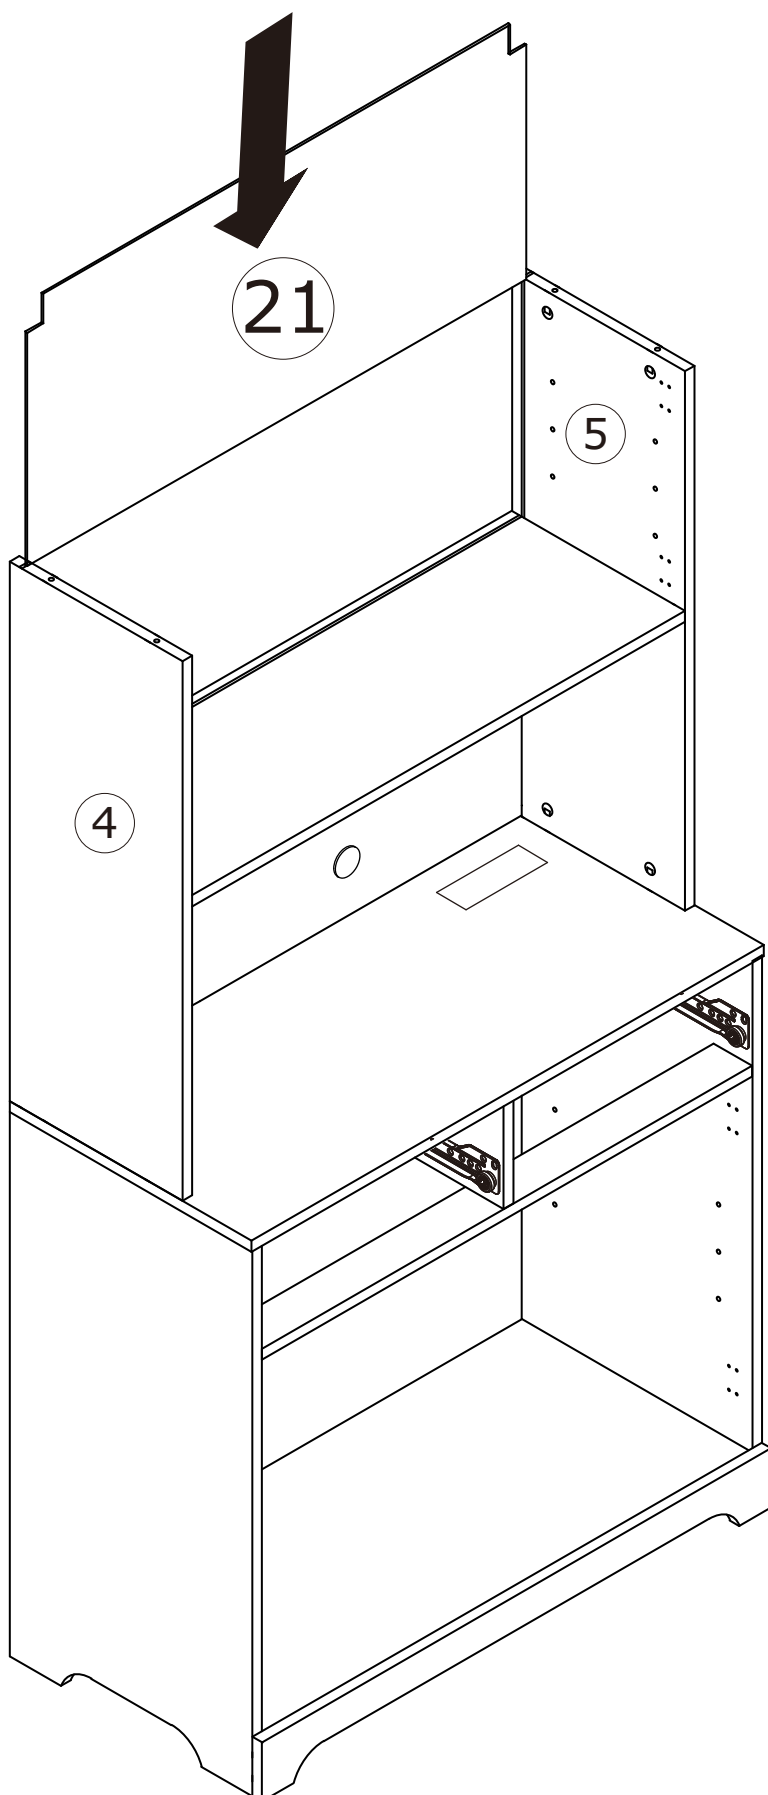 
 


23

A x 4



  Ø 6 x 35 mm


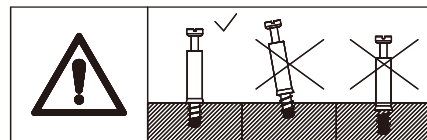
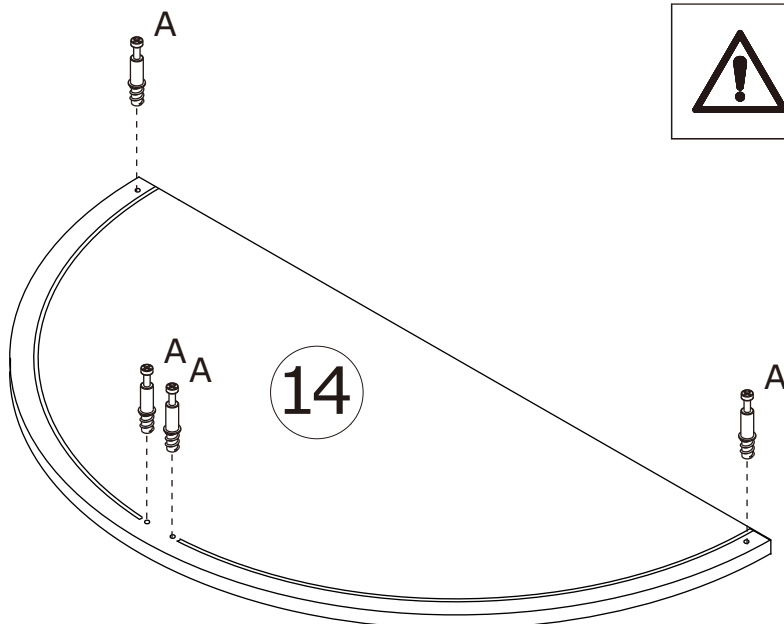


24

B x 4



   Ø 15 x 11 mm

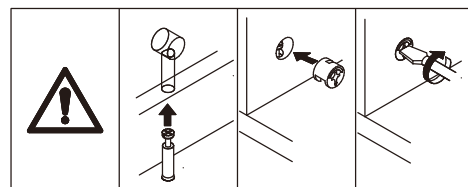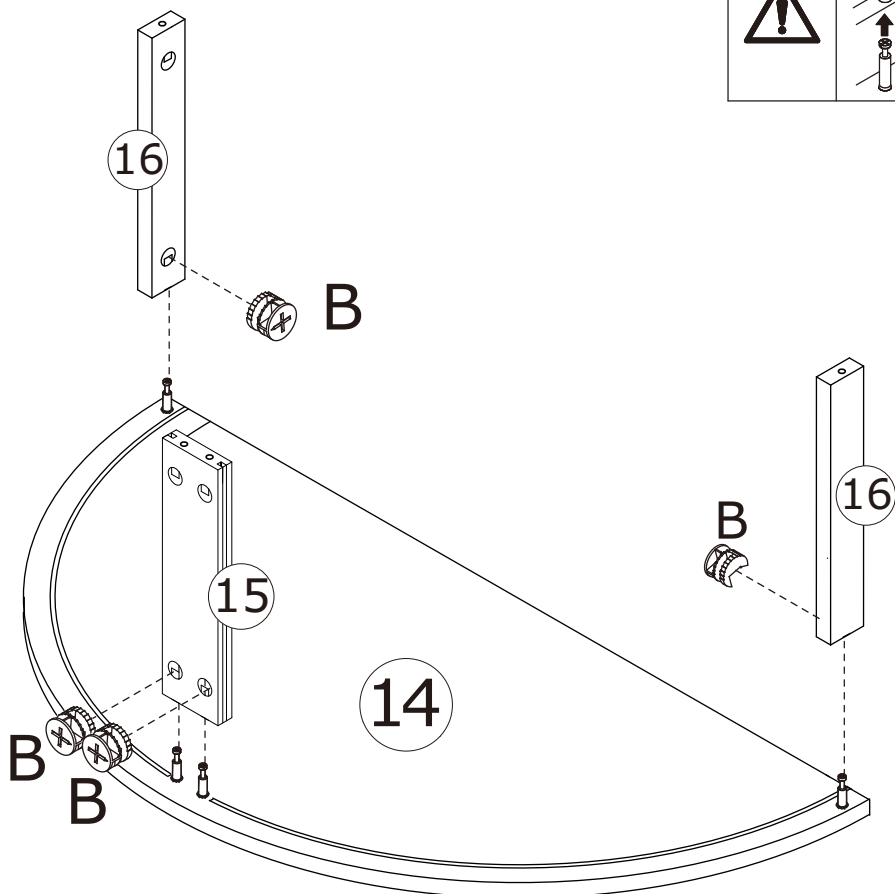



25

A x 4



  Ø 6 x 35 mm

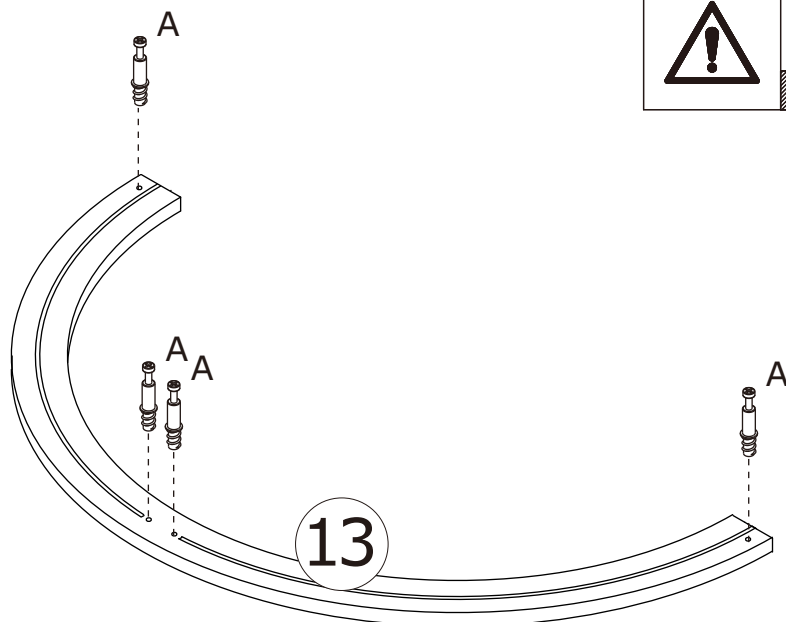
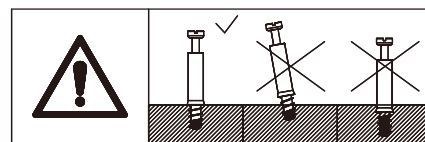


26


B x 4



  Ø 15 x 11 mm

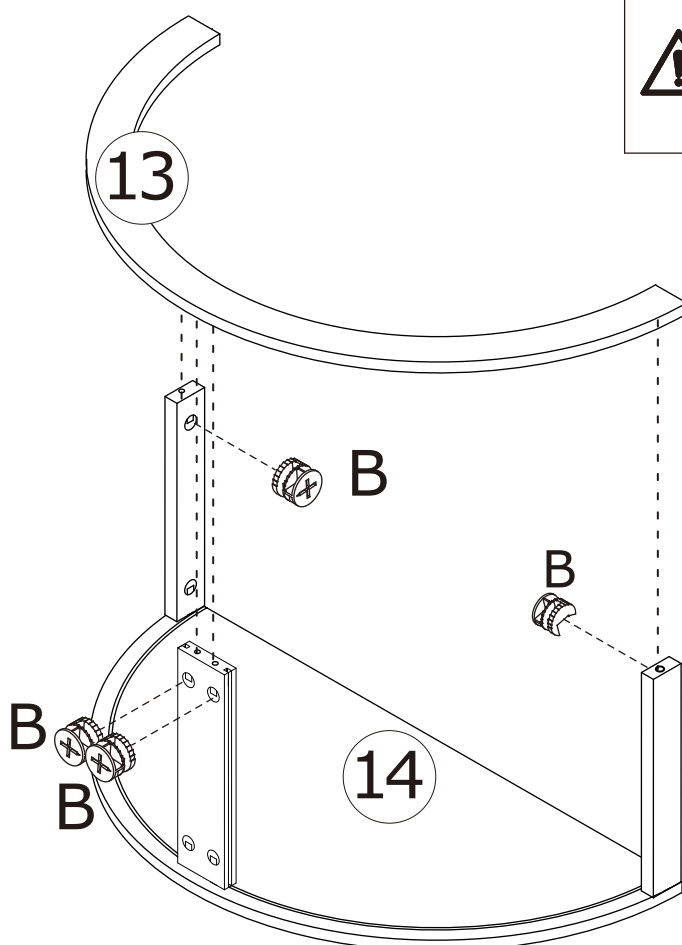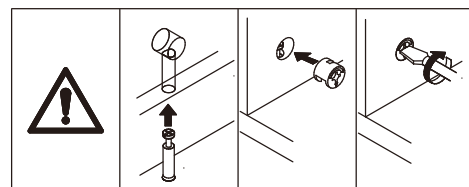

27


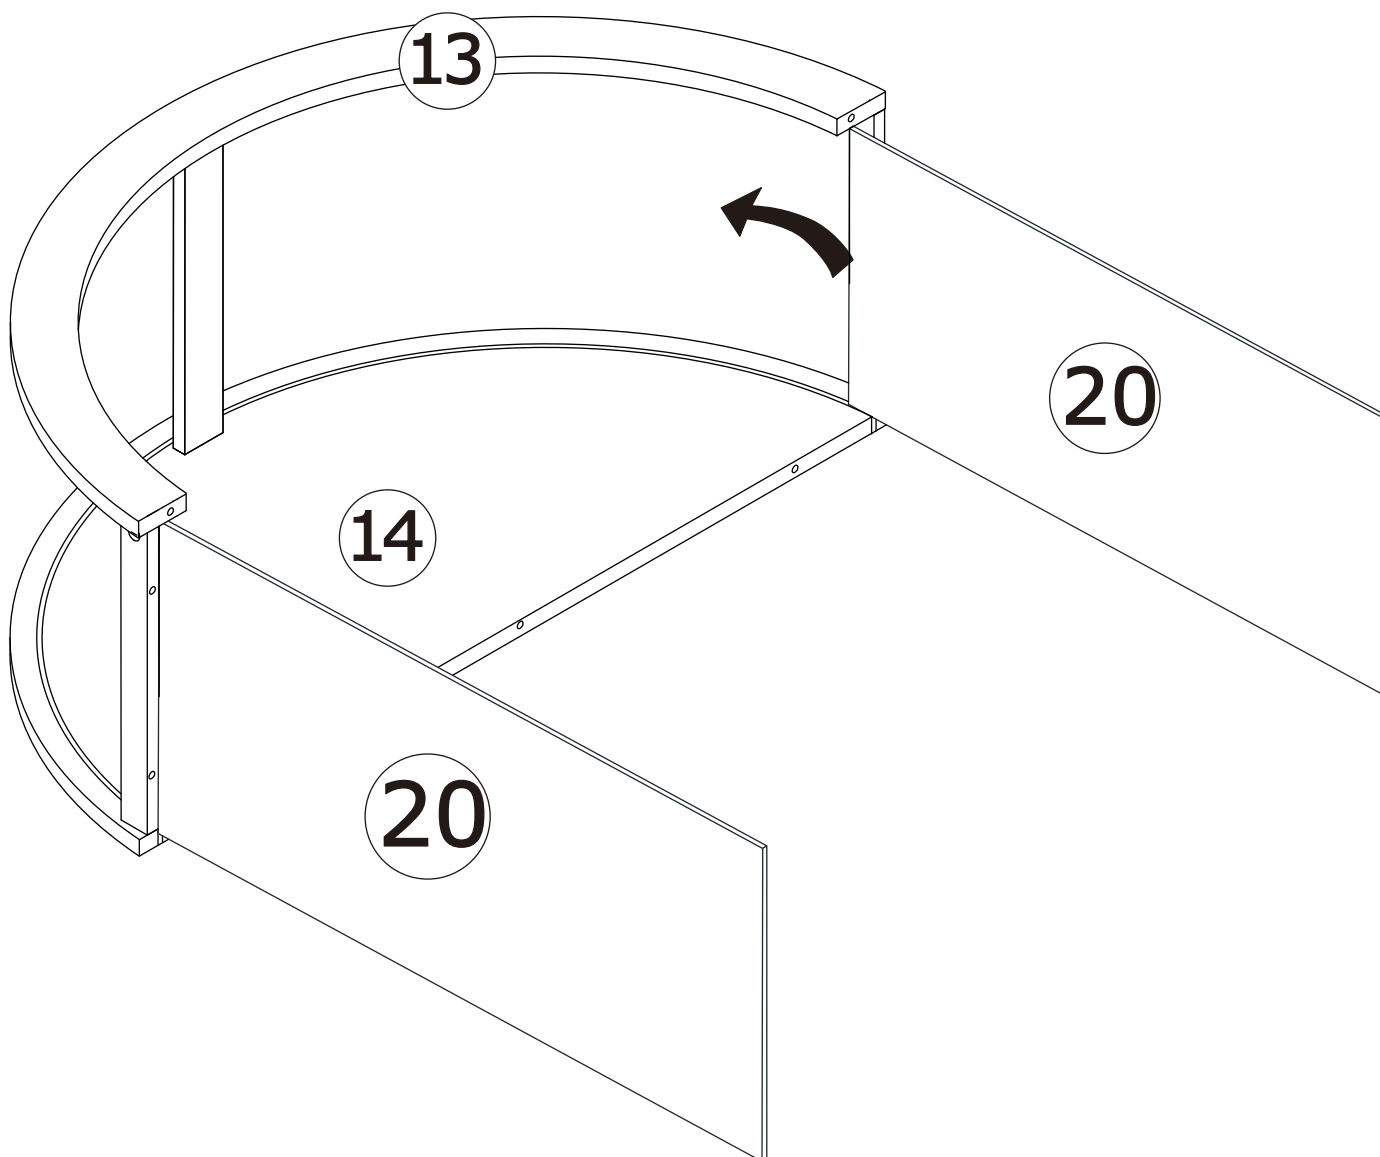 


28

A x 3



  Ø 6 x 35 mm

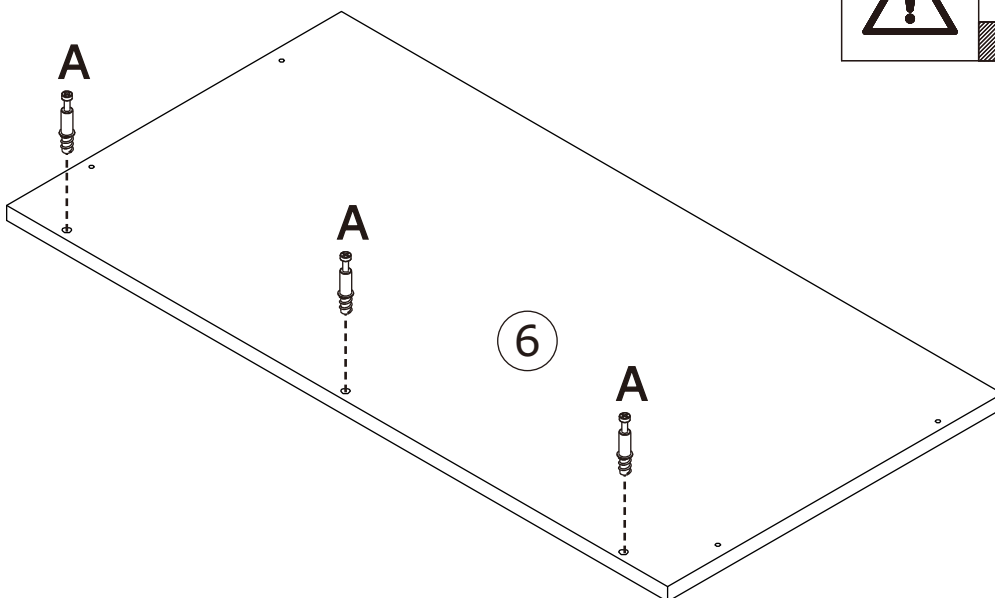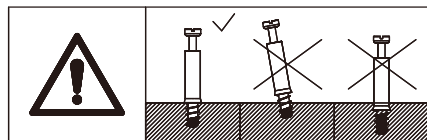

29

F x 6

 


Ø 5*40mm

B x 3



Ø 15 x 11 mm

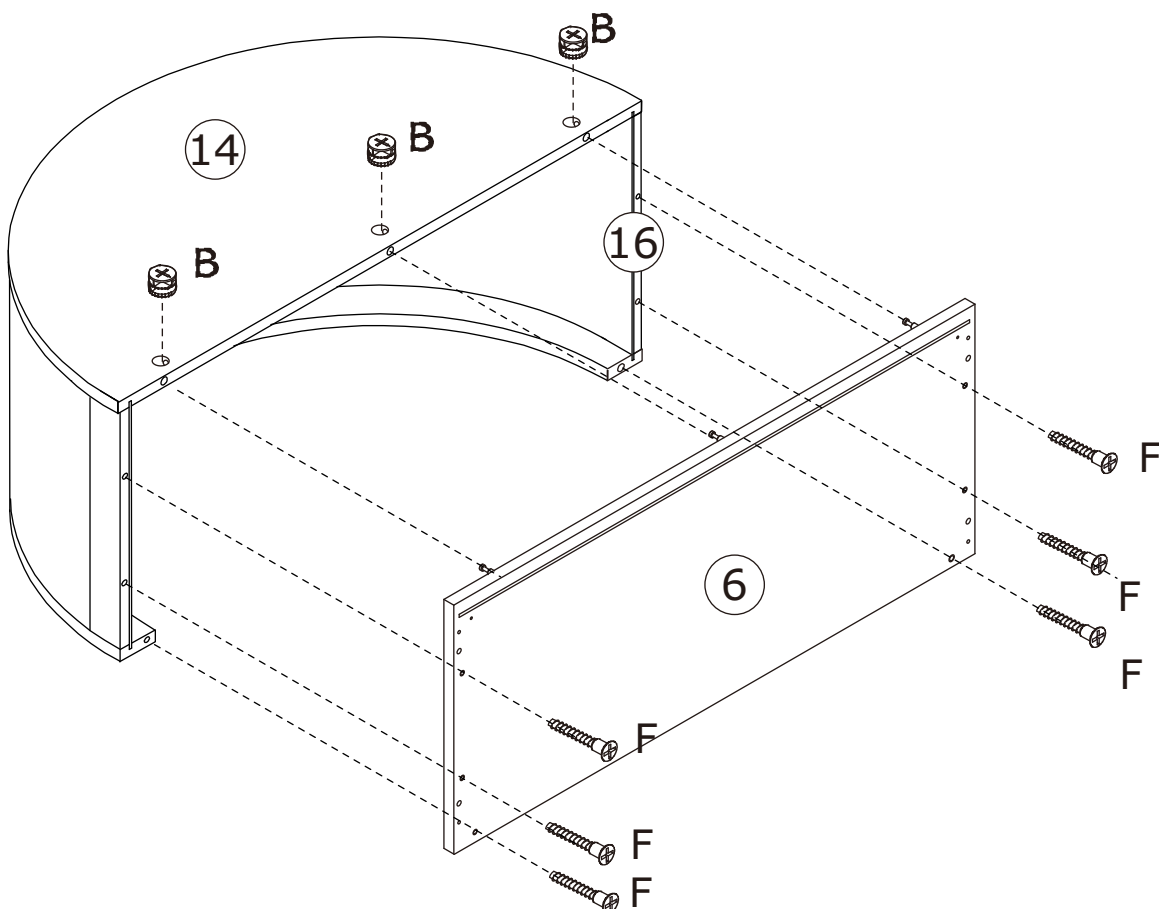

30

 
 
A x4



Z x 2



Ø4x12mm


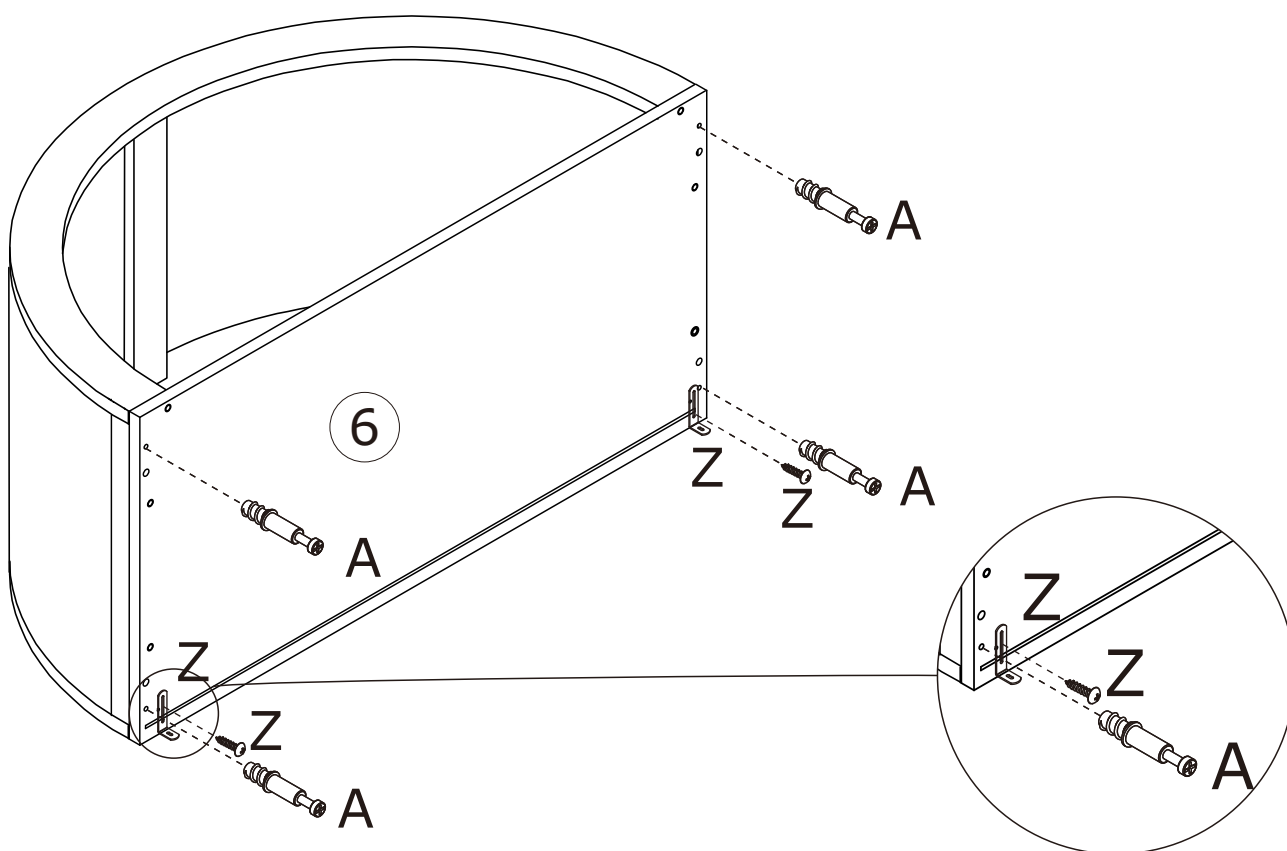
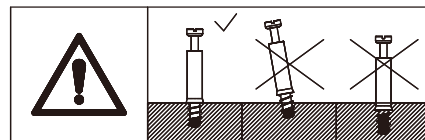


31

B x4



   Ø15 x 11 mm

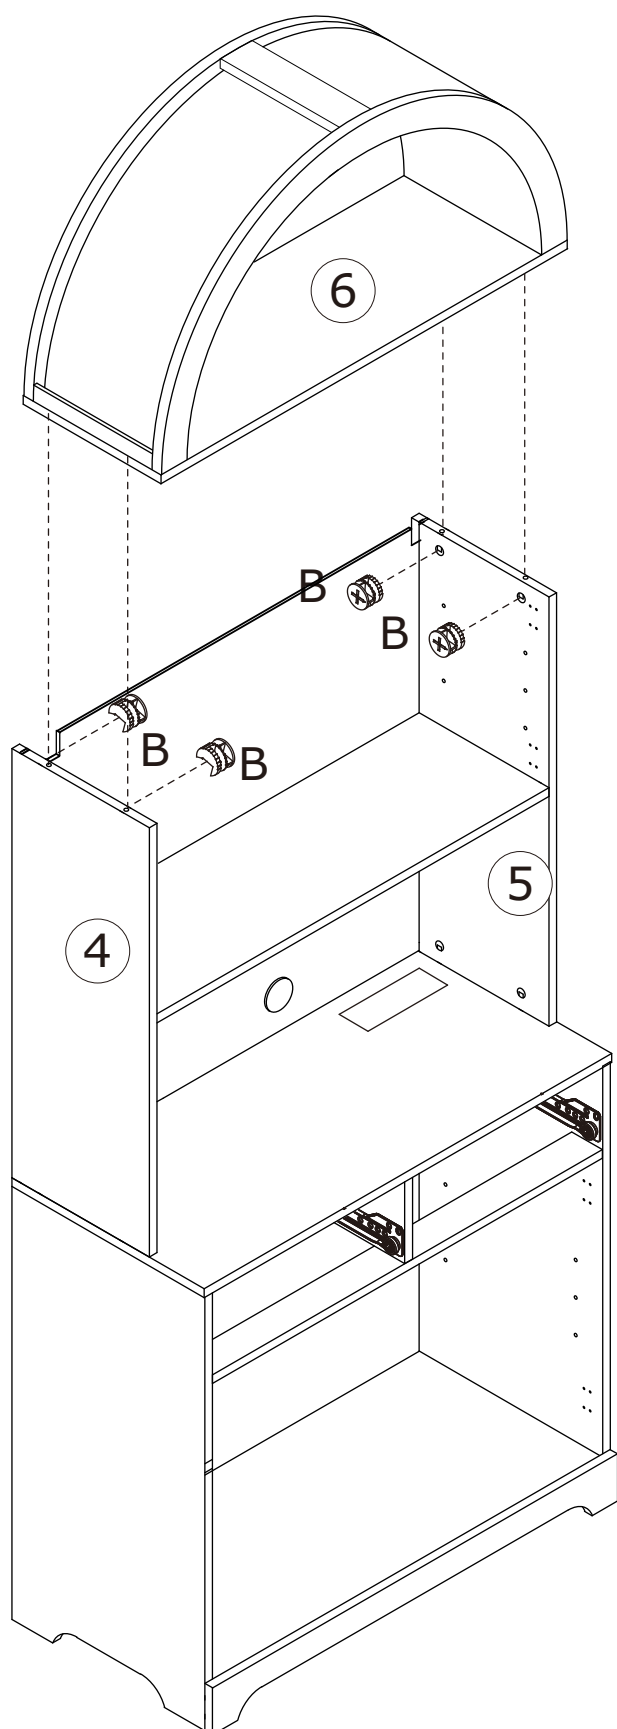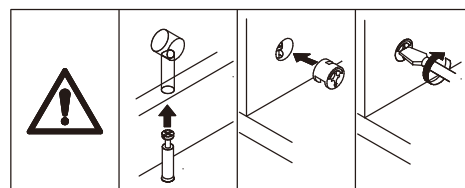

32





Sx26



E x26






 
 
 
 
Ø3x 12 mm

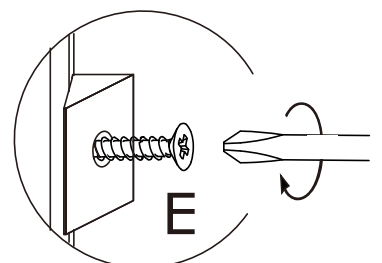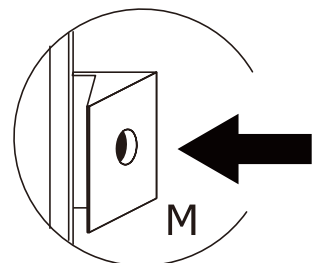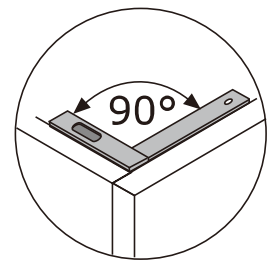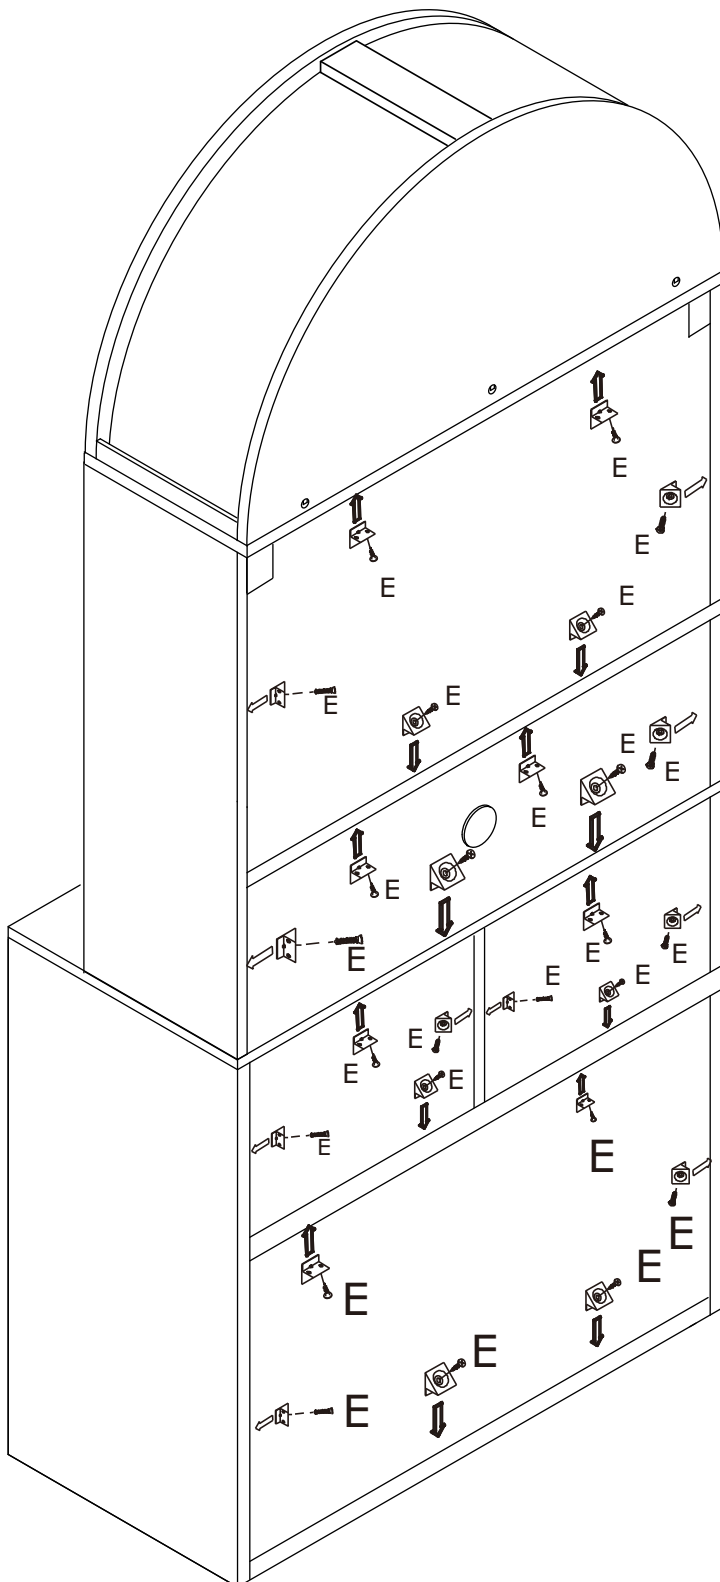

33

       
U x 8

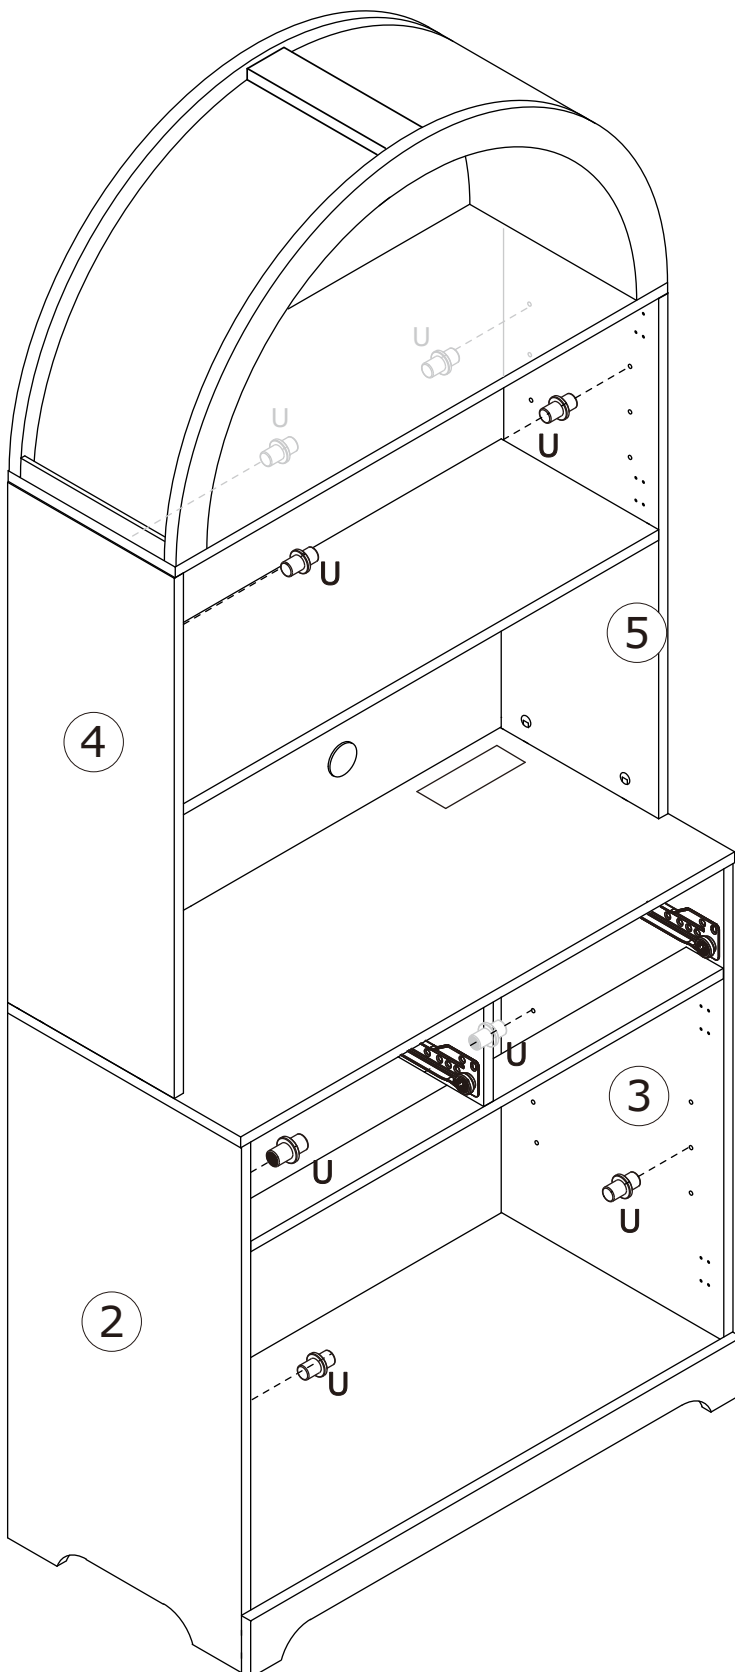

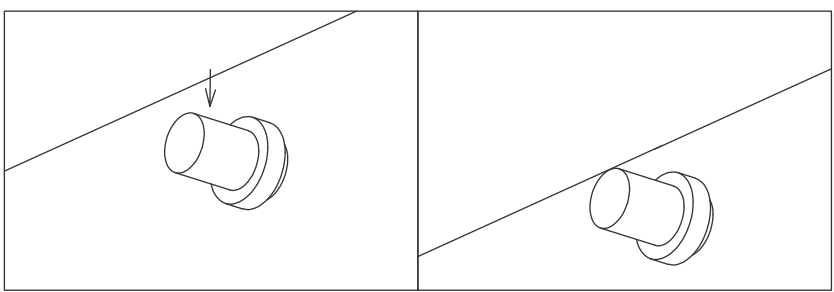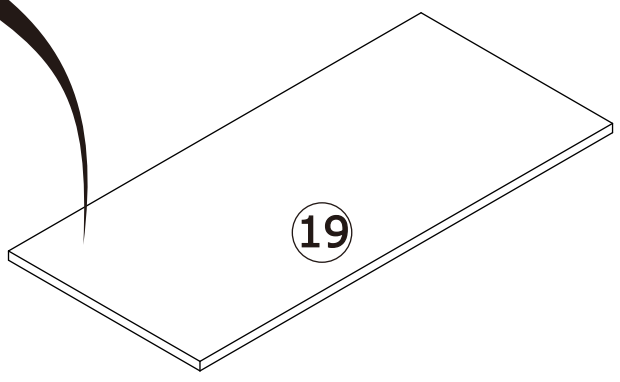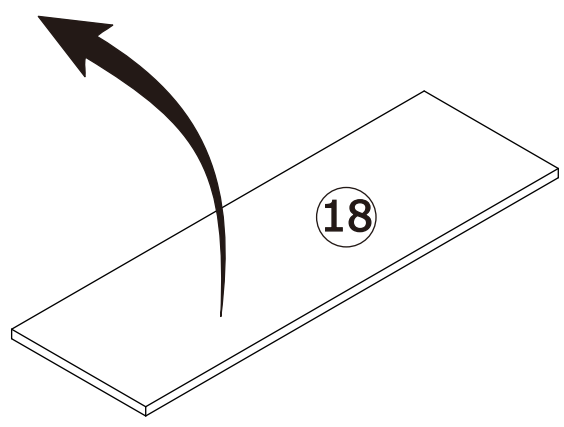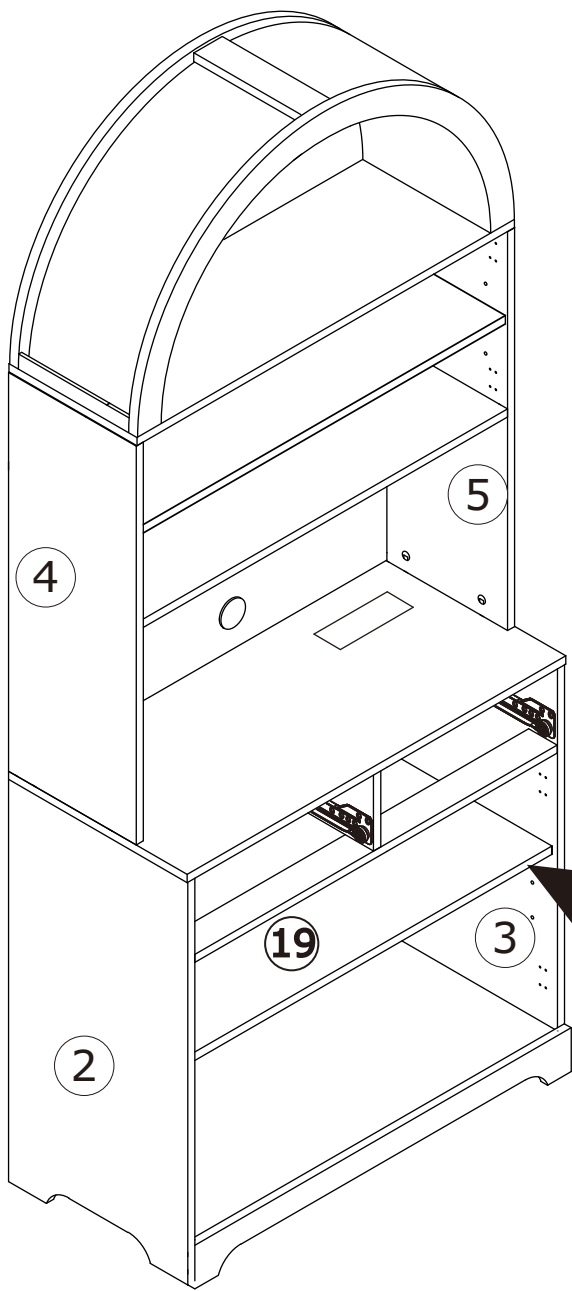

35



 
W x 1






Xx2



   Ø3.5X14mm

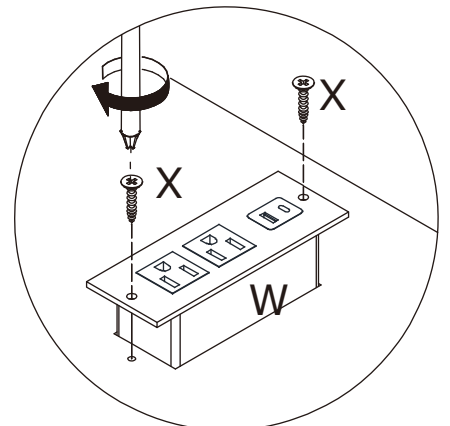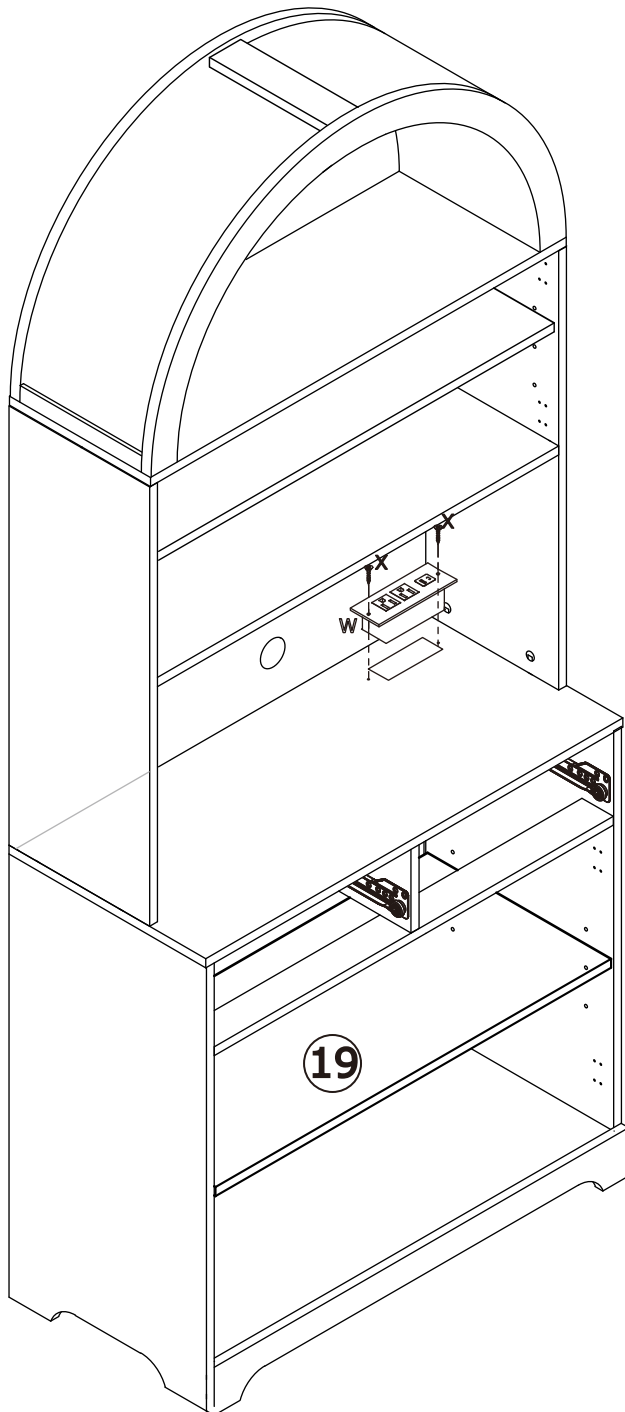


36

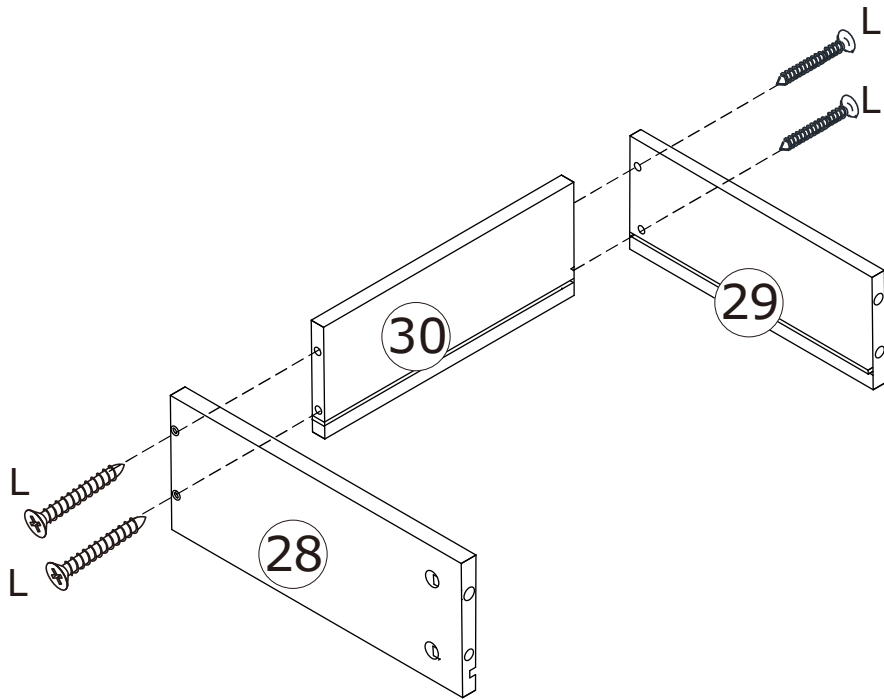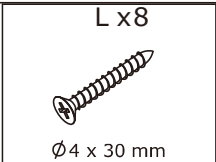   

X2

 37

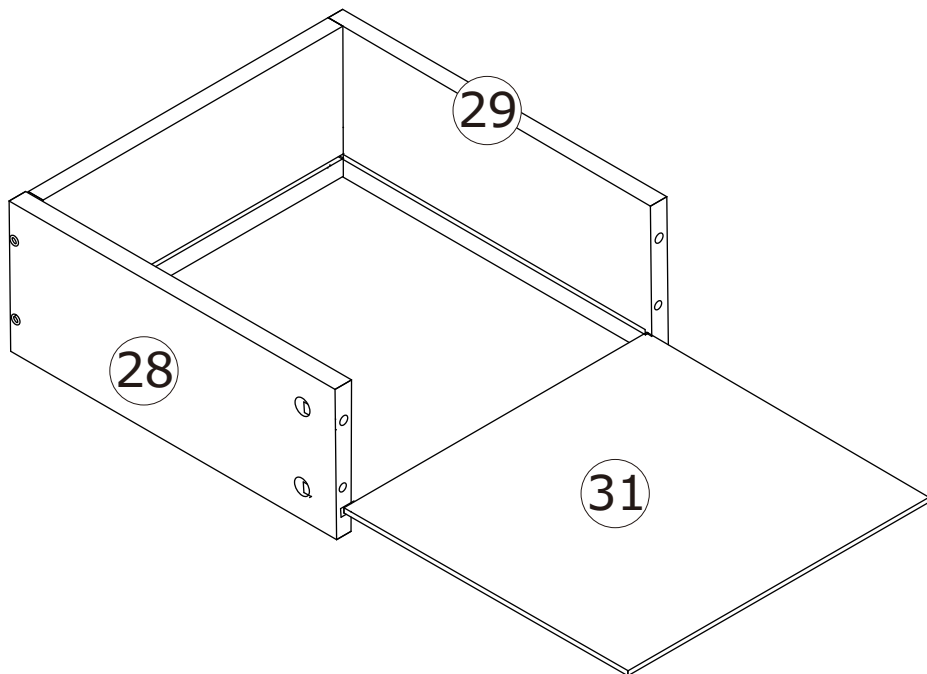

X2

 
38

P x 2







Ø4 x 10 mm

A x 8



Ø6 x 35 mm

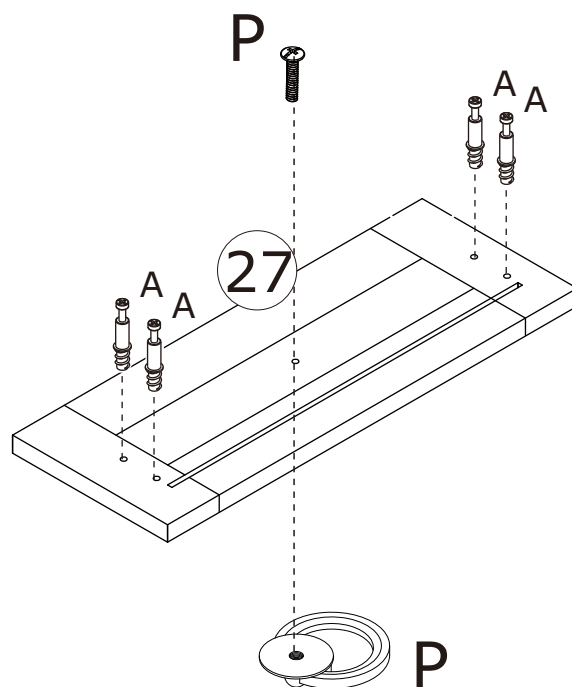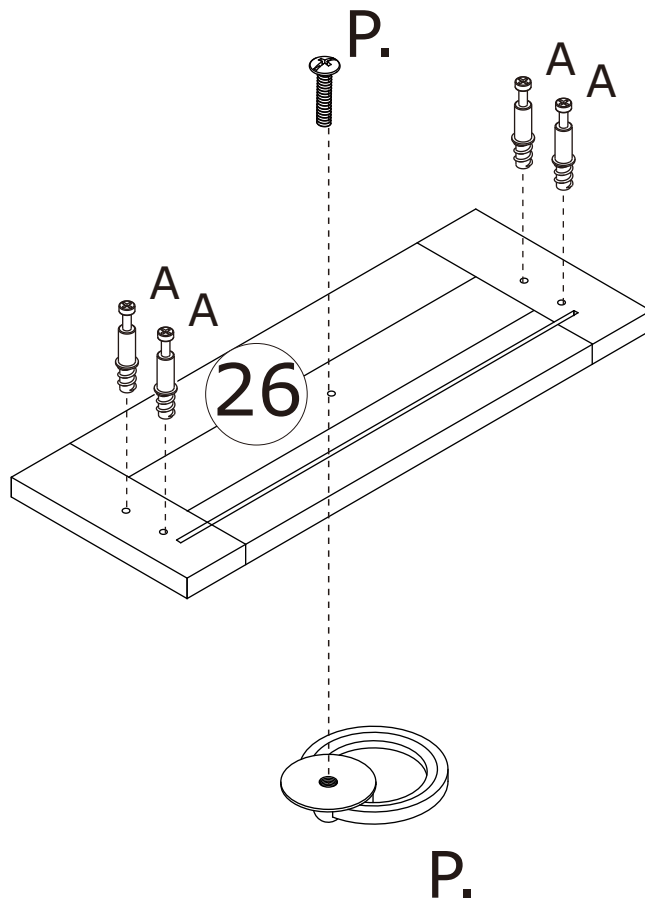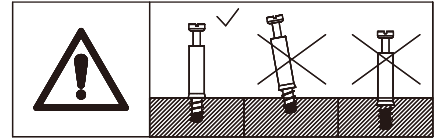   
 


39

T x 8



  Ø 15 x 9.5mm

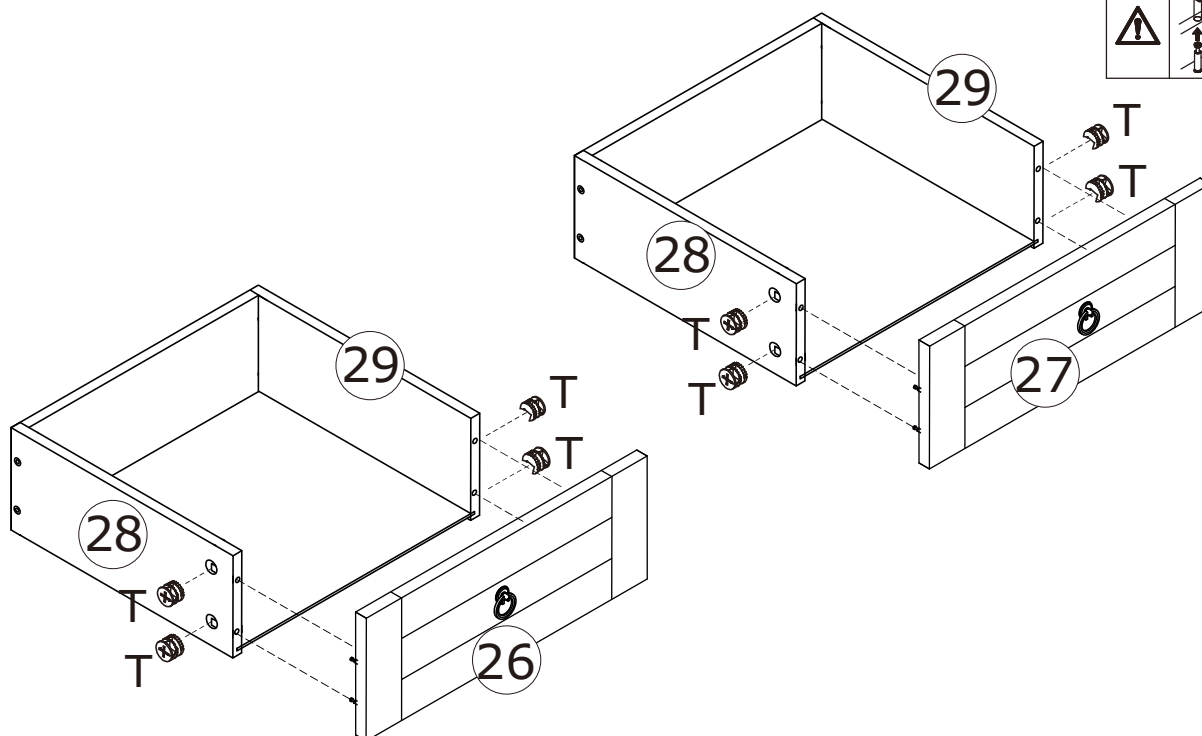

40

D x 2

 
 
 
 


 
 
L = 300 mm

E x 8



Ø 3 x 12 mm

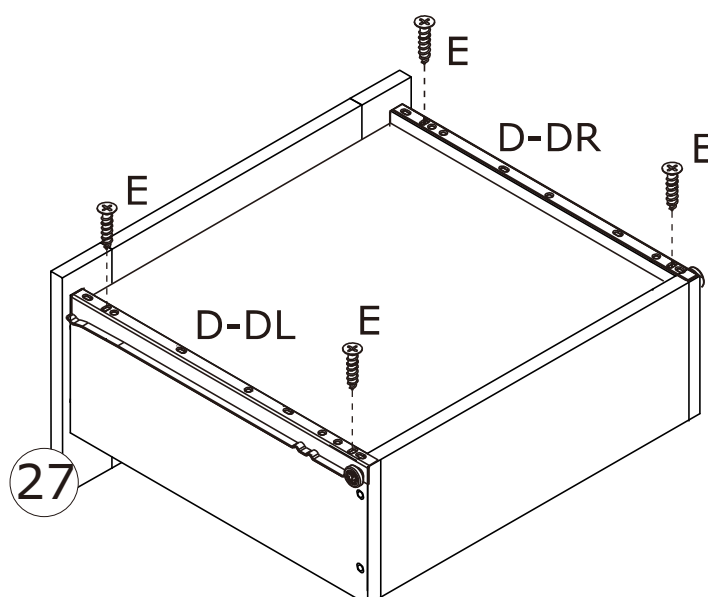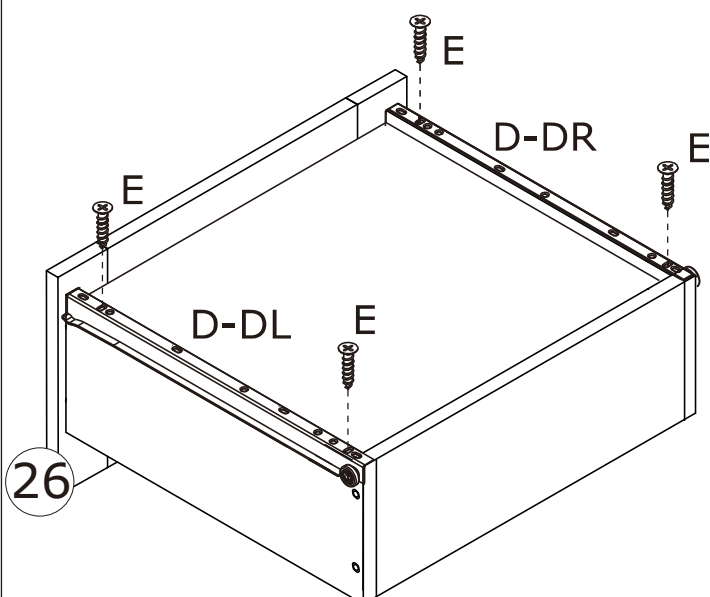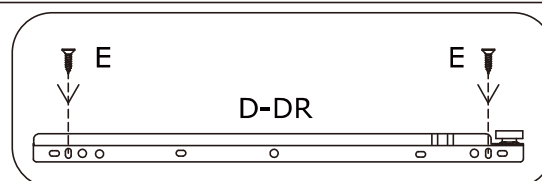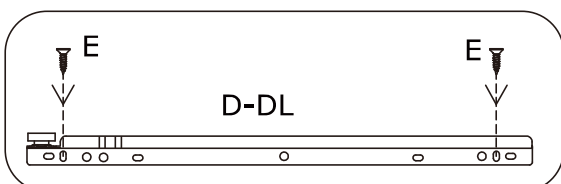

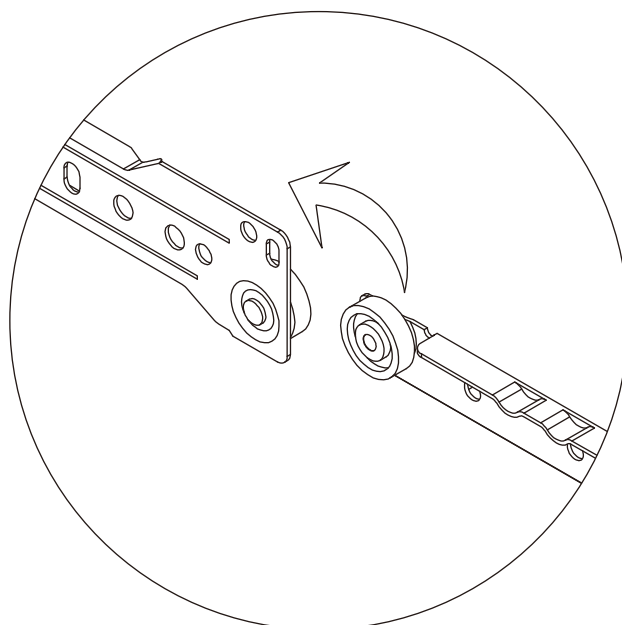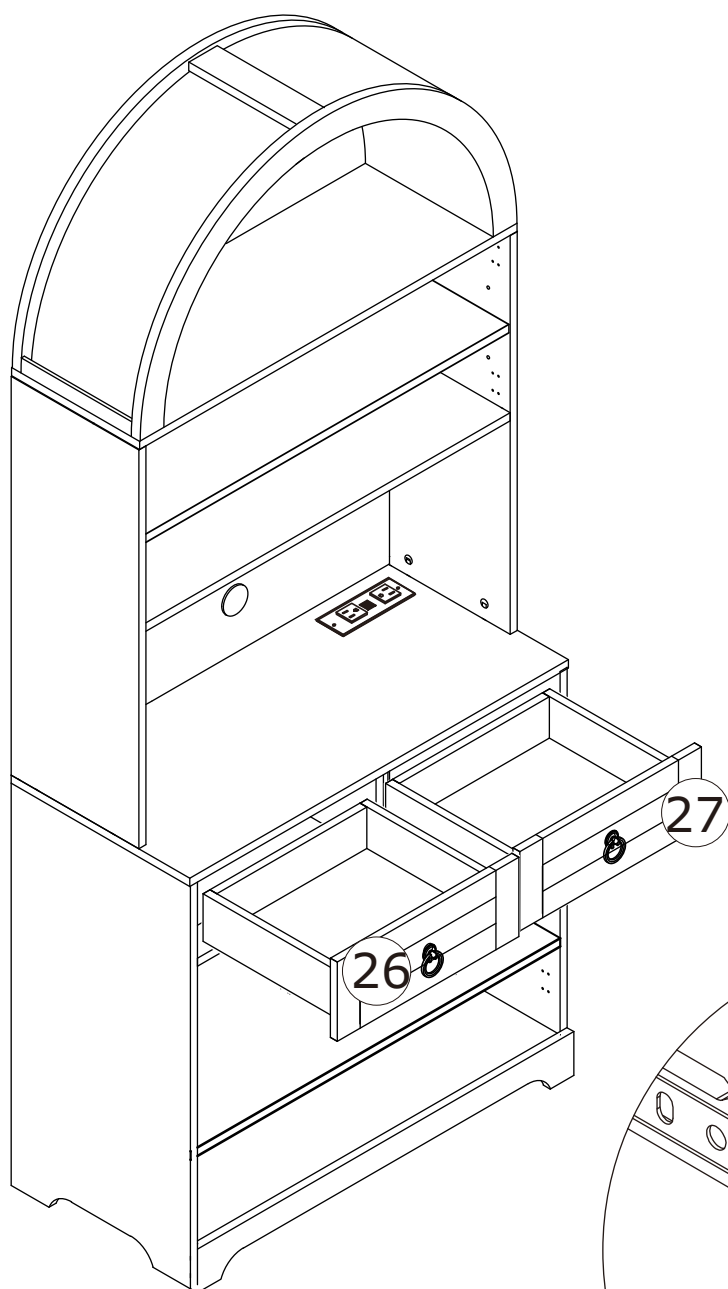

42

G x 8

 


Ø3.5X14mm



K x 4



V x 4



Ø4 x28 mm

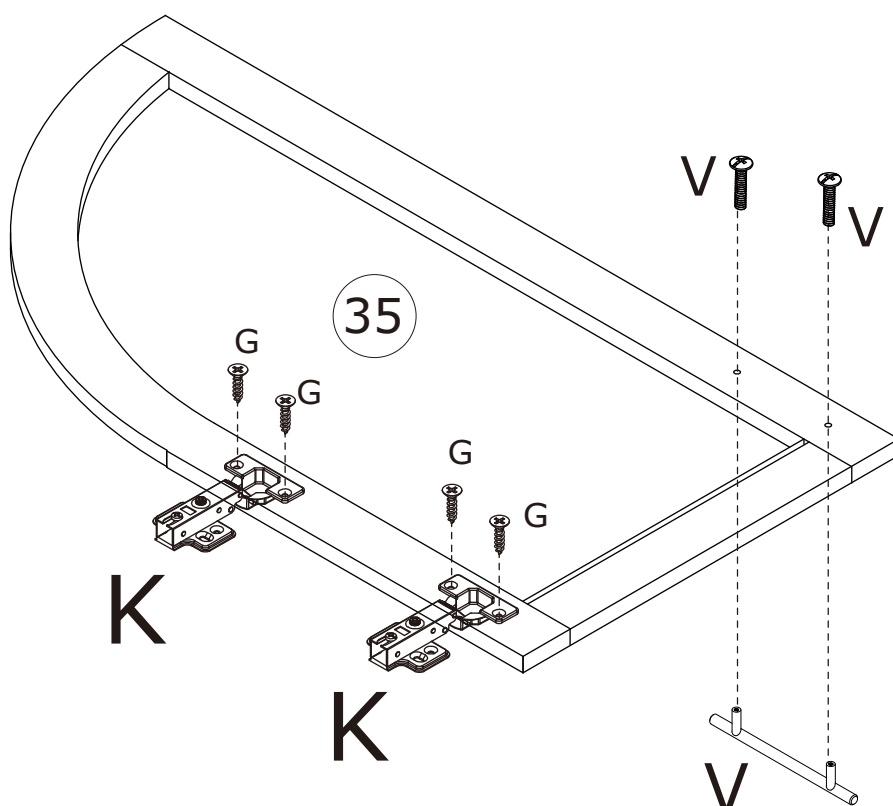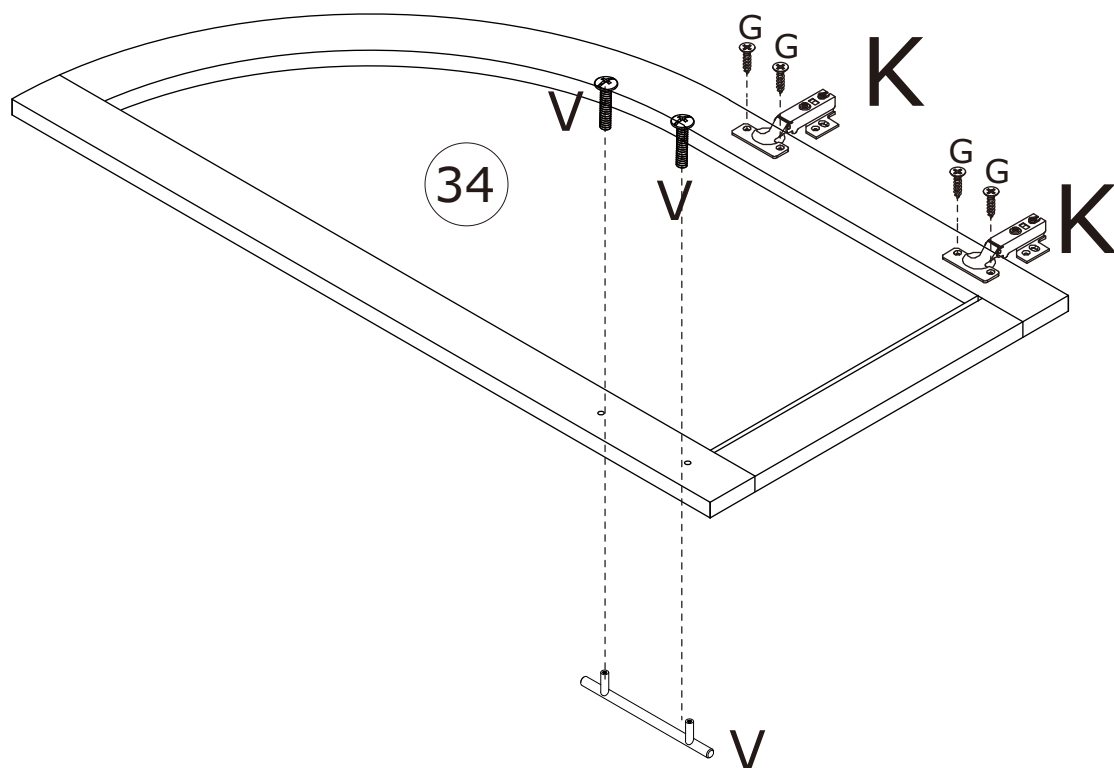  

43

 
 
 
 
G x 8

Ø3.5X14mm

K x 4



V x 4

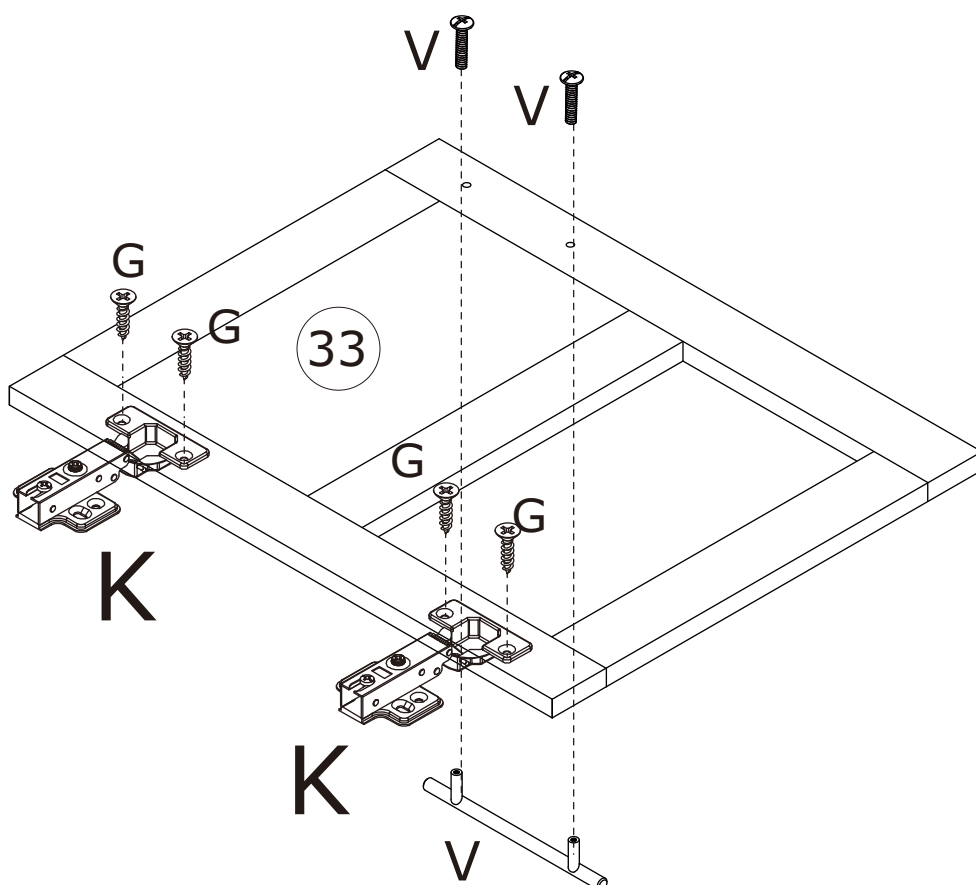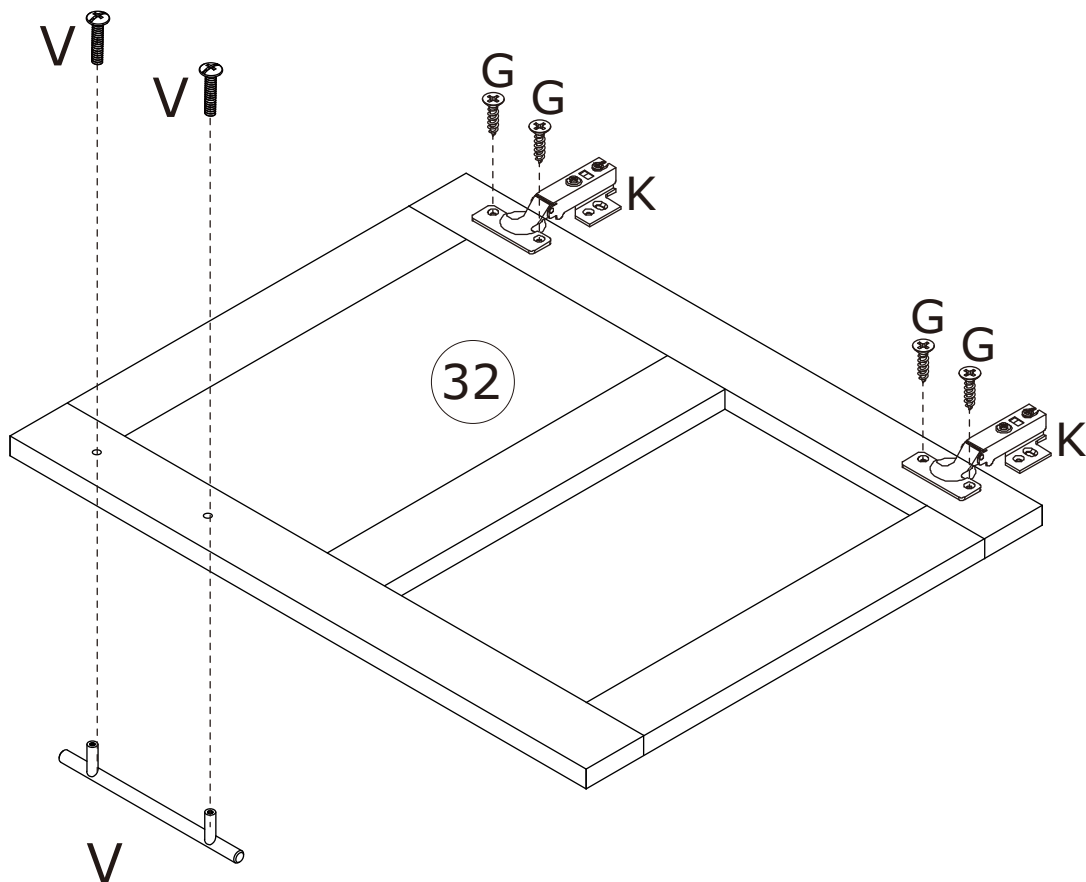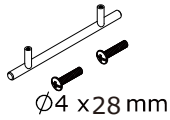

44

G x 32

 
Ø3.5X14mm



Note: It is forbidden to install the fixing hole screws first, otherwise it will lead to installation failure!

Remarque : Il est interdit d'installer d'abord les vis du trou de fixation, sinon cela entraînera un échec de l'installation !


Hinweis: Es ist verboten, zuerst die Befestigungslochschauben zu montieren, da dies sonst zu einem Installationsfehler führt!

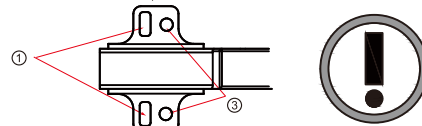

- ① Installez d'abord les vis du trou de réglage
- ② Mettez la porte dans la bonne position
- ③ Montieren Sie abschließend die Befestigungslochschauben



- ① Install the adjustment hole screws first
- ② Get the door in the right position
- ③ Finally, install the fixing hole screws

 - ① Montieren Sie zuerst die Einstellochschauben
- ② Bringen Sie die Tür in die richtige Position
- ③ Enfin, installez les vis du trou de fixation

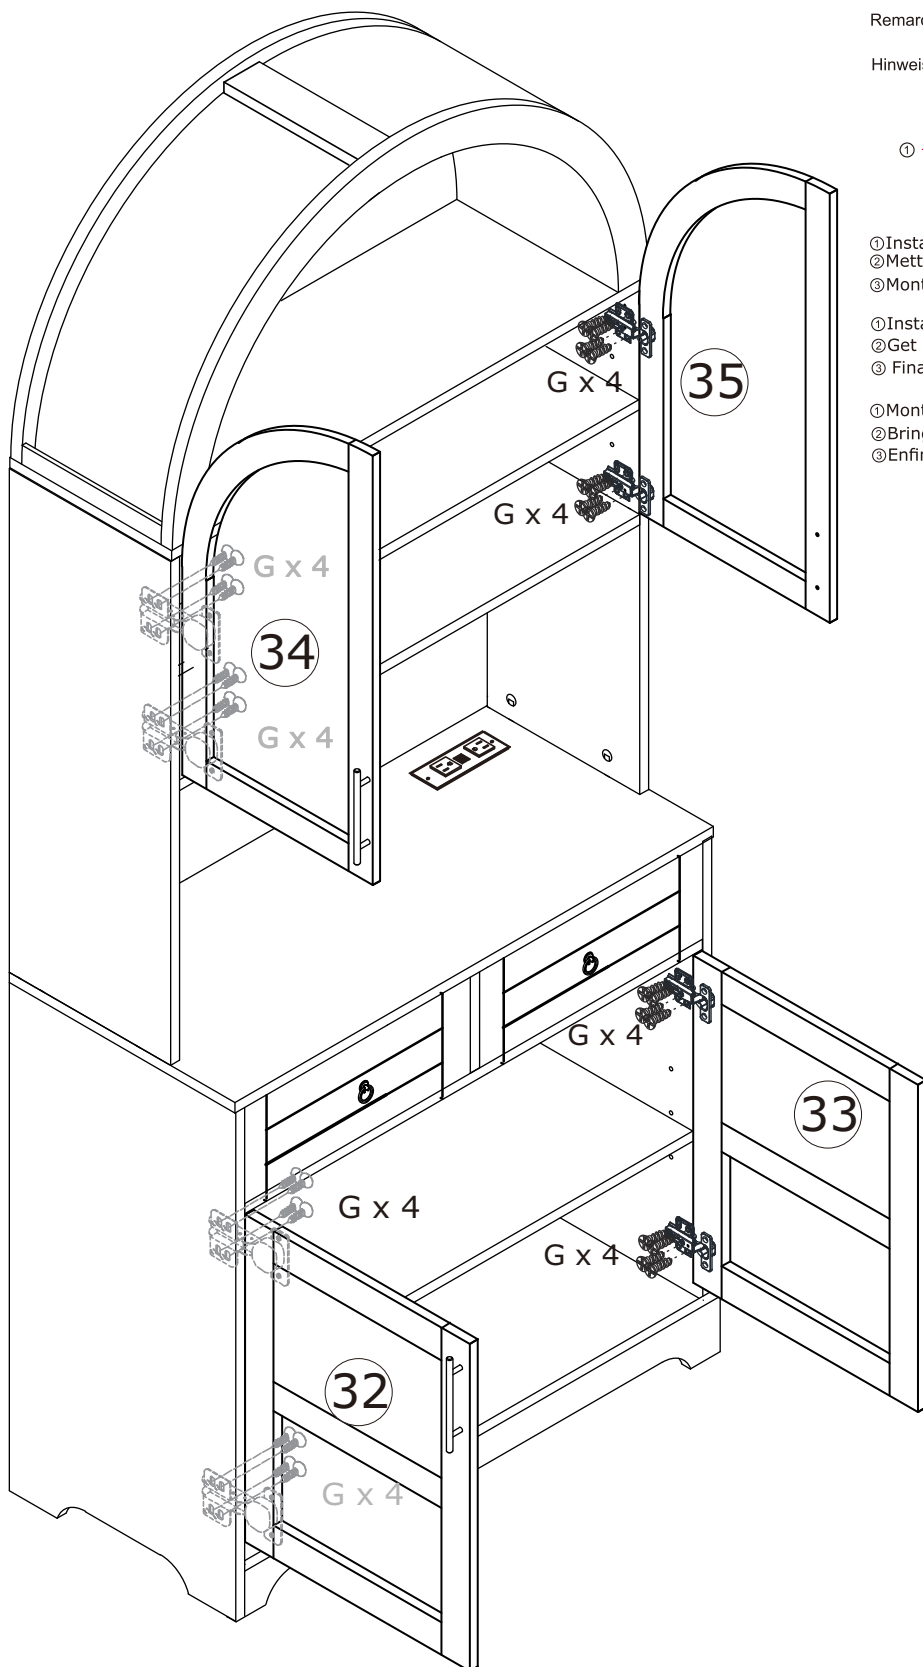


45

  
Zx2




WALL

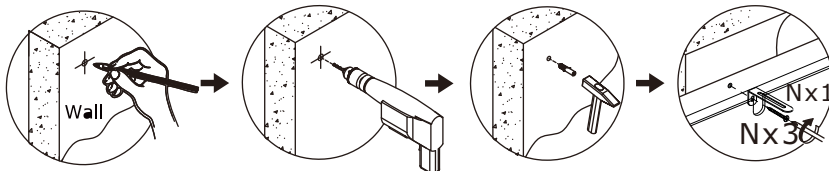 


A solid wall

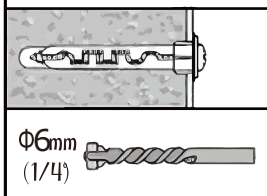 


B cavity wall

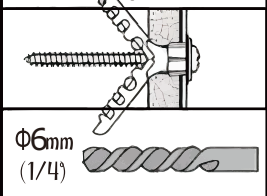 

C solid wood




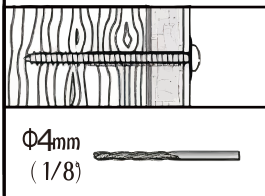 




WALL

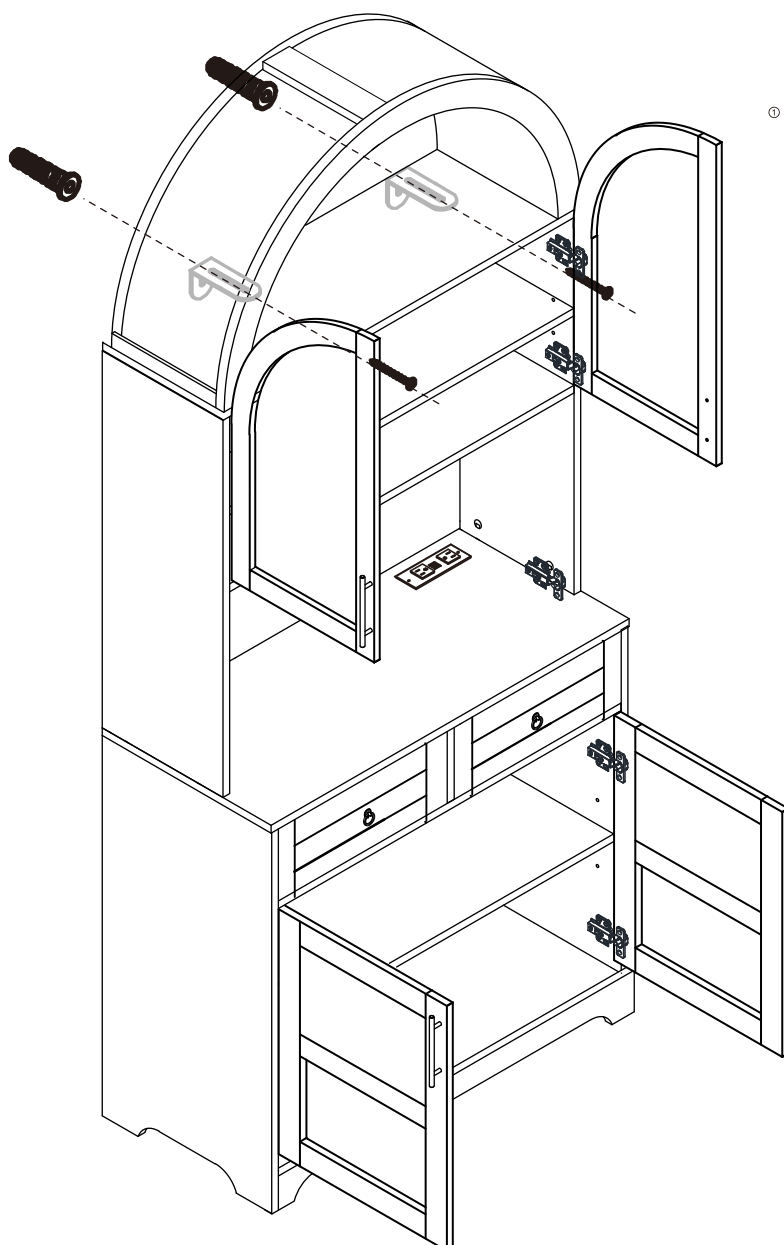 


46

     
 
 
H x52

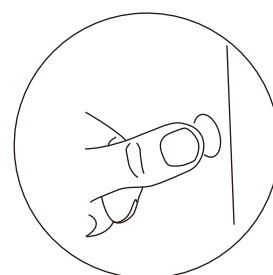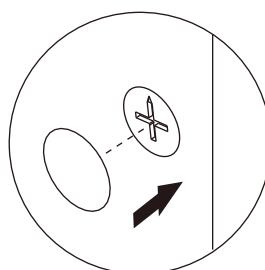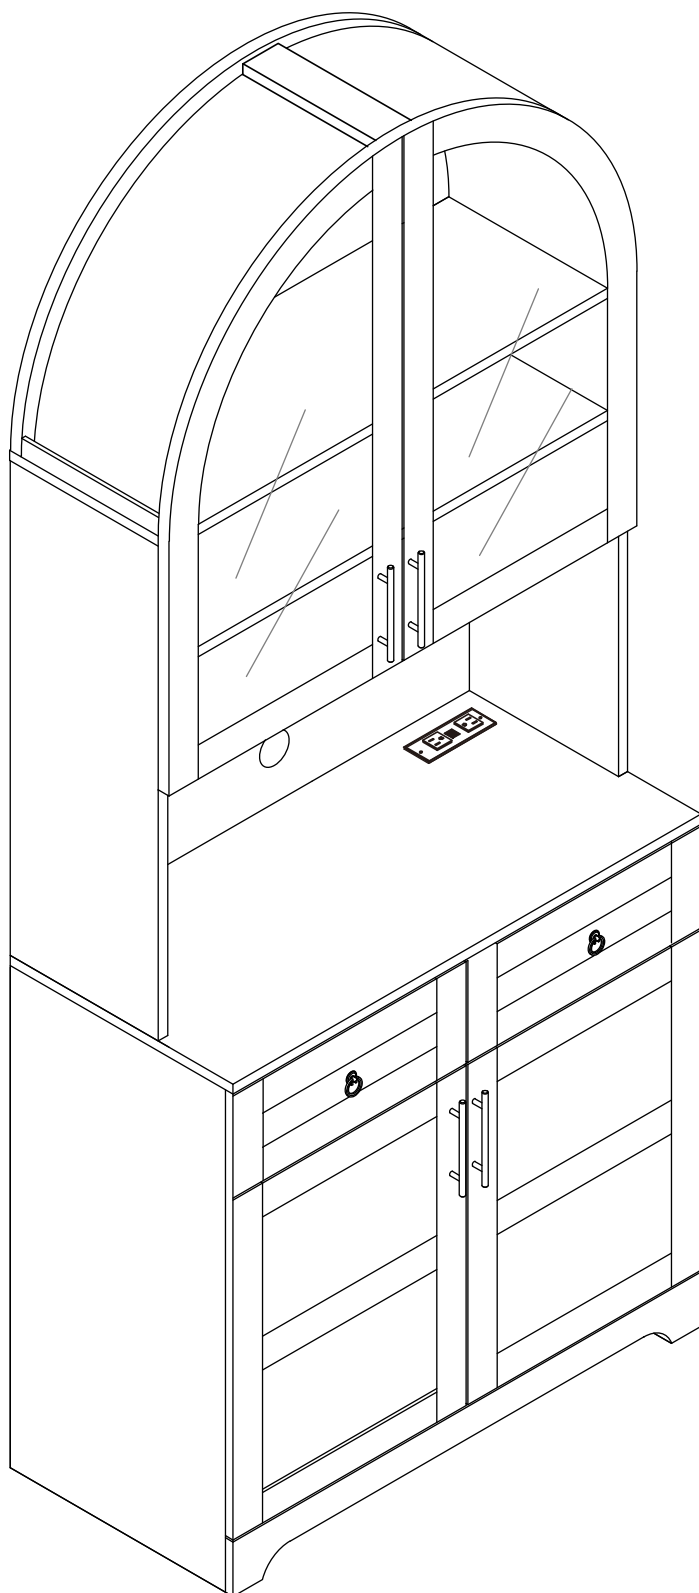

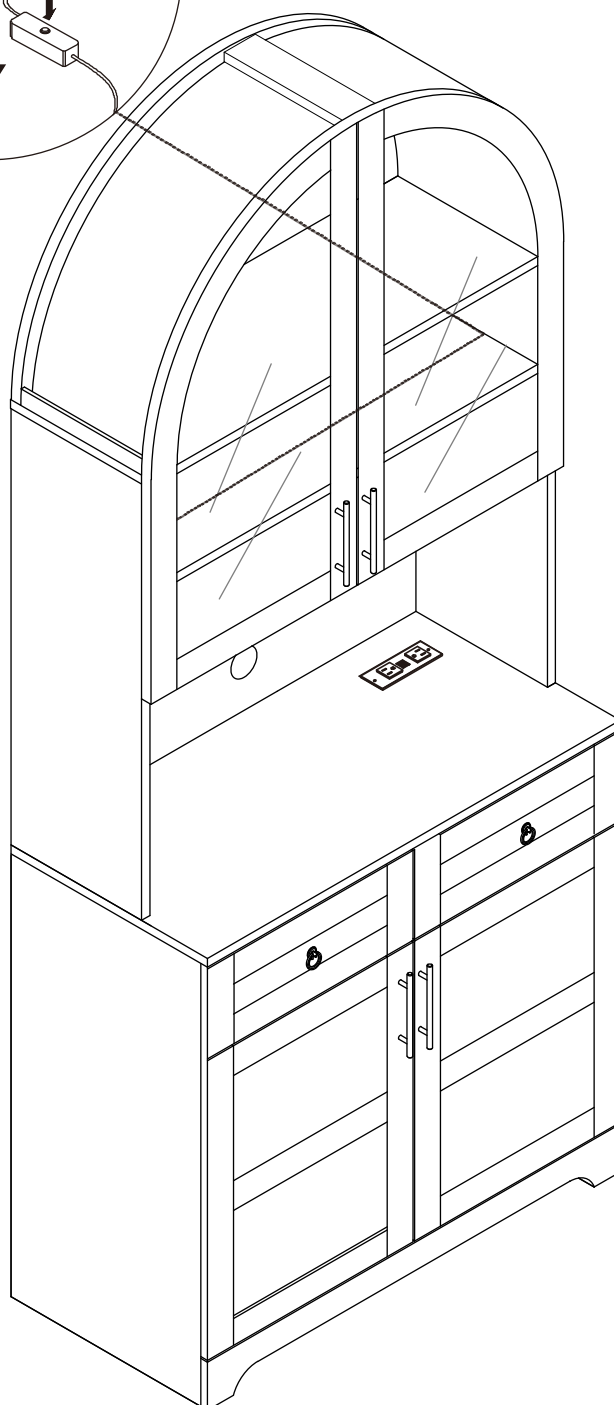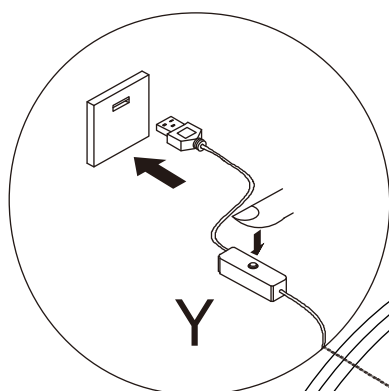




 
 
 
If there is misalignment after you install,
adjust the screw to the best condition

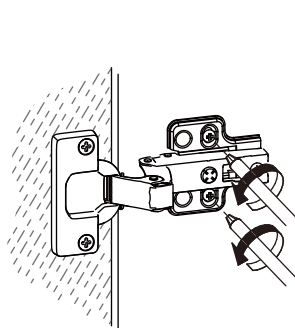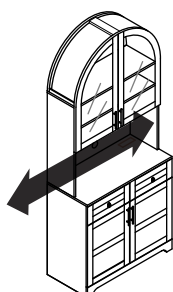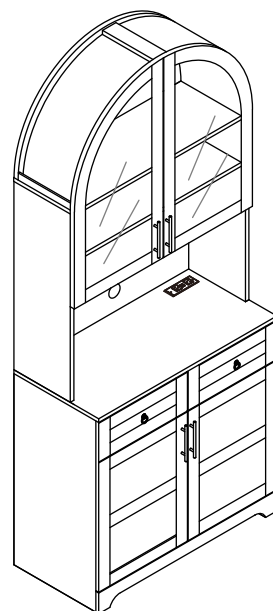


II

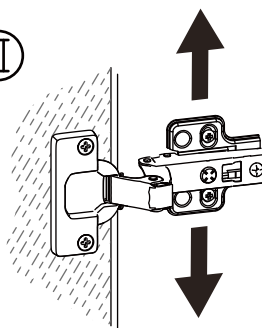 




III

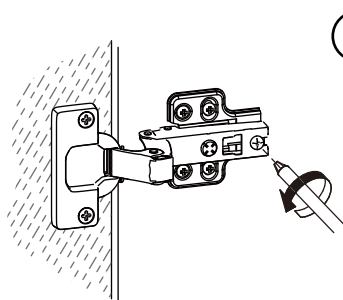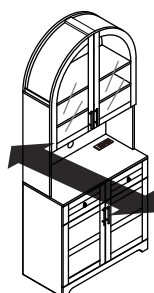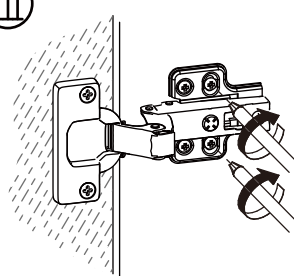   


II

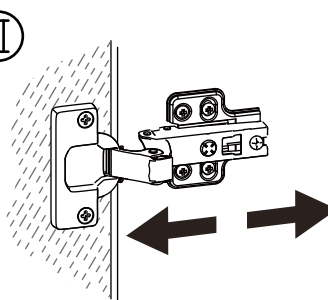 


III

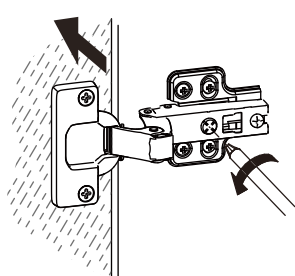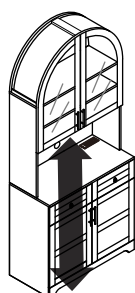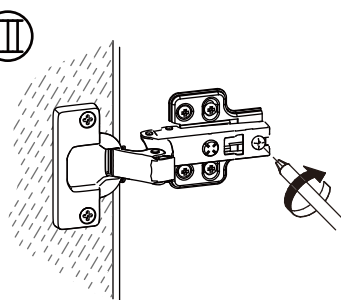   

II

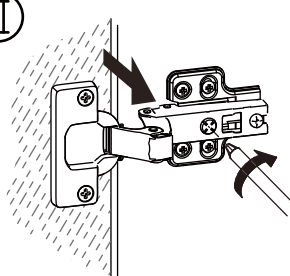 

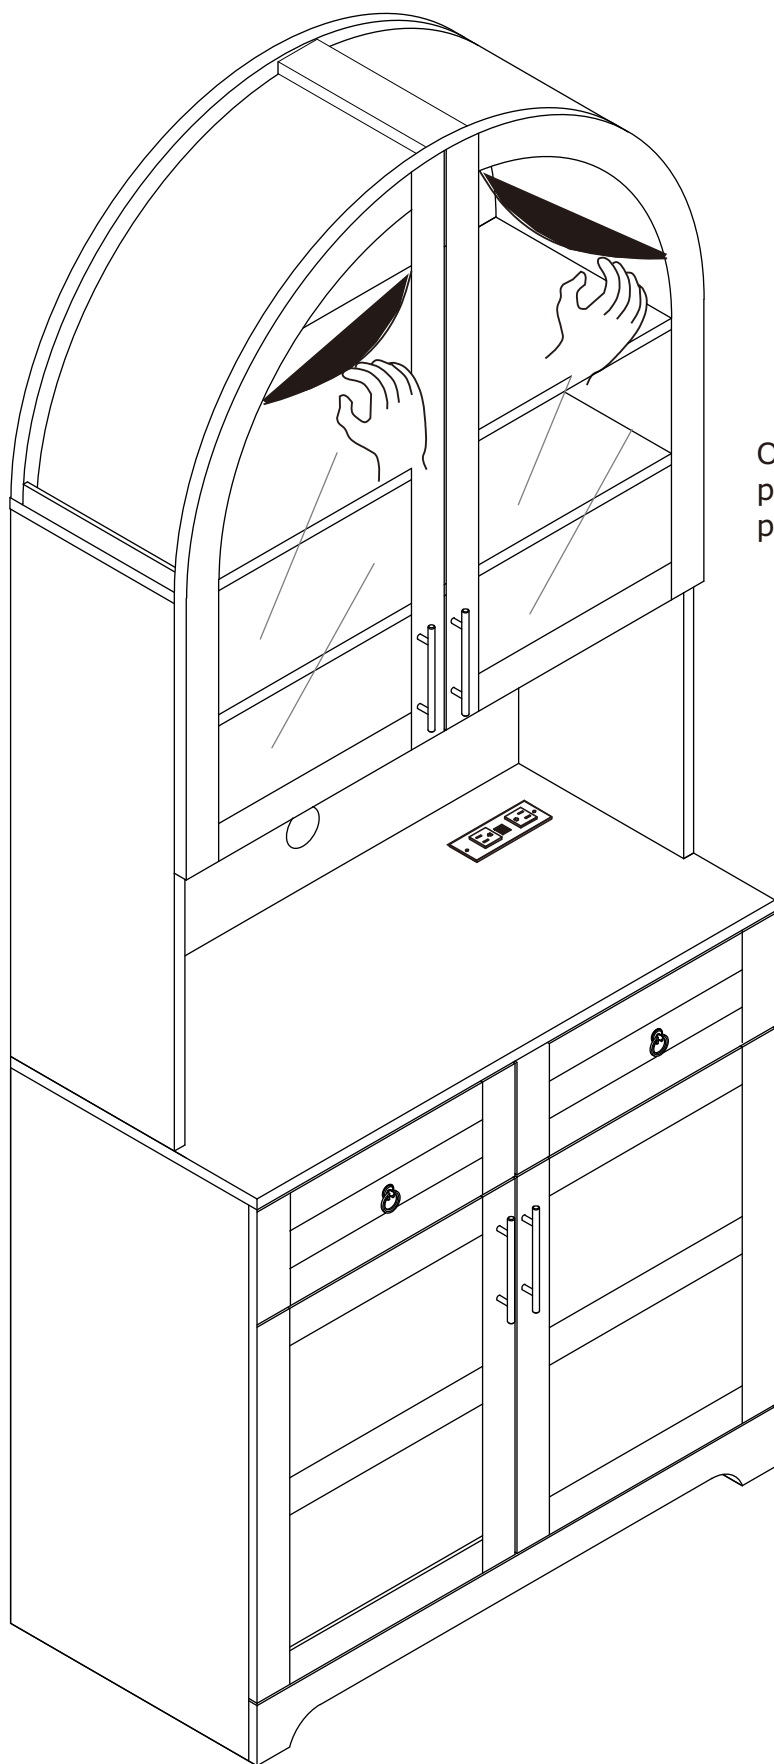 

Once the assembly is complete,
please remember to remove the
protective film from the glass

LotusLantern APP Manual

1. Software Overview

1.1 Overview

LotusLantern is a mobile APP to control LED strip by both Apple and Android phones.

The traditional control ways like infrared, 433MHz, 2.4GHz and others old wired ways will be replaced by mobile phone control way with convenient, powerful and scalable features.

Through this mobile APP, you can not only control the color, brightness and color temperature of the LED strips but also set up all kinds of fancy flash mode; Also this APP can change the light of the LED strip according to the rhythm of the music. This APP can set and control several LED strips through Bluetooth and the operation is very simple, easy to learn and easy to use.

1.2 Features

- Adjust color LED strips with 60,000 colors to change color and brightness and adjust monochrome LED strips to change brightness and color temperature
- Play music or turn on a sound playback device, you can let the light change the color and brightness with the rhythm of music, the music rhythm beautiful
- Inside multiple setting mode for color change and control LED strips without mobile
- Long distance control with omni-directional antenna, and many-to-many group control mode
- Once the connection is successful, connect automatically next time

1.3 Performance

LotusLantern APP is easy for use as well as great compatible for all kinds of smart phones; After the actual test of hundreds of mobile phones verification, the compatibility is above 95% of mobile phones in the market. APP is small and convenient, it consumes less system resources, so the requirements of the mobile configuration are low. Control delay is small, the operation feel good, light control is smooth with people's visual sense.

2. Operating Environment

This APP program requires phones of system above Andriod 4.3 and iOS 8.0. Mobile phone configuration is not limited.

3. Instuctions

Note: Android version and iOS version download and use the same method, here in the Android version as an example.

3.1 APP Download

 
- Scan the QR code

iOS and Android systems can download the "LotusLantern" APP by scanning the QR code. Open the browser or other tools with "Scan QR code" function, scan the "LotusLantern" QR code as below:




3.2 App Operation


- (1) Click on the LotusLantern APP icon, enter the APP page:

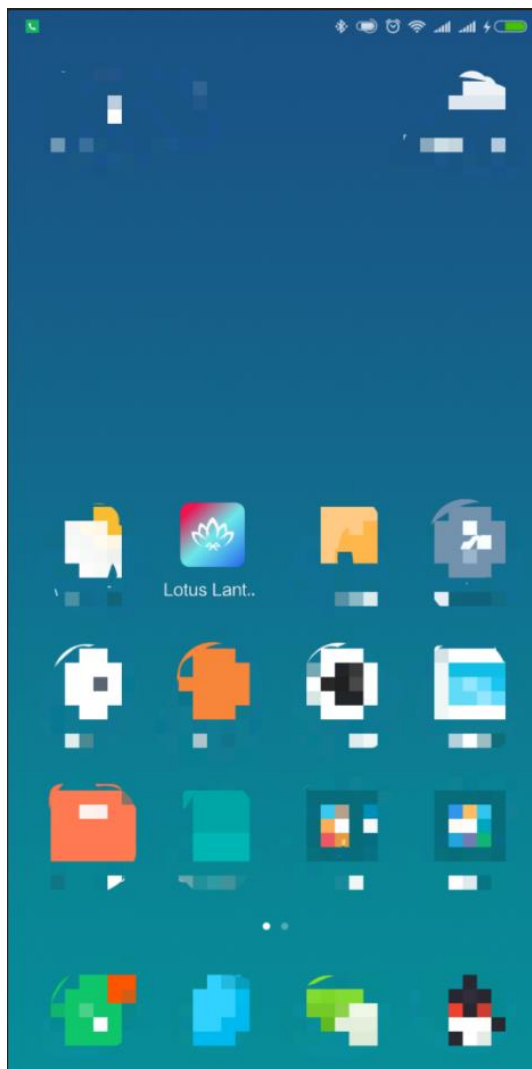

 
(2) After entering the APP interface, if Bluetooth is not enabled, "an application wants to enable the Bluetooth function of this device." Click [Allow]

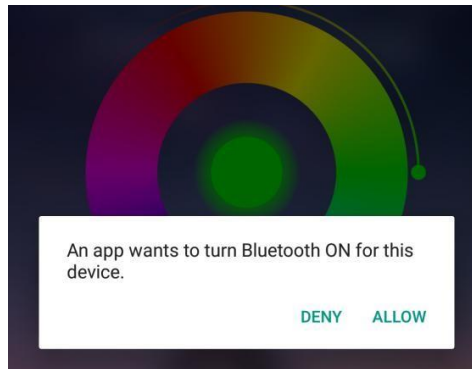

 
(3) switch to color and brightness interface:

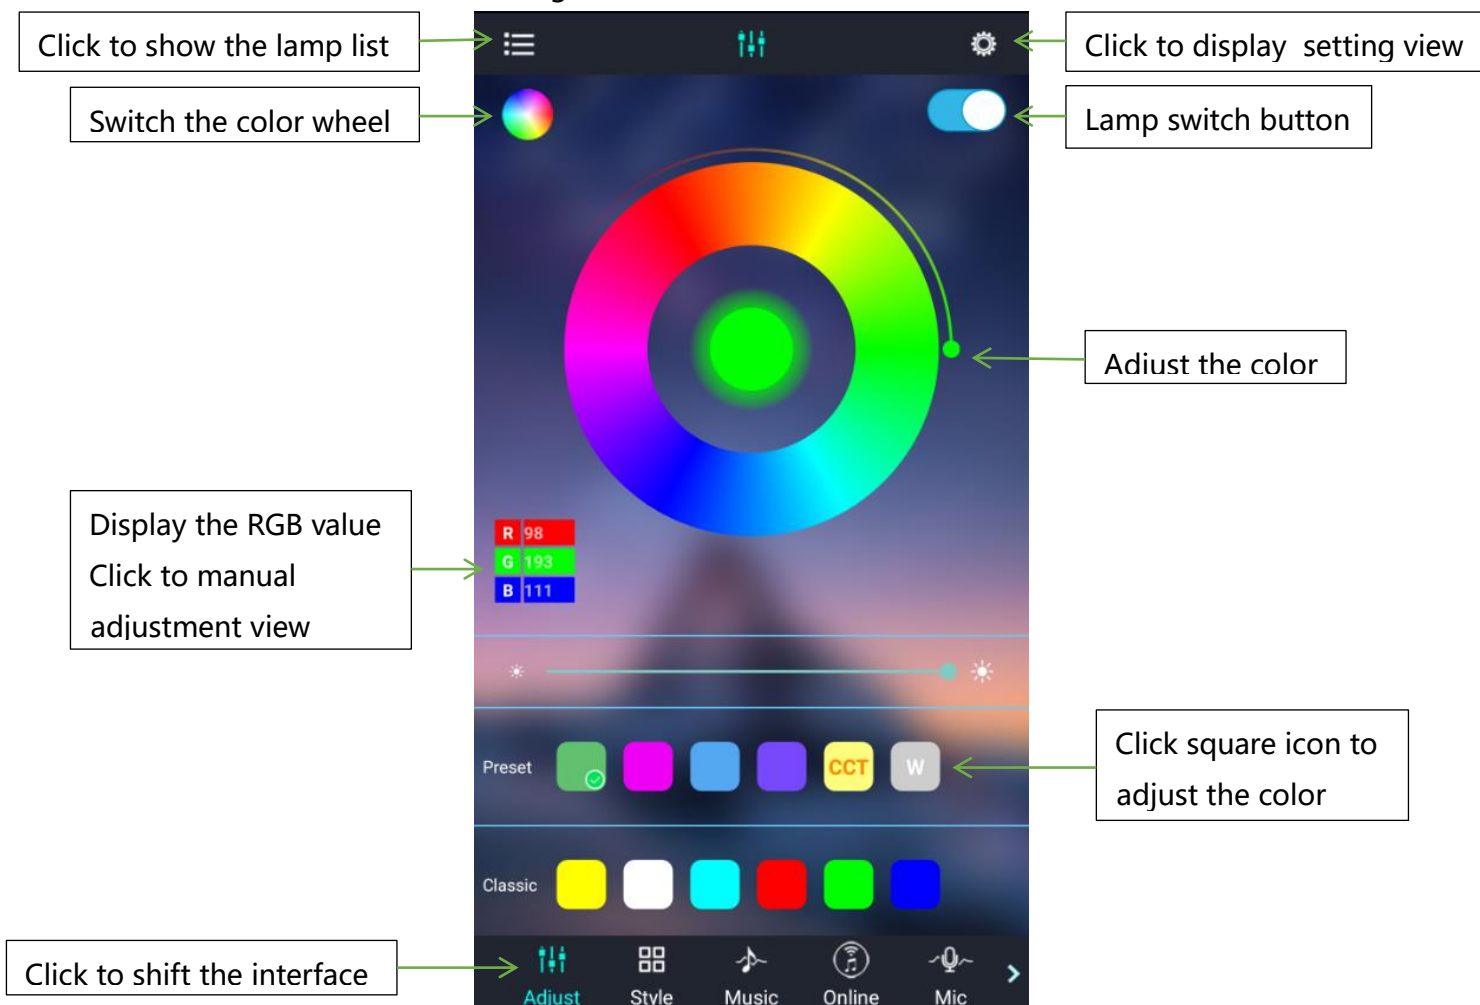

 
(4) click to show the lamp list, view lamp list:

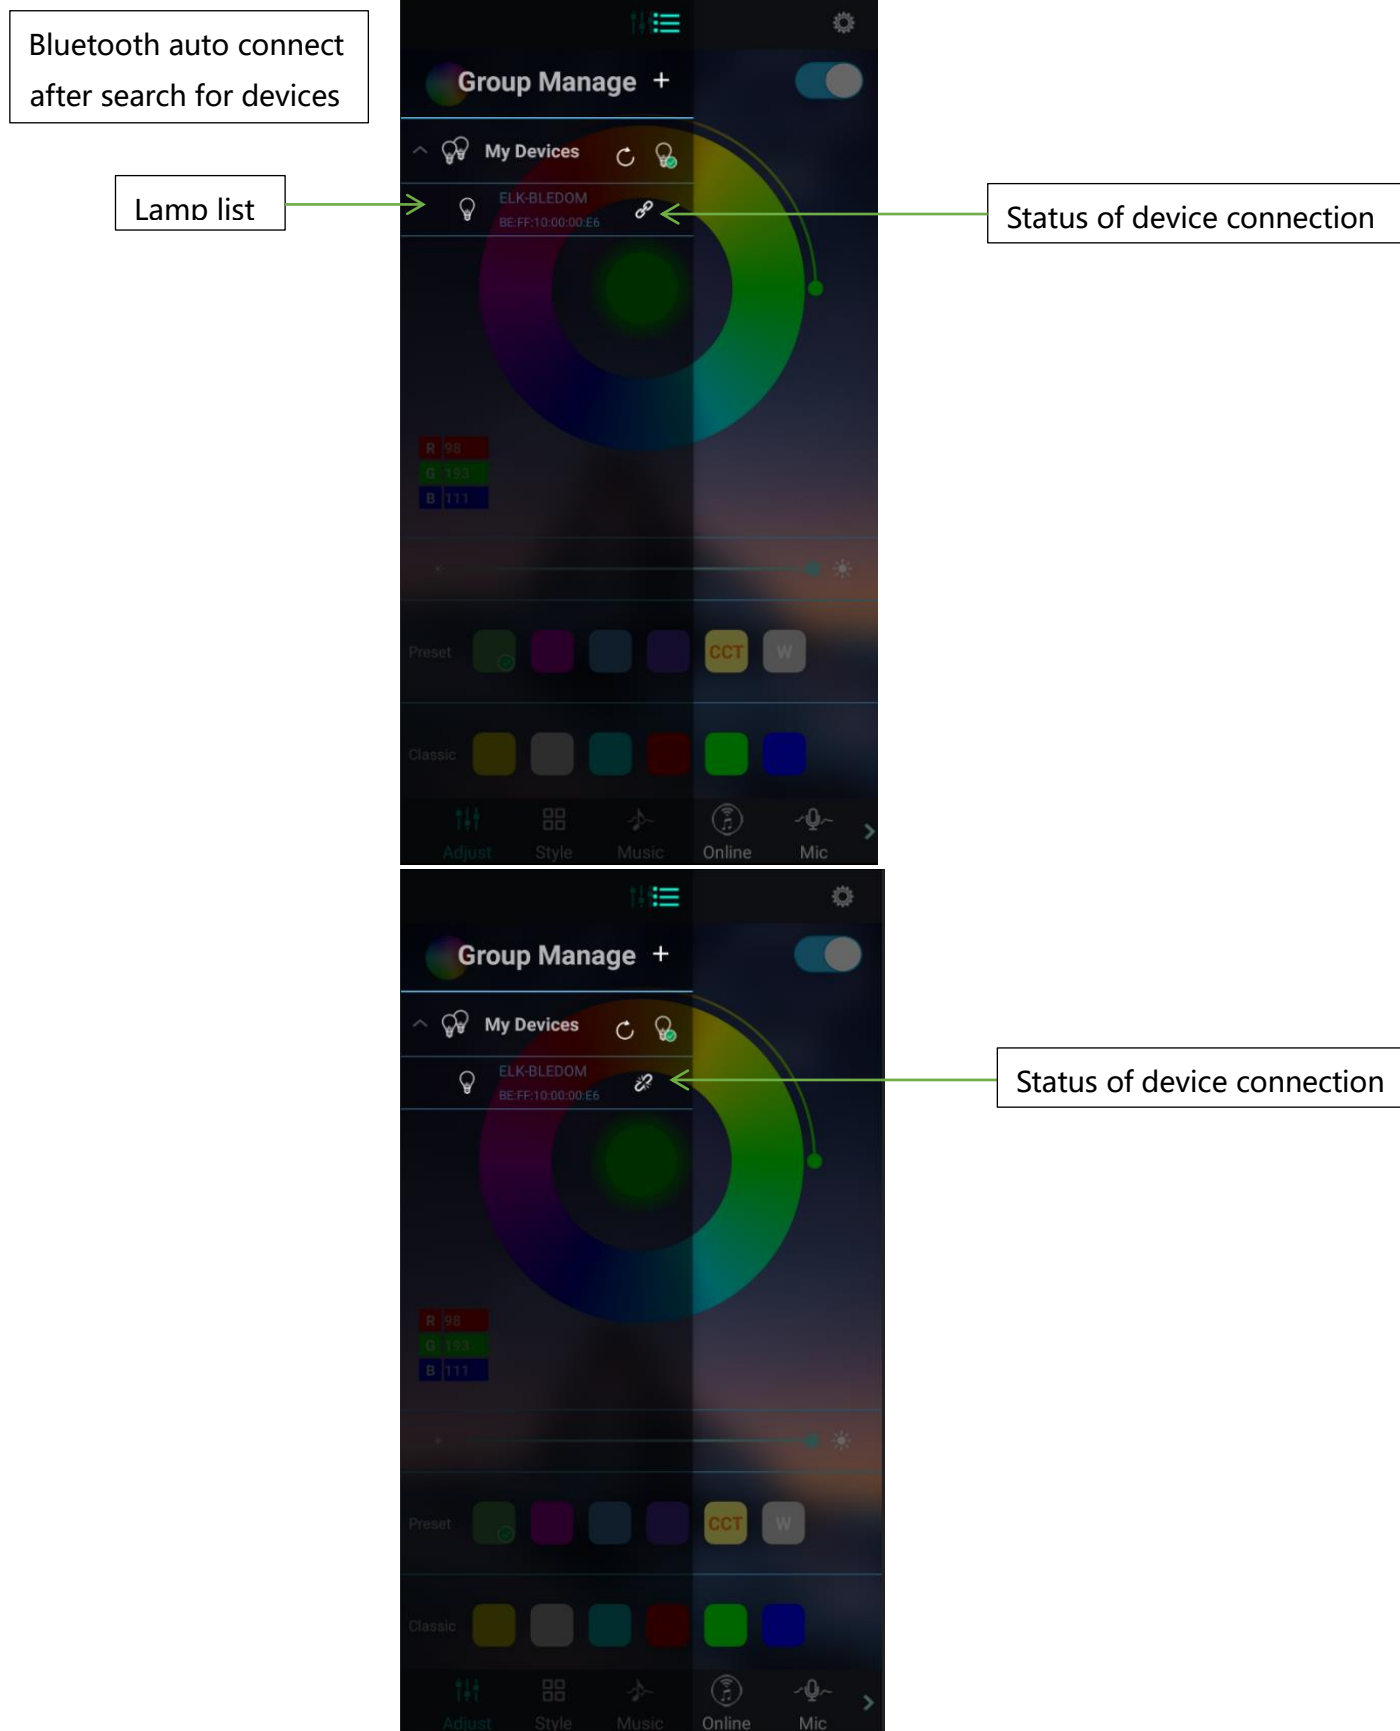

 
(5) Click to RGB manual adjustment view:

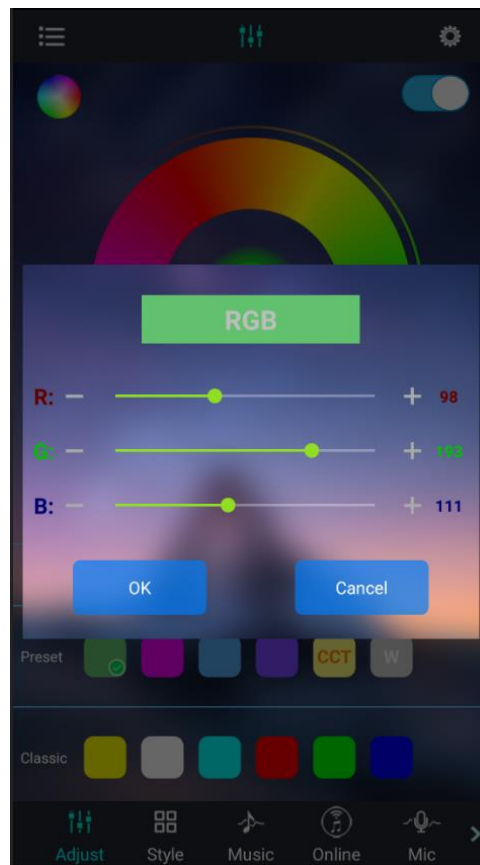

 
(6) switch to the mode interface:

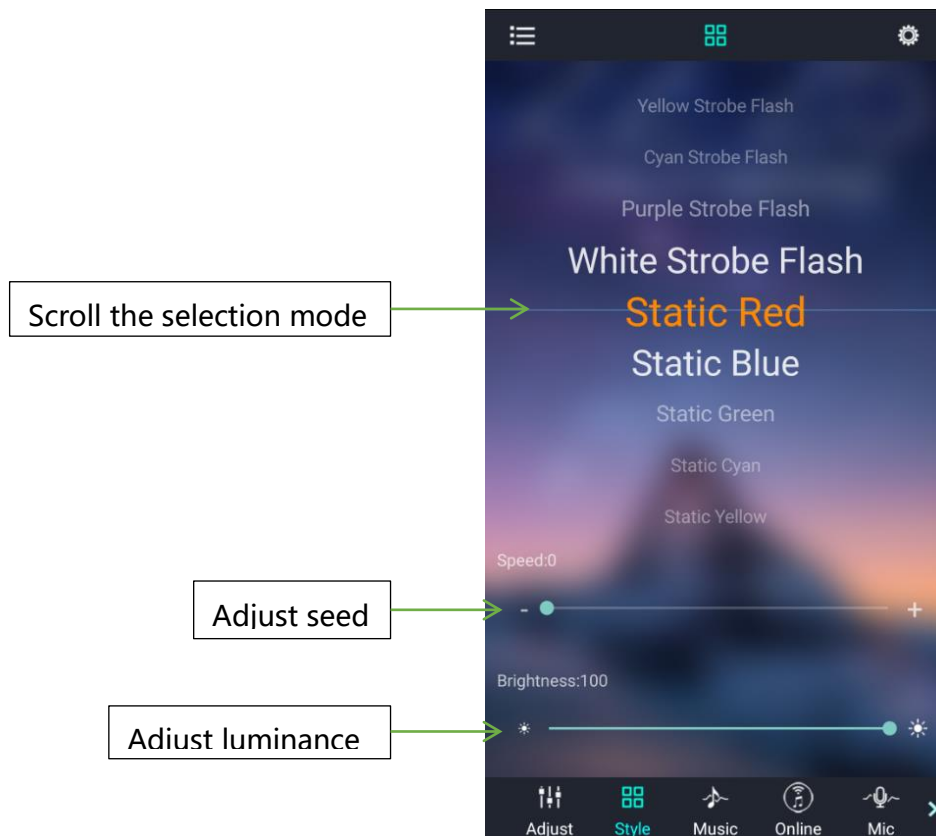

 (7) switch to the music rhythm interface:

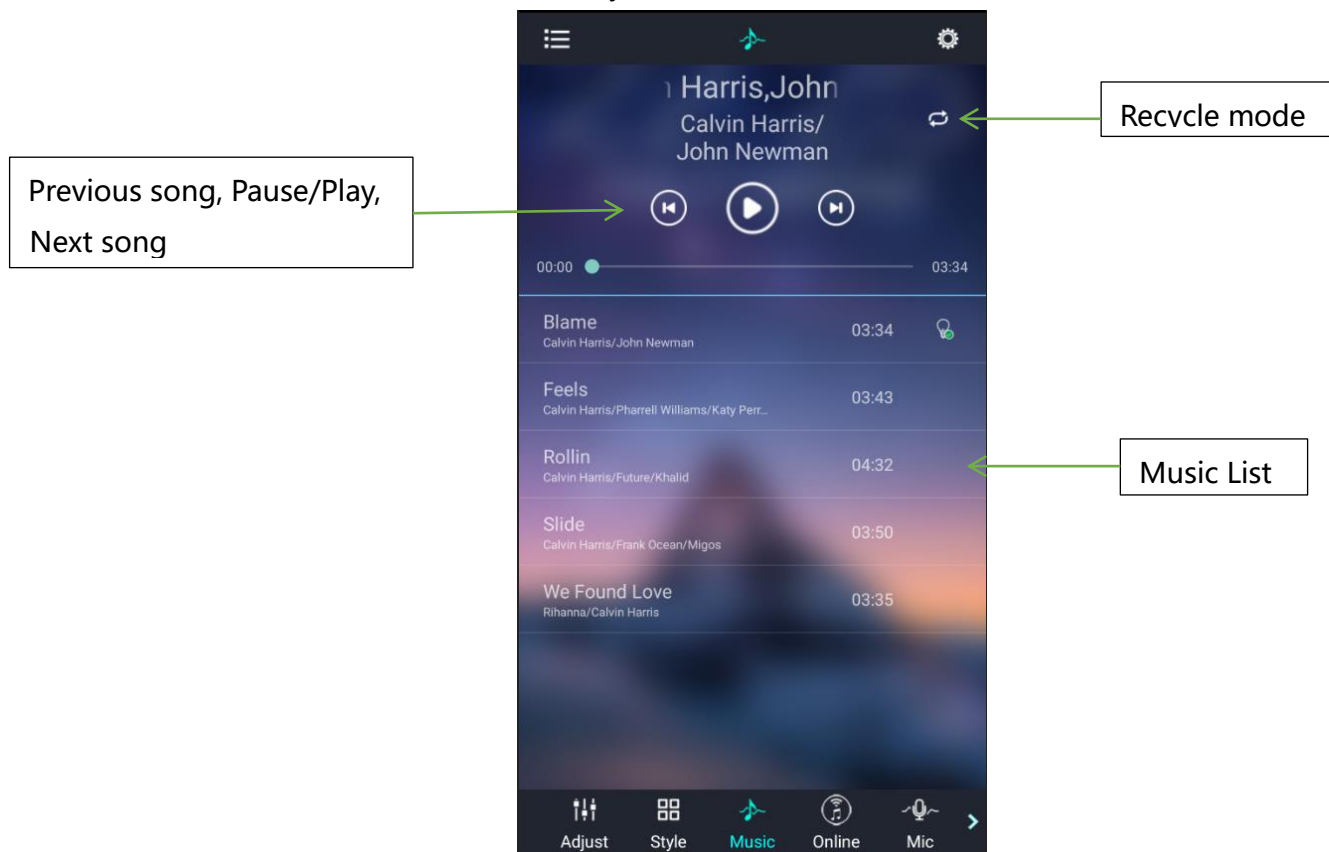


 (8) Switch to the online music interface:

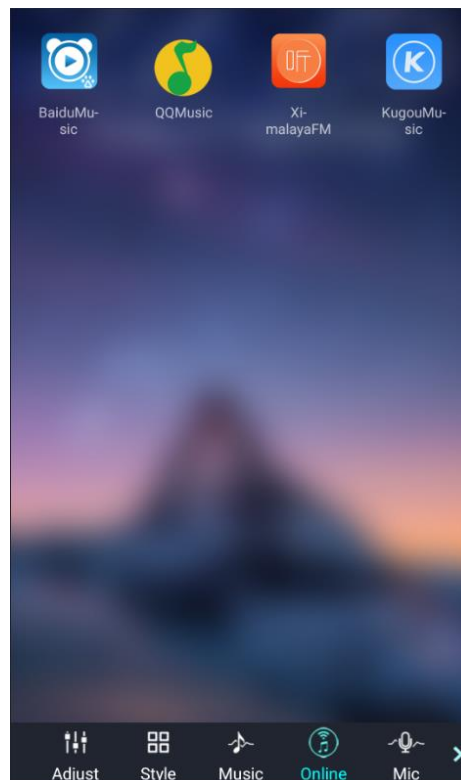


(9) Switch to the microphone rhythm interface:

 Music rhythm through cell phone microphone

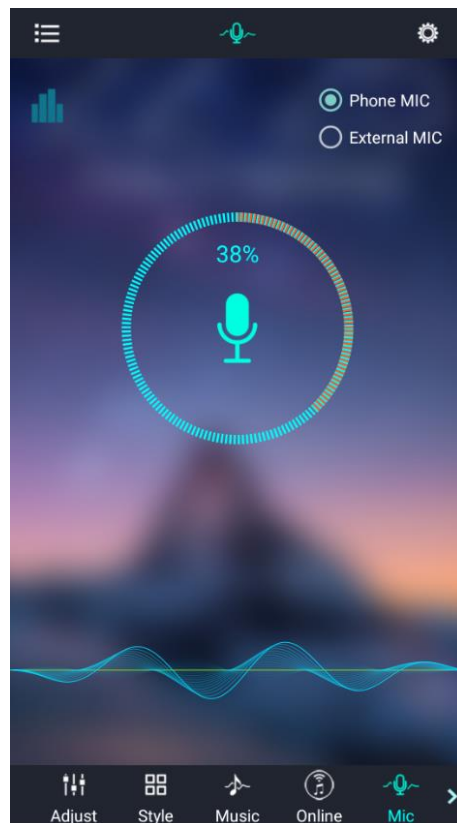

Switch phone microphone and external microphone

 Music rhythm through the microphone on the product

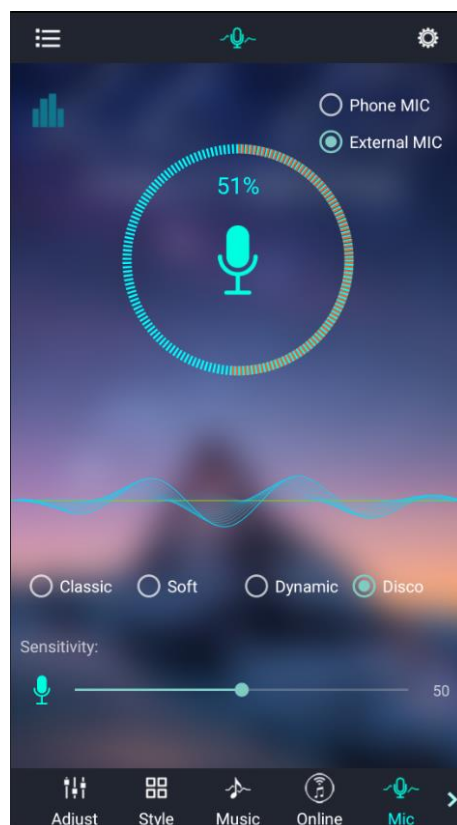

Switch phone microphone and external microphone

4-style rhythm

Change the sensitivity of MIC to match the sound

(10) Switch to the schedule interface:

Set the time of Light-On

Enable or disable the Light-On function

Repeat setting
No selection for once Light-On

Set the time of Light-Off

Enable or disable the Light-Off function

Repeat setting
No selection for once Light-Off

Style Music Online Mic Schedule

(11) Switch to the modify pin sequence interface:

Click to save the new assignment

Change the real color of this line

V+ W

R G B



FCC Part 15C Test Report

FCC ID:2A595YH-6181

Applicant: Dongguan Yihong Hardware electronics Co., LTD
Address: Room 1106, No.2, Shangheng Road, Chang'an Town, Dongguan, Guangdong, China
Manufacturer: Dongguan Yihong Hardware electronics Co., LTD
Address: Room 1106, No.2, Shangheng Road, Chang'an Town, Dongguan, Guangdong, China
EUT: LED Controller
Trade Mark: N/A
Model Number: YH-6181
YH-252, YH-358, YH-6183, YH-21KEY, YH-24KEY, YH-44KEY, YH-17KEY, LZZX-IR21-12-03, YH-088-24-44, YH-313, YH6180, YH-RF17
Date of Receipt: Jun. 16, 2025
Test Date: Jul. 02, 2025 to Jul. 08, 2025
Date of Report: Jul. 08, 2025
Prepared By: Shenzhen DL Testing Technology Co., Ltd.
Address: 101-201, Building C, Shuanghuan, No.8, Baoqing Roa Baolong Industrial Zone, Baolong Street, Longgang Shenzhen, Guangdong, China.
Applicable Standards: FCC CFR Title 47 Part 15 Subpart C Section 15.247
ANSI C63.10:2013
Test Result: Pass
Report Number: DLE-250708002R

Prepared (Test Engineer): Dimon Tan

Reviewer (Supervisor): Jack Bu

Approved (Manager): Jade Yang



This test report is based on a single evaluation of one sample of above mentioned products. It is not permitted to be duplicated in extracts without written approval of Shenzhen DL Testing Technology Co., Ltd.



Shenzhen BCTC Technology Co., Ltd
101M., Unit 1, Building1, Pengyuan, No.18, Lilang Road, Shanglilang
Community, Nanwan Street, Longgang District, Shenzhen, Guangdong, China

FCC Supplier's Declaration of Conformity

Declaration Number: BCTC2512857183C

Applicant : DONGGUAN NANFAN ELECTRONIC TECHNOLOGY CO LTD
Room 202, No. 19, Wanbu Road, Changping Town, Dongguan,
Guangdong 523570

Manufacturer : DONGGUAN NANFAN ELECTRONIC TECHNOLOGY CO LTD
Room 202, No. 19, Wanbu Road, Changping Town, Dongguan,
Guangdong 523570

Product : Furniture Power Distribution Units

Trademark : NAN FAN

Model/Type Reference : NF02-12-02W,
See page 2

Report Number : BCTC2512857183E

Test Standard : CFR 47 FCC Part 15 Subpart B
ANSI C63.4:2014

Note: This document is only a proof to demonstrate that the product complied with FCC requirements. While according to FCC Supplier's Declaration of Conformity procedure, the local responsible party should prepare a compliance information statement to be supplied with the product at the time of marketing.



Tel: 400-788-9558 / 0755-32936262

www.chnbctc.com

This Verification is for the exclusive use of BCTC's client and is provided pursuant to agreement between BCTC and its client. BCTC's responsibility and liability are limited to the terms and conditions of the agreement. The observation and test results referenced in this Verification are relevant only to the sample tested. This Verification by itself does not imply that the material, product, or service is or has ever been under a BCTC certification program.



Shenzhen BCTC Technology Co., Ltd
101M., Unit 1, Building1, Pengyuan, No.18, Lilang Road, Shanglilang
Community, Nanwan Street, Longgang District, Shenzhen, Guangdong, China

Model/Type Reference :

NF02-12-02W,

NF01-12-01D,NF01-12-01U,NF01-12-01W,NF01-12-02D,NF01-12-02U,NF01-12-02W,NF01-12-06R,NF01-12-07R,NF01-12-04,NF01-12-05,NF50-0502-01,NF50-0502-01Ab,NF50-0502-02,NF50-0503-02K,NF50-0502-02Ab,NF02-12-01D,NF02-12-02D,NF02-12-01W,NF02-12-02W,NF02-12-01U,NF02-12-02U,NF02-12-01WS,NF02-12-02WS,NF02-12-01US,NF02-12-02US,NF02-12-01L,NF02-12-02L,NF02-12-04,NF02-12-05,NF02-12-01STR,NF02-12-02STR,NF02-12-06R,NF02-12-07R,NF02-12-06A,NF02-12-07A,NF02-12-06,NF02-12-07,NF03-12-01D,NF03-12-02D,NF03-12-01W,NF03-12-02W,NF03-12-01U,NF03-12-02U,NF03-12-04,NF03-12-05,NF03-12-01L,NF03-12-02L,NF03-12-03L,NF04-12-04,NF04-12-05,NF04-12-01W,NF04-12-02W,NF04-12-01U,NF04-12-02U,NF04-12-01L,NF04-12-02L,NF04-12-05L,NF04-15-04,NF04-15-05,NF04-15-01W,NF04-15-02W,NF04-15-01U,NF04-15-02U,NF04-15-01L,NF04-15-02L,NF04-15-05L,NF01-12-01Z,NF01-12-02Z,NF02-12-01Z,NF02-12-02Z,NF03-12-01Z,NF03-12-02Z,NF04-12-01Z,NF04-12-02Z,NF04-15-01Z,NF04-15-02Z,NF04-15-04Z,NF04-15-05Z,NF02-12-01ZU,NF02-12-02ZU,NF02-12-01ZW,NF02-12-02ZW,NF2785-0502-01,NF2785-0502-02,NF2785-0502-03,NF2785-0502-04,NF2785-0502-01Ab,NF2785-0502-02Ab,NF2785-0502-03Ab,NF2785-0502-04Ab,NF66-0502-01,NF66-0502-01Ab,NF66-0502-02,NF66-0502-02Ab,NF66-0503-02,NF66-0502-01W,NF66-0502-02W,NF5094-0502-09,NF5094-0502-10,NF5094-0503-09,NF5094-0503-10,NF5094-0503-09W,NF5094-0503-10W,NF5094-0506-09,NF5094-0506-10,NF3580-0502-01,NF3580-0502-01Ab,NF3580-0502-02,NF3580-0502-02Ab,NF3580-0503-02,NF3580-0502-03,NF3580-0502-03Ab,NF3580-0503-03,NF3580-0502-08,NF3580-0502-08Ab,NF3580-0503-08,NF3580-0502-01W,NF3580-0502-02W,NF3580-0502-03W,NF3580-0502-08W



Tel: 400-788-9558 / 0755-32936262

www.chnbctc.com

This Verification is for the exclusive use of BCTC's client and is provided pursuant to agreement between BCTC and its client. BCTC's responsibility and liability are limited to the terms and conditions of the agreement. The observation and test results referenced in this Verification are relevant only to the sample tested. This Verification by itself does not imply that the material, product, or service is or has ever been under a BCTC certification program.