

单页130x185mm CBH1-4008-SIG IM说明书23.12 127克铜版纸

390 mm

185 mm

130 mm

Barbasol®
DUAL-SPEED RECHARGEABLE T-BLADE TRIMMER



USE AND CARE GUIDE
Manufactured under exclusive license of Perio Inc. © Barbasol

PLEASE RETAIN THIS USE & GUIDE FOR FUTURE REFERENCE

WARNING/IMPORTANT

1. Read the use and care guide thoroughly before using the appliance.
2. Use the appliance only for purposes described in this use and care guide.
3. For hygienic reasons, the appliance should not be shared with others.
4. If signs of damage are visible, do not use the appliance and notify email support at support@barbasolelectric.com.
5. Do not use it if skin is red, irritated, inflamed, infected or blistered.
6. This appliance is for household use only.
7. Do not place or store the appliance in direct sunlight. Store only in a cool, dry place.
8. Keep the appliance out of reach of children.
9. Do not use in a bathtub, shower or sink, and never submerge in water.
10. Do not operate this appliance if it has been damaged.

BATTERY CARE

For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.


- The appliance is only to be used with the power supply unit provided with the appliance.
- This appliance contains batteries that are non-replaceable.
- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- The battery is to be disposed of safely.
- Only remove the rechargeable battery when you are intending to discard the appliance and you have the rechargeable battery removed by a professional.



SPECIFICATIONS

General descriptions

1. Blade
2. LED Display
3. On/off switch
4. Guide comb (1/2/3/6/9/12mm)
5. USB charging cable
6. Oil bottle

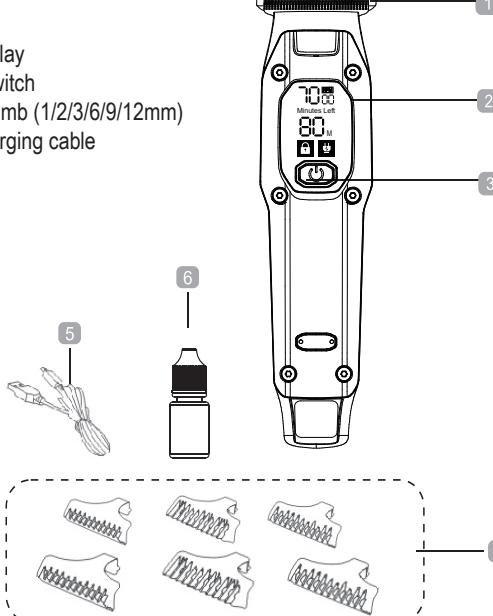

How to use:

1. Fully charge the trimmer before you use it for the first time or after not using it for a long period (When charging, please use a power adapter with an input voltage not higher than 5V 1A).
2. Press the switch down to start work, and the display will light up; press it again to turn off the trimmer. Travel lock: Press 3-5 seconds to lock the machine. Long press the switch for 3 seconds or connect to the power supply to unlock the machine.
3. Display function introduction:
 - When working: The digital display shows the remaining electricity.
 - When low power: The charging symbol flashes. The trimmer will be shut down when the number shows 01.
 - When charging: The charging symbol is always on and the numbers flash. When fully charged, it shows 80 and the number stops flashing.
- After charging the appliance is ready for use. It can be used with or without the guide comb attachment. To attach the guide comb attachment, slide it onto the cutting head until it clicks into position. The appliance must be switched off while the guide comb is being attached or removed.

4. There are 6 pcs guide combs (1/2/3/6/9/12mm). Hair can be cut to 6 different lengths ranging from approximately 1mm to 12 mm.
5. Cleaning: In order to ensure that the appliance remains in perfect working order, it is important to note the following instructions:

1. Clean off the hair on blades with cleaning brush.
2. Drop appropriate amount of lubricating oil on blades.
3. Wipe the outside of trimmer with soft cloth. (Please do not rinse the trimmer with water.)

Note: Please switch off machine first before cleaning.

Technical Parameters:
Dimensions: 155x38x38mm
Power Source: DC 5V 1A
Charging time: 80 minutes
Working time: 80 minutes
Battery Type: Lithium battery
Battery Capacity: 600mAh

ENVIRONMENTAL PROTECTION
The battery within this appliance is equipped with contained substances which may result in environmental pollution.
Do not dispose of the appliance with household waste. Please recycle at a local recycling center for proper disposal.


2-Year Limited Warranty
Questions: call toll-free Barbasol Customer Service (844) 777-9601
Email Support: support@barbasolelectric.com

This appliance is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow this use and care guide will void the warranty.