

**vtech**<sup>®</sup>

# Instruction Manual

 
## **SWITCH&GO**<sup>®</sup> **BOOST**<sup>™</sup>

### **THUNDER THE T-REX**



# INTRODUCTION

Time to roar with **Switch & Go® Boost™ Thunder the T-Rex**. This 2-in-1 toy includes a fierce T-Rex and race car, which combine to make an Armored-Up Power Dragon!

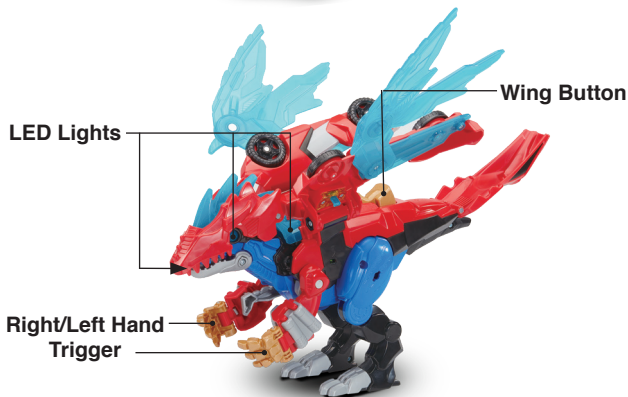

# INCLUDED IN THE PACKAGE

- **Switch & Go® Boost™ Thunder the T-Rex (in T-Rex mode)**
- Race Car
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this manual as it contains important information.

 
## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

## Unlock the Packaging Locks

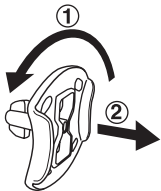

- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out and discard the packaging locks.

# GETTING STARTED



## WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

 


## ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## Battery Removal And Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old battery by pulling up on one end of the battery.
4. Install 1 new AA (LR6/AM-3) battery following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

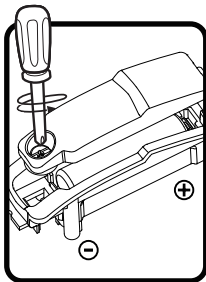

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## **IMPORTANT : INFORMATIONS CONCERNANT LES PILES**

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.


- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.



### **PILES RECHARGEABLES :**

 
- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

# COMBINING T-REX AND RACE CAR PRODUCT FEATURES

## 1. Power Volume Switch

Slide the switch to the  position to switch the unit Off.

Slide it to the  position to turn On the unit with low volume or slide it to the  position to turn On the unit with high volume.

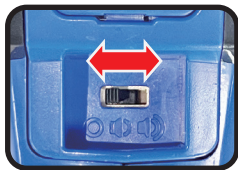

## 2. Voice Button

### 2.1 Leg Button

Press the **Leg Button** to learn fun dinosaur facts and sounds in T-Rex Dino mode and Armored-Up Dragon mode.



 
### 2.2 Right/Left Hand Trigger

Press the **Right/Left Hand Trigger** to learn fun dinosaur facts and sounds in T-Rex Dino mode and Armored-Up Dragon mode.



### 2.3 Wing Button

Press the **Wing Button** to learn fun dinosaur facts and sounds in Armored-Up Dragon mode.

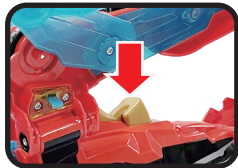

### 3. Light Up Eyes, Back and Mouth

Light flashes along with voice and sound.



 
### 4. Automatic Shut-Off

To preserve battery life, **Switch & Go® Boost™ Thunder the T-Rex** will automatically power down after approximately 15 seconds without input. The unit can be woken up again by pressing the Voice Button. The unit will also automatically turn off when battery power is very low.


**Note:** If the unit repeatedly powers down or has abnormal responses when the unit is switched on, please install a brand new battery and try switching it on again.

## HOW TO SWITCH

### Transform Race Car To Dragon Armor

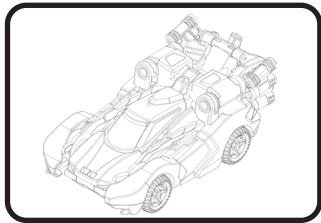


 1. Begin in Race Car mode.

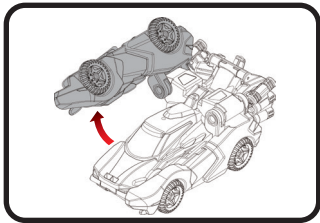


 2. Pull and flip one side of the car body upward.




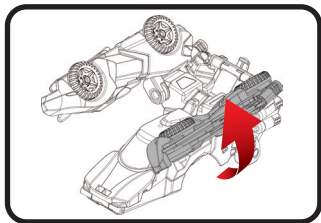

 
3. Pull and flip the other side of the car body upward.

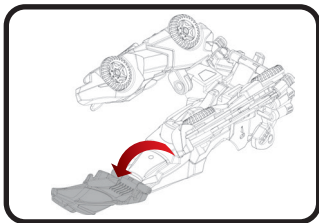

 
4. Flip out the car hood.

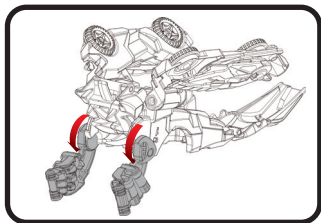

 
5. Flip the arms and hands down.

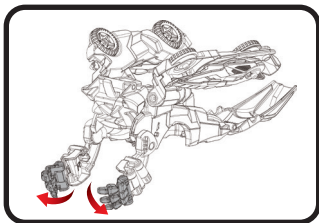

 
6. Slightly pull out the claws to the sides.

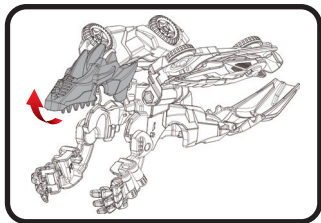

 7. Lift up the Dragon head armor.

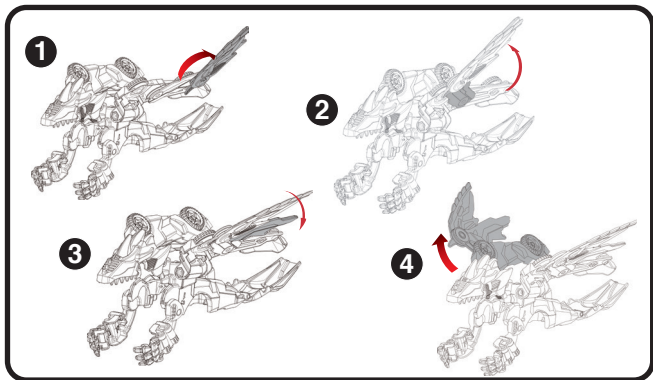


 8. Open and fully unfold all the wings.

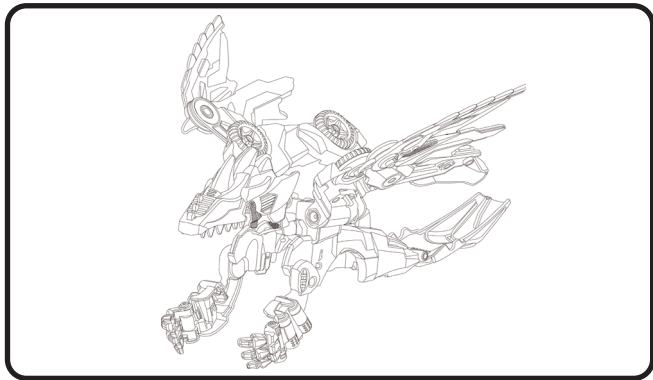


9. The T-Rex and Dragon Armor are now ready to be combined.

## Combine the T-Rex and Dragon Armor.

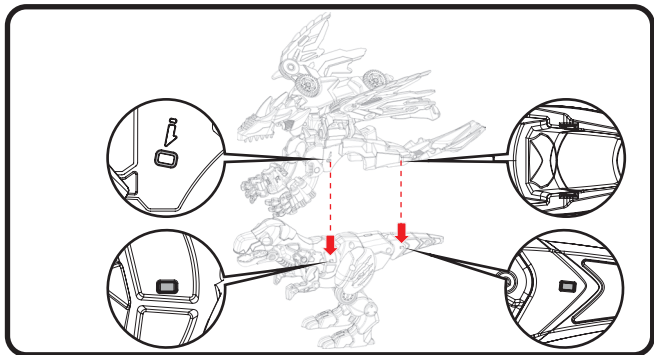 

 1. Put the Dragon Armor on the T-Rex.

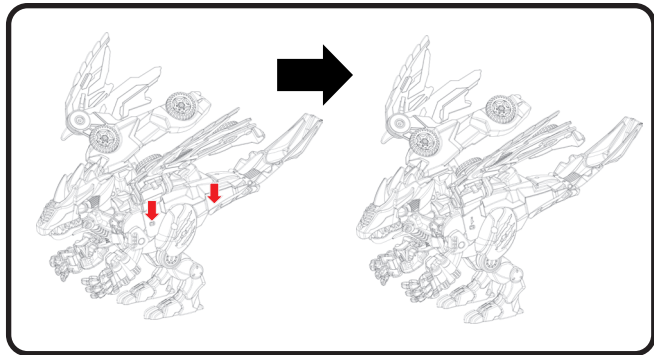

2. Overlap and lock the Dragon Armor on the T-Rex body. Make sure you hear a clicking sound. The unit is now in Armored-Up Dragon mode.

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

## IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **Supplier's Declaration of Conformity**

### **47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®  
Model: 5823  
Product Name: Switch & Go® Boost™ Thunder the T-Rex  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES(B)/NMB(B)

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***

***vtechkids.ca***

**Read our complete warranty policy online at  
*vtechkids.com/warranty*  
*vtechkids.ca/warranty***

