



ASSEMBLY INSTRUCTION

PHOENIX COLLECTION

D5399-10

MODEL : PHOENIX 78" DINING TABLE

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.

Please read all instructions carefully. See the hardware and furniture part listing for guidance. Be sure you have all parts listed before beginning assembly. Place all wooden parts on a clean, flat surface to protect the finish from scratches. Follow the diagram to assemble.


CAUTION

1. Do not fully tighten the nuts or bolts until the table is fully assembled.
2. Please tighten by hand, not by a drill. Overtightening will damage threads. Do not overtighten.
3. Keep all hardware out of the reach of children.

PARTS LIST				HARDWARE LIST			
ITEM	DESCRIPTION	SKETCH	QTY	ITEM	DESCRIPTION	SKETCH	QTY
A	TABLE TOP		1 PC	1	JCBB SCREW M8 x 2-6/8"		8 PCS
B	RIGHT SIDE FACING (RSF) LEG w/ LABEL "R"		2 PCS	2	SPRING WASHER M8 x 1/2"		8 PCS
C	LEFT SIDE FACING (LSF) LEG w/ LABEL "L"		2 PCS	3	FLAT WASHER M8 x 7/8"		8 PCS
				4	ALLEN KEY M5 (2-9/16")		1 PC

HARDWARE DIMENSIONS
VERIFICATION TOOL

STEP 1: Place the table top (A) upside down on a flat and soft surface. Assemble the table leg (B & C) to the table top (A) by using the Allen key (4) with hardware 1, 2, and 3. **Attention: DO NOT TIGHTEN THE SCREWS.

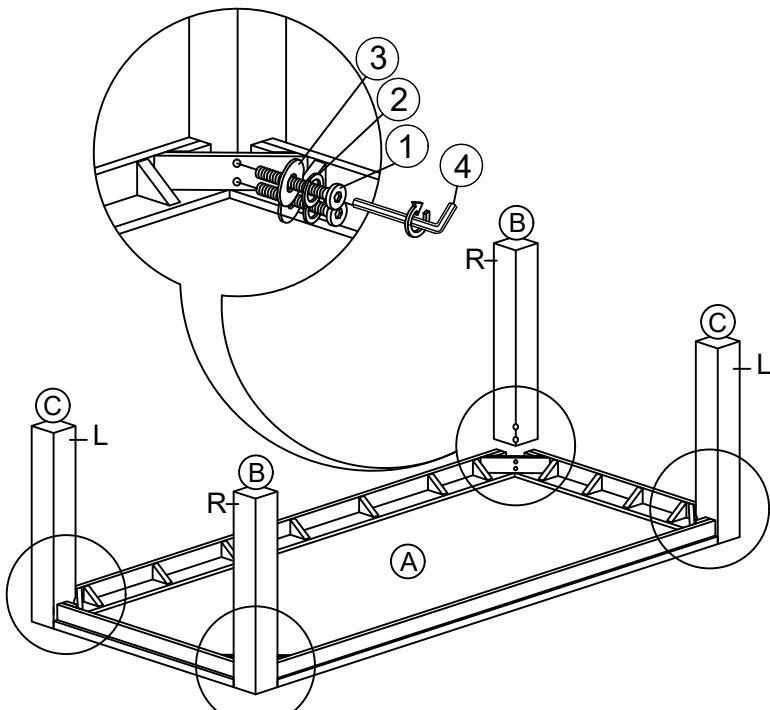

STEP 2: To level the table, stand the table up on a flat surface and tighten all the screws with Allen key (4).

FULLY SET-UP

