




PopSockets MagSafe® PopWallet, PopWallet+, Softgoods Wallet and Softgoods Wallet+

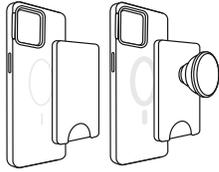

Snap on and off

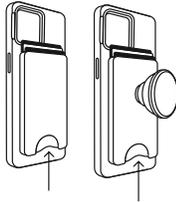


Push up

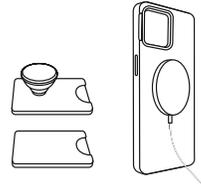

Remove to charge


How to swap

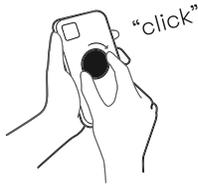

1. Press down and twist



2. Remove top

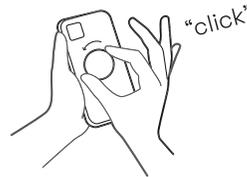

3. Swap on a new one


Works with MagSafe® compatible cases, or paired with the included magnetic adapter.

PopSockets is not responsible for damages due to improper use.


iPhone and MagSafe® are registered trademarks of Apple Inc., registered in the US and other countries and regions.

 CAUTION: This product contains magnets. Certain medical devices may respond to magnets when in close contact.


PopSockets MagSafe® PopWallet, PopWallet+, Softgoods Wallet und Softgoods Wallet+

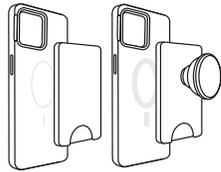

Aufstecken und
abnehmen

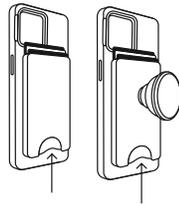

Hochschieben

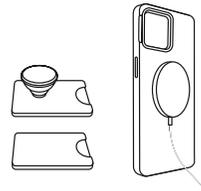

Zum Aufladen
abnehmen

So tauschen Sie sie aus



1. Nach unten drücken
und drehen



2. Oberteil
abnehmen



3. Neues Oberteil
aufsetzen

Geeignet für MagSafe®-kompatible Hüllen oder in Kombination mit dem mitgelieferten magnetischen Adapter.

PopSockets haftet nicht für Schäden durch unsachgemäßen Gebrauch.

iPhone und MagSafe® sind eingetragene Marken von Apple Inc. in den USA und anderen Ländern und Regionen.



ACHTUNG: Dieses Produkt enthält Magnete. Bestimmte medizinische Geräte können bei engem Kontakt auf Magnete reagieren. Fragen Sie Ihren Arzt um Rat.