Instruction Manual

Kidi Star™

DJ Mixer Pro™



INTRODUCTION

Thank you for purchasing the **VTech® Kidi Star™ DJ Mixer™ Pro**. Get in the DJ booth and create your own custom music mixes! Customize the built-in songs or play along with your own music. You can also build your loop for live performances and play 3 rhythm games that help to reinforce music skills. Jam, scratch and mix it up – you're the star!



① Disco Light On/Off Button
② Power Button
③ Mode Buttons
④ Turntable Sound Effects Buttons
⑤ Turntable
⑥ Record Button
⑦ Customize/Play Effects Buttons
⑧ Play/Pause Button
⑨ Sound Grid Buttons
⑩ Arrow Buttons
⑪ OK Button
⑫ Crossfader
⑬ Volume Control
⑭ Bluetooth® Button
⑮ Select Music Style Button
⑯ Tempo Button
⑰ Select Keyboard Style Button
⑱ Customize Keyboard Button
⑲ Keyboard Keys
⑳ AC Adapter Jack
㉑ Audio-Out Jack
㉒ Stand for Music Player
㉓ Build in microphone

INCLUDED IN THIS PACKAGE

- One **VTech® Kidi Star™ DJ Mixer™ Pro**
- One Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.


ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet. Il est conseillé de conserver ce manuel d'utilisation car il comporte des informations importantes.

NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks :

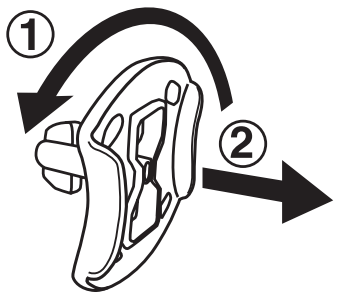


① Turn the packaging locks counterclockwise several times.
② Pull out the packaging locks and discard.

GETTING STARTED

NOTE
The product is in Try-Me mode in the packaging. Rotate the Try-Me lock (located at the bottom of the unit) counter-clockwise to exit Try-Me mode, then pull out and discard the Try-Me lock. If the unit powers down during play, please install a new set of batteries.

BATTERY REMOVAL AND INSTALLATION

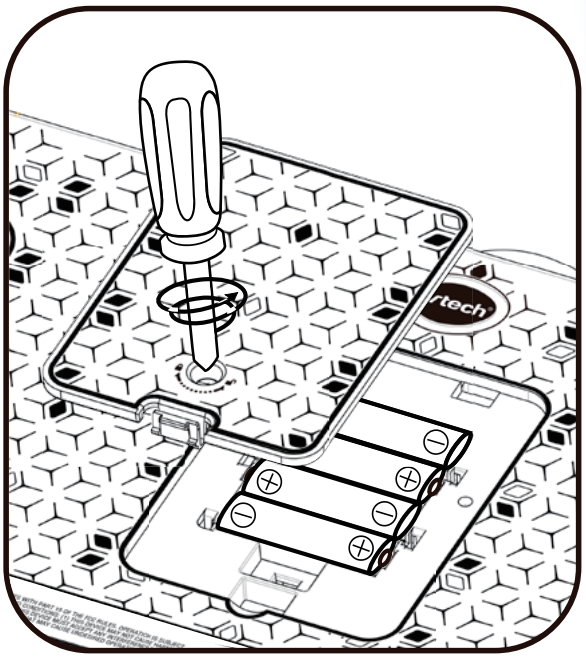

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old battery by pulling up on one end of each battery.
4. Install 4 new AA (LR6/AM-3) batteries following the diagram inside the battery compartment. (For best performance, alkaline batteries are recommended. Rechargeable batteries are not guaranteed to work with this product.).
5. Replace the battery cover and tighten the screw to secure.

⚠ WARNING:
Adult assembly required for battery installation.
Keep batteries out of reach of children.

⚠ ATTENTION :
Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:


- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

POWER ADAPTER CONNECTION 

- Make sure your **VTech® Kidi Star™ DJ Mixer™ Pro** is turned **Off**.
- Locate the **AC Adapter Jack** on the side of the unit.
- Connect an AC adapter (not included) to the **AC Adapter Jack**.
- Plug the adapter into a power outlet.
- Press the **Power Button** to turn the unit **On**.

Note: When the toy is not going to be used for an extended period of time, unplug the adapter.

SAFETY INFORMATION FOR ADAPTERS FOR TOYS

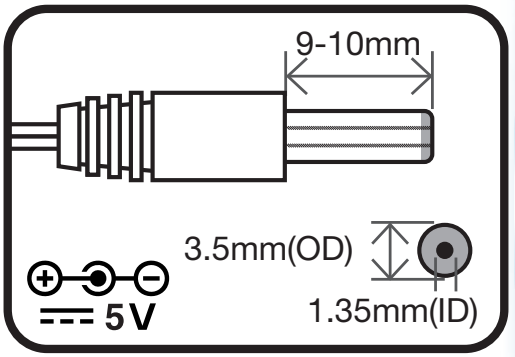

We recommend a power supply (AC/DC adapter) of the following specifications for use with this toy:


AC/DC adapter, output voltage: 5V, output current: 1000mA or above, with 3.5mm/1.35mm plug, (positive centre).

- This toy should only be used with a power supply intended for toys.
- The power supply is not a toy.
- This toy is not intended for use by children under 3 years old.
- Do not connect the toy to more than the recommended number of power supplies.
- Never clean a plugged-in toy with liquid.
- Please examine the power supply periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the supply cord, output cord, plug, blades, housing, or other parts) and that, in the event of such conditions, the power supply should be appropriately discarded.
- Power supplies for toys are not intended to be used as toys, and the use of these products by children must be under the full supervision of parents.

PRODUCT FEATURES

1. Power Button

Press the **Power Button** to power **On** the unit. Press the button again to power **Off** the unit.

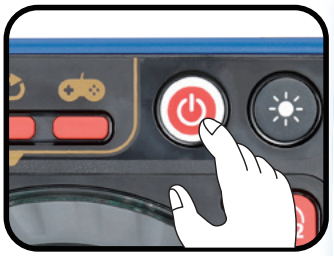

2. Audio-Out Jack

Connect the mixer to external speakers or headphones using the **Audio-Out Jack** (cable not included).




3. AC Adapter Jack

Connect the mixer to AC power (adapter not included).



4. Mode Buttons

Press the **Mode Buttons** to change the mode (see “Modes”).

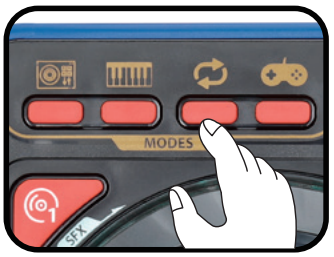

5. Turntable

Spin the **Turntable** back and forth to add sound effects to your music.




6. Turntable Sound Effects Buttons

Press a **Turntable Sound Effects Button** to change the **Turntable** sound effect.




7. Sound Grid Buttons

Press the **Sound Grid Buttons** to choose the instruments or sound effects, or to play games in Game mode.

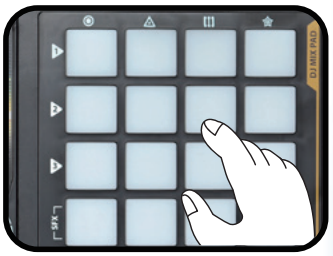

8. Tempo Button

In Mixer mode, press the **Tempo Button** then press the **Arrow Buttons** to adjust the tempo of built-in audio tracks.

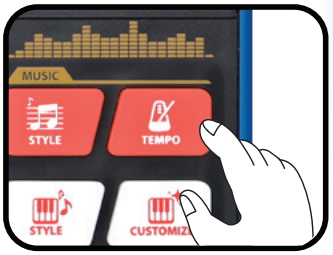

9. Customize Sound Effects Buttons

Press and hold a **Customize Sound Effects Button** to record your own short sound effect. When the microphone countdown starts on the screen, make a sound. Release the button when you have finished recording. You can record up to 3 seconds. Press the button to hear your customized sound effect.




10. Arrow Buttons

Use the **Arrow Buttons** to change the music style and make selections.




11. OK Button

Use the **OK Button** to confirm selections.

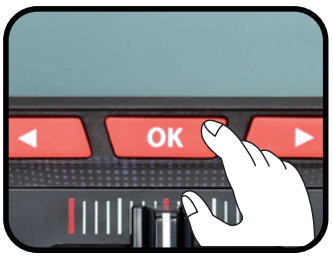


12. Keyboard Keys

Press the **Keyboard Keys** to play your melody.

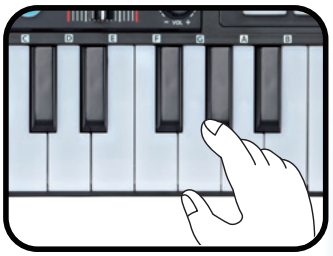

13. Keyboard Style Button

Press the **Keyboard Style Button** to change the keyboard sound. There are 5 built-in sounds, and you can customize your own.

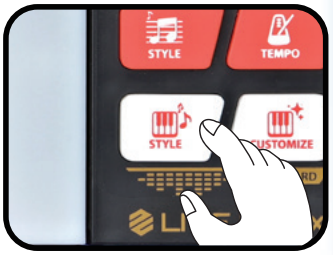

14. Customize Keyboard Button

Press and hold the **Customize Keyboard Button** to record your own keyboard sound. When the microphone countdown starts on the screen, make a sound into the mic. Release the button when you have finished recording. You can record up to 3 seconds. Choose Keyboard Style 6 to play your customized keyboard sound on the **Keyboard Keys**.




15. Disco Light On/Off Button

Press the **Disco Light On/Off Button** to switch the **Disco Light On** or **Off**.


NOTE

The **Disco Light** does not work in Games mode.

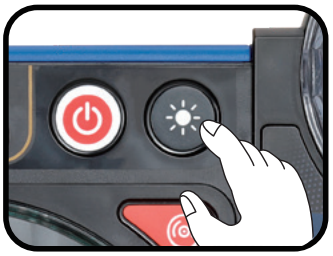

16. Bluetooth® Button

Press the **Bluetooth® Button** to connect to a nearby device via Bluetooth® wireless technology.

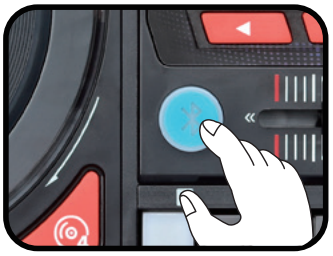

Bluetooth® Connection

- Press the **Bluetooth® Button** , then it will light up and flash.
- Enter the Bluetooth® interface of your device and begin searching for Bluetooth® devices.
- Select “VTech 5911 DJ Mixer” when you see it displayed on your device.
- Enter the PIN number from the DJ Mixer on the device.
- While Bluetooth® is connected, the **Bluetooth® Button** light will remain on.
- The DJ Mixer will automatically search and connect to the last Bluetooth® device that it was connected to before. You do not need to enter the PIN number again.
- To disconnect Bluetooth®, press the Bluetooth® Button again.

NOTE

If your music device does not support a PIN code connection, you can disable the PIN by pressing the **Arrow Buttons**.


Please use the PIN-secured connection when possible. VTech® strongly recommends keeping the PIN security on for the use of Bluetooth® transmission to avoid any connection by an unauthorized device. The disabling of the PIN security should only be used when the connection of an external device with PIN security is impossible. The use of the toy when PIN security has been disabled should be under the supervision of an adult.

17. Crossfader

The **Crossfader** controls the balance between audio elements. To make the Bluetooth music louder, slide the **Crossfader** to the left.
To make the **Sound Grid Buttons** louder, slide it to the right.



18. Record Button

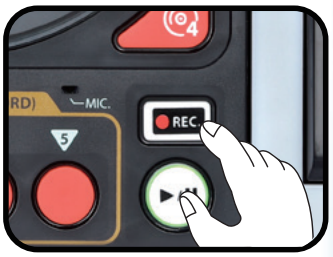

Press the **Record Button** to start recording. The system will record the sound from the **Turntable, Keyboard Keys**, **Sound Grid Buttons**, and **Customize Sound Effects Buttons** (see note below). When you finish the recording, press the **OK Button** to save your mix.

Note: Bluetooth® audio source will not be recorded.

19. Play/Pause Button



Use the **Play/Pause Button** to play back and pause your recorded mixes, keyboard melodies and loops.

NOTE

When recording a new mix, your previous recording in the current mode will be overwritten.


If your recording includes customized sound effects or keyboard sounds, the most current customized sounds will play back.

20. Playback/Pause Button



Press the **Playback Button** to listen to your mix. Press it again to pause the playback.

21. Volume Control

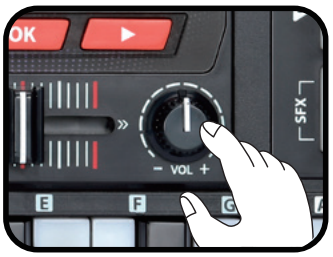

Use the **Volume Control** to adjust the overall system volume.


22. Automatic Shut-Off

To preserve battery life, the **Kidi Star™ DJ Mixer™ Pro** will automatically power down after 10 minutes without input. The unit can be turned **On** again by pressing the **Power Button**.

Modes

1. Mixer

Create custom mixes with any of the 15 built-in tracks. Adjust all aspects of each song, or play along with your own music.

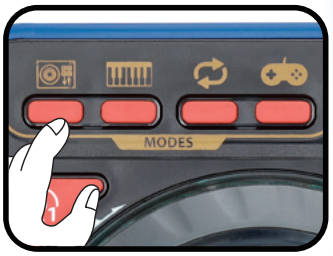

Audio Controls

- The top 3 rows of **Sound Grid Buttons** let you choose different for your mix. You can make one selection from each column (or leave it off). You can change up each song with different combinations!




- In the bottom row, press the first three buttons to use built-in sound effects.



- The **Vocal Track Button** on the **Sound Grid** will add or remove singing from the mix for all built-in songs.


- Press the **Music Style Button** or use the **Arrow Buttons** to change the song. There are 15 different songs!

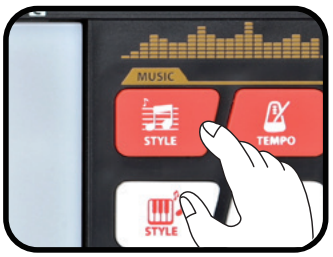

- Use the **Crossfader** to adjust the volume balance between Bluetooth® audio source and the system's built-in sounds.




- Press the **Tempo Button** then press the **Arrow Buttons** to adjust the tempo of built-in audio tracks.

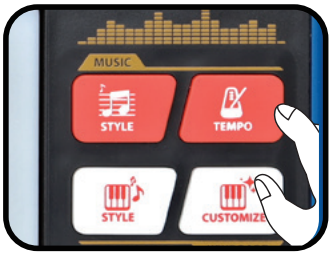




- Use the **Keyboard Keys** to add your own melody into the music.

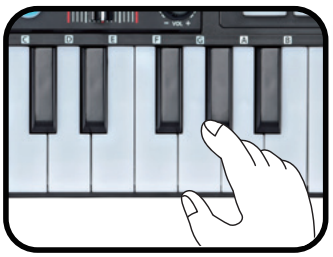


- Press the **Keyboard Style Button** to choose the Keyboard instrument.

2. Keyboard Fun


Press the **Keyboard Keys** to create your own melody. Press the **Keyboard Style Button** to choose the Keyboard instrument.
You can also press the **Sound Grid Buttons**, **Customize Sound Effects Buttons** or spin the **Turntable** to add sound effects.

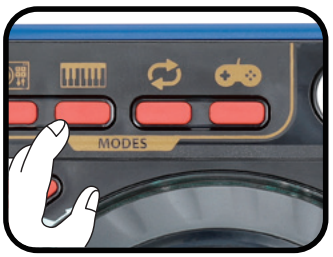

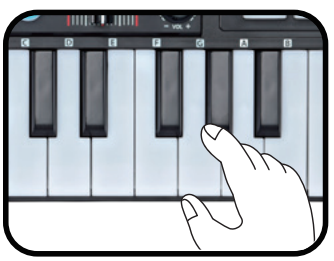




3. Loop Builder

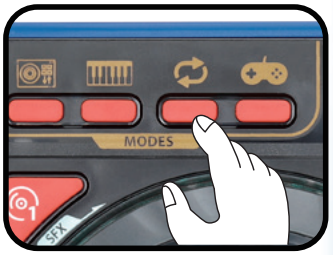

Build an 8-beat loop for live performance. Press the **Record Button** to start building the loop. An 8-beat rhythm will keep looping. Press the **Sound Grid Buttons, Keyboard Keys**, or spin the **Turntable** to add sounds to the loop. When you're done, press the **OK Button** to stop recording, then press the **Play Button** to play the loop back in your live performance.

4. Games

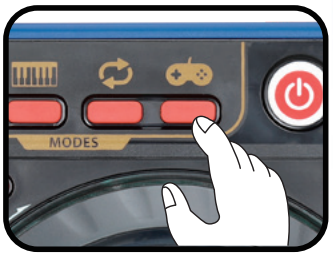

Press the **Arrow Buttons** to choose among 3 games, then press the **OK Button** to start the game.

- **Game 1 - Beat Dropper**
  The lights on the **Sound Grid Buttons** will "fall" from the top to the bottom row. When a light reaches the bottom row, "catch" it by pressing the button. Catch at least half of the lights to win the game.

- **Game 2 - DJ Pro**
  Use the whole device to play a rhythm game. Remember the rhythm on the **Sound Grid Buttons**, **Keyboard Keys**, **Turntable** and **Crossfader**, and then repeat it. Repeat at least half of the patterns to win the game.

- **Game 3 - Keyboard Beats**
  The **Keyboard Keys** will light up in a pattern. Remember the pattern, then play it back and repeat it by using the **Keyboard Keys**. Master 50% or more patterns to win the game.

Song Lyrics

SONG 1

Get up! It's time to dance!
If you don't know how, sit back and relax
Just move your body from left to right
And soon you will be dancing, all night!

SONG 2

Let's party now, and have a great time
Everybody loves to dance and move around
Lift your hands up high, give it a try
You can reach the sky!

SONG 3

Mix up the beat, get out of your seat
And tell me what you want to hear
If the rhythm is right, then stomp your feet
The DJ's gonna make you feel!

SONG 4

Hot sand, good friends, food and fun
Summer vibes for everyone
Groovin' with my friends, we're having fun
Summer vibes, out in the sun

SONG 5

Laid back rhythm is cool, don't rush it.
Slow it down, find the groove, don't crush it.
Lean back, sway and move, with a rhythm so cool it must be blue.
When tomorrow comes, it's gonna be just as cool!

SONG 6

Rhythm is right, lights are tight
We made this beat

To dance in the street.
With everyone we meet
Ooh, the bass, feeling so right
It can't be beat, when everybody's dancing! Yeah!

SONG 7

Play that remix, don't care if it's perfect
Give it your best, see that it's worth it
If something's not quite right, that's OK
Just play it loud anyway!

SONG 8

Sun goes down over ocean waves (oo - ooh)
It's cooling down, now it's time to play (aa-ay)
Having fun, with all my friends (yea – aay)
Let's play that beat again!

SONG 9

Think fast, move quick
Make the beats that move your feet
Hit the pads, feel the beat
Keep the groove, it's moving me
Come along, and you will see
What the DJ does for me
This music is groovin',
This music's right for me!

SONG 10

Set the vibe, just relax
We're bringing back that old time energy
Can you feel it?
One more time, just sit back
Groovin with an old-time memory
It's like a dream!

SONG 11

The beat is groovin' right!
The vibe is feelin' positive
It's so laid back and energetic!
Now's the time to find the beat and move your feet
Let's dance into the night!

SONG 12

It's time to move (time to move),
it's time to groove (time to groove)
It's time to dance, like no one's watching you!
Just feel that beat (feel that beat),
beneath your feet (beneath your feet)
And dance!

SONG 13

Feel that rhythm, keep on groovin', it's time to let it out
We are dancin', and we're singin' and we're never gonna stop!
Move your arms, and shake your legs,
Follow along with me with lots of energy, yeah!

SONG 14

Doesn't matter if we have a fun day
Doesn't matter if we play a game
All that matters is we're together
You and me, the best of friends

SONG 15

Mix it up! We love that sound!
Twist it up! Everybody's moving!
Mix it up! We love that sound!
Twist it up! Everybody's groovin'!

IMPORTANT ADDITIONAL INSTRUCTIONS:

Ecodesign Information	(EU) 2023/826 amending Regulation (EC) No. 1275/2008
Manufacturer's name	VTech®
Product type	Product
Model No.	5911
Power consumption in off mode (Watt)	0.2 W
Default time to switch to off mode (minutes)	10 minutes
Adaptor Information	AC/DC adaptor, Conform to the ERP norm, DC output 5V/1A

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit is not working properly, install a new battery.

TROUBLESHOOTING

If there is a pairing problem with your Bluetooth® device, please follow these steps:

Please ensure the **Kidi Star™ DJ Mixer™ Pro** is not in Try-Me mode before attempting to pair to a Bluetooth® wireless connection.

1. On your Bluetooth® enabled device, please go to Bluetooth® settings. If “DJ Mixer” is found in your list of connected, paired or saved devices, please “forget” or “unpair” it.
2. Disable and enable Bluetooth® or restart your device.
3. Turn the DJ Mixer **Off** and **On** and repeat the pairing process.If for some reason the unit stops working or malfunctions, please follow these steps:

a. Please turn the unit **Off**.

b. Interrupt the power supply by removing the batteries.

c. Let the unit stand for a few minutes, then replace the batteries.

d. Turn the unit **On**. The unit should now be ready to use again.

e. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please contact our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1) L'appareil ne doit pas produire de brouillage;

2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Bluetooth® Statement

The ***Bluetooth***® word mark and logos are registered trademarks owned by the ***Bluetooth***® SIG, Inc. and any use of such marks by **VTech**® is under license. Other trademarks and trade names are those of their respective owners.

RF Warning Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name:	VTech®
Model:	5911
Product Name:	Kidi Star™ DJ Mixer™ Pro
Responsible Party:	VTech Electronics North America, L.L.C.
Address:	1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES(B)/NMB(B)

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com

vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

© 2026 VTech.
All rights reserved.
IM-591100-000
Version:0