THE LITTLE TIKES COMPANY EXPRESS WARRANTY PROGRAM

The Little Tikes Company ("Company") makes fun, high-quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year from the date of purchase or date of delivery. A dated sales receipt or gift receipt, and a dated delivery confirmation document for product purchased online, is required as proof of purchase or delivery. Approval of any claim is at the sole reasonable discretion of the Company. The only remedies available under this warranty will be either replacement of the defective part, replacement of the product, or exchange for a different product of the same or approximately the same value. You also have the option to return the product to the retailer from which it was purchased according to the retailer's return policy, which may include exchange or refund.

This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, product previously owned, cosmetic issues such as fading or scratches from normal wear, damage by battery leakage not caused by a manufacturing defect in the product, or any other cause not arising from defects in material and workmanship. Company cannot be held responsible for any damage that may arise from the use of a damaged unit.

These are limited warranties and give you specific legal rights. You may also have other rights, which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. TO THE EXTENT PERMITTED BY LAW, ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE 30-DAY PERIOD OF THIS EXPRESS WARRANTY.

Outside the USA and CANADA: Contact place of purchase for warranty service.

Please keep this manual as it contains important information.
Illustrations are for reference only. Styles may vary from actual contents.

© 2026 The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance, not otherwise owned, are the property of Little Tikes.

Printed in China

US/CA - Little Tikes Consumer Service
2180 Barlow Road, Hudson, Ohio 44236 U.S.A.
Phone: 1-800-321-0183 / blog.littletikes.com/little-tikes-contact-form

UK - MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton Keynes, MK8 0ES, Bucks, UK.
Little Tikes Consumer Services
P.O. Box 2040 Hockley, Essex, SS5 4BF
Phone: 0 800 521 558 / E-mail: support@littletikesstore.co.uk

EU - MGA Entertainment (Netherlands) B.V.
Baronie 68-70, 2404 XG, Alphen a/d Rijn, The Netherlands
Tel: +31-172-758-010 / Email: klantenservice@mgae.com

AU/NZ - Imported by MGA Entertainment Australia Pty Ltd.
Suite 5.05, 32 Delhi Road, Macquarie Park NSW 2113. AU.
Tel: 1 300 059 676 / Email: au-sales@mgae.com

0426-0-E/INT


22 PAP

www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au

Kitchen Sink

SKU: 646867

AGES 3+
ADULT ASSEMBLY REQUIRED

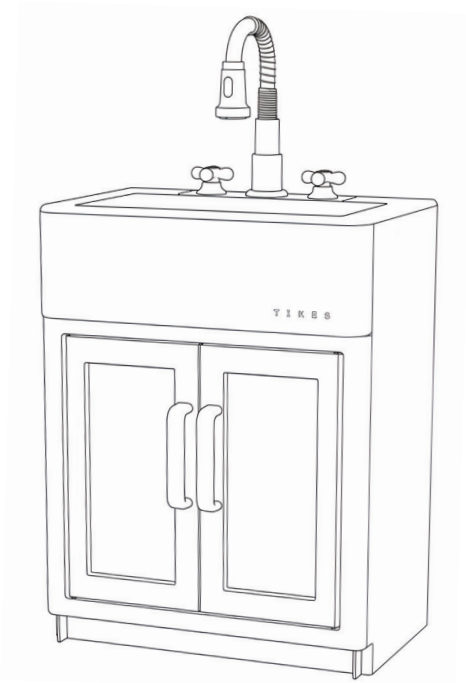

Thank you for choosing the Little Tikes® Kitchen Sink.
We strive to provide a durable, easy-to-assemble toy that is made to last, giving your child years of imaginative, engaging fun!

⚠ WARNING


- ADULT SUPERVISION REQUIRED when children are playing with water.
- ADULT ASSEMBLY IS REQUIRED.
- DO NOT allow children to play with water near any electrical source or apparatus.
- Keep out of reach of small children.


IMPORTANT INFORMATION

- Before beginning, cover the play area to protect from possible water damage.
- Do not use extremely hot water. (over 109.4˚F/ 43˚C).
- Thoroughly drain water and make sure the sink is dry after play and before storing.
- Make sure no water is left in the water tank.
- Make sure sink is thoroughly dry before storing.


GETTING STARTED

Setup the sink before playing. Make sure to cover any surface to prevent any water damage.

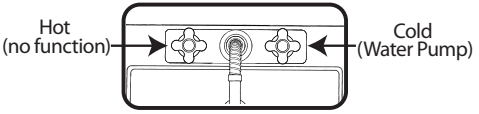

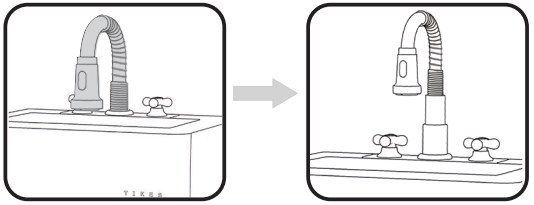


Pull the faucet hose up at the base to extend it.
Note: The sink will not function if not extended.

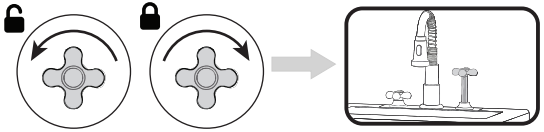


TO OPEN: Turn the right knob labeled COLD counterclockwise.
TO CLOSE: Press down and twist to lock it in place.


USING THE SINK

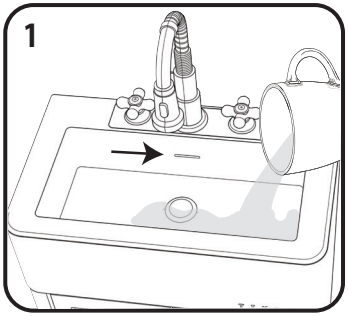

Pour water into the sink up to the water line. If too much water is poured it will sit inside the sink.
Note: Water tank holds up to 50 mL of water.

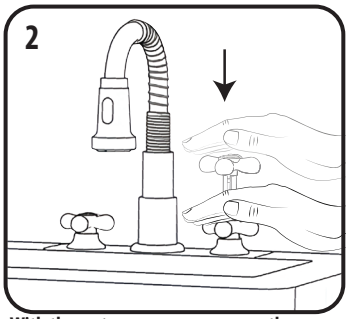


With the water pump open, press the pump up and down to begin pumping water.

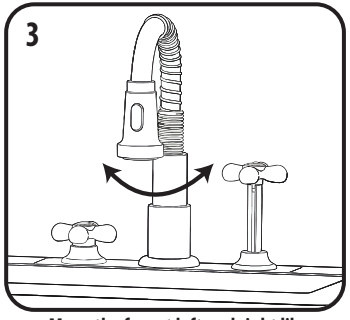

Move the faucet left and right like a real sink.

EMPTYING THE SINK

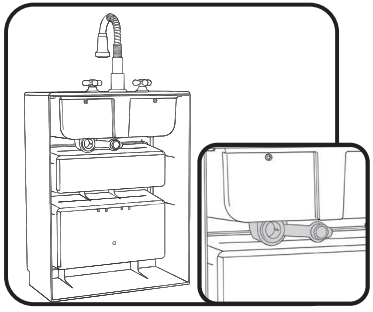

Empty the water tank by unplugging the drain from the back of the sink.
NOTE: An adult can tilt the sink backwards to help the water drain out.