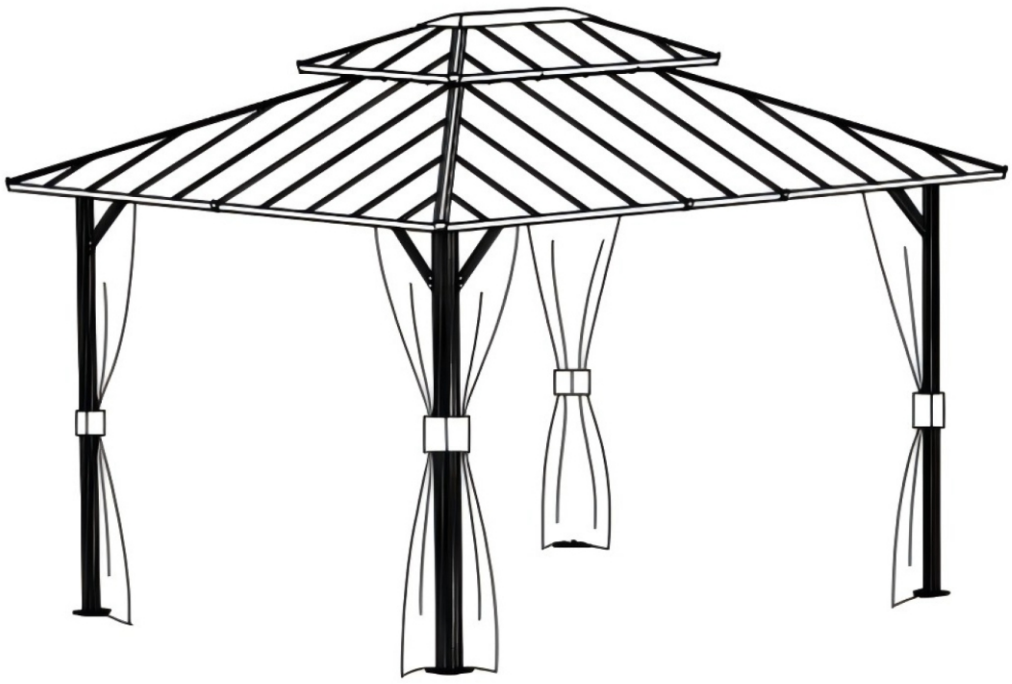
ASSEMBLY INSTRUCTION

10×12FT Patio Gazebo (B12-GA)



[Scan for Installation Video]

- The product comes in three packages.
- Please install after receiving all packages.

Pre-assembly



1.Two or more people are required for assembly.



2.You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4.You may need a safety hat.



5.Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7.You may need a safety goggle.



8.Do not fully tighten screws prior to complete assembly.

Warning & Attention


-Assemble this product on a flat, level ground. Uneven ground may make assembly difficult;

-Assembly is easier with three or more people;

-After assembly, check that all screws are fully tightened to prevent parts from loosening or coming apart.




⚠Use bolts to secure the frame to the ground to against the strong wind.





BOX1

Label	Part Image	Qty	Spare
A		4	
J1		2	
J2		2	
J3		4	
J4		4	





Label	Part Image	Qty	Spare
J5		2	
K1		4	
K2		4	
F4		8	

BOX2

Label	Part Image	Qty	Spare
B1		2	
B2		2	
B3		2	
B4		2	
C1		4	
C2		4	
E1		4	
E2		4	
F1		4	
F2		8	
F3		6	
G1		4	
G2		6	
G3		6	
G4		4	


Label	Part Image	Qty	Spare
G5		4	
G6		2	
G7		4	
K3		6	
K4		4	
L1		1	
L2		1	
M		4	
N1		8	
N2		2	
S		4	
Q1		2	
Q2		2	
R1		1	
R2		1	




BOX1


Label	Part Image	Description	Qty	Spare
H1		M6X15	238	12
H2		M6X25	14	1
H3		M6X40	10	1
H4		M6X80	16	1
H5		30-M6X15	16	
H6		M6	294	14
H7		RUBBER	2	
H8			72	5



Label	Part Image	Description	Qty	Spare
H9			34	3
H10			2	
H11		M6	16	1
HQ1		4X140	8	
HQ2		M8X70	8	
HW1		4MM-100	2	
HW2		10-14	1	

BOX3

Label	Part Image	Qty	Spare
P1		4	
P2		4	
P3		4	
P4		4	
P5		4	

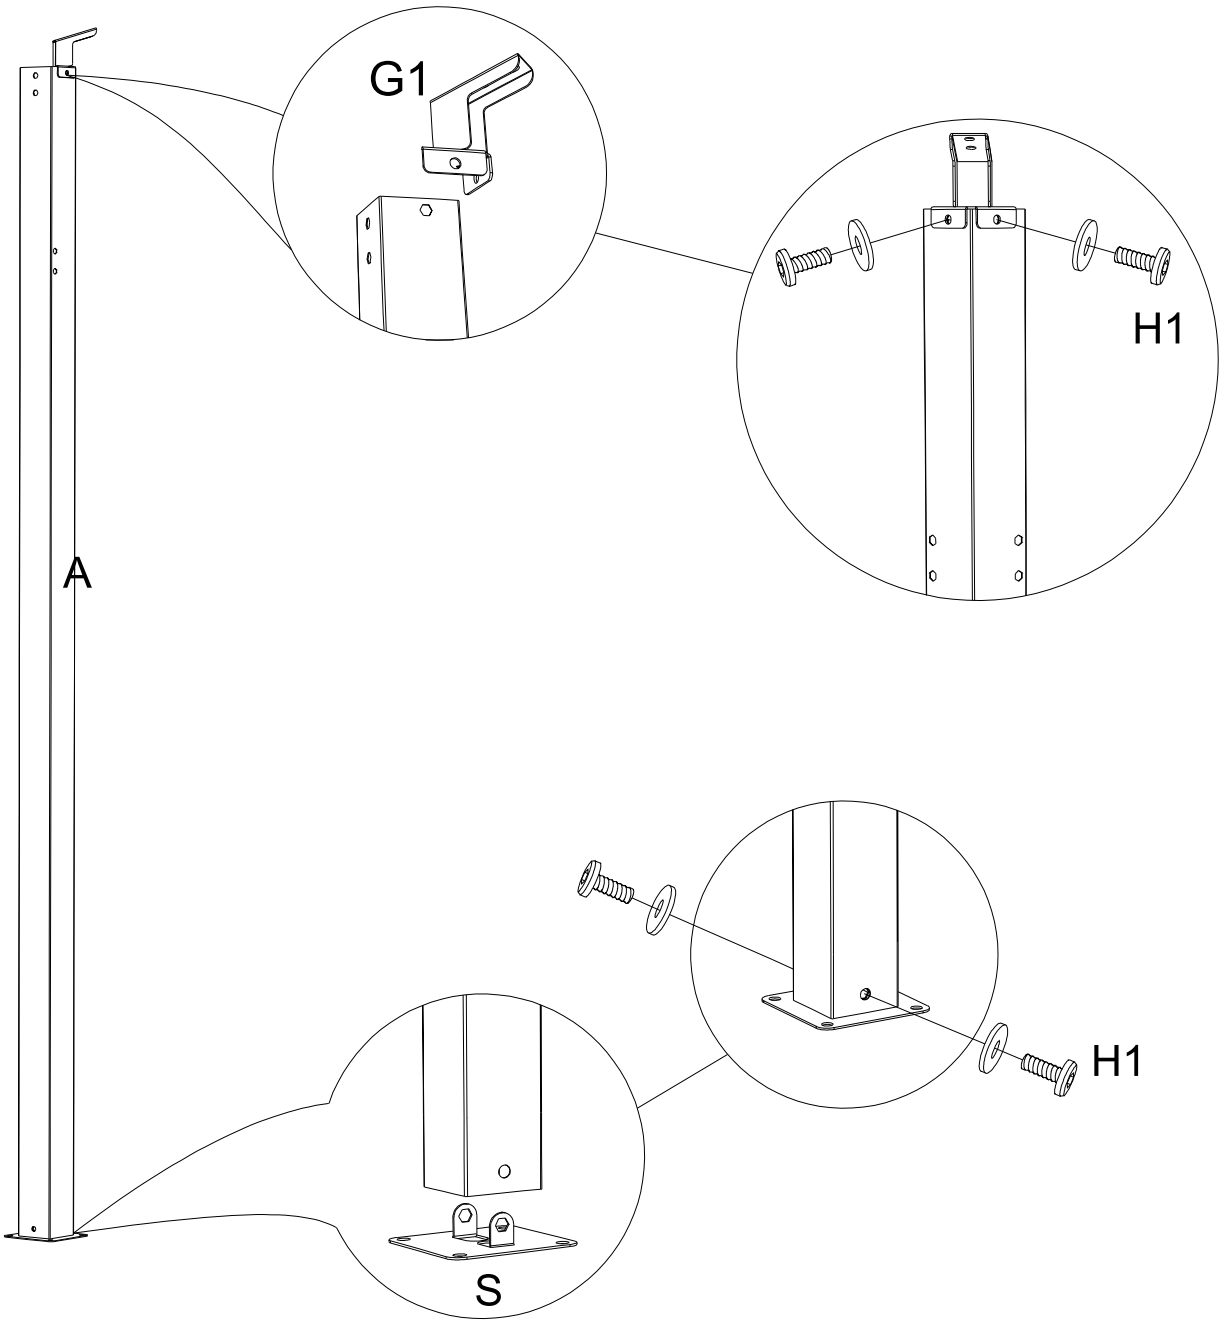
Label	Part Image	Qty	Spare
P6		4	
P7		6	
P8		2	
		2	

A		4
G1		4
S		4



H1		M6X15	16
H6		M6	16

Step 1：

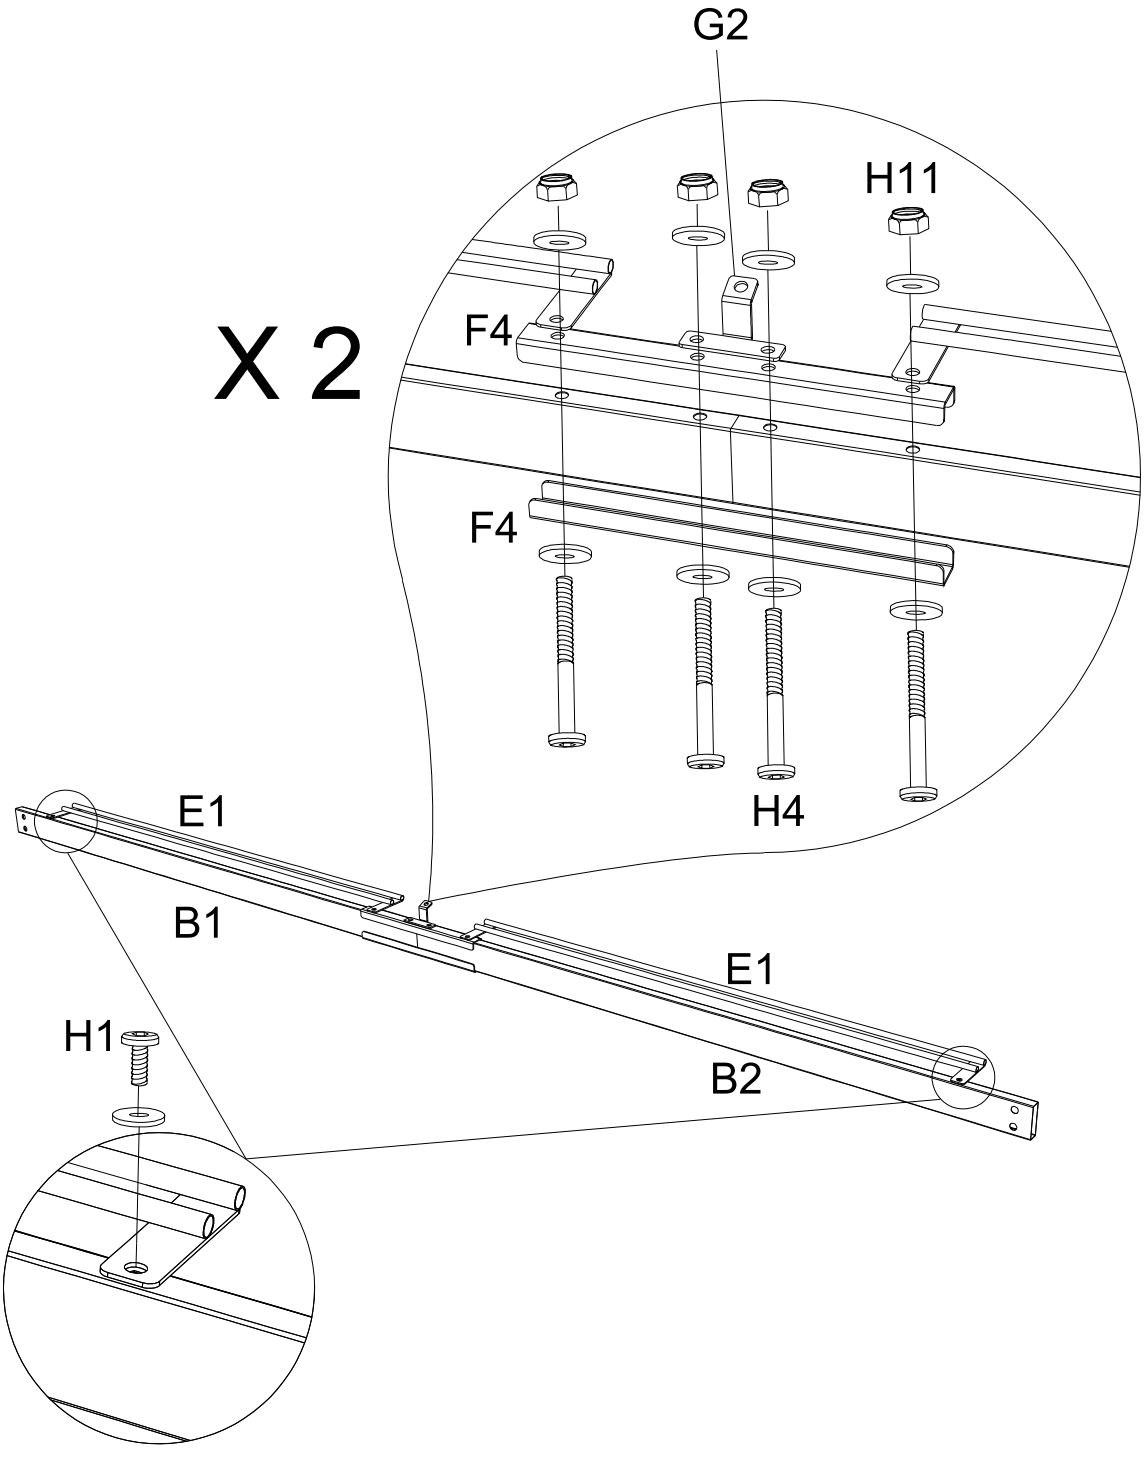
X 4






B1		2
B2		2
F4		4
G2		2

E1			4
H1		M6X15	4
H4		M6X80	8
H11		M6	8
H6		M6	20

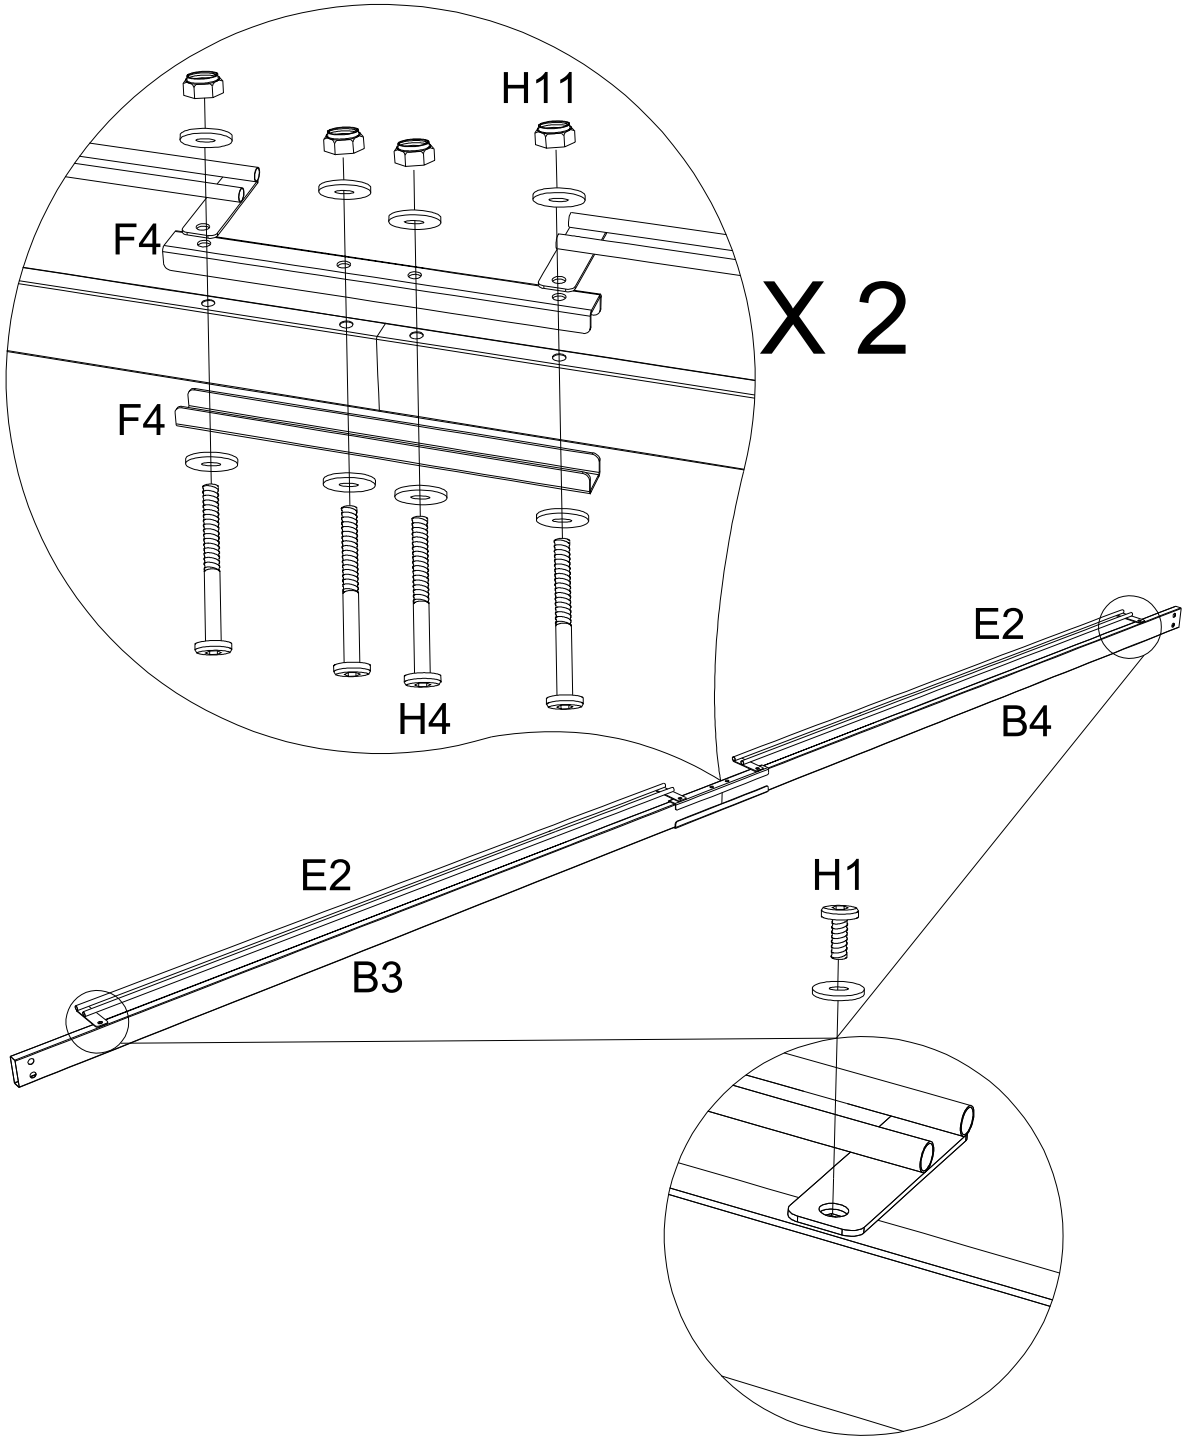
Step 2：



B3		2
B4		2
F4		4
E2		4

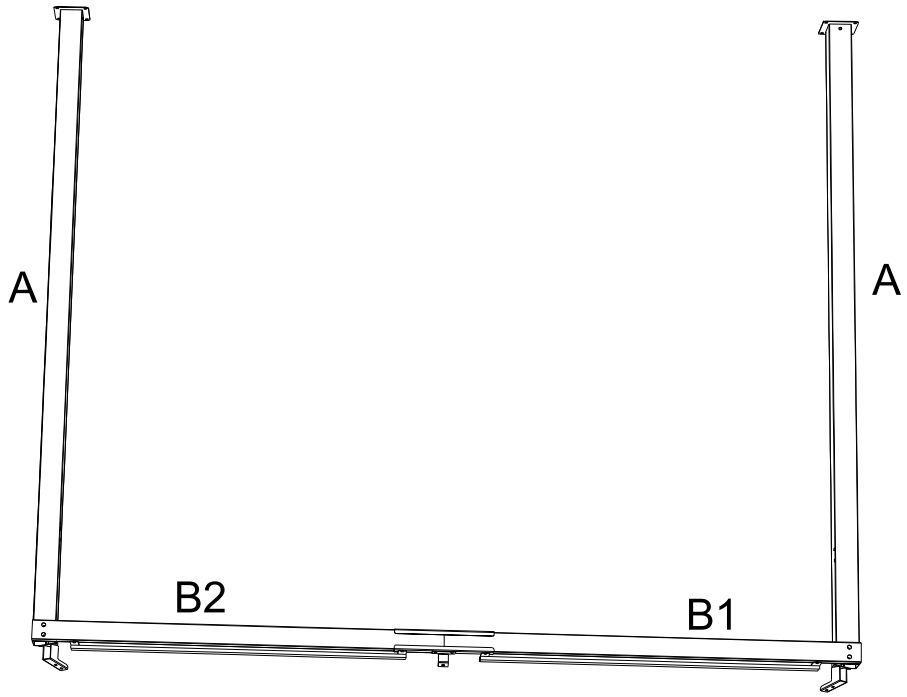
H1		M6X15	4
H4		M6X80	8
H11		M6	8
H6		M6	20

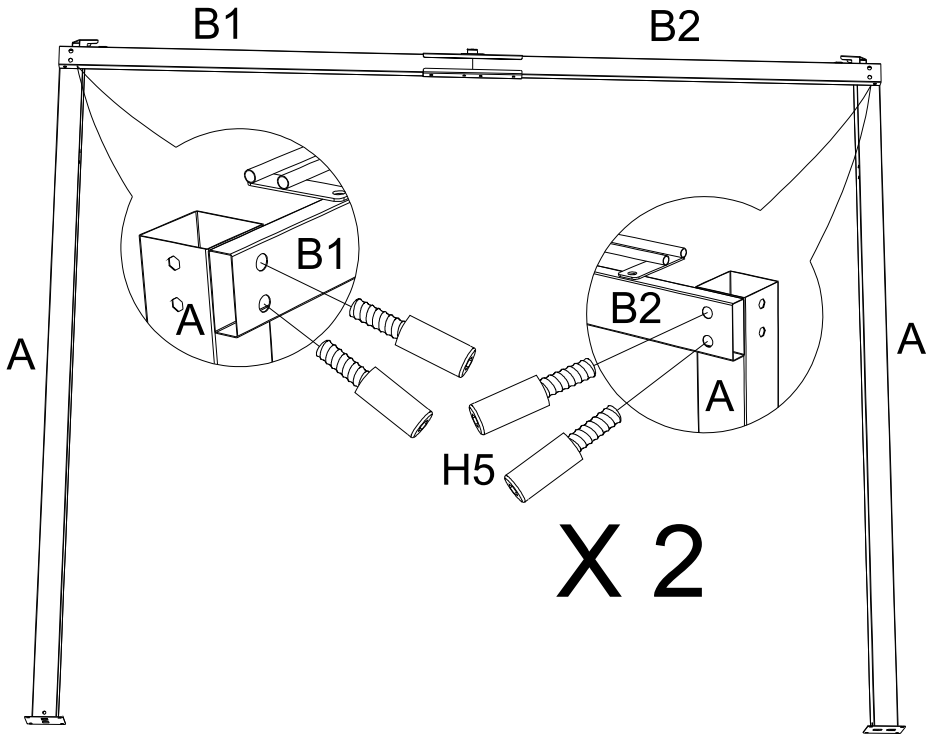
Step 3：




H5		30-M6X15	8

Step 4：

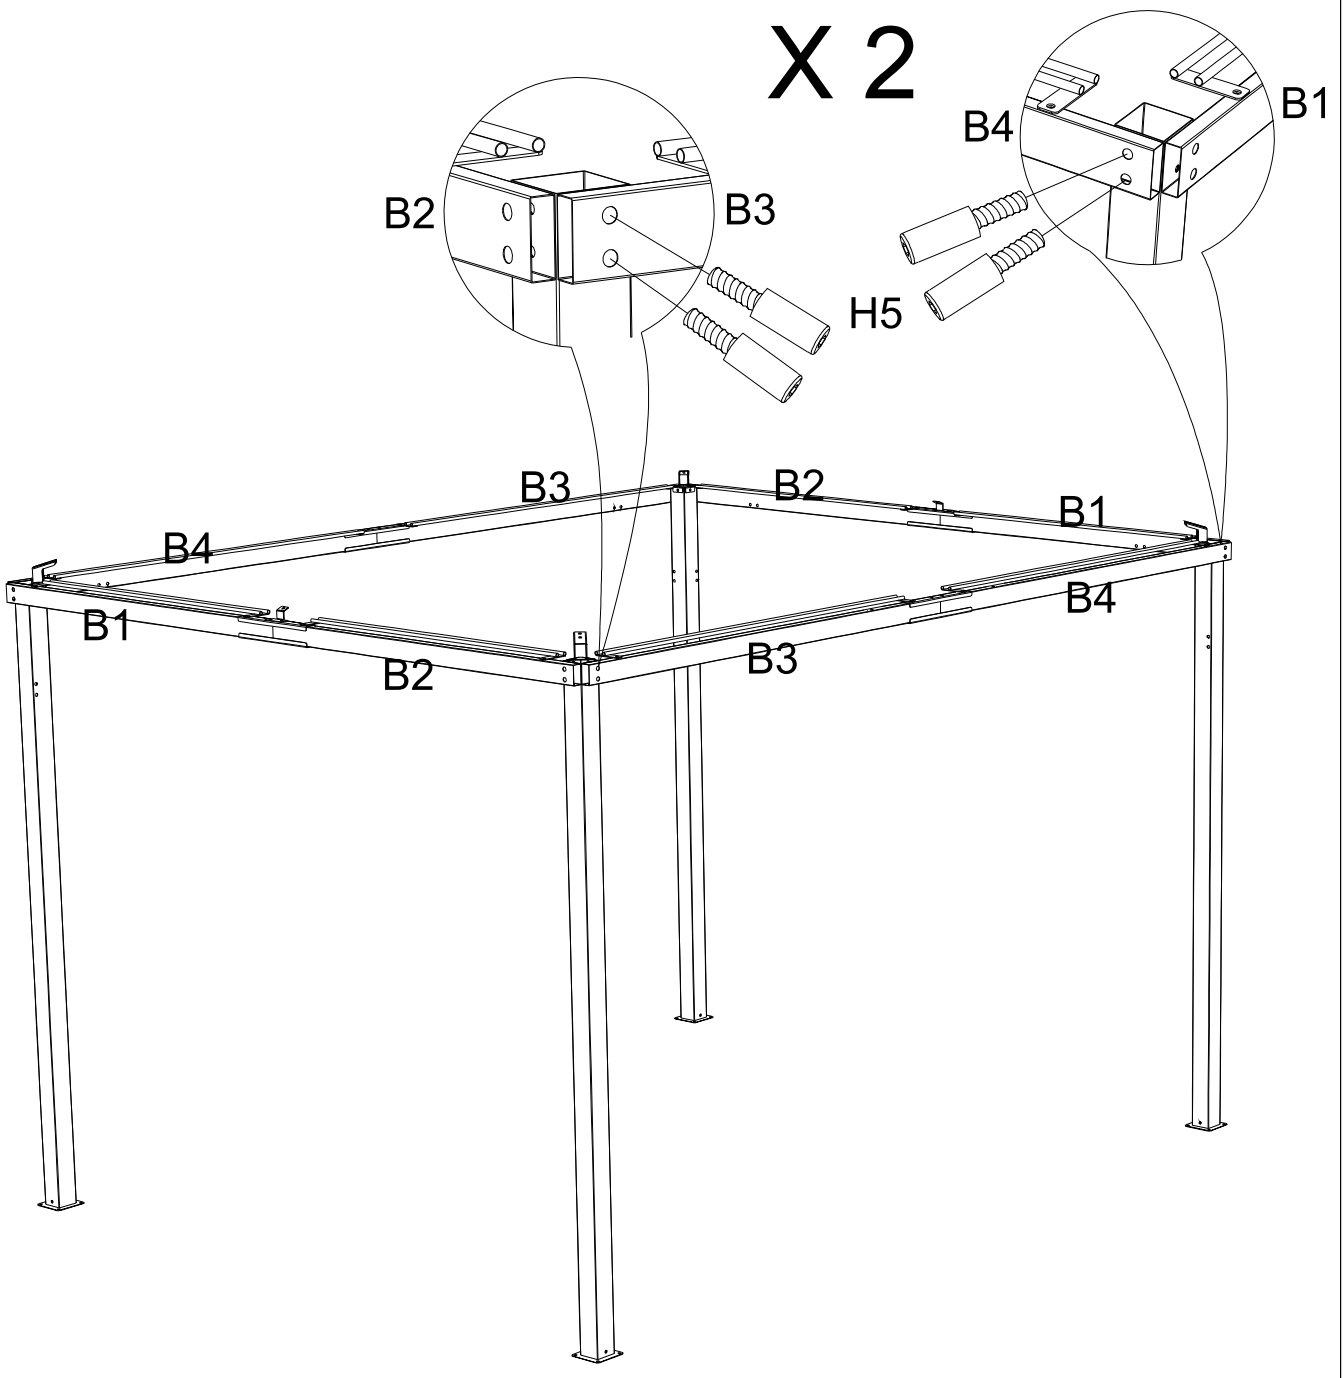





X 2

H5		30-M6X15	8

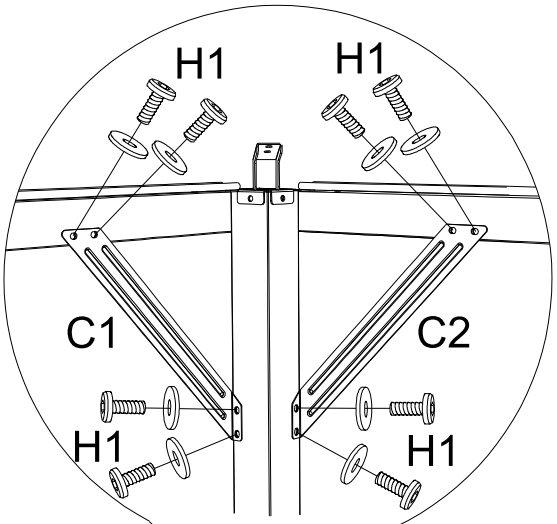
Step 5：



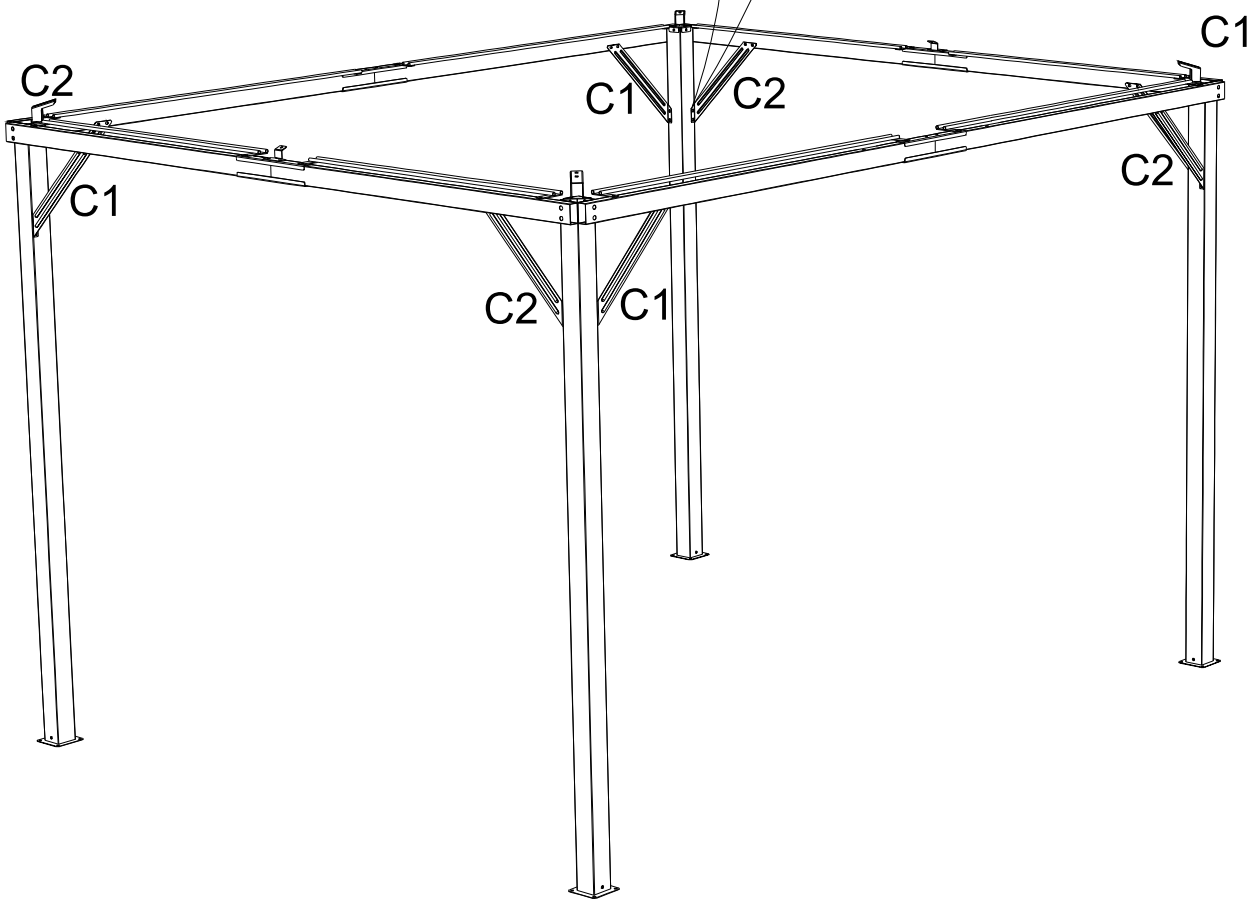
C1		4
C2		4


H1		M6X15	32
H6		M6	32

Step 6：



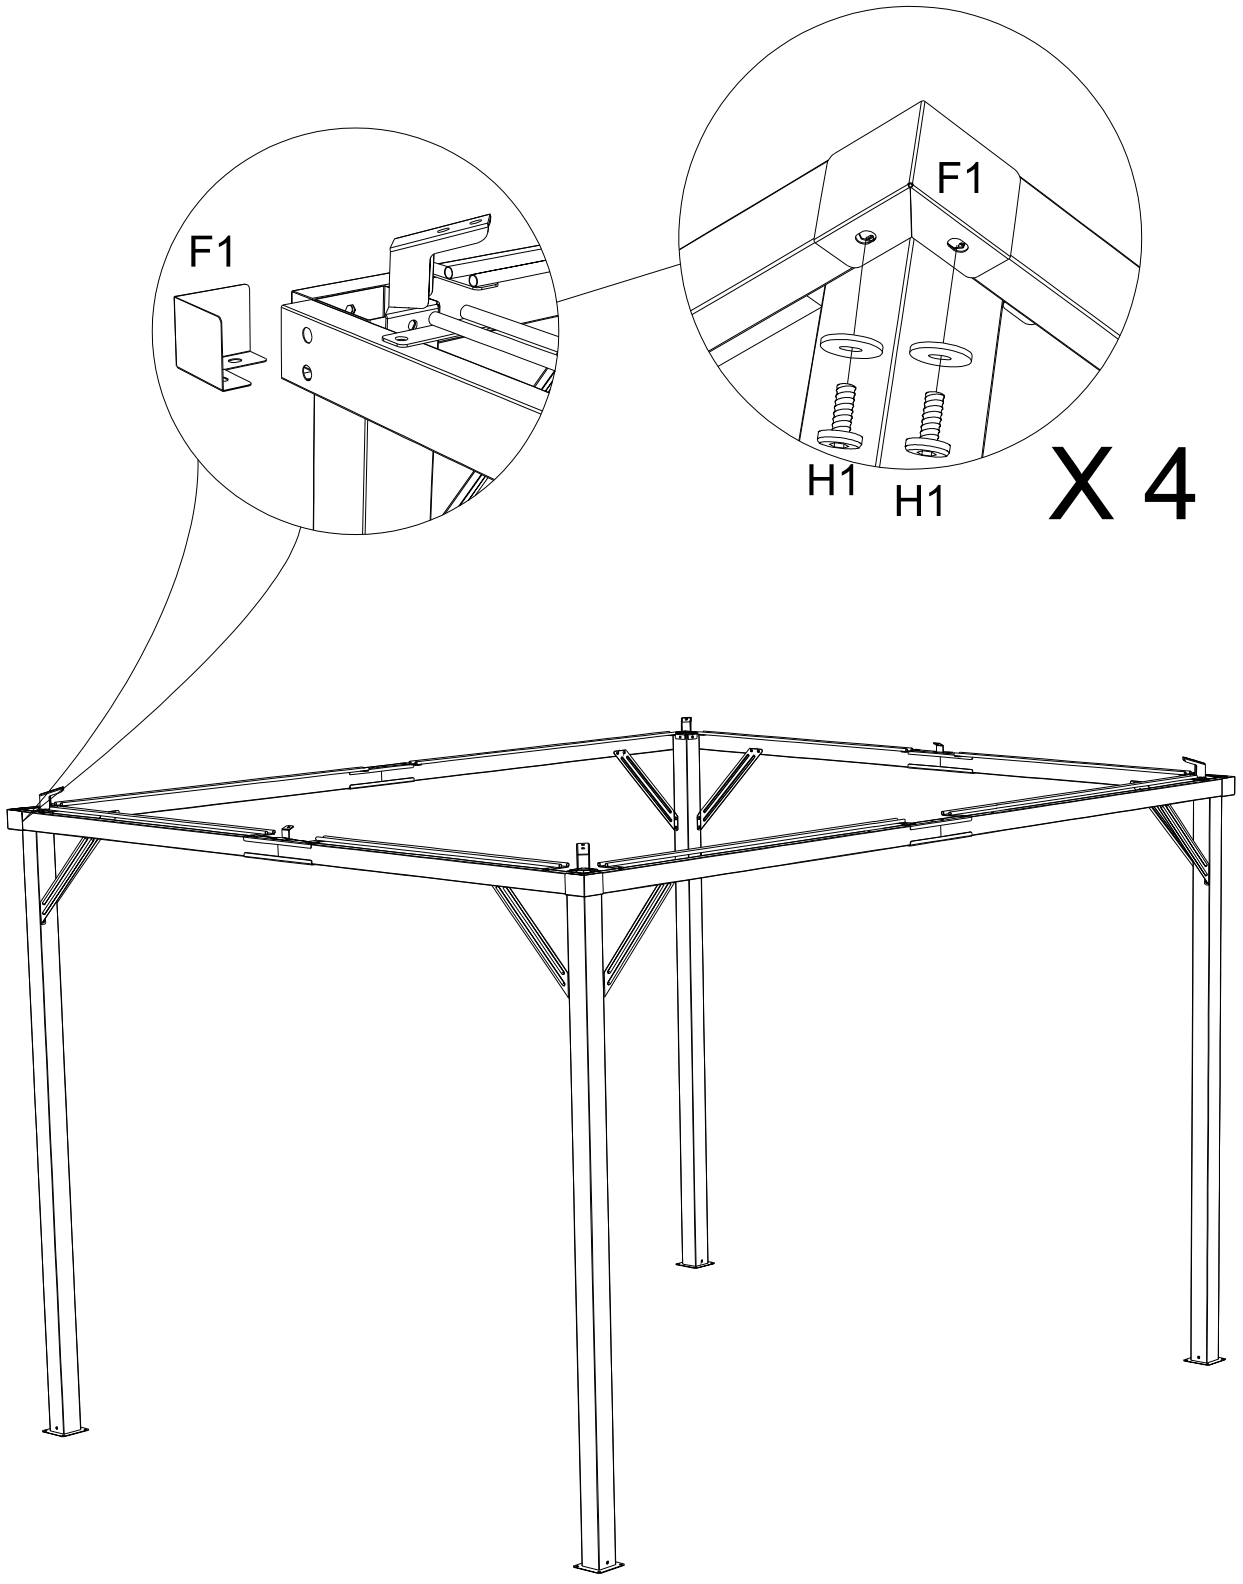
X 4





F1			4
H1		M6X15	8

H6		M6	8

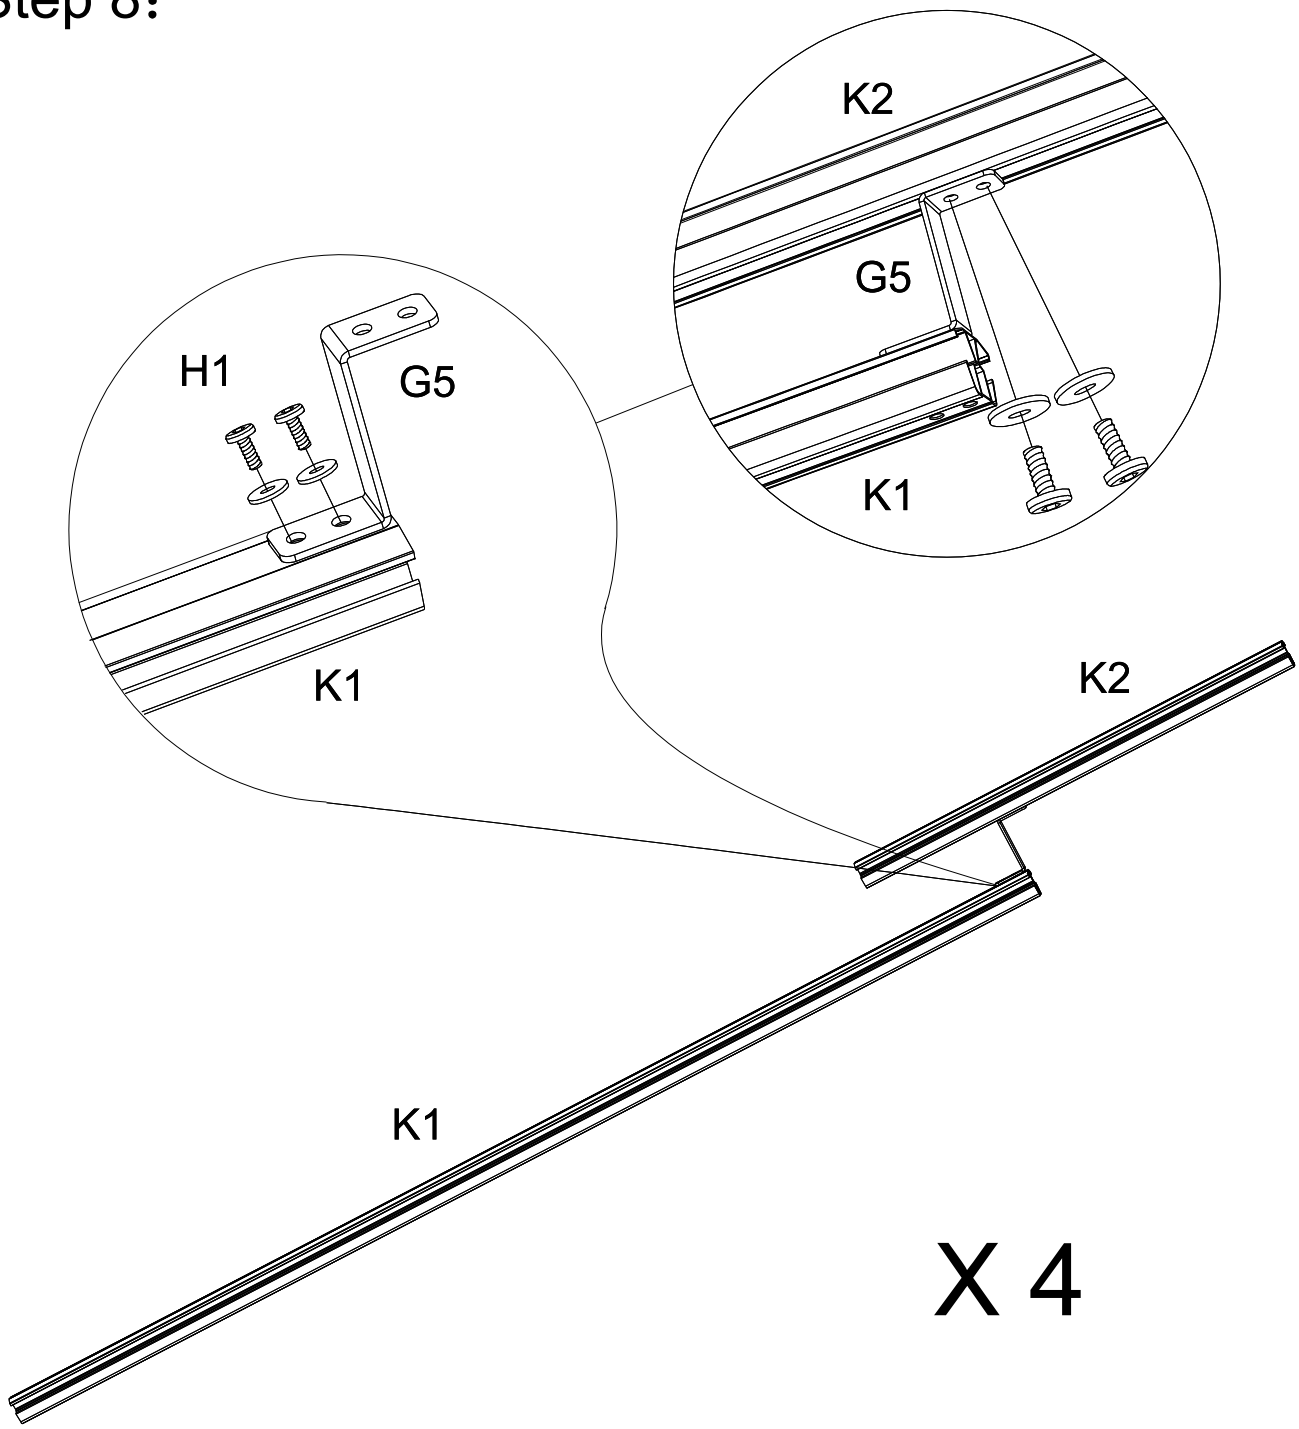
Step 7：







K1		4
K2		4
G5		4

H1		M6X15	16
H6		M6	16

Step 8：

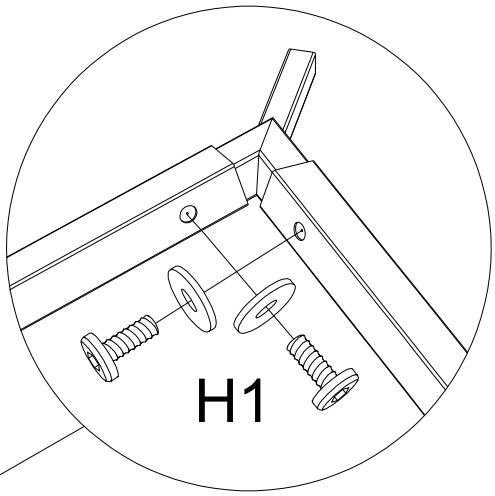


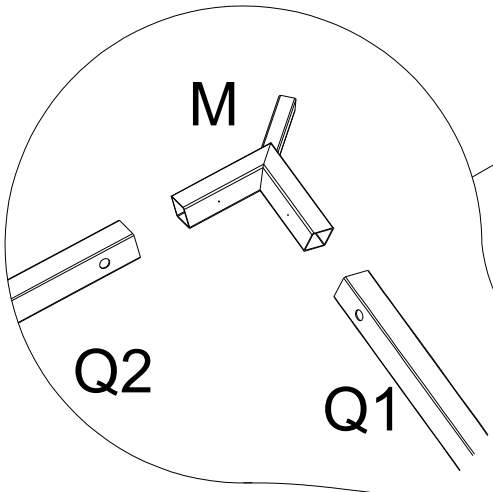
Q1		2
Q2		2
M		4

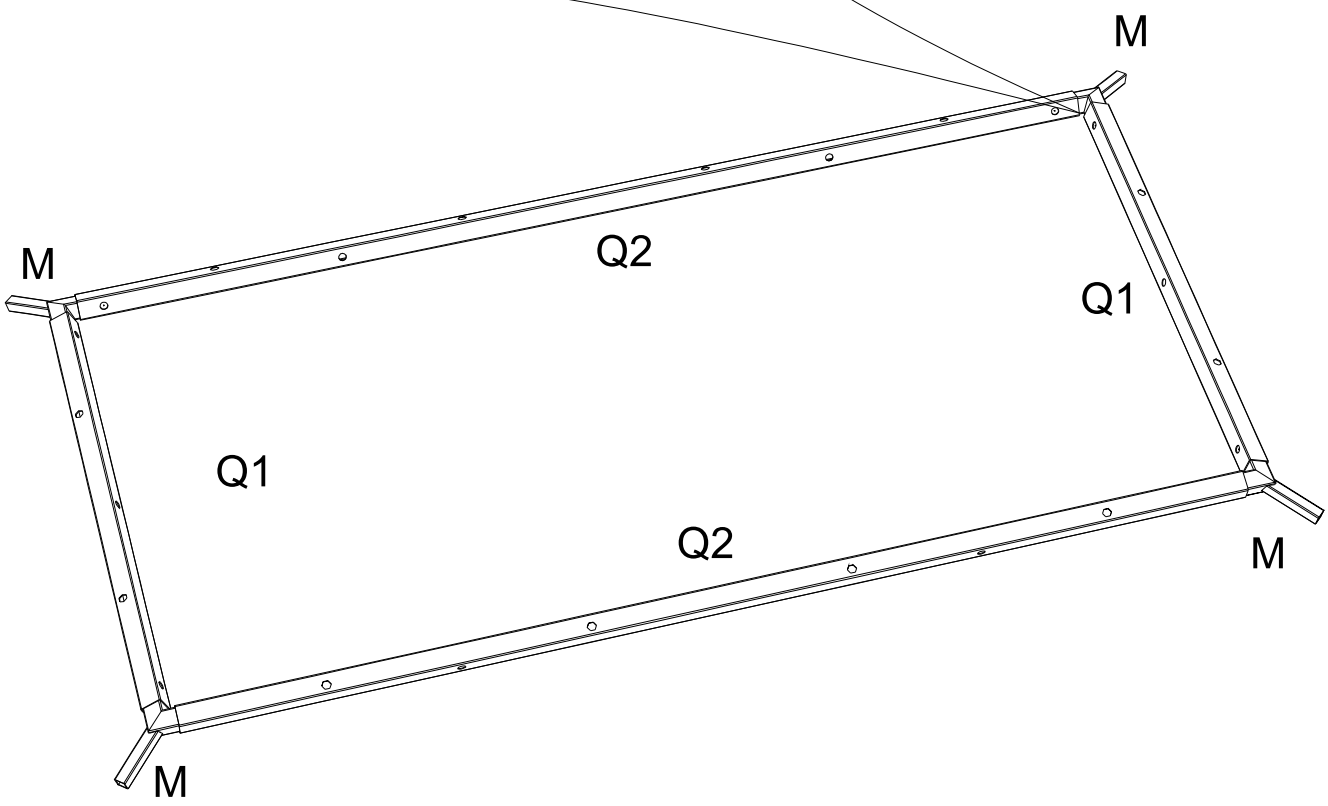
H1		M6X15	8
H6		M6	8


Step 9：

X 4



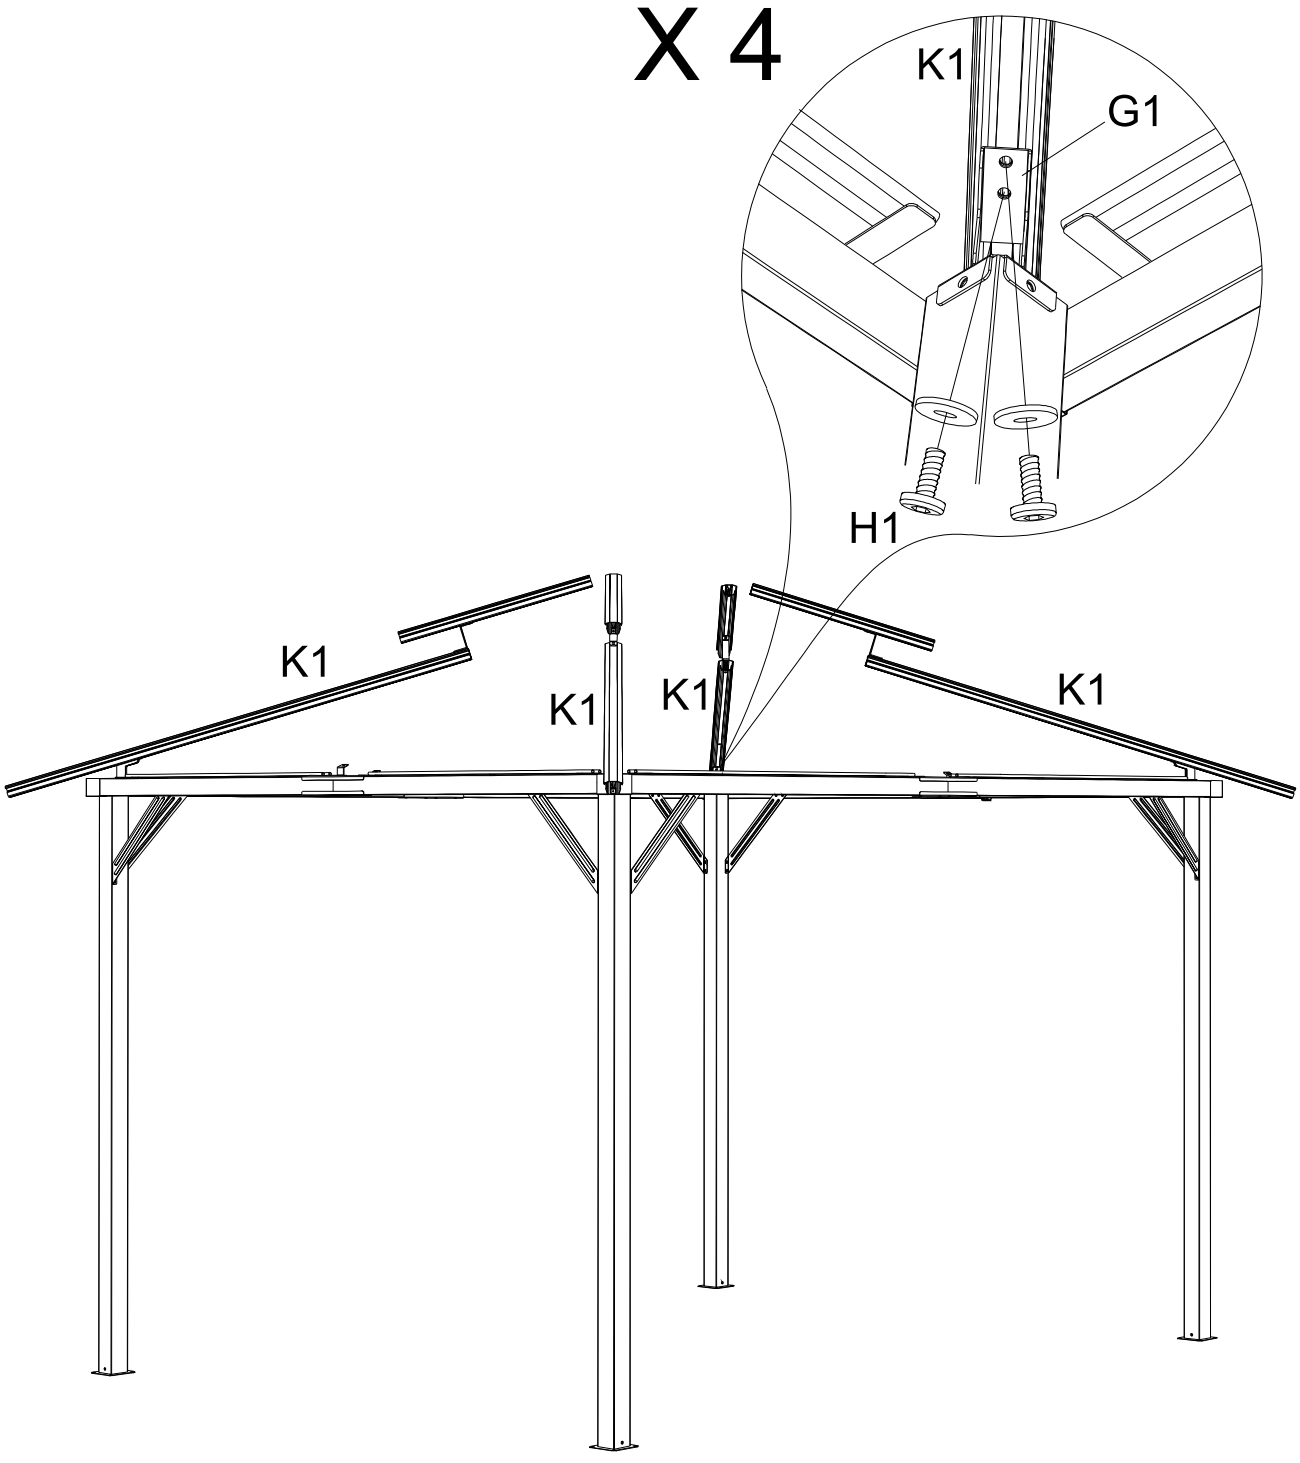





H1		M6X15	8	H6		M6	8

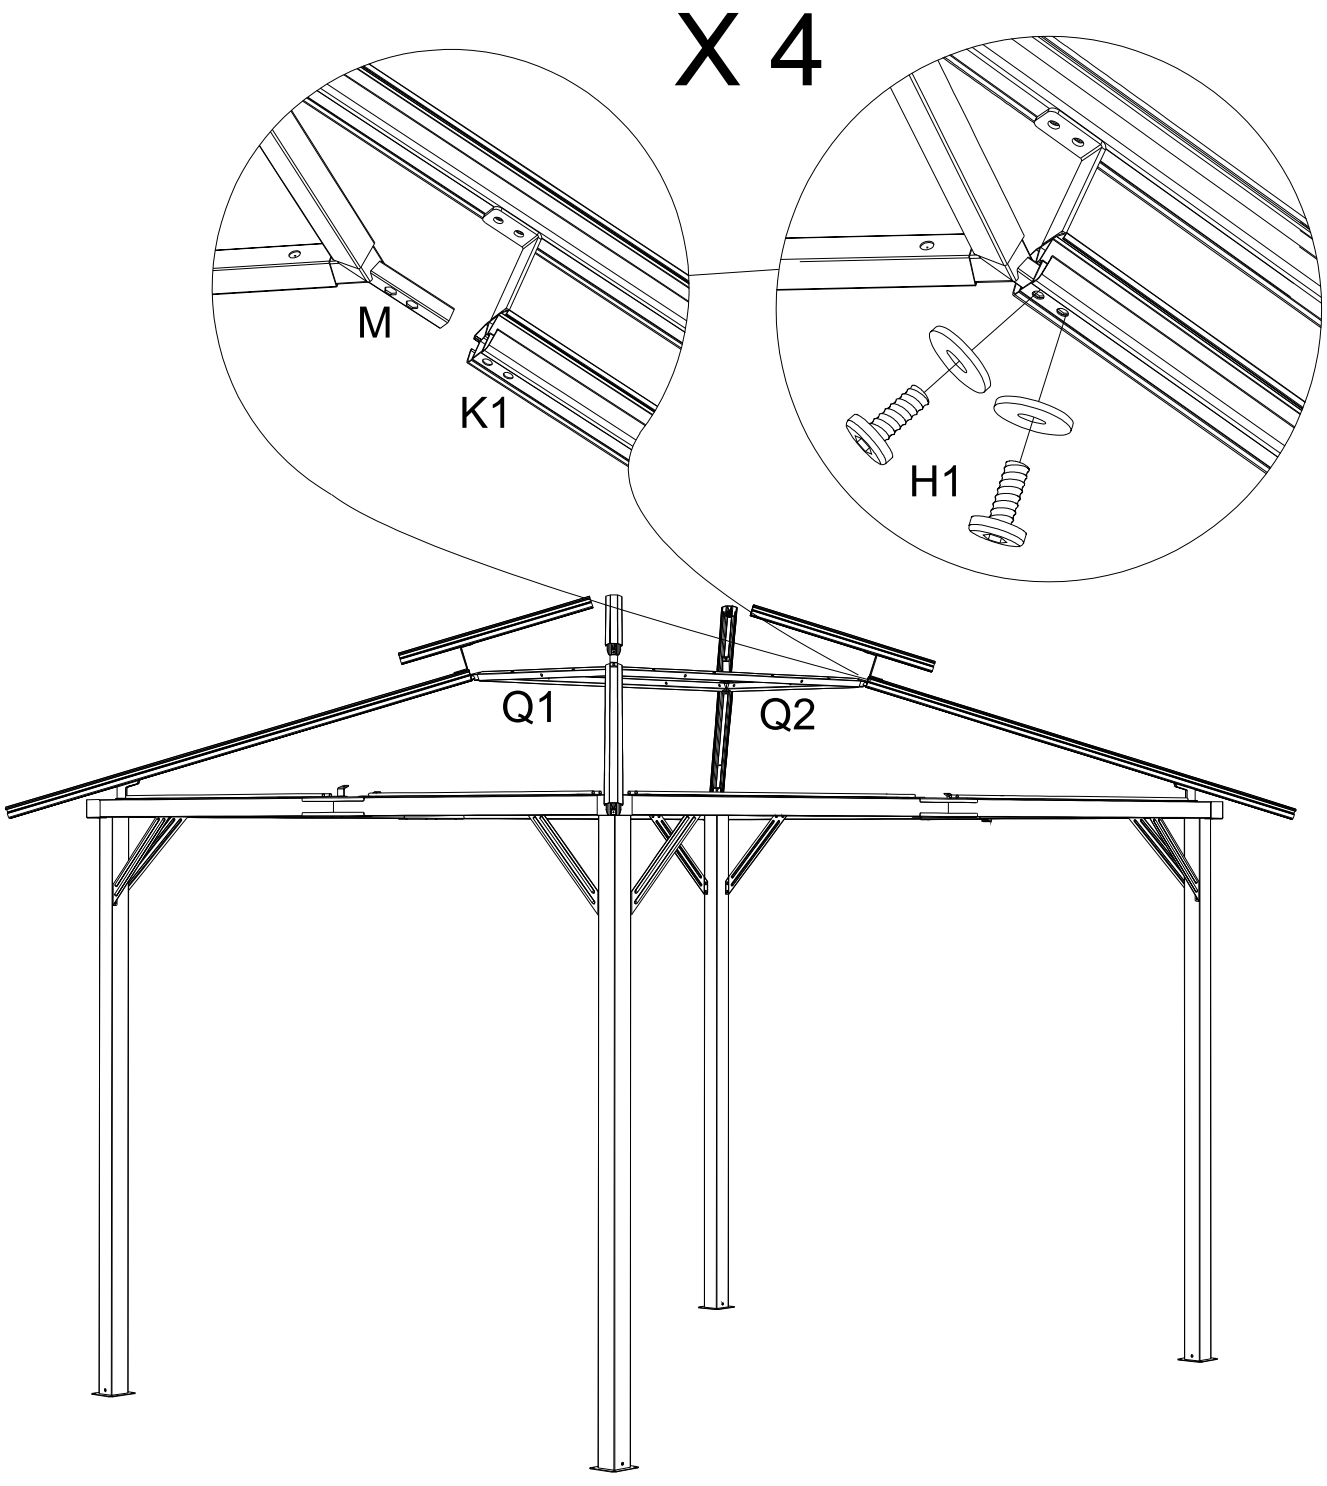
Step 10：

X 4



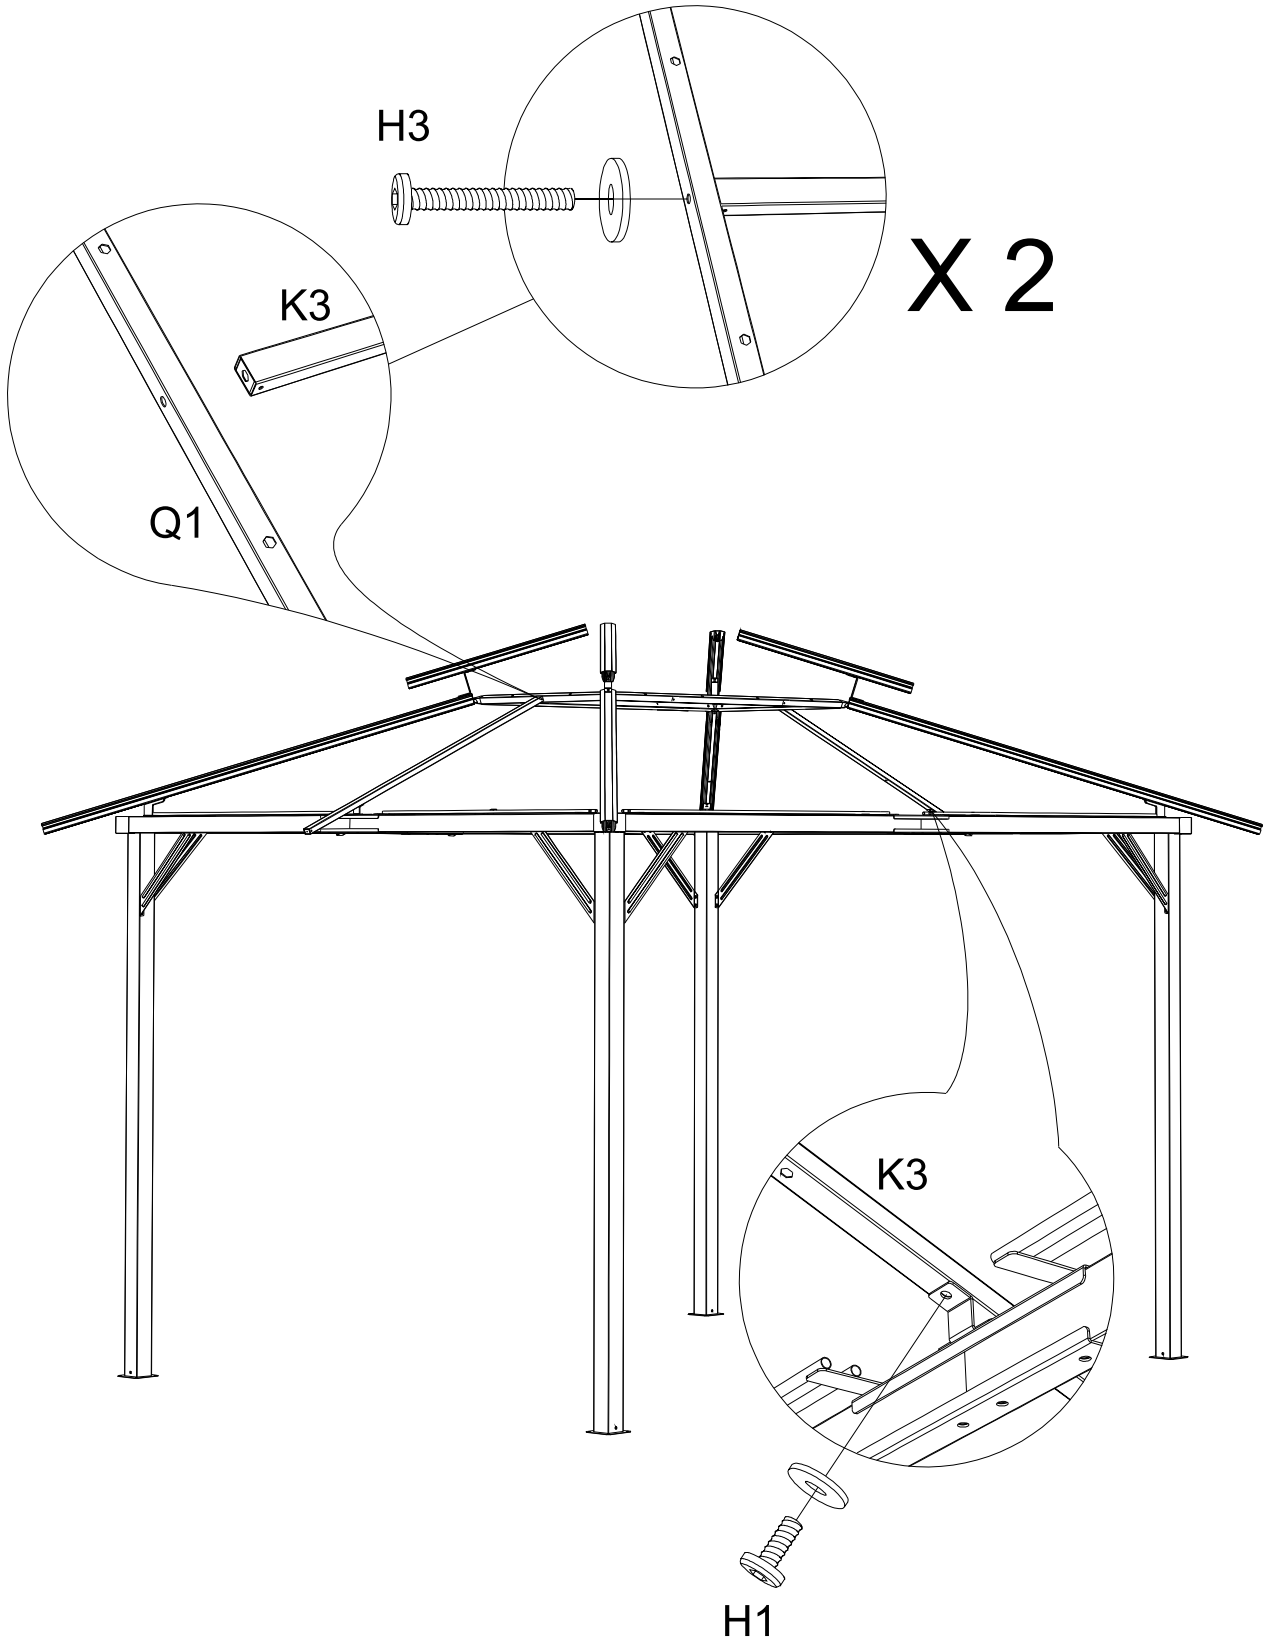
H1		M6X15	8	H6		M6	8



Step 11：



K3		2		H1		M6X15	2
H3	M6X40	2		H6		M6	4

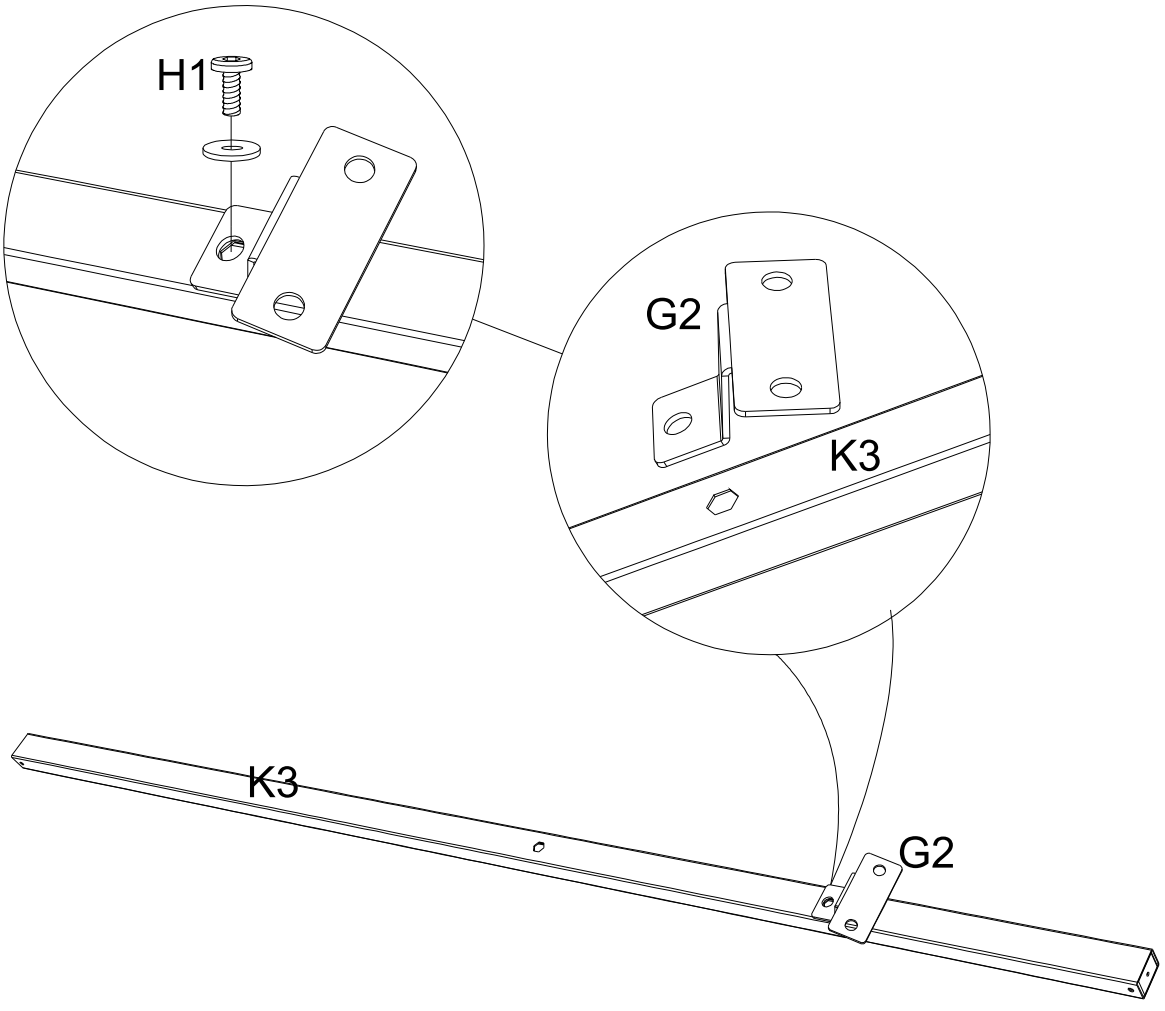
Step 12：




K3		4		H1		M6X15	4
G2		4		H6		M6	4

Step 13：

X 4

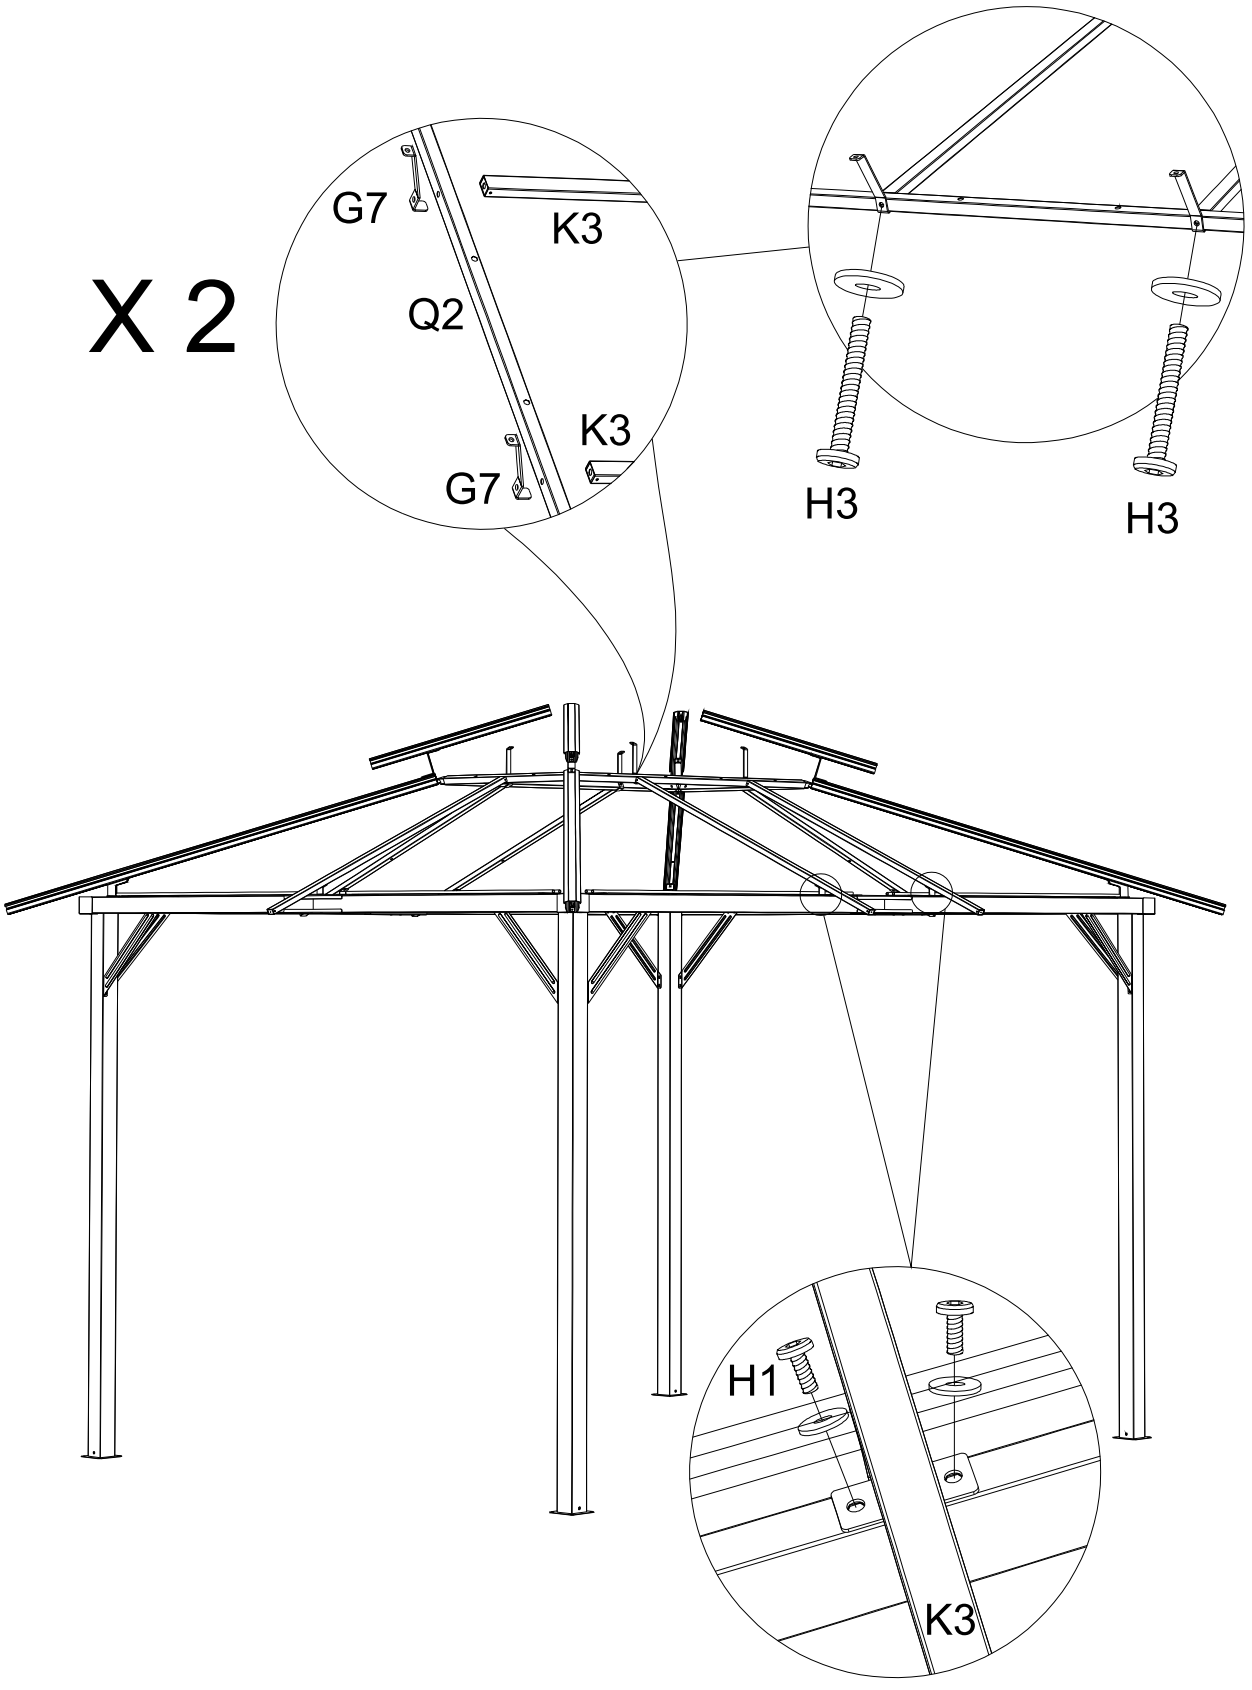



G7			4
H1		M6X15	8

H3		M6X40	4
H6		M6	12

Step 14：

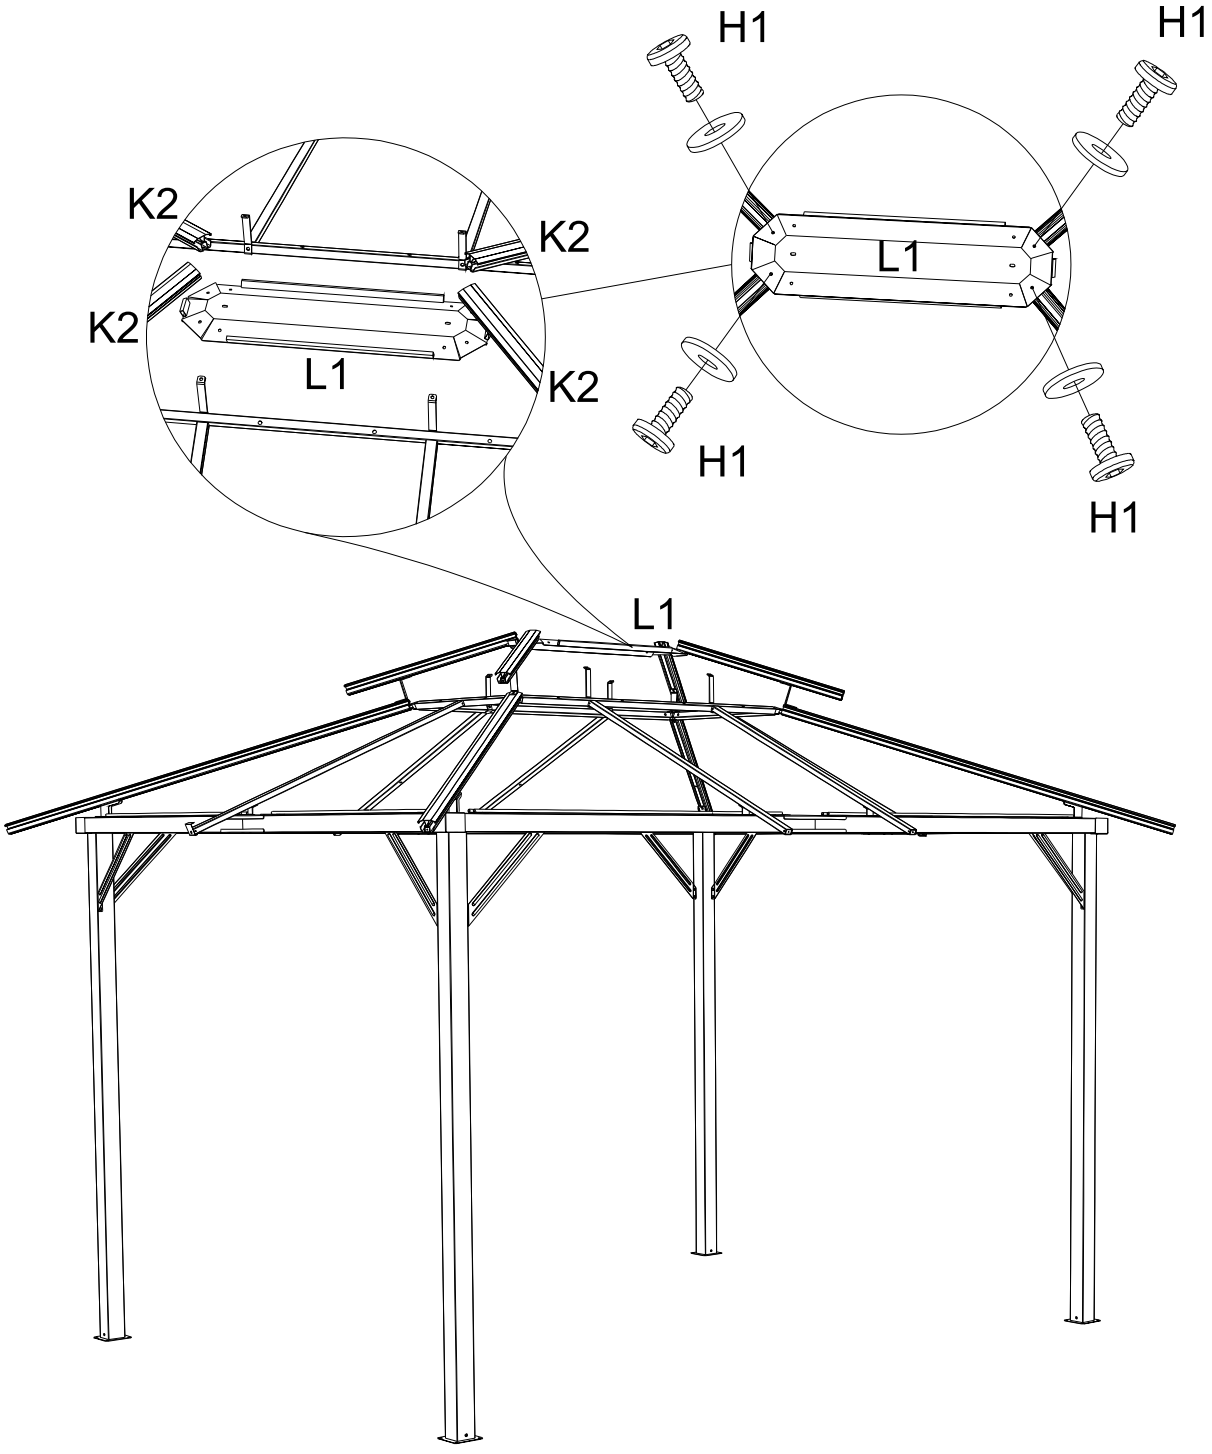
X 2




L1			1
H1		M6X15	4

H6		M6	4

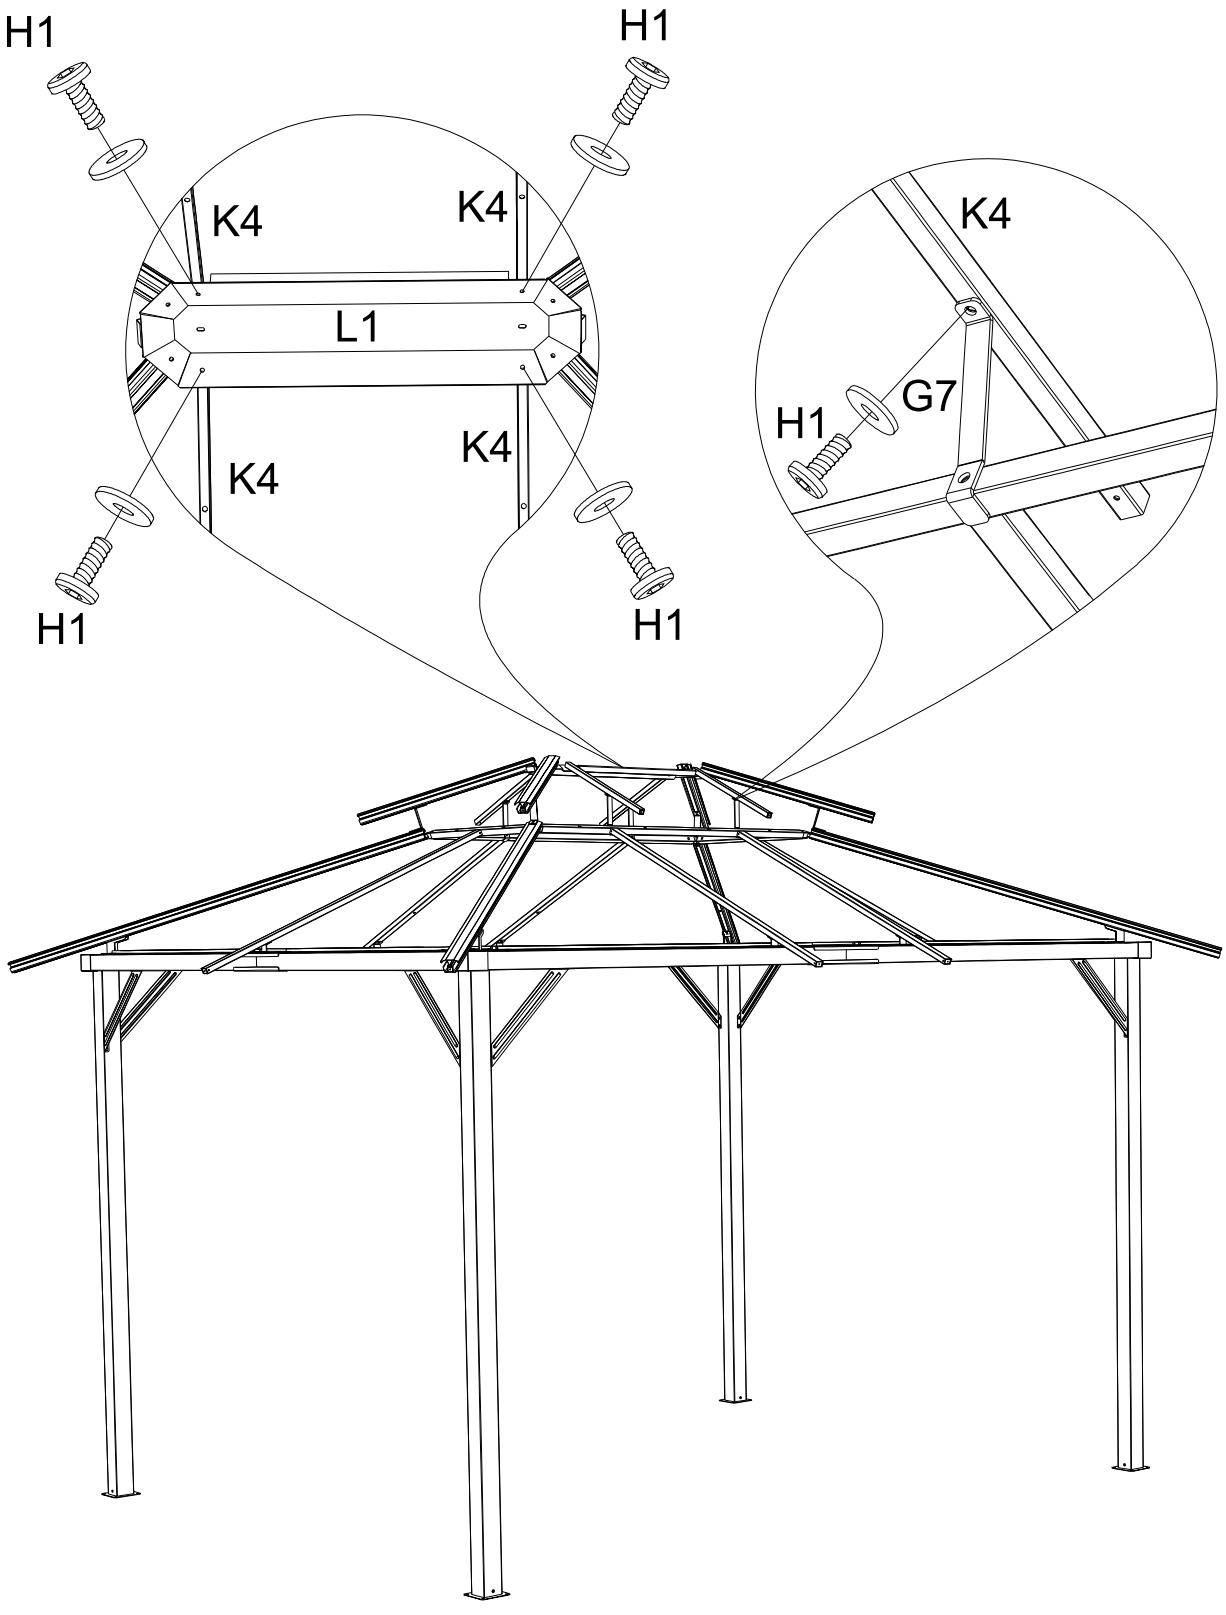
Step 15：




K4			4
H1		M6X15	8

H6		M6	8

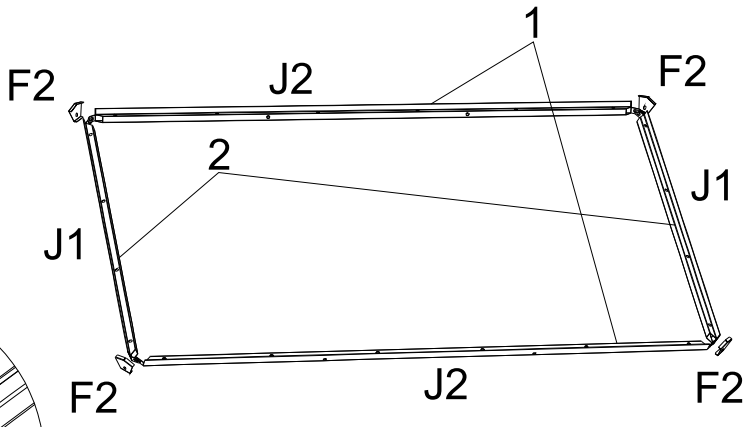
Step 16：



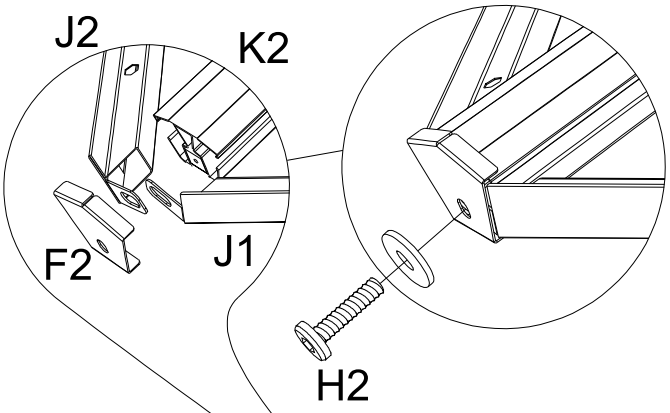
J1		2
J2		2
F2		4

H2		M6X25	4
H6		M6	8
H3		M6X40	4

Step 17：

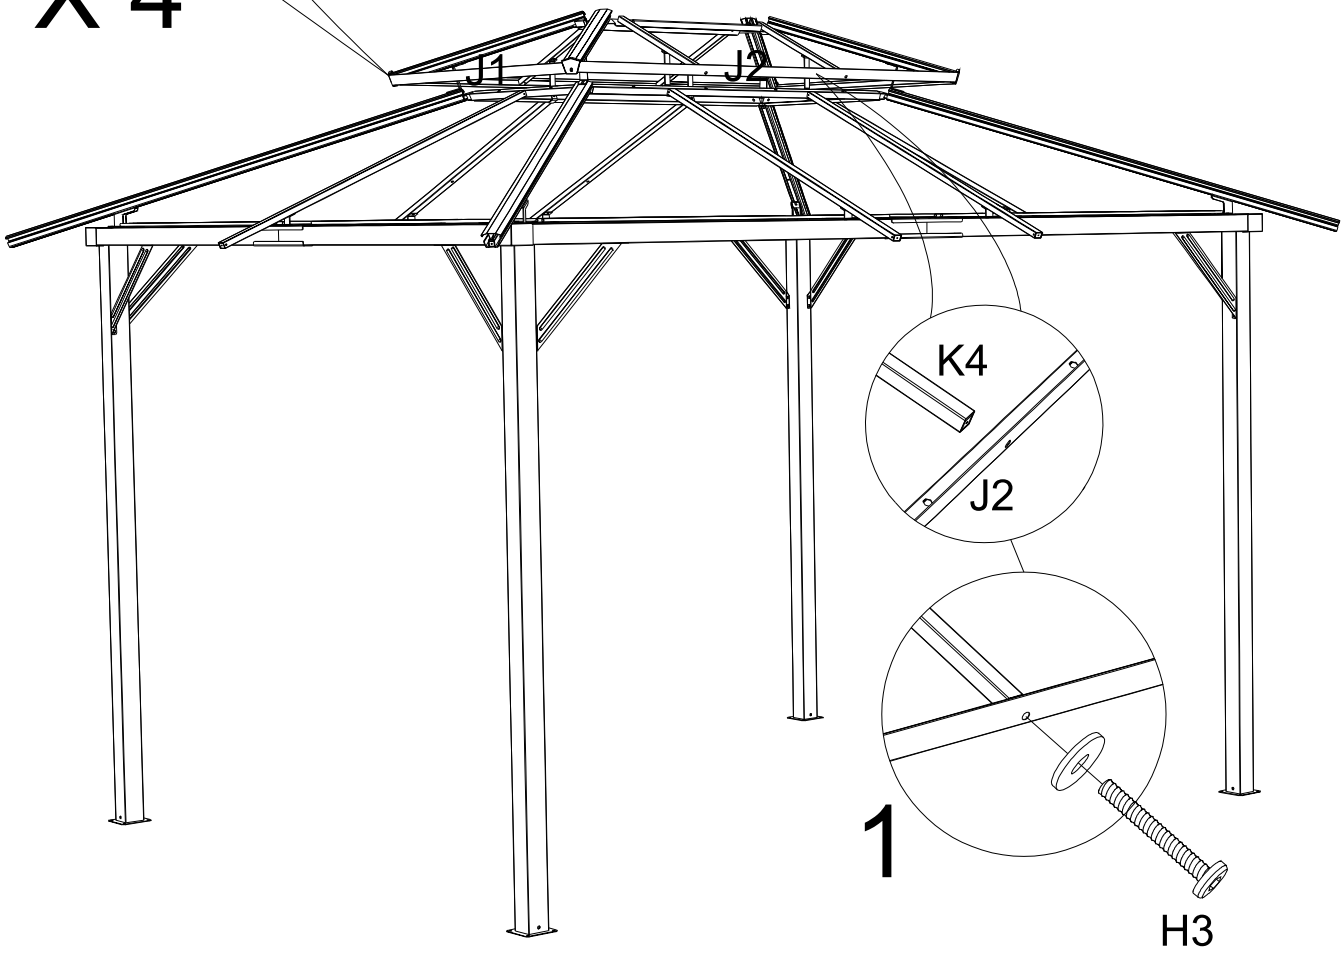




2




Do not fully tighten the H2 and H3 screws until the tiles are installed

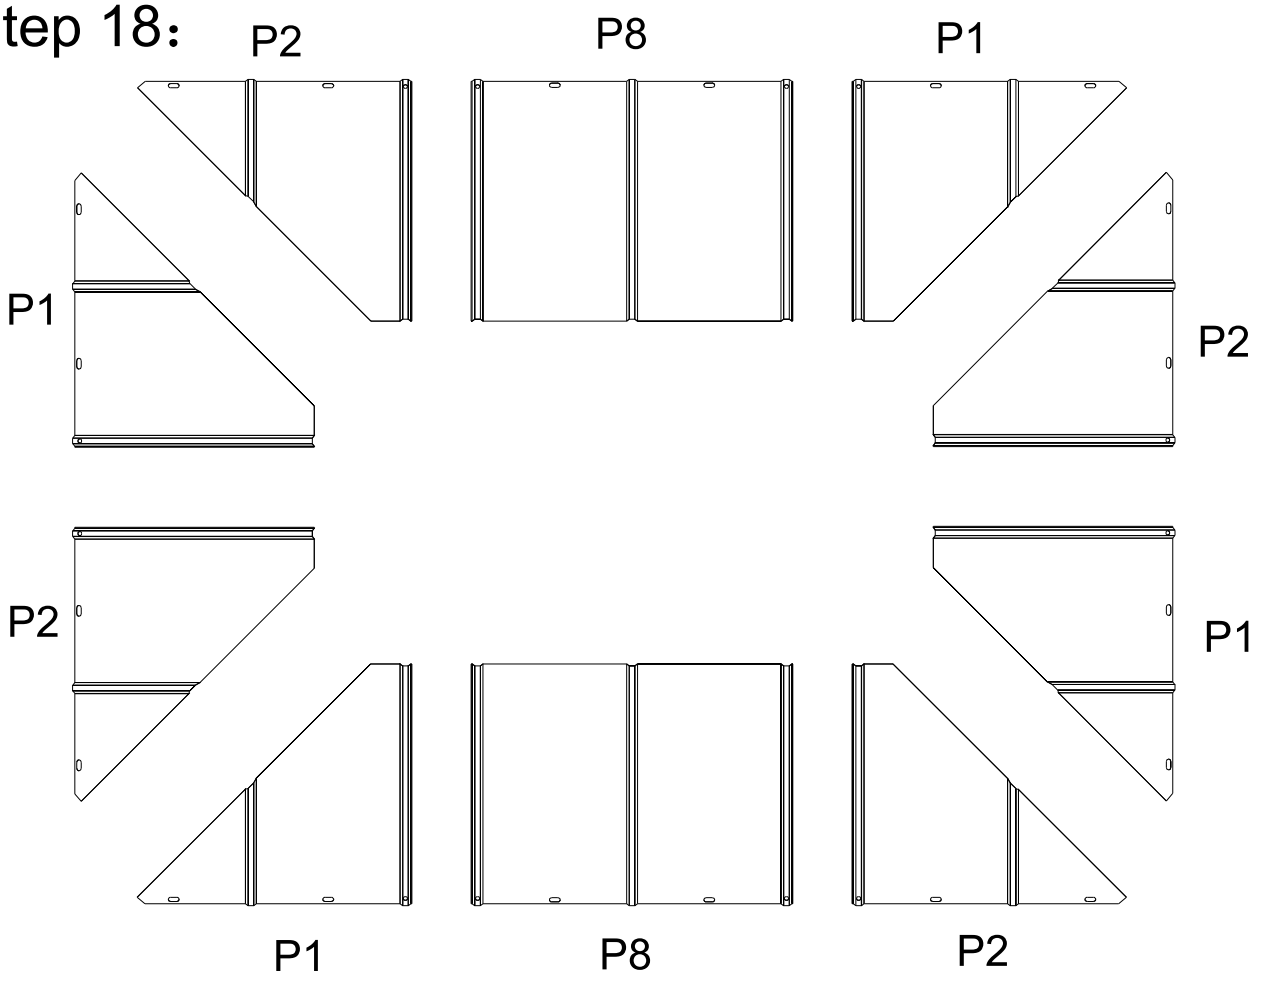
X 4

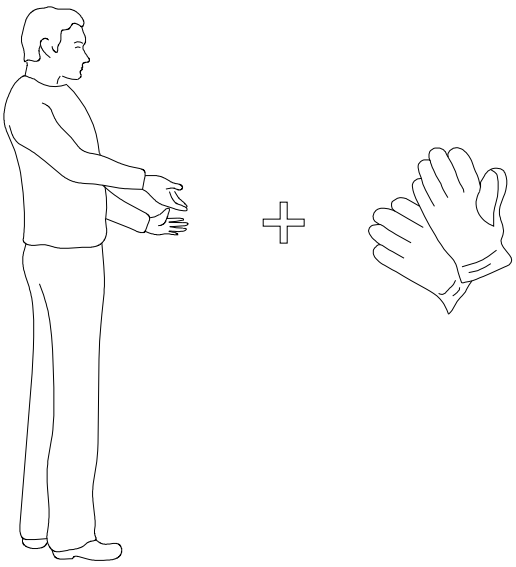


P1		4
P8		2

P2		4

Step 18:

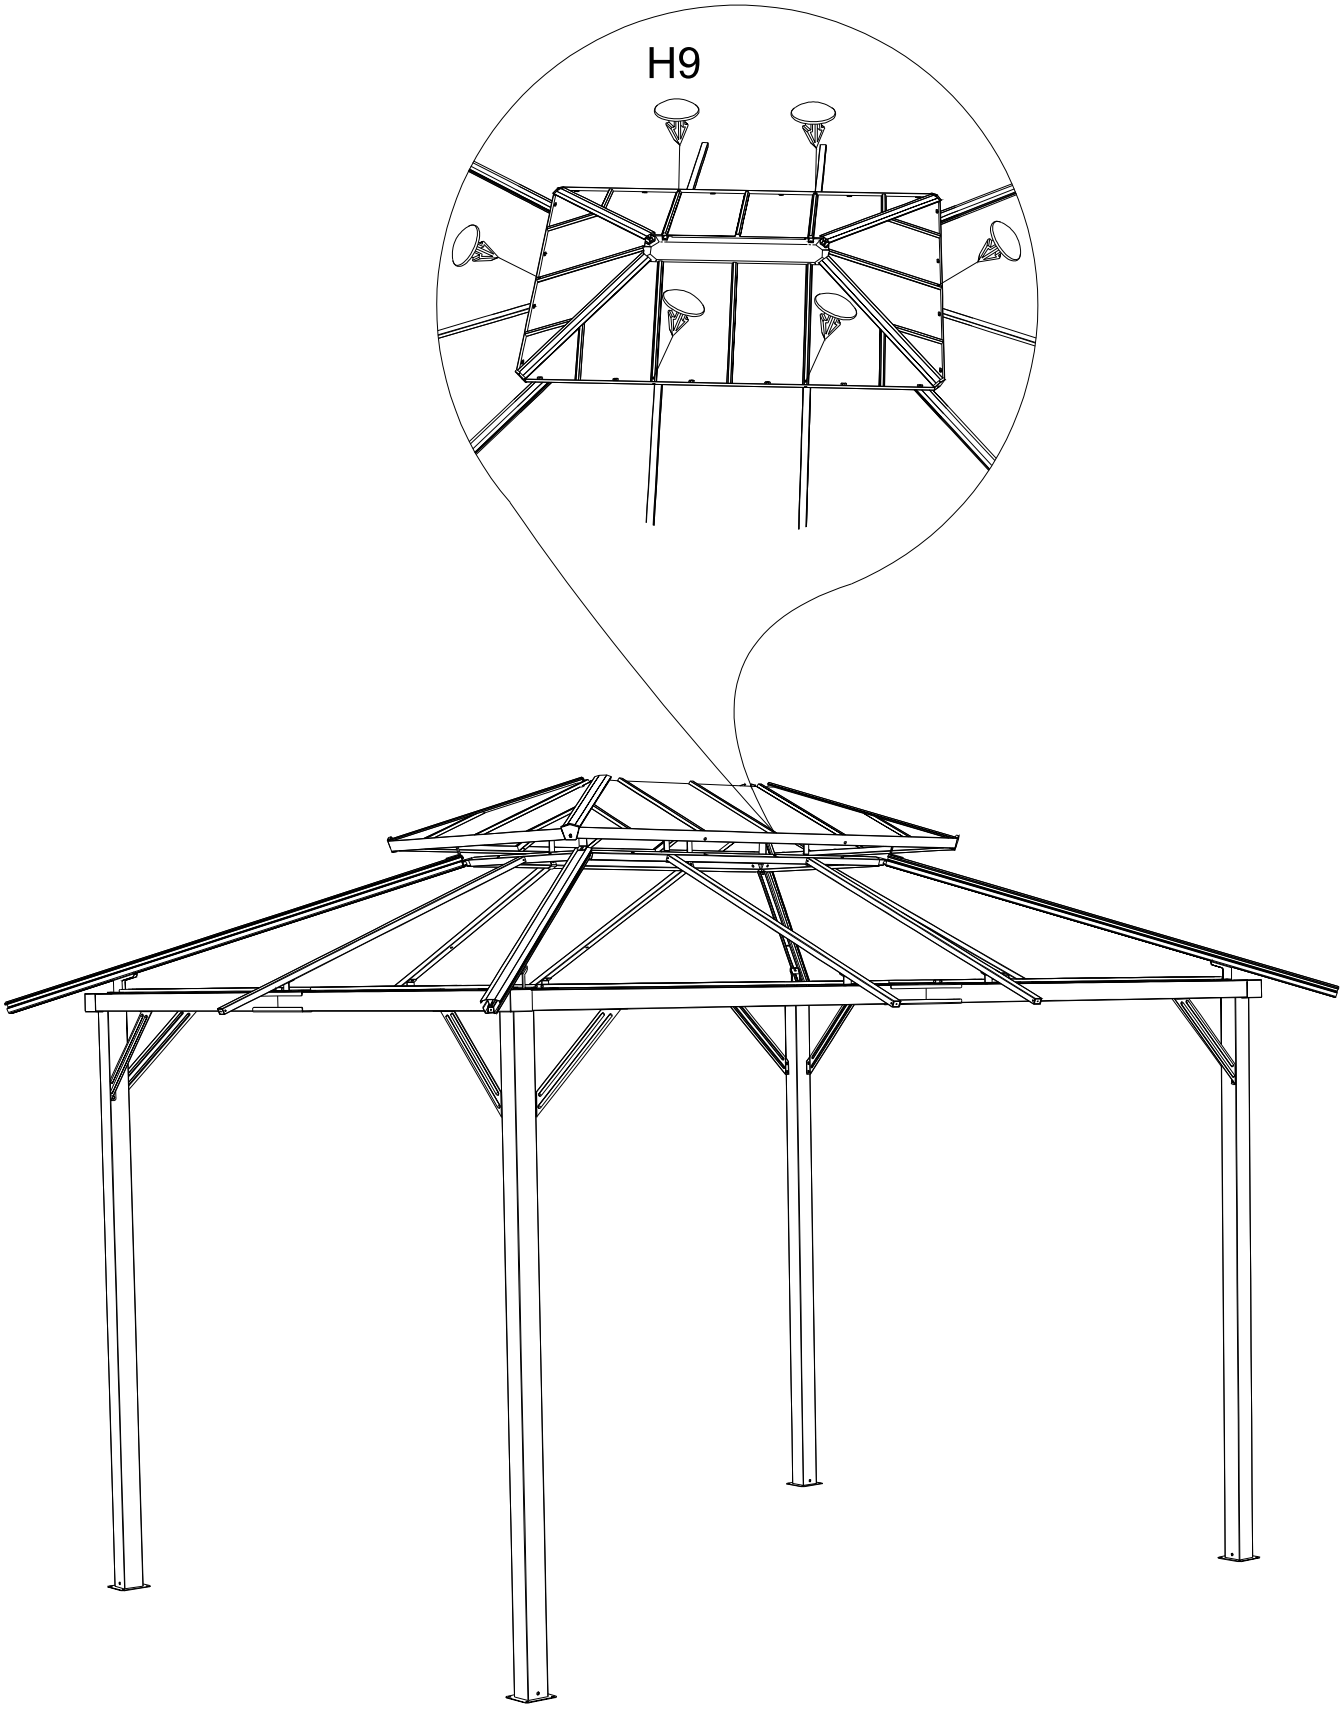





Warning:Wear protective gloves when installing the roof panels.

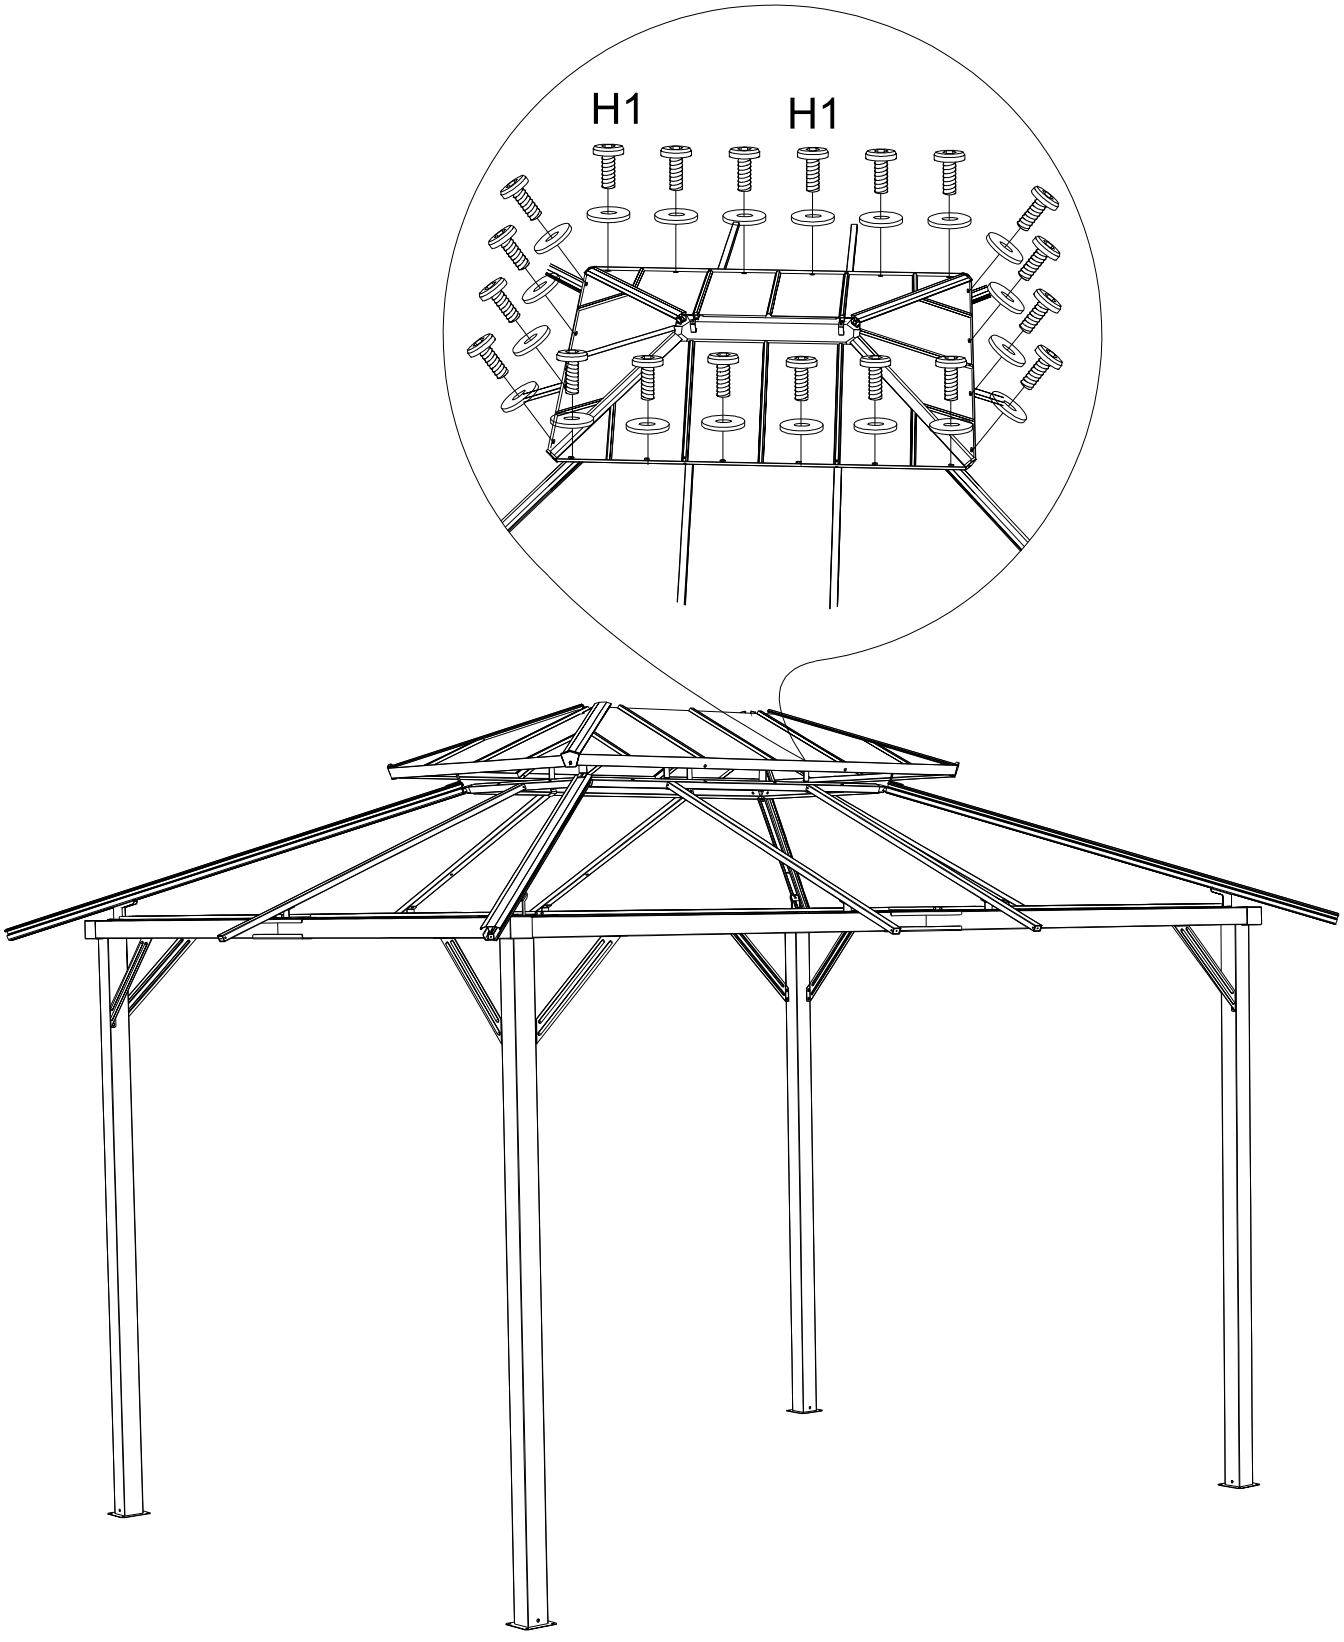
H9			6


Step 19：




H1		M6X15	20
H6		M6	20

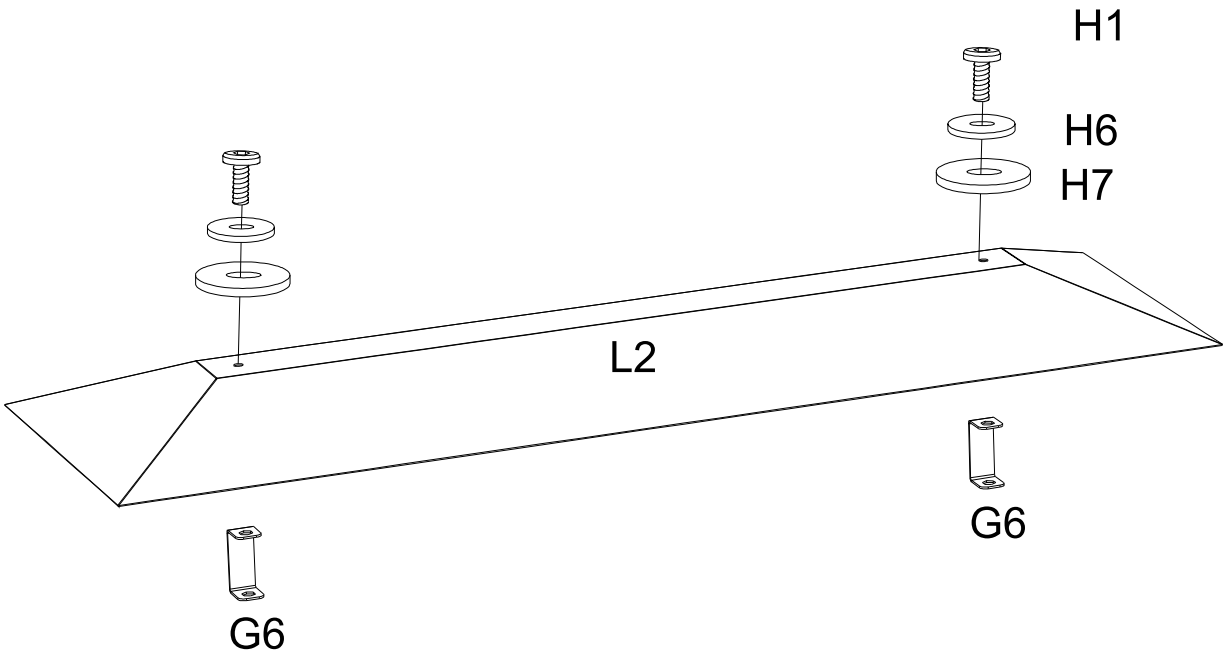
Step 20：




G6			2
L2			1
H1		M6X15	2

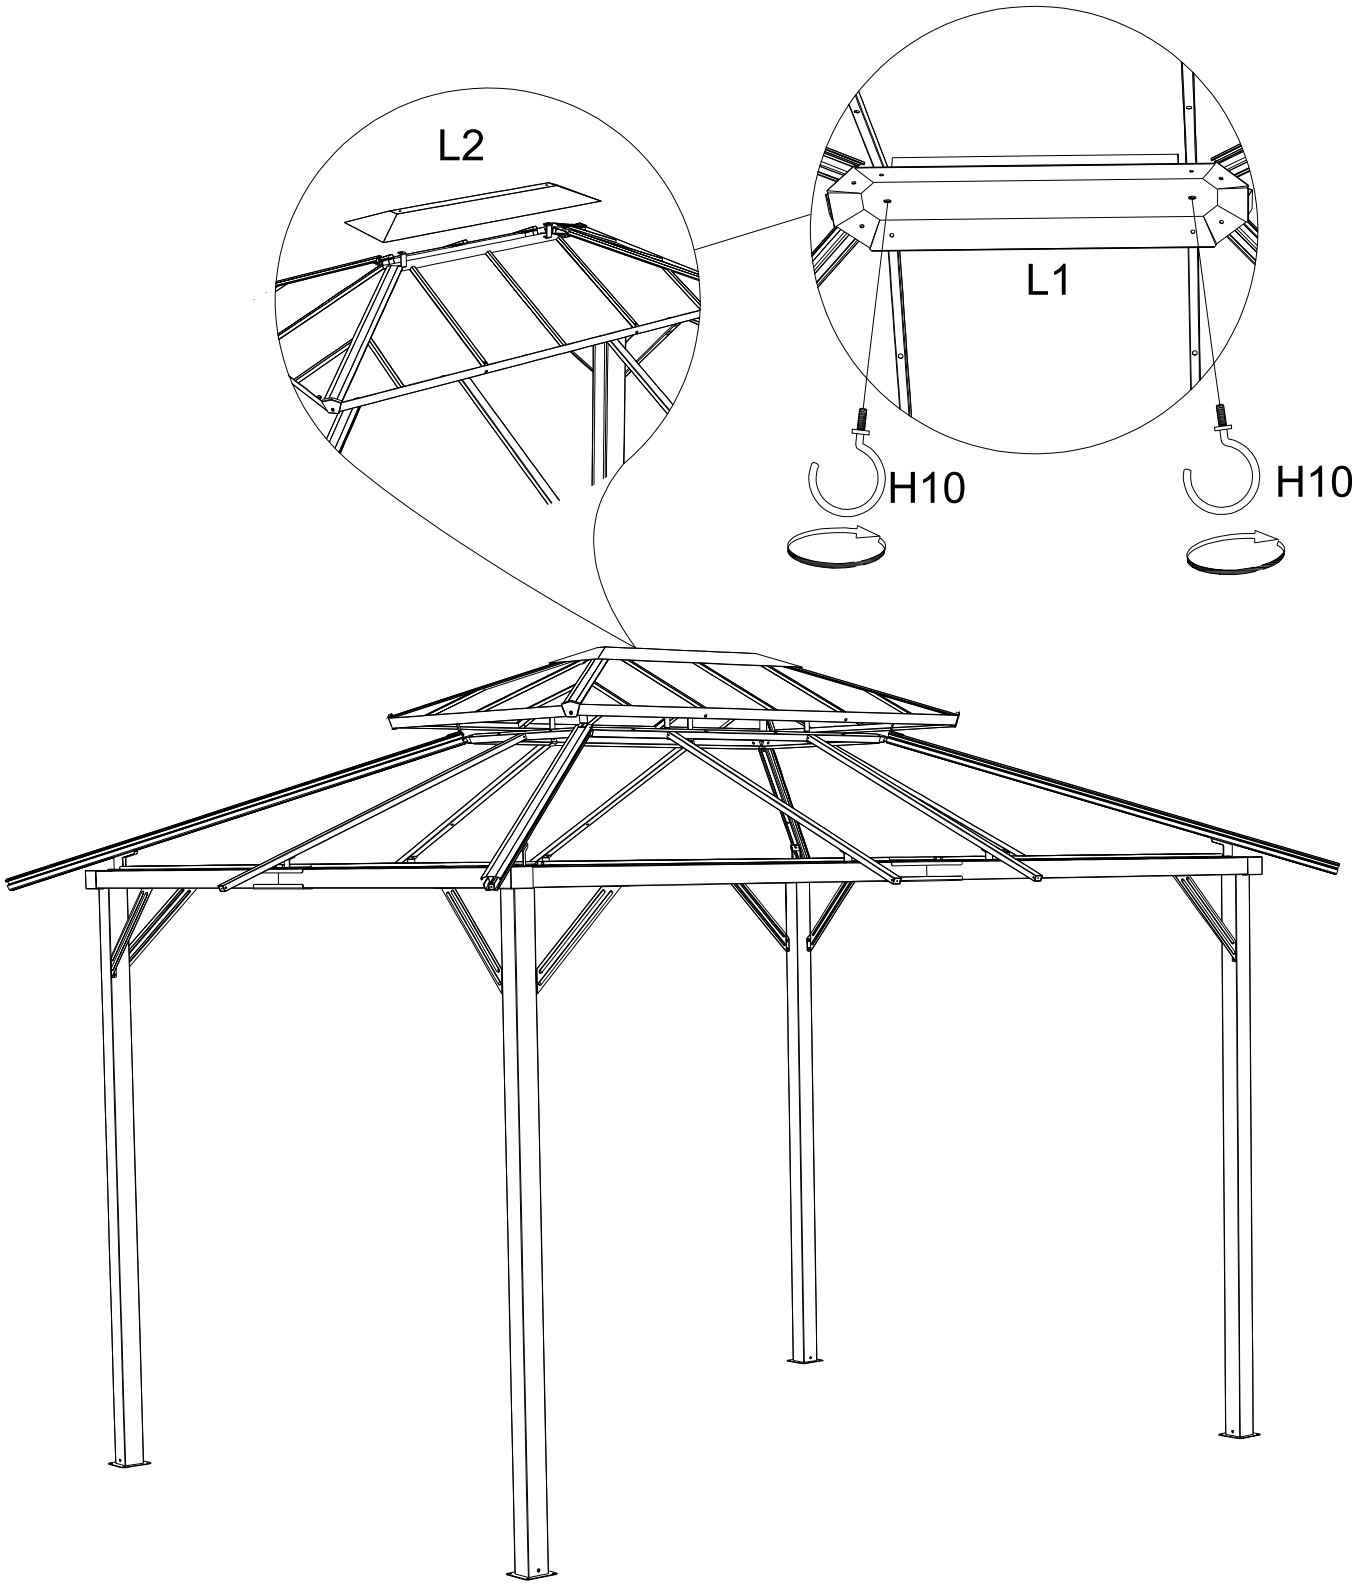
H6		M6	2
H7		RUBBER	2



Step 21：





H10		2

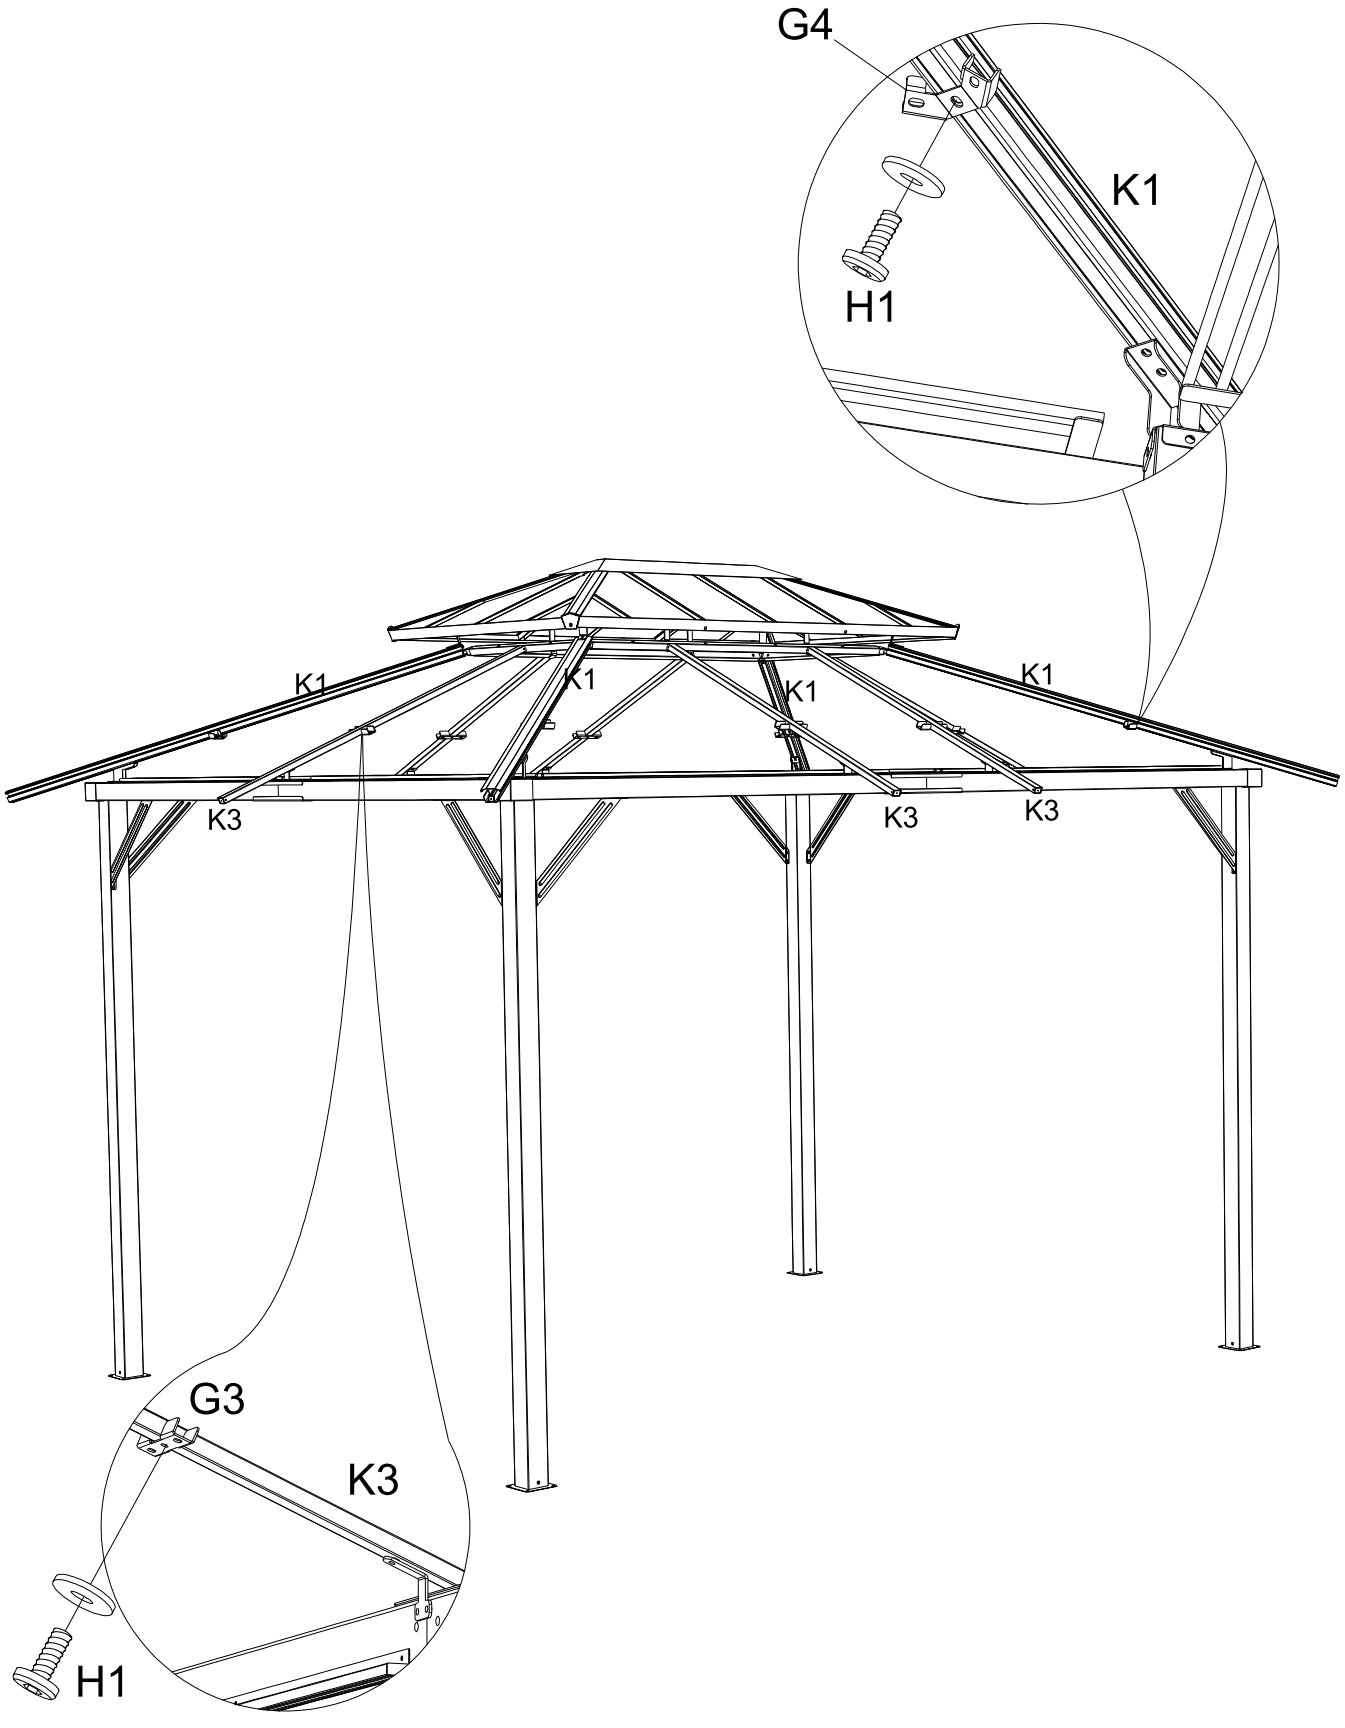
Step 22：



H1		M6X15	10
H6		M6	10

G3		6
G4		4

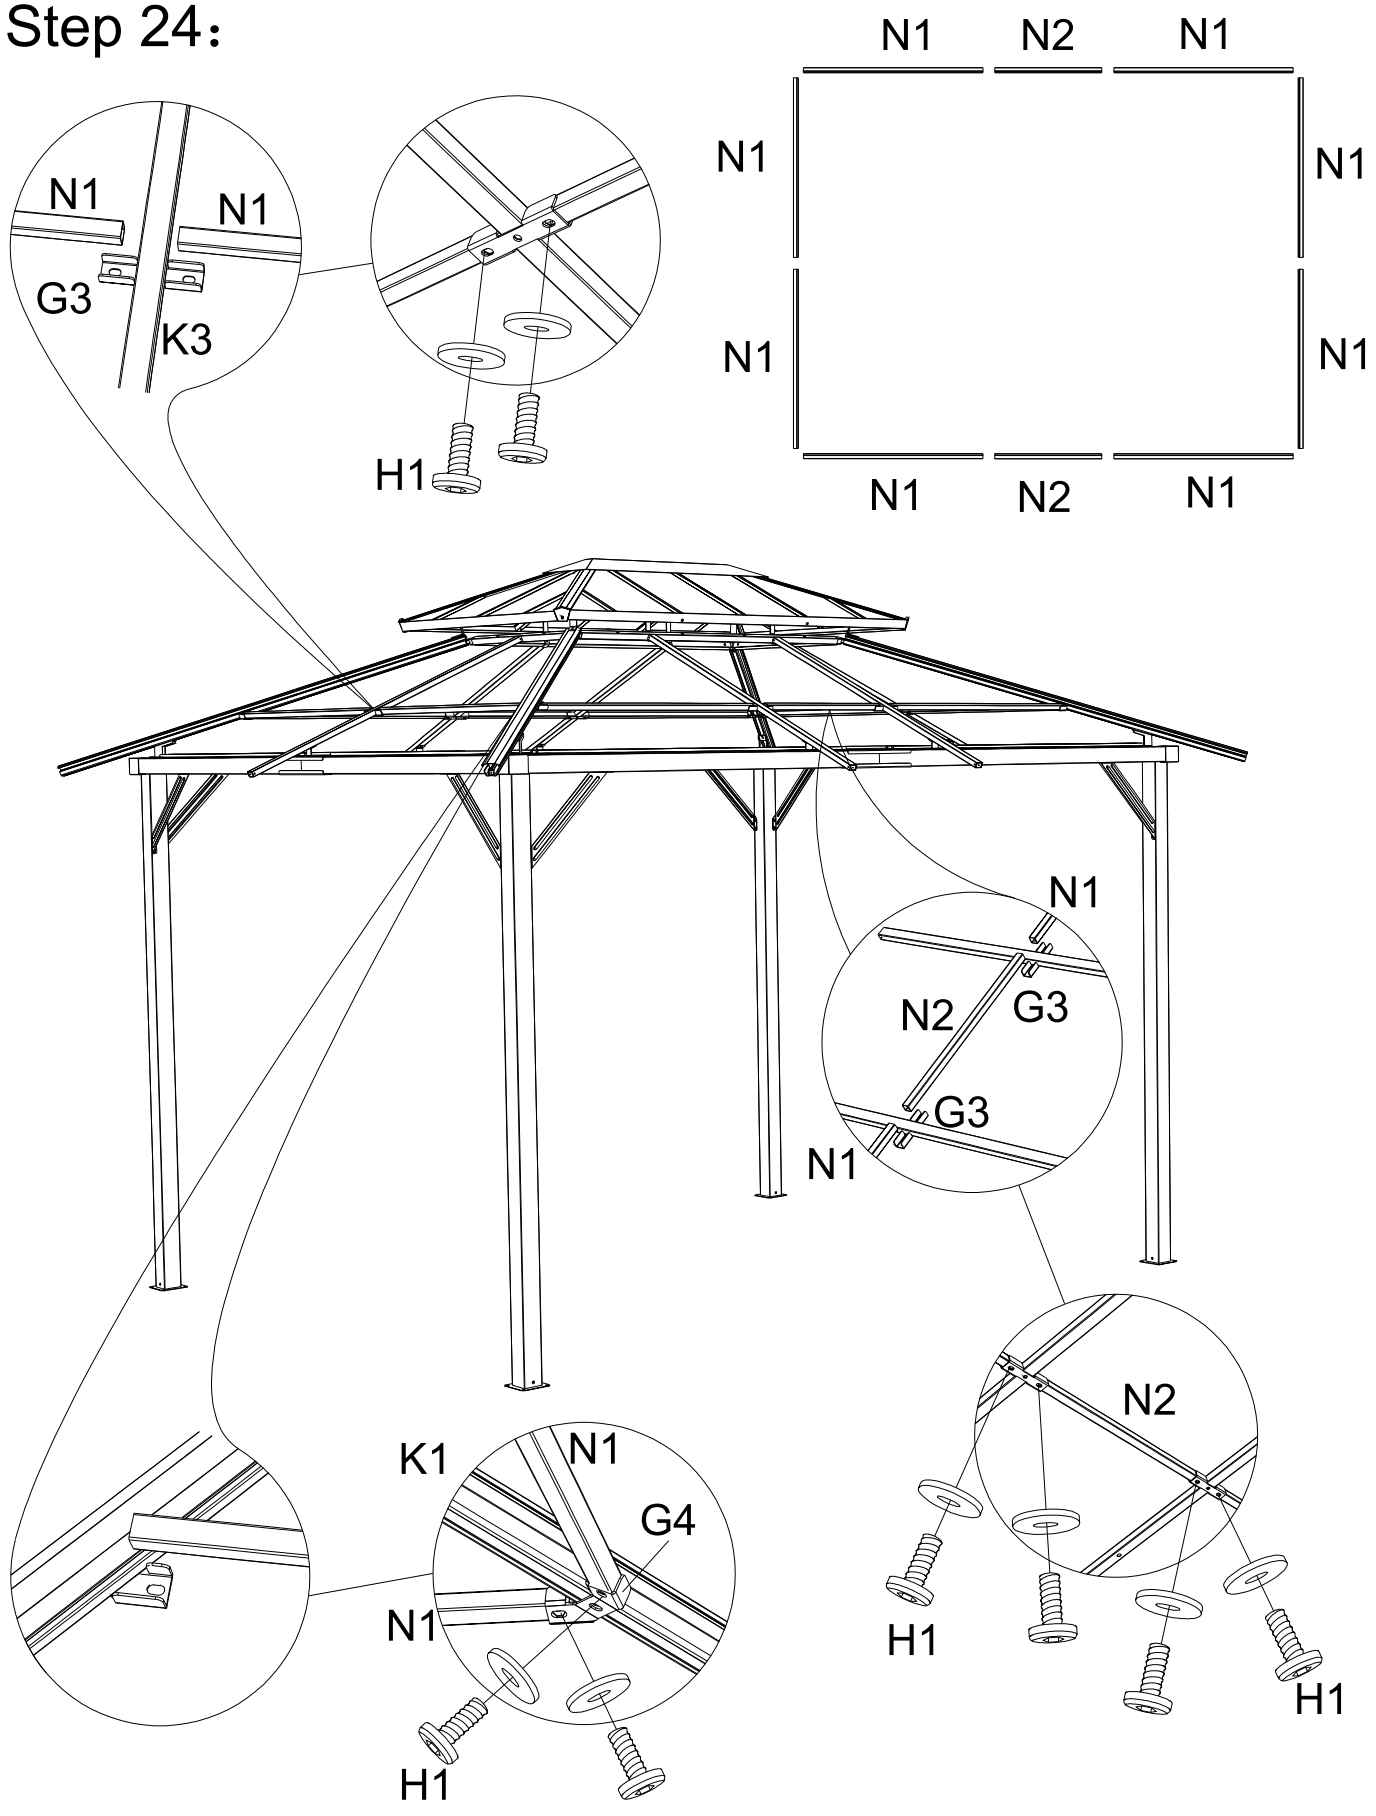
Step 23：



N1		8
N2		2

H1		M6X15	20
H6		M6	20

Step 24：

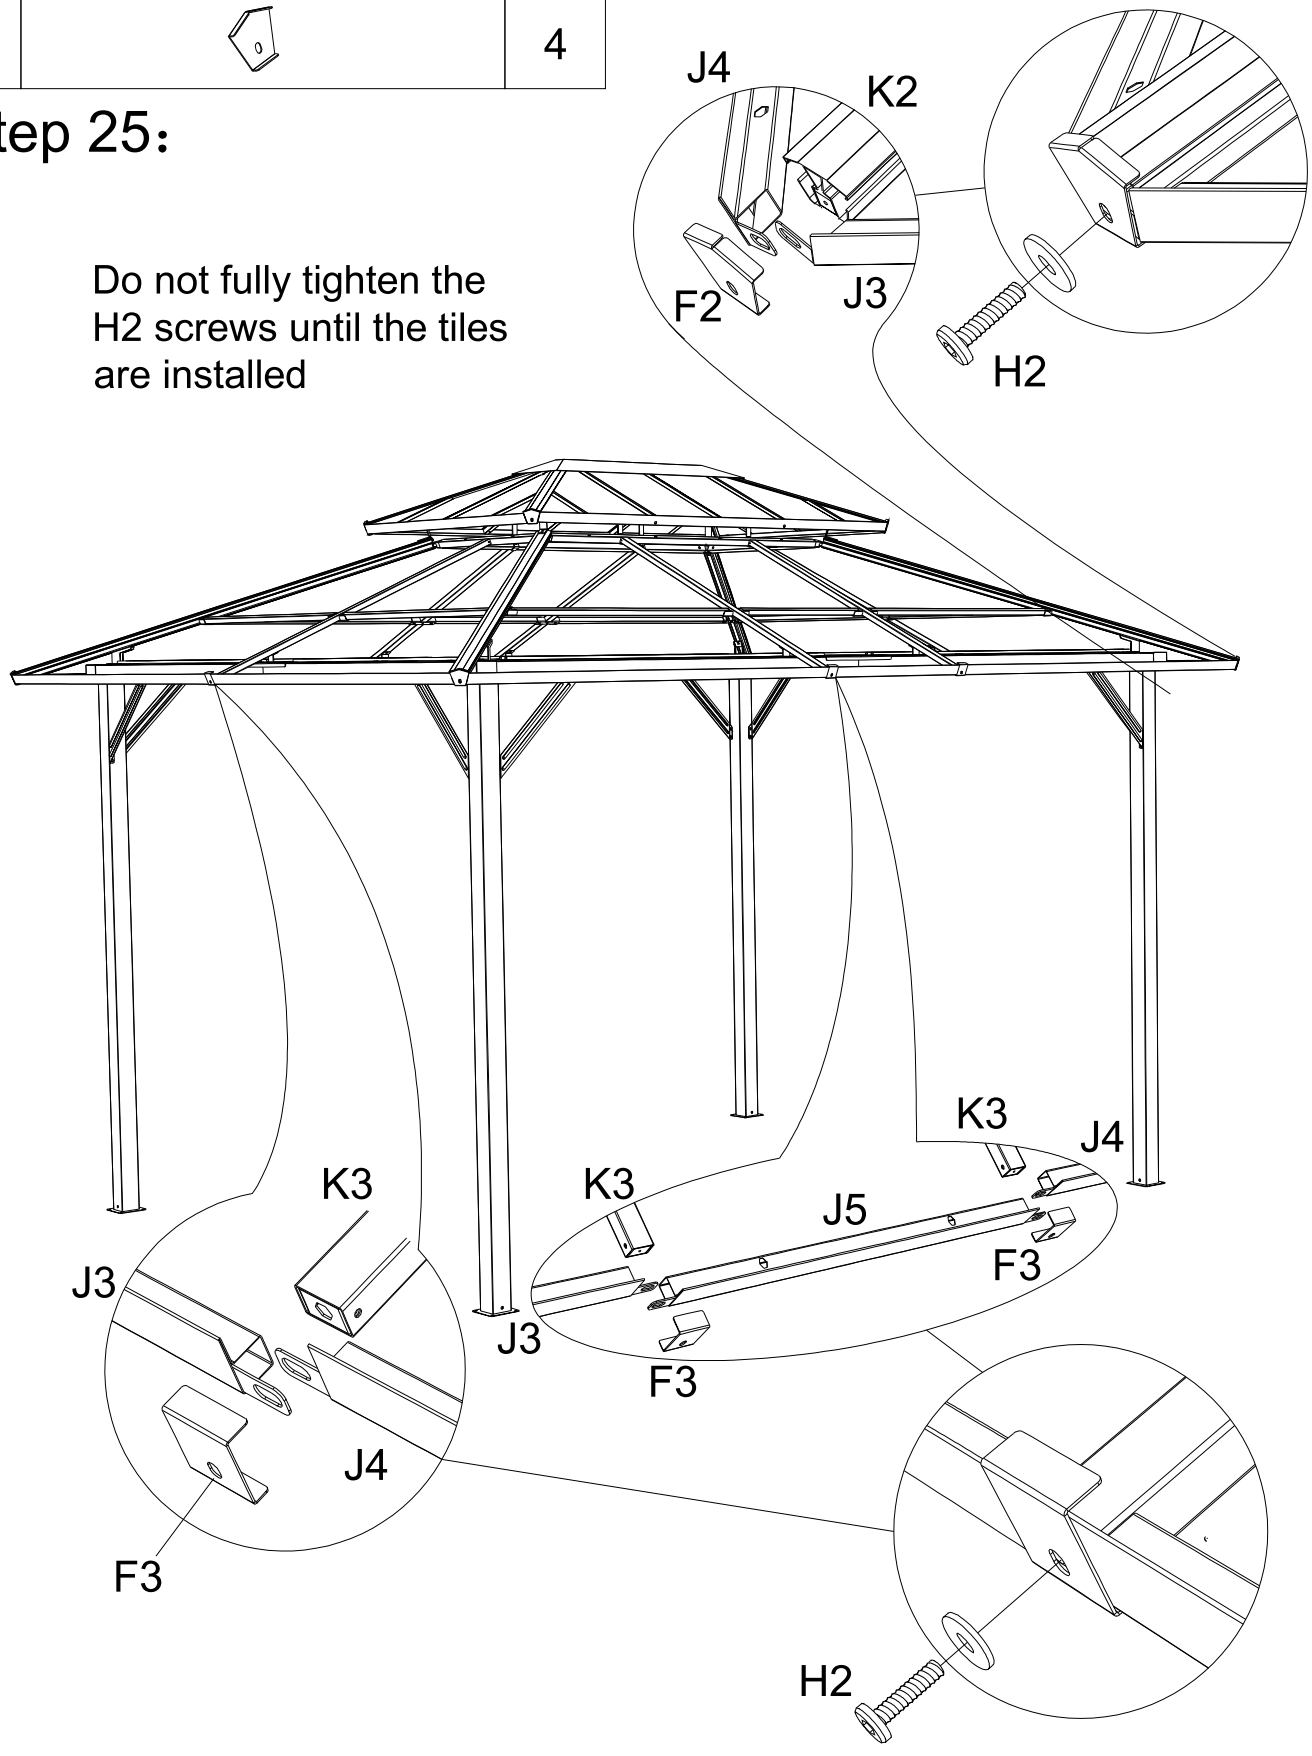




J3		4
J4		4
J5		2
F2		4


F3		6
H2	M6X25	10
H6	M6	10

Step 25:

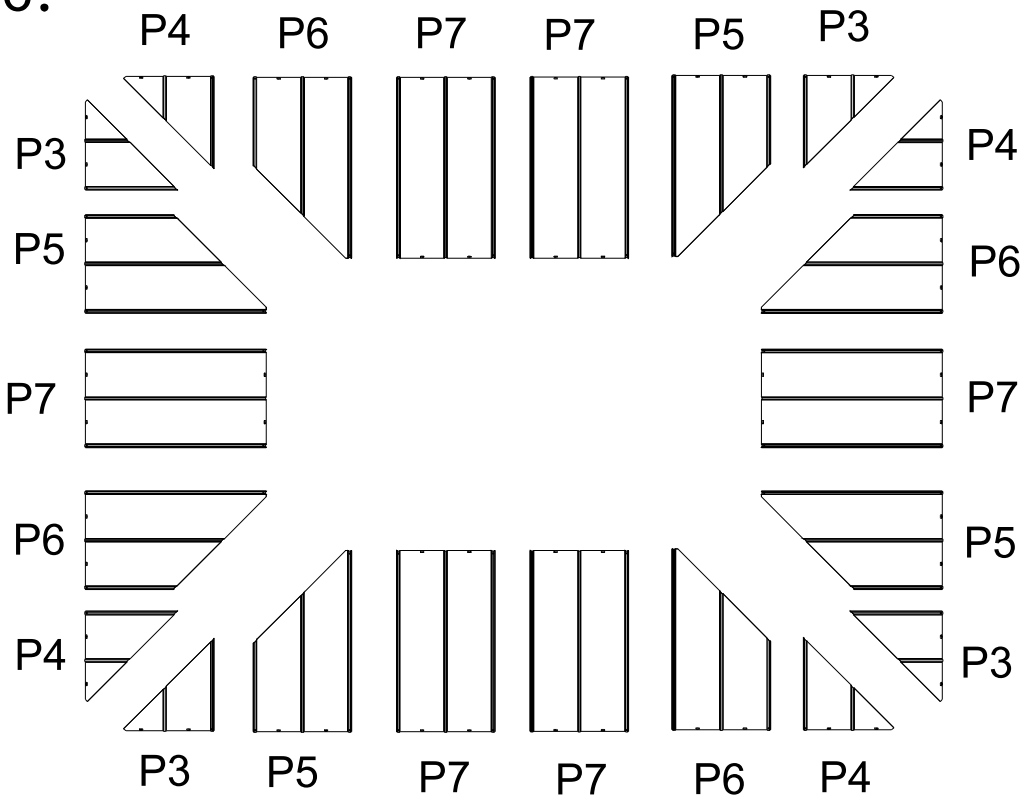
Do not fully tighten the H2 screws until the tiles are installed

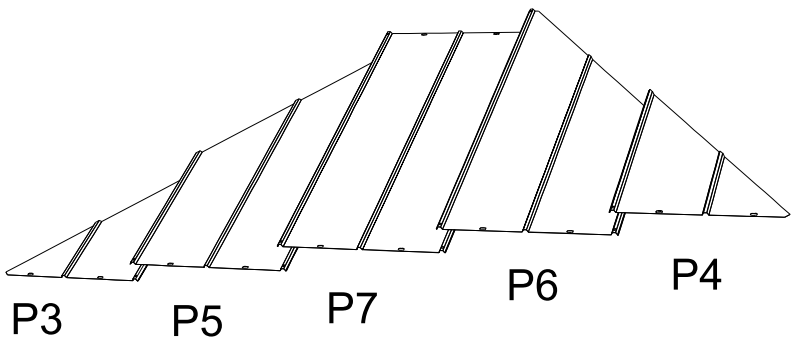


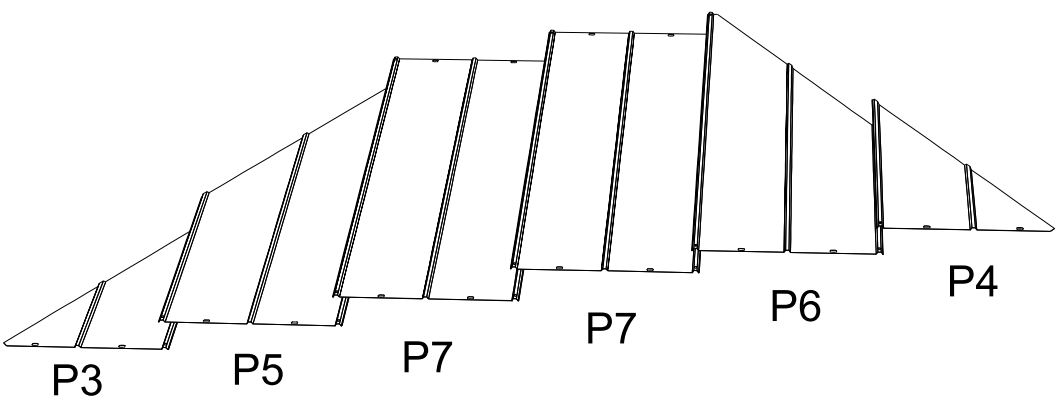
P3		4
P5		4
P7		6

P4		4
P6		4

Step 26:







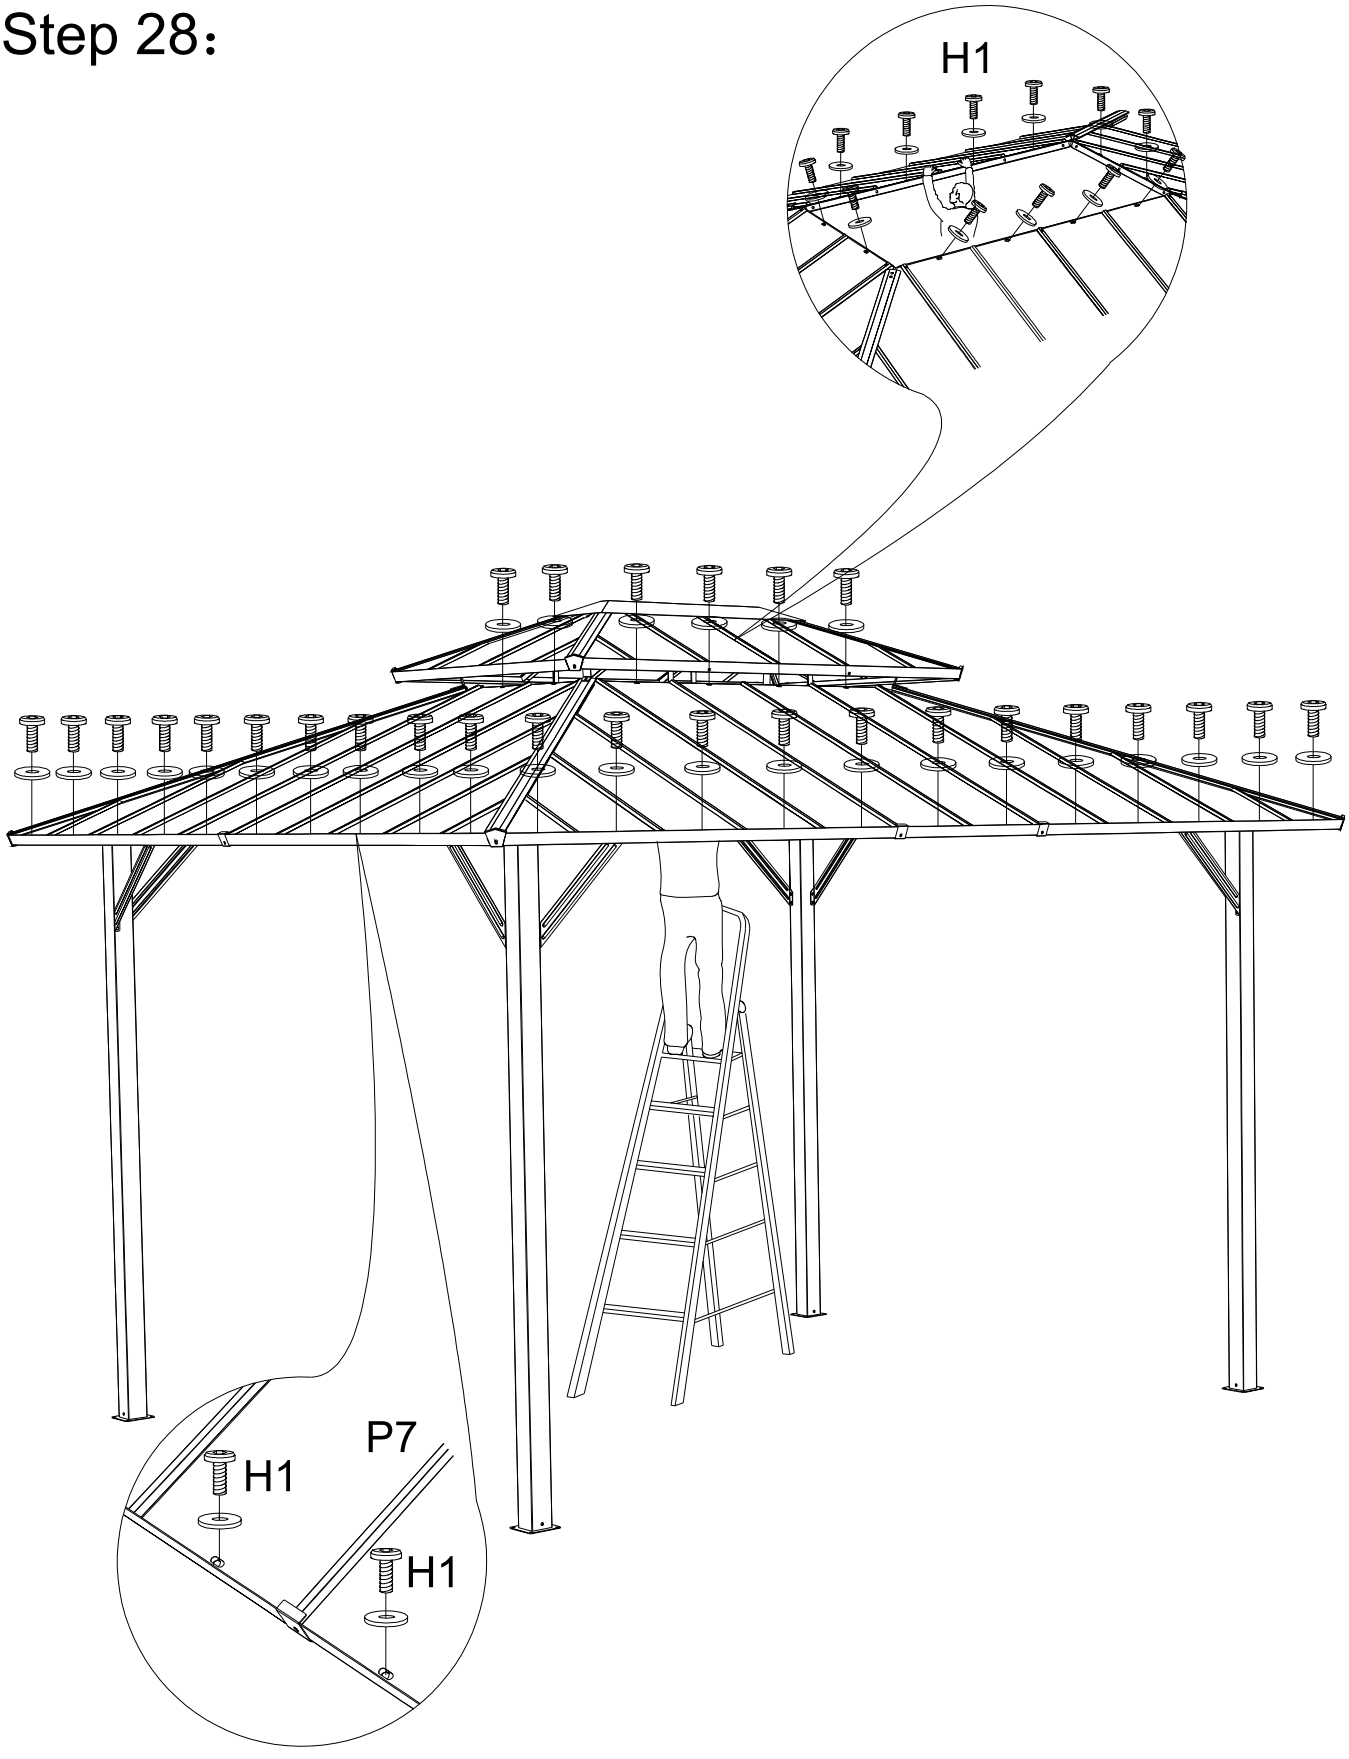


H9			28

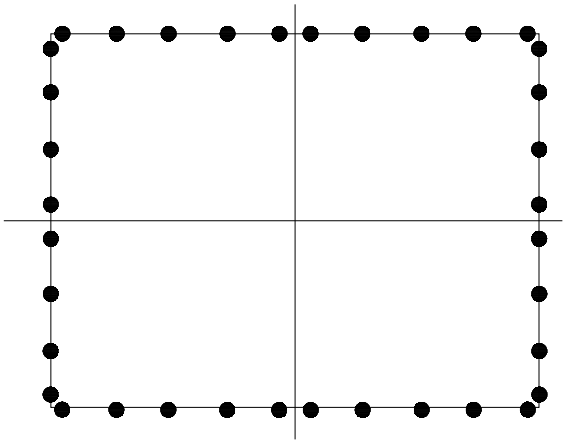
Step 27：

H1		M6X15	56
H6		M6	56

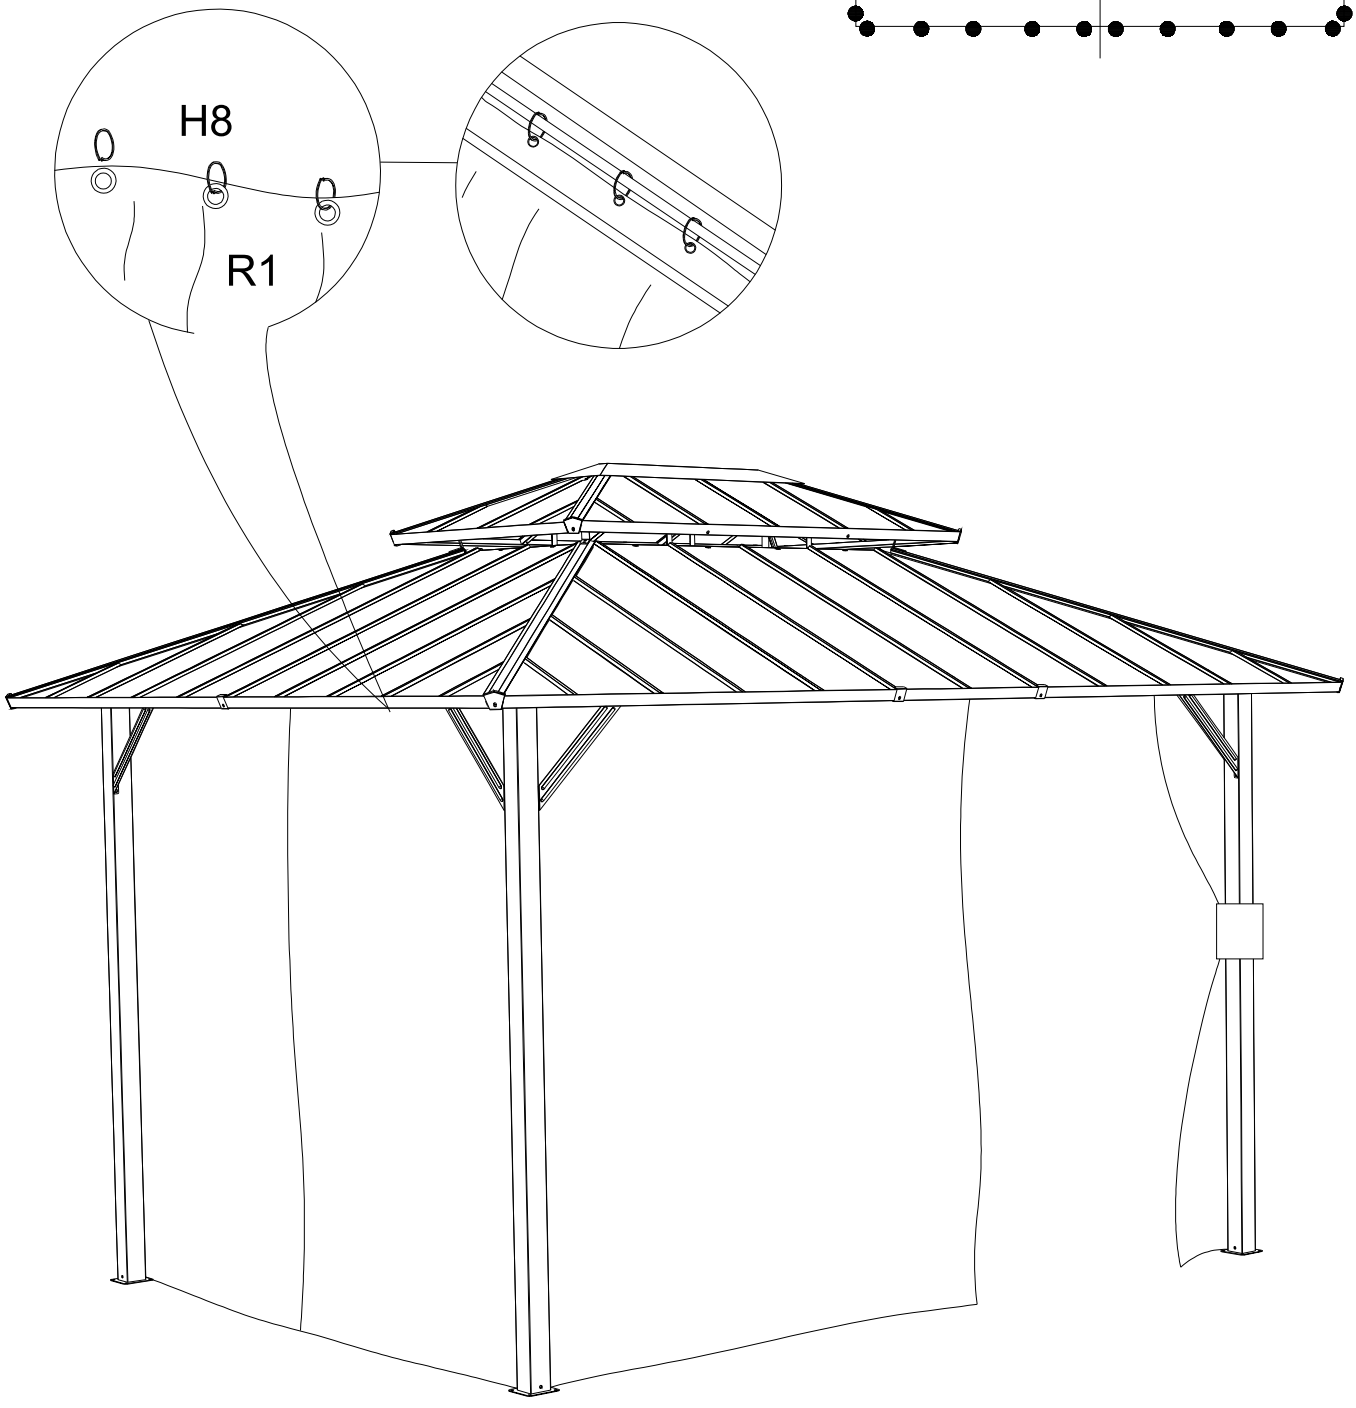
Step 28：



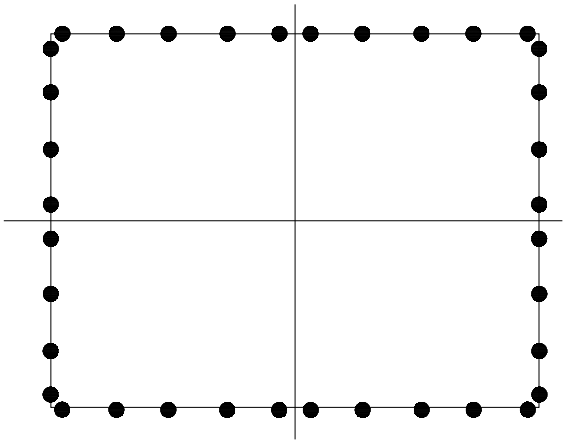
H8		36
R1		1



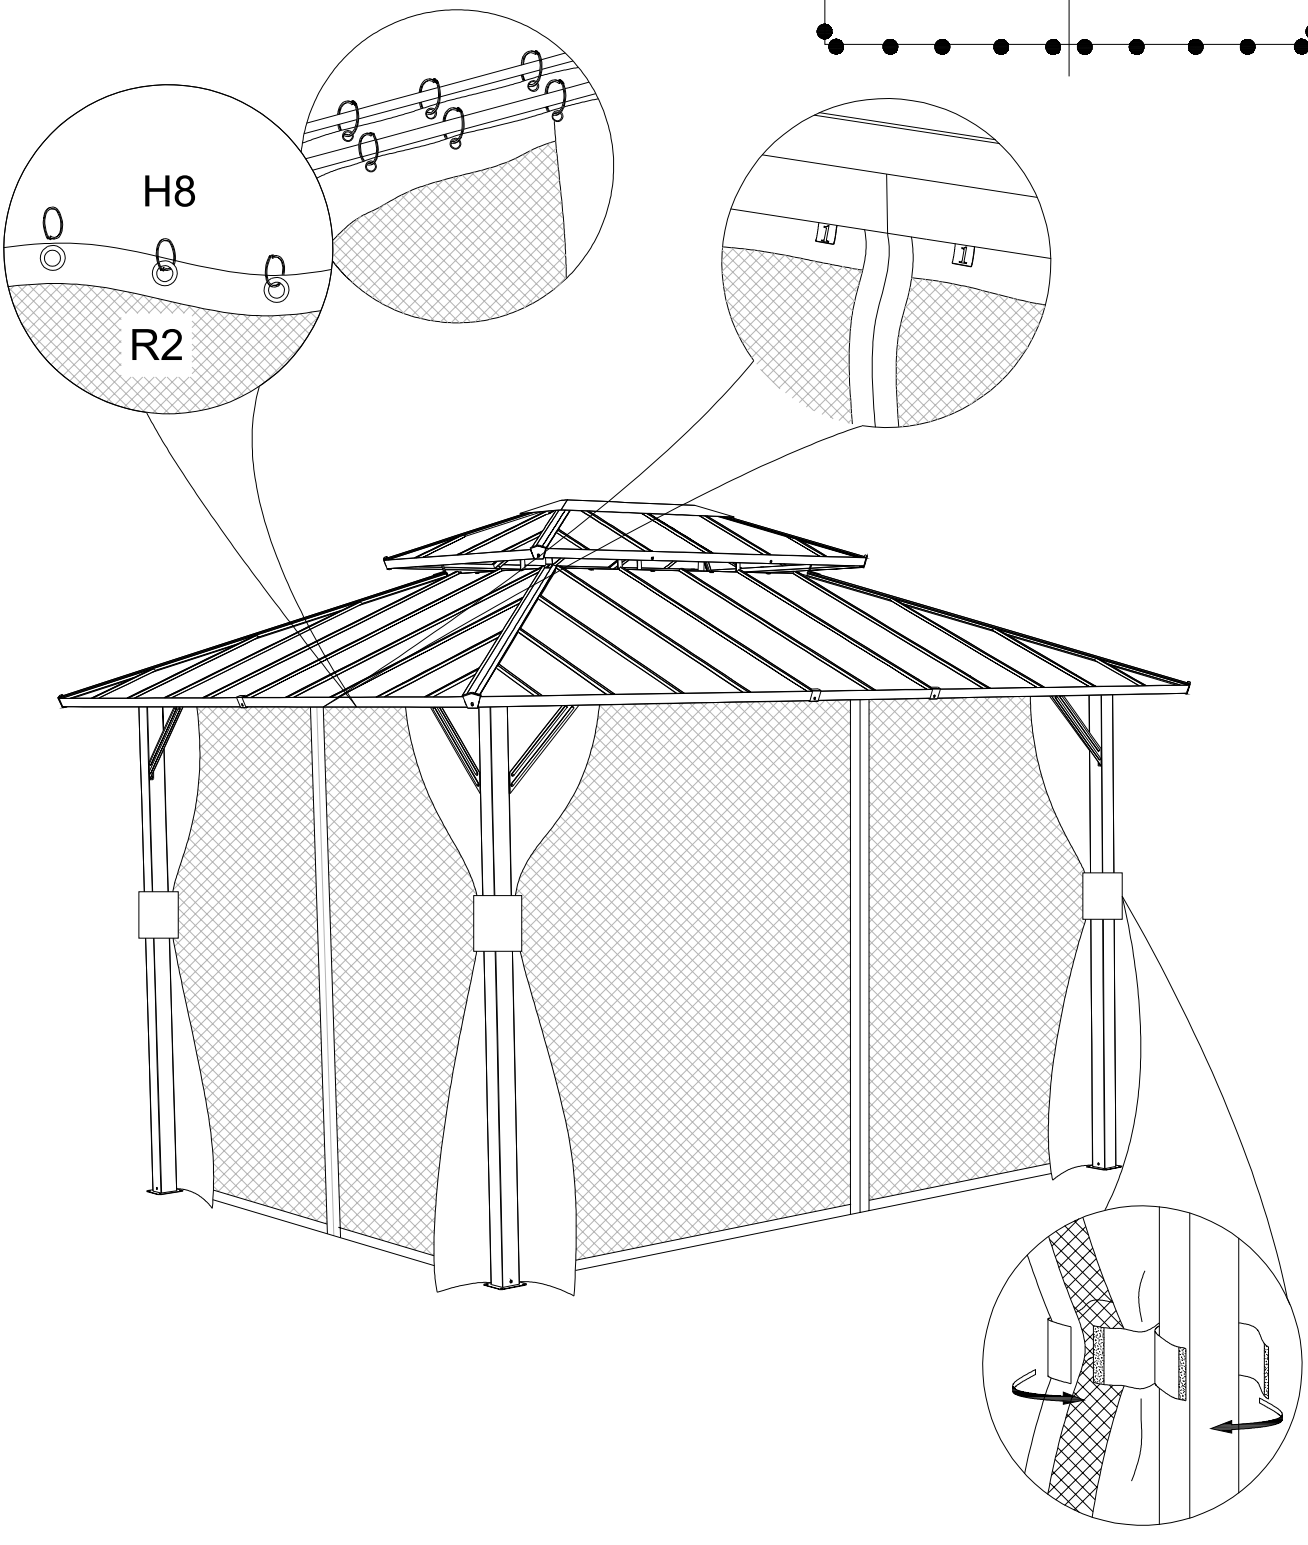
Step 29：



H8		36
R2		1

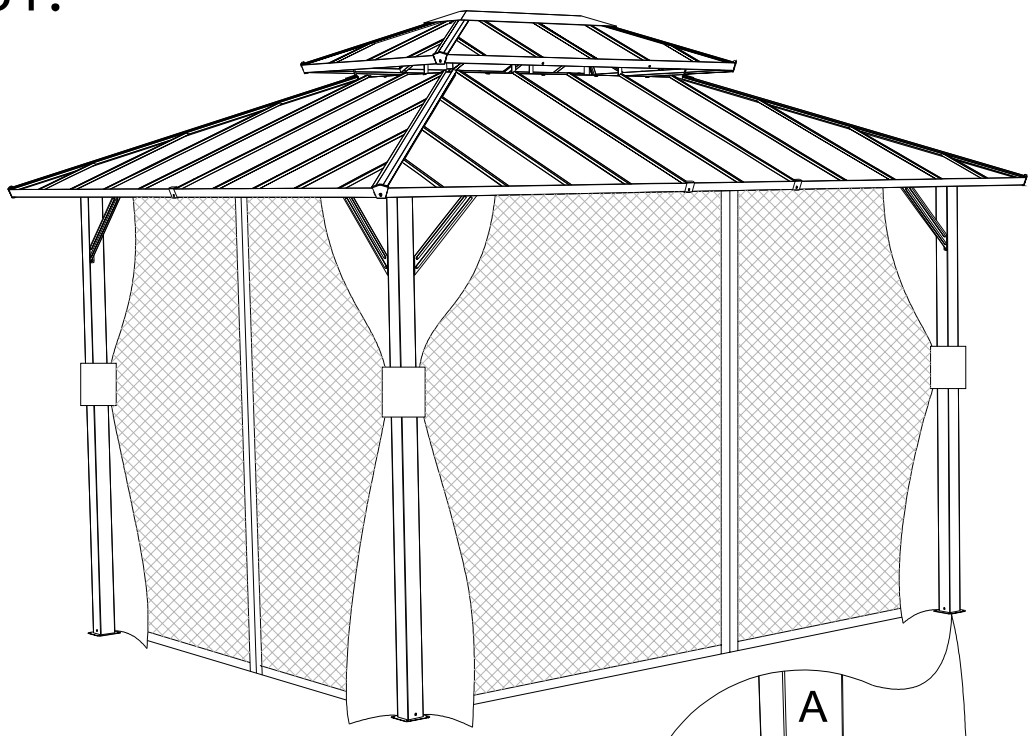


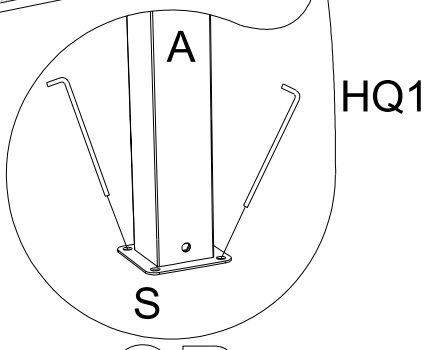
Step 30：



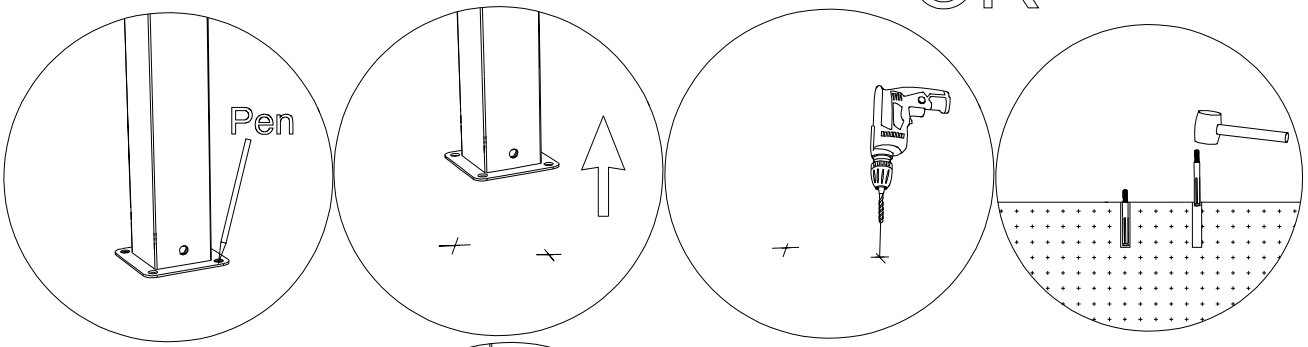
HQ1		4X140	8	HQ2		M8X70	8

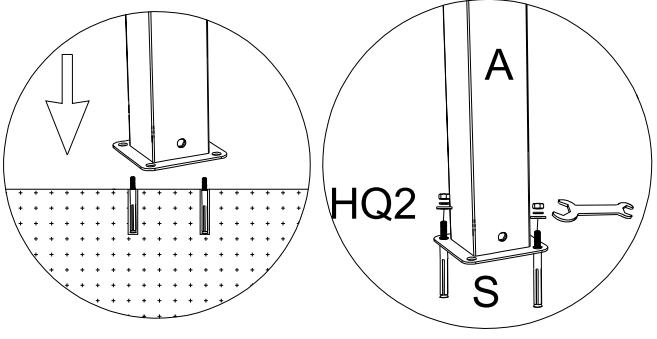
Step 31：





OR





We recommend using HQ2 expansion bolts to secure the gazebo.

1.Mark the mounting locations on the ground and drill the holes.

2.Insert the expansion bolts into the holes.

3. Lift the gazebo, align it with the expansion bolts, and tighten the bolts securely.