

## ASSEMBLY INSTRUCTIONS

OUTDOOR SUNBED WITH CANOPY

# PARTS

Check that you've received  
all parts listed below.

A1



(1 pc)

A2



(1 pc)

B1



(1 pc)

B2



(1 pc)

C1



(1 pc)

C2



(1 pc)

D1



(1 pc)

D2




(1 pc)

D3



(1 pc)

E

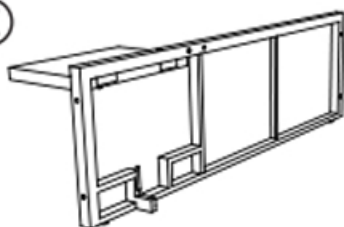

(1 pc)

F



(2 pcs)

G




(2 pcs)

# PARTS |

Check that you've received  
all parts listed below.

ⓓ

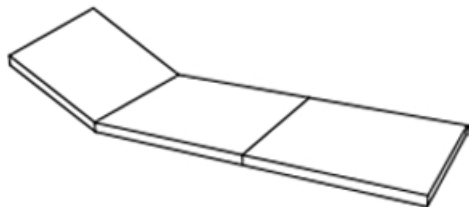


(1 pc)

ⓓ




(1 pc)

ⓓ

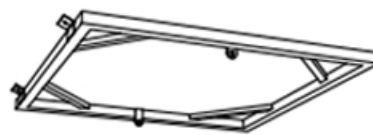


(1 pc)

ⓓ

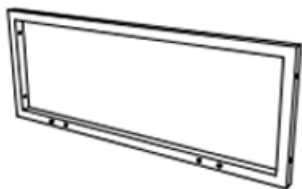


(2 pcs)

ⓓ

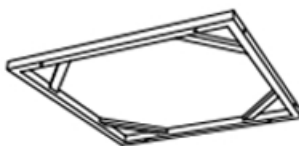


(1 pc)

ⓓ

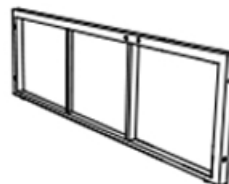


(1 pc)

ⓓ

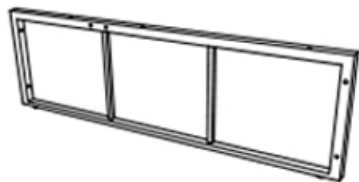


(1 pc)

ⓓ

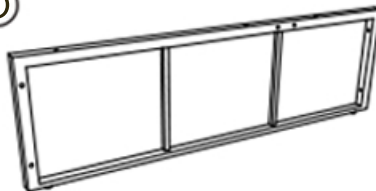


(1 pc)

ⓓ

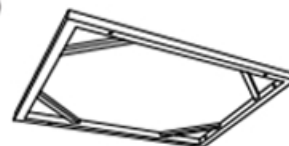


(1 pc)

ⓓ

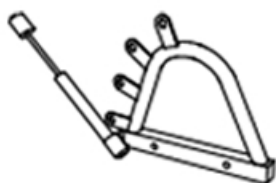

(1 pc)

ⓓ

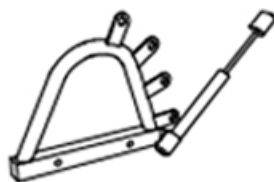


(1 pc)

# HARDWARE

Check that you've received  
all hardware listed below.

① M6x20 mm



(18 pcs)

② M6x35 mm



(7 pcs)

③ M6x40 mm



(14 pcs)

④ M6x45 mm



(8 pcs)

⑤ Ø6x14x1 mm



(18 pcs)

⑥ Ø6x16x3 mm



(2 pcs)

⑦ Eru M6 mm



(10 pcs)

⑧ Allen key 4x98 mm




(2 pcs)

⑨ Spanner No. 10 mm



(1 pc)

⑩ M6x25 mm



(7 pcs)

⑪



(1 pc)

⑫ M6x12 mm




(4 pcs)

⑬



(1 pc)

⑭ Torque wrench

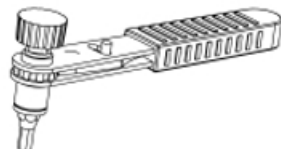


(1 pc)

Missing something? Email us at [hello@museandlounge.com](mailto:hello@museandlounge.com)




# HARDWARE |

Check that you've received all hardware listed below.

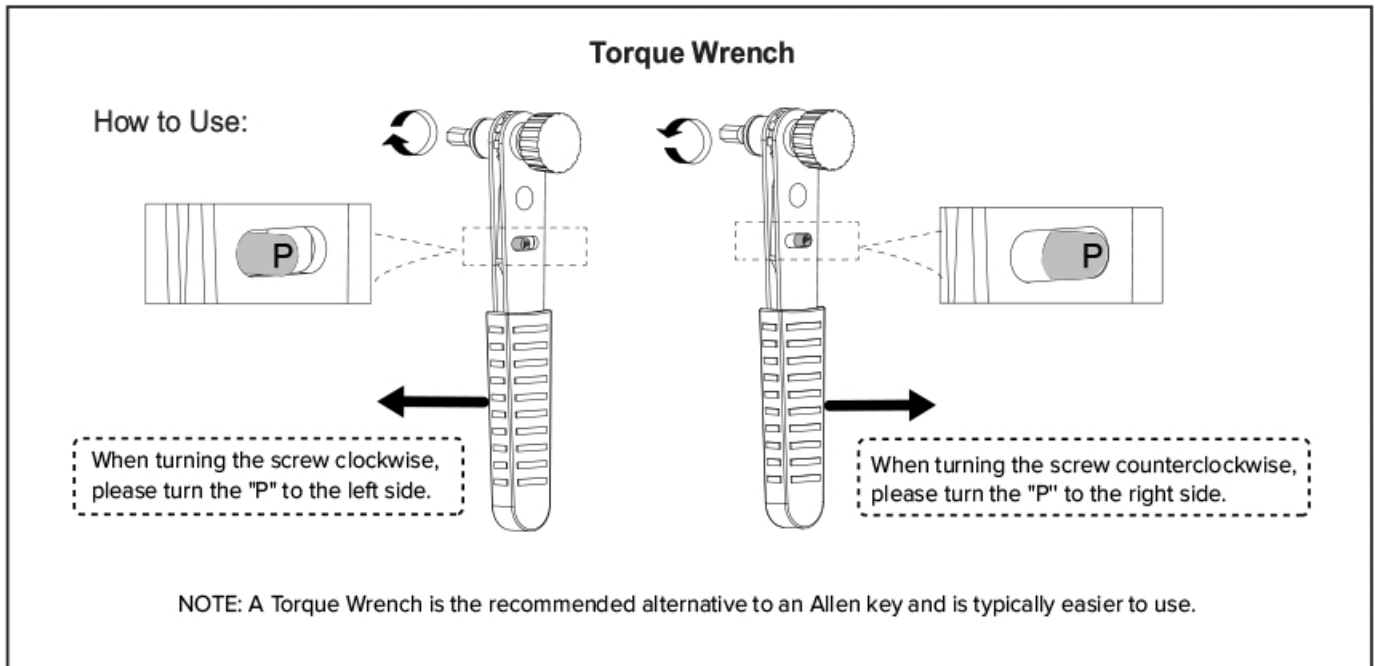

# STEP 1


Tighten bolts halfway

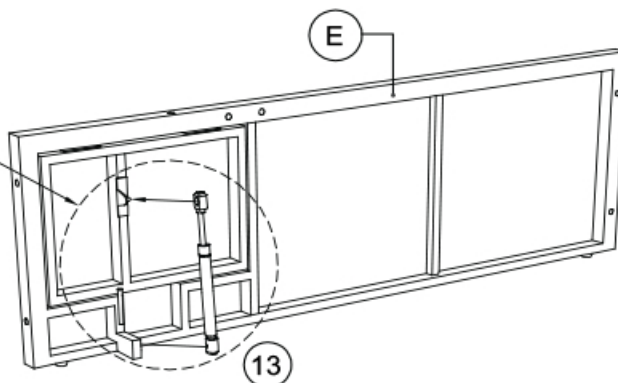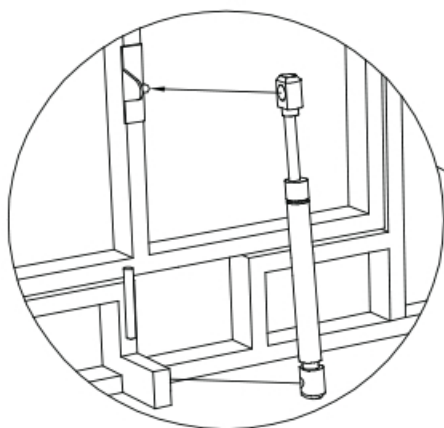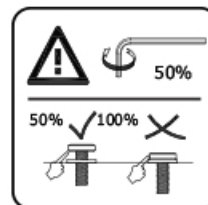


Let's prep the side table.  
Attach Hinge (13) to the Rear  
Side Panel (E).

# STEP 2

Tighten bolts halfway

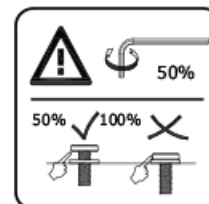

Align Side Panel (O) with Rear Side  
Panel (E) and secure Long Bolt (3)  
with supplied Allen key (8).


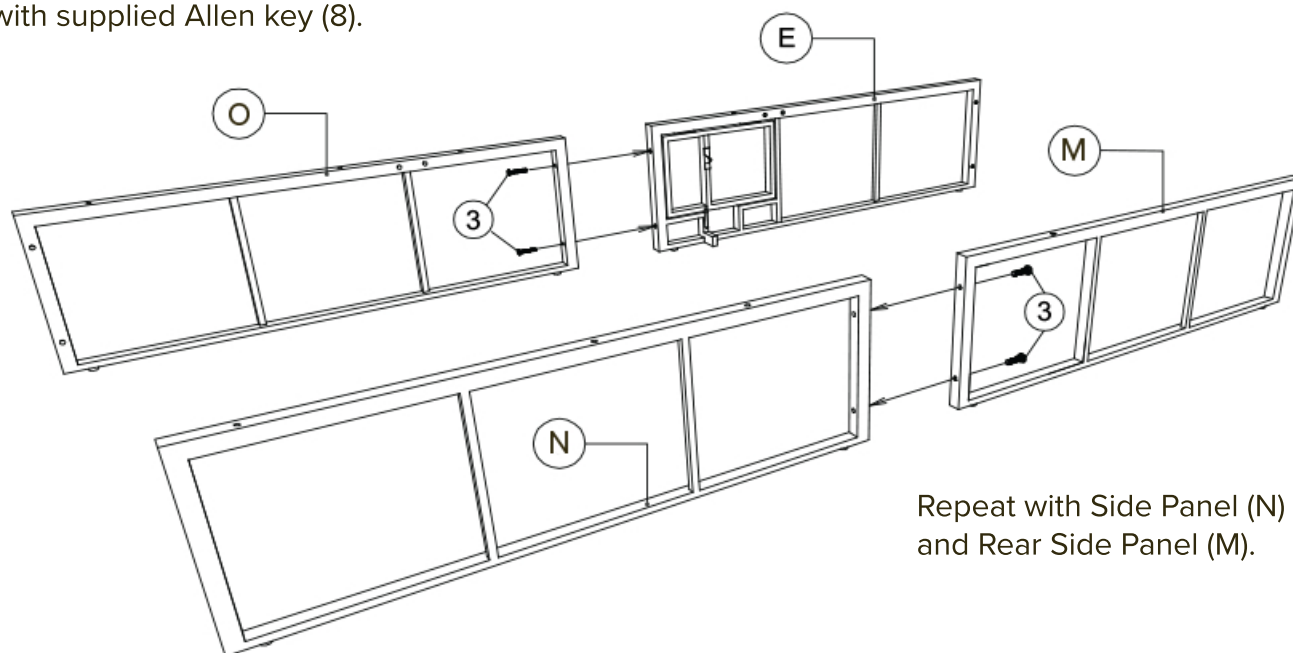


Repeat with Side Panel (N)  
and Rear Side Panel (M).

# STEP 3

Align one Connecting Bar (F) between Rear Side Panels (M, E) and secure Small Bolt (1) with supplied Allen key (8). Repeat between Side Panels (N, O).


Tighten bolts halfway

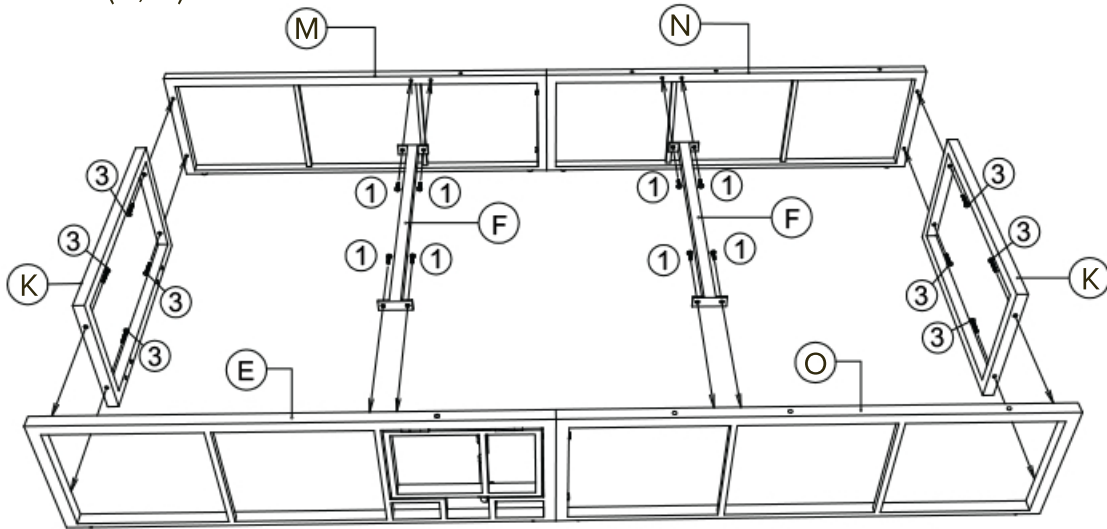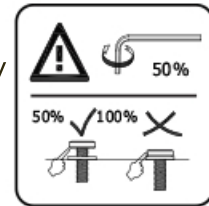


Align one Connecting Panel (K) between Side Panels (M, E) and secure Long Bolt (3) with supplied Allen key (8). Repeat between Side Panels (N, O).

# STEP 4

Tighten bolts halfway

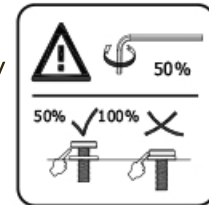


Align Angled Support Bar (G) between Connecting Bar (F) and Connecting Panel (K), with adjustment brackets facing upwards, and secure Small Bolt (1) with supplied Allen key (8).

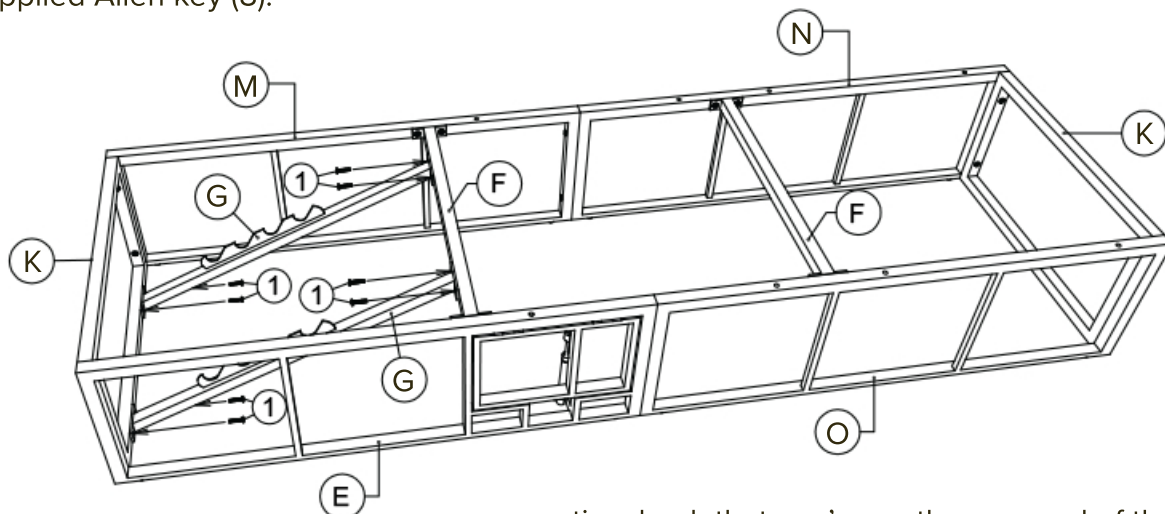

tip: check that you're on the rear end of the lounge, between Rear Side Panels (M, E)

# STEP 5


Tighten bolts halfway

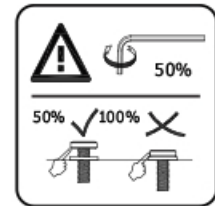

Position Backrest Beam (I) perpendicular to Backrest Frame (J).



Insert Small Bolt (2) through Backrest Frame (J), Spring Washer (6), Backrest Beam (I), Spring Washer (5) and tighten halfway in place with Lock Nut (7).

Repeat on other end.

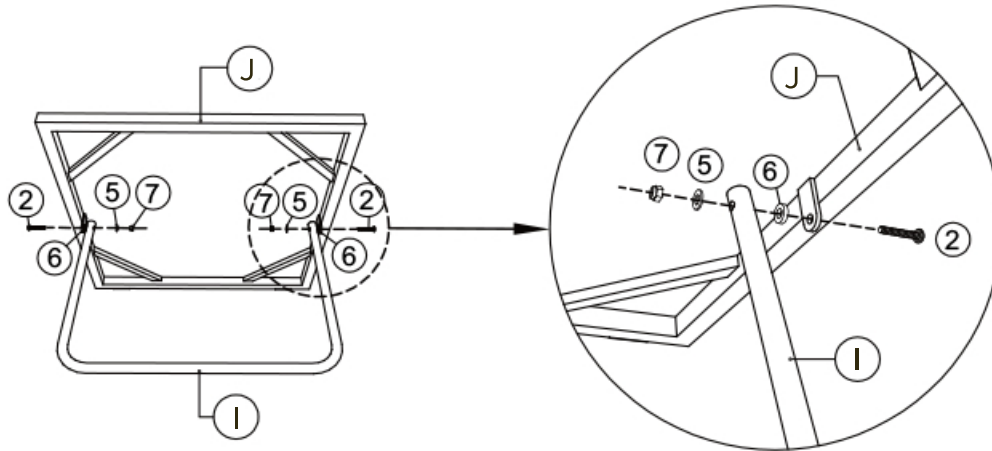

# STEP 6

Tighten bolts halfway

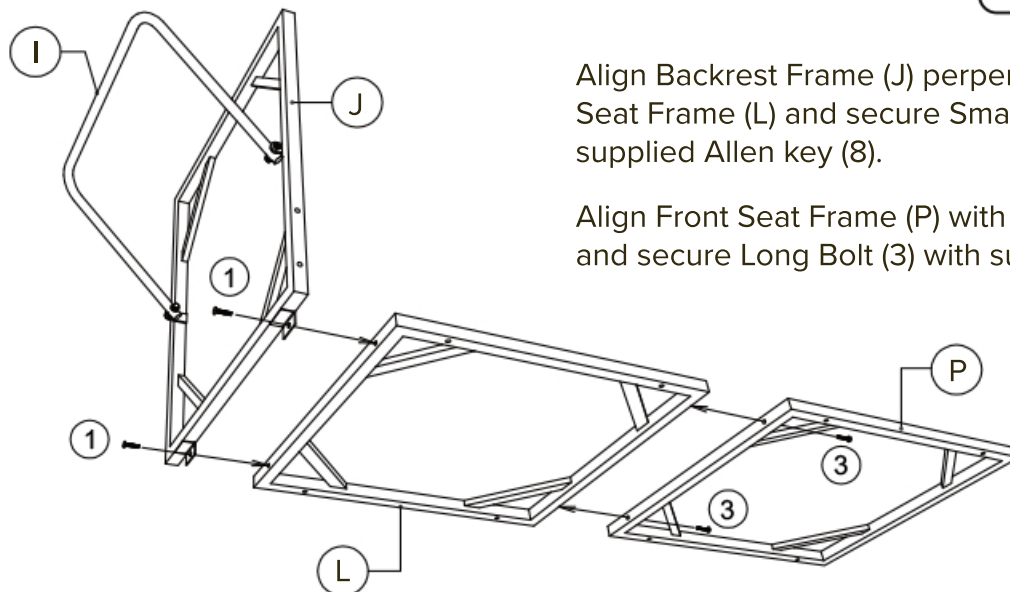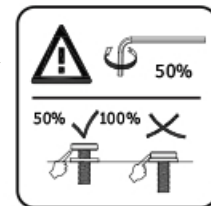

Align Backrest Frame (J) perpendicular to Rear Seat Frame (L) and secure Small Bolt (1) with supplied Allen key (8).

Align Front Seat Frame (P) with Rear Seat Frame (L) and secure Long Bolt (3) with supplied Allen key (8).




# STEP 7

Tighten bolts halfway




Place Front Seat Frame (P) atop the Side Panels (N, O). Rear Seat Frame (L) should lay atop the center of the lounge.

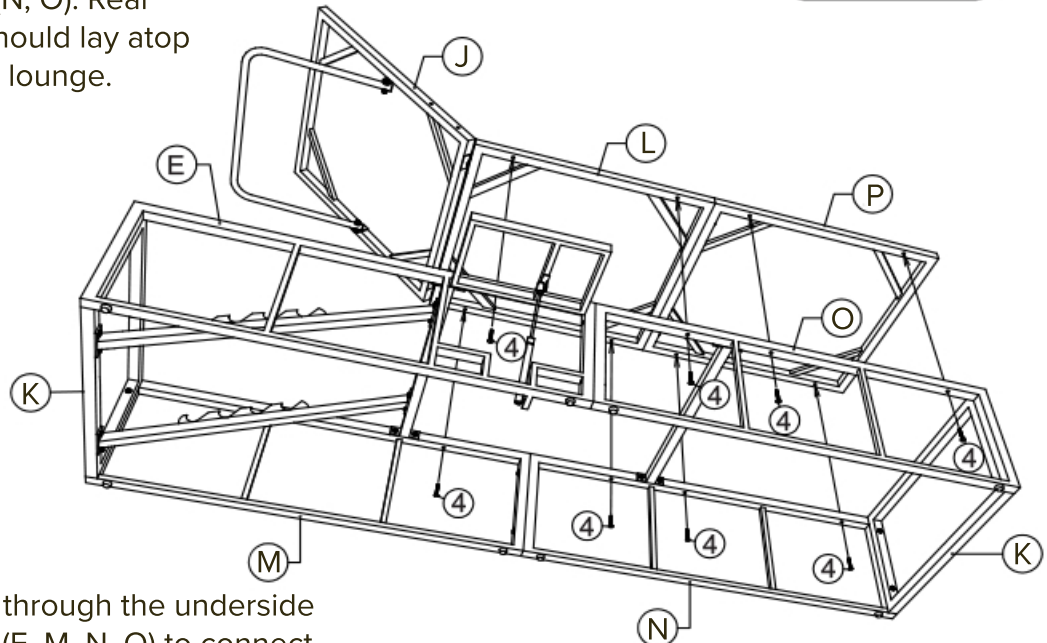

Insert Long Bolt (4) through the underside of each Side Panel (E, M, N, O) to connect with Seat Frame (P, L) and secure with supplied Allen key (8).


# STEP 8

Tighten bolts halfway

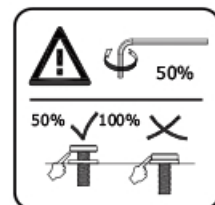

Align Canopy Bracket (R) to the side of Backrest Frame (J), with brackets facing outward, and secure Small Bolt (2) with supplied Allen key (8).

Repeat on other end with Canopy Bracket (Q).

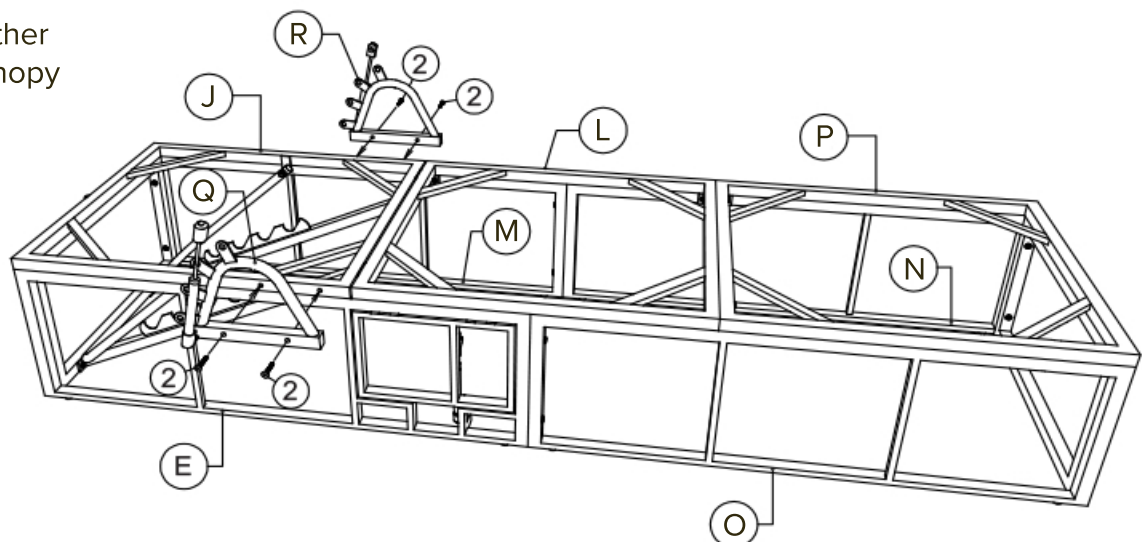


# STEP 9

Connect Canopy Beams (A1) and (A2), and secure with Screw (12).

Canopy Beam (A1) should have a nub facing inwards.



Canopy Beam (A2) will not have a nub.

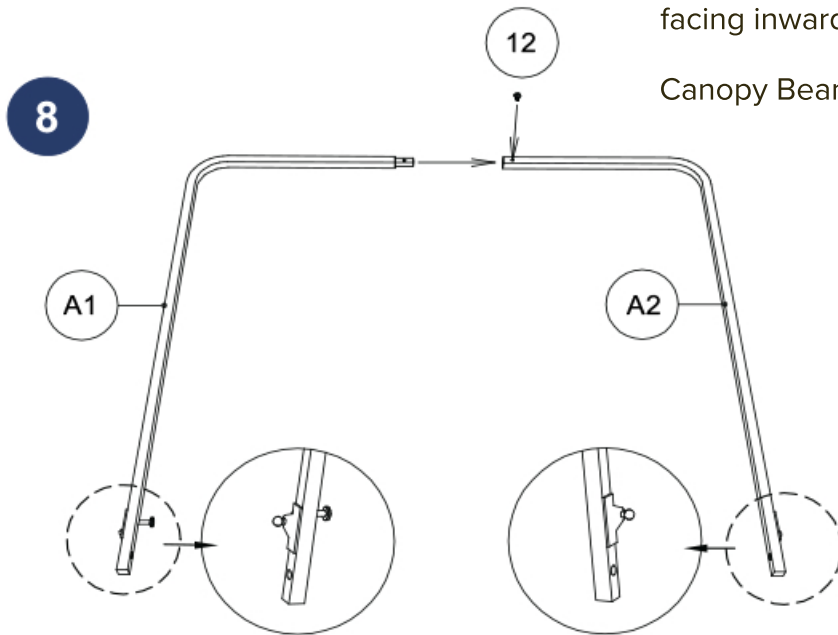

# STEP 10


Connect Canopy Beams (B1) and (B2), and secure with Screw (12).

Tighten bolts halfway

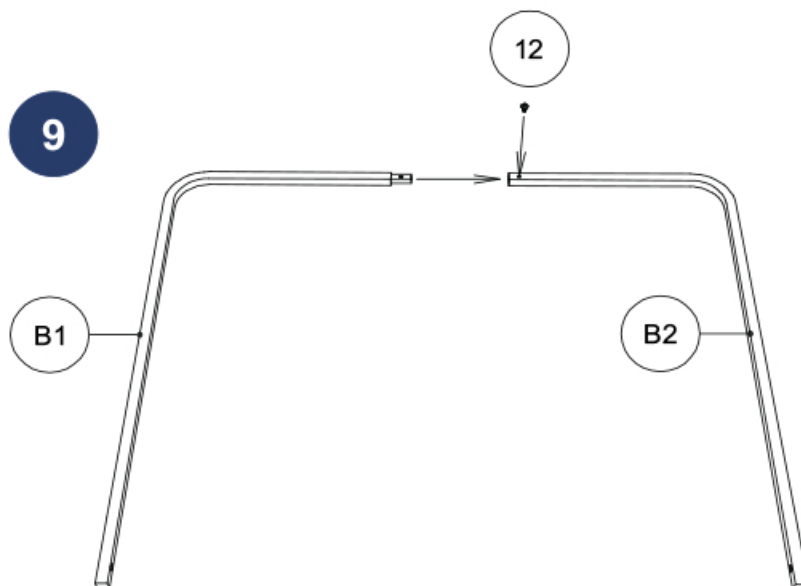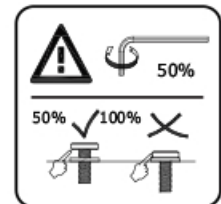


# STEP 11

Connect Canopy Beams (C1) and (C2), and secure with Screw (12).

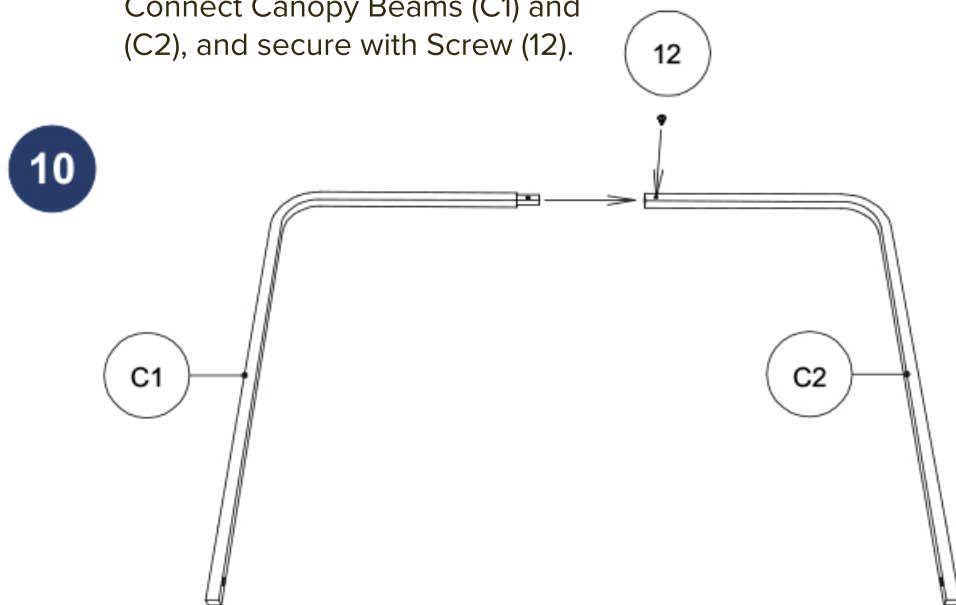


# STEP 12

Tighten bolts halfway

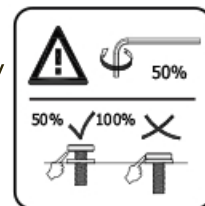


Connect Canopy Beams (D1) and (D2), and secure with Screw (12).

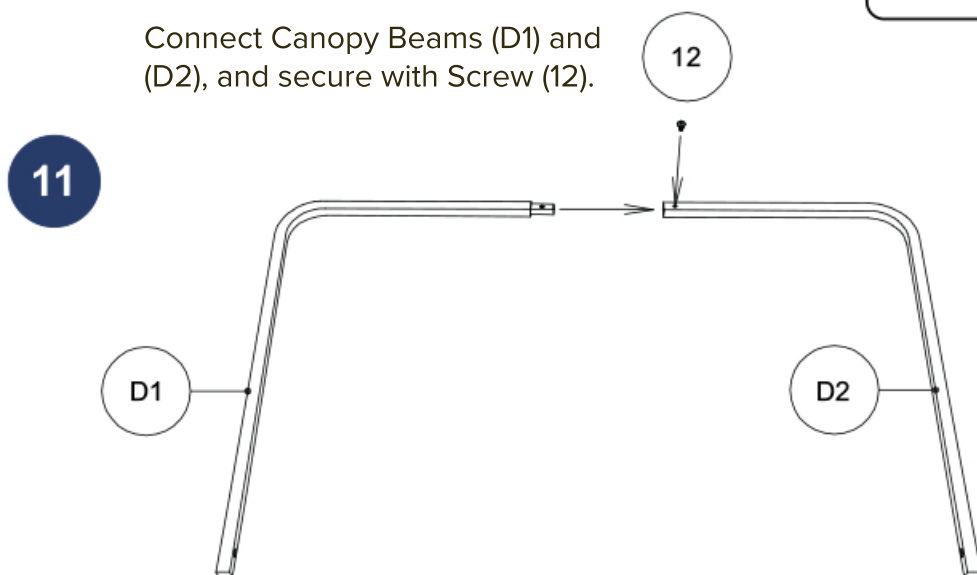


# STEP 13

Tighten bolts halfway

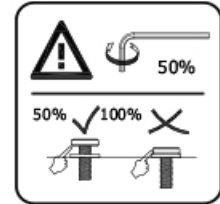

Arrange Canopy Beams in order from A to D. Attach Canopy Cover (D3).

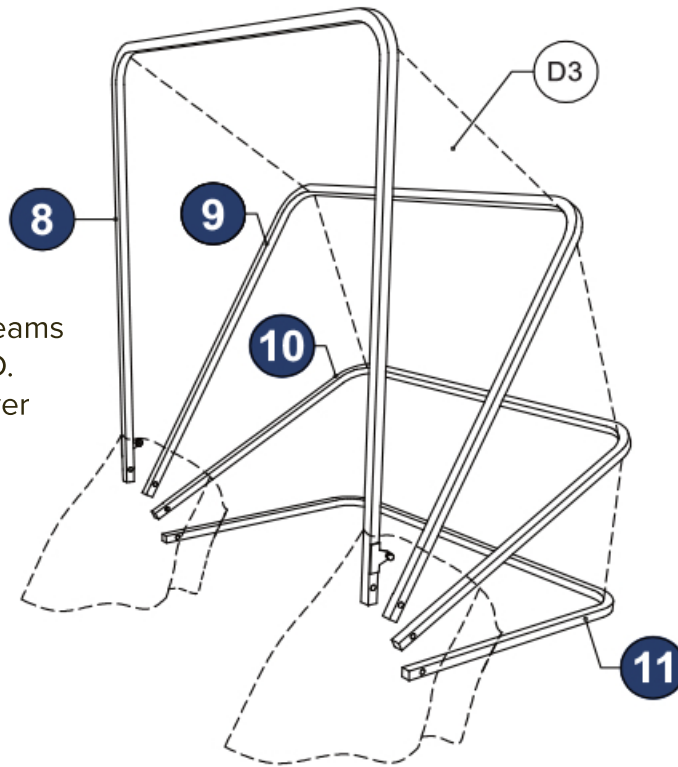

# STEP 14


Tighten bolts halfway



Align Canopy Beams with Canopy Bracket (Q, R).




For Canopy Beam (A1), insert Short Bolt (10) through Canopy Beam (A1), Spring Washer (5), Canopy Bracket (Q) and secure in place with Lock Nut (7). Use Hand Tool (11) to tighten halfway. Repeat for remaining Canopy Beams (B1, C1, D1).

For Canopy Beam (A2), insert Short Bolt (10) through Canopy Beam (A2), Spring Washer (5), Canopy Bracket (R) and secure in place with Lock Nut (7). Use Hand Tool (11) to tighten halfway. Repeat for remaining Canopy Beams (B2, C2, D2).

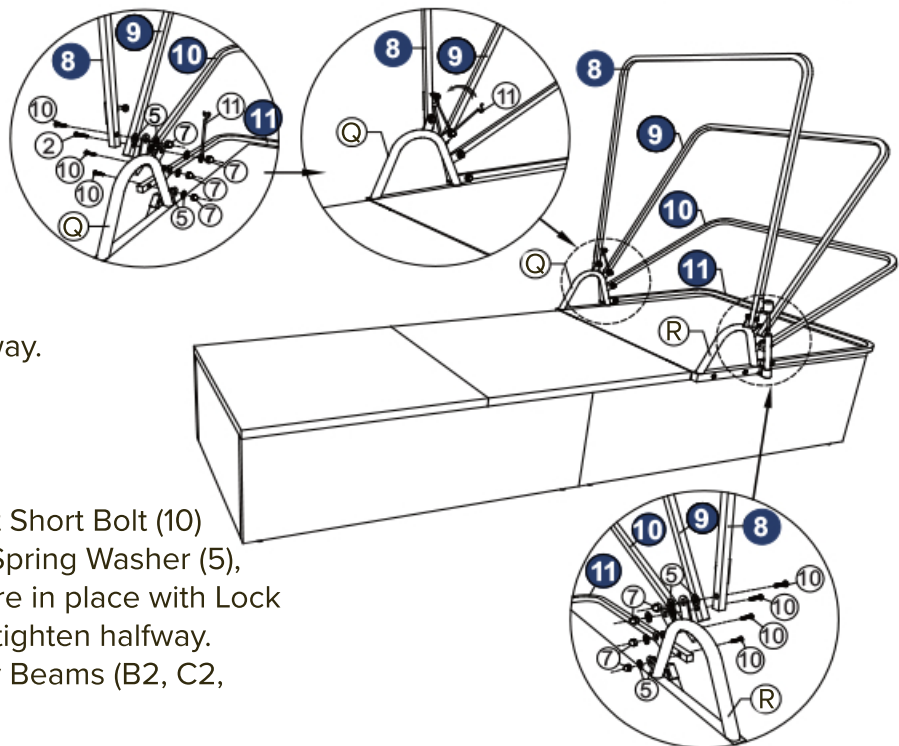

# STEP 15

Attach hinge of Canopy Bracket (Q) to Canopy Beam (A1). Repeat for Canopy Bracket (R).

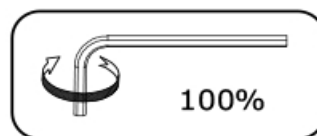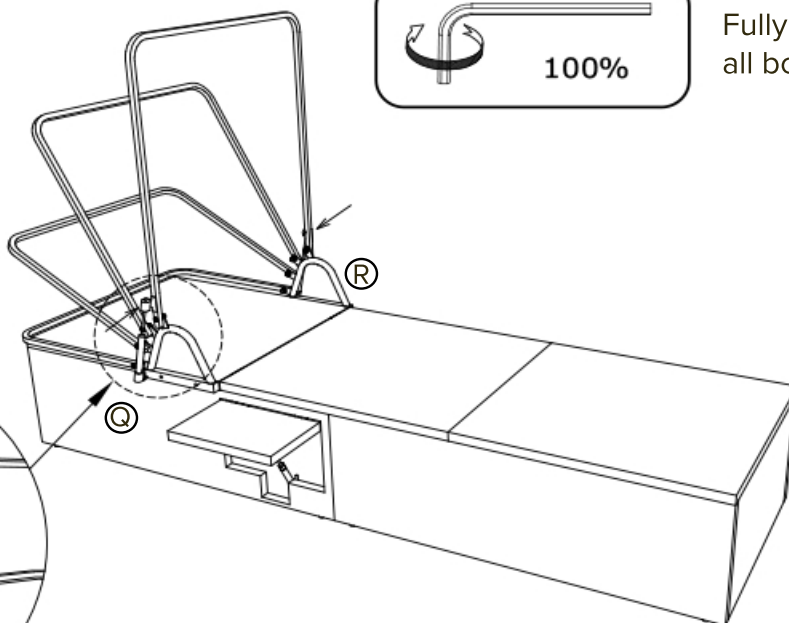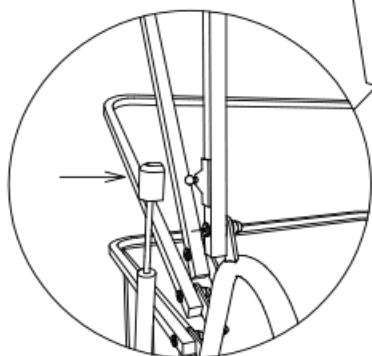


Fully tighten all bolts.

Fully tighten all visible bolts with Hand Tool (11).


# STEP 16

Time to test!


- Adjust the backrest through different recline settings
- Carefully fold and unfold the canopy cover
- Open and close the side table

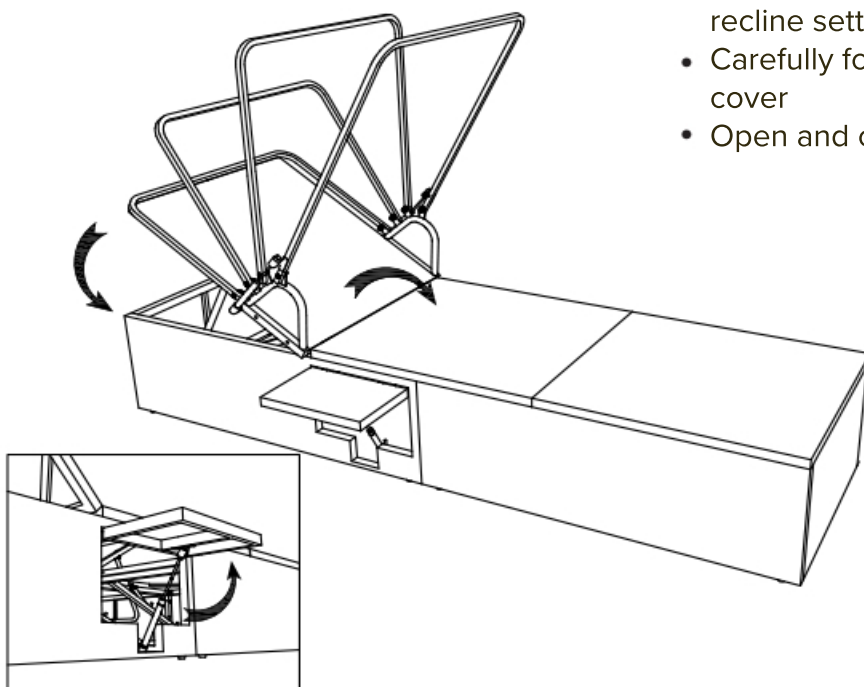

# STEP 17

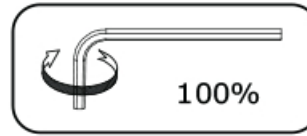

Fully tighten  
all bolts.

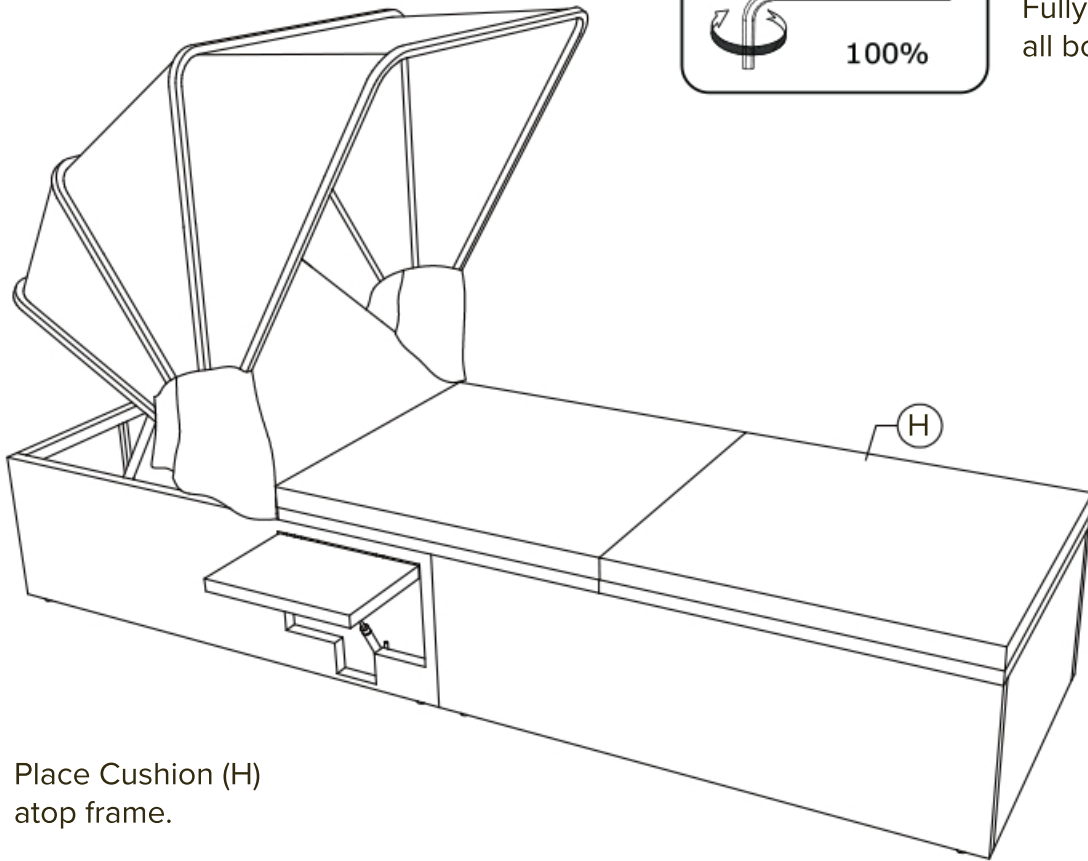

Place Cushion (H)  
atop frame.

Enjoy.

# Need some help?



1-888-980-5122



@museandloungeco



hello@museandlounge.com



## CARE INSTRUCTIONS

Outdoor furniture naturally weathers and shows color variation over time. We recommend the following care for the best results:

- Wipe with a soft cloth.
- Wash with mild soap and water as needed; do not use abrasive cleaners.
- Cover furniture with an outdoor cover (not included) when not in use.
- Store in a dry, covered area during inclement weather or winter season.



After assembly is completed, save these instructions and any included tools for future maintenance or re-assembly.