


W Walker
Edison
furniture company




Item #: OWB7SBR
Assembly Instructions

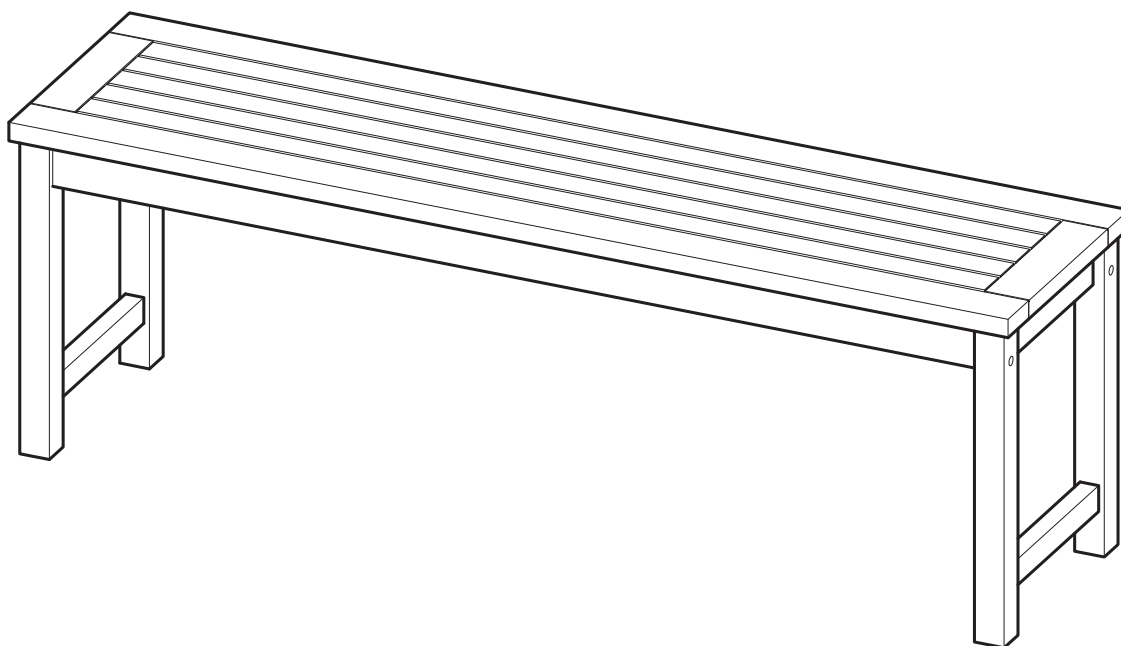





For our most current instructions, to request missing, lost or broken parts, or for any other Customer Service issues, please visit our website at www.walkeredison.com or call us at 877-207-5906.

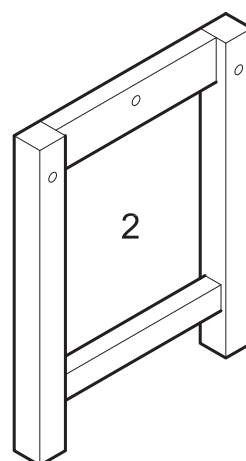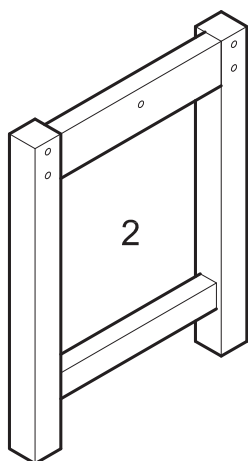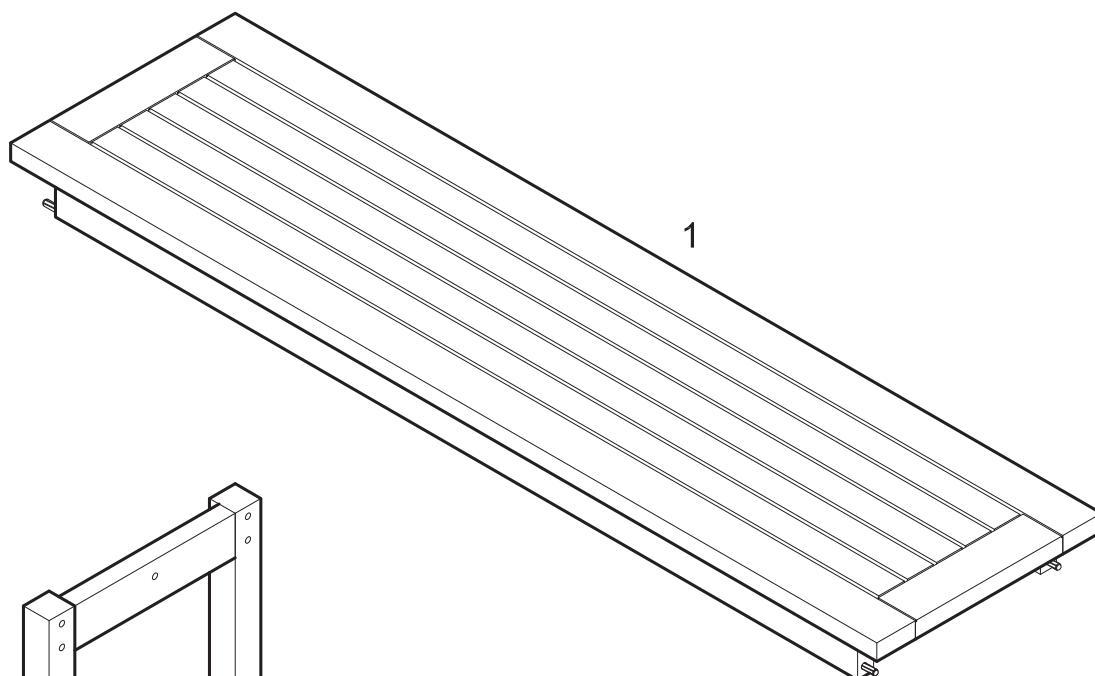Revised 02/2012

Parts List




Hardware List

| | | | | |
|---|---|------------|--------|-------|
| A |  | Ø8*82(mm) | Bolt | 4 pcs |
| B |  | Ø8*52(mm) | Bolt | 2 pcs |
| C |  | Ø11*15(mm) | Nut | 4 pcs |
| D |  | M5(mm) | Wrench | 1 pc |


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

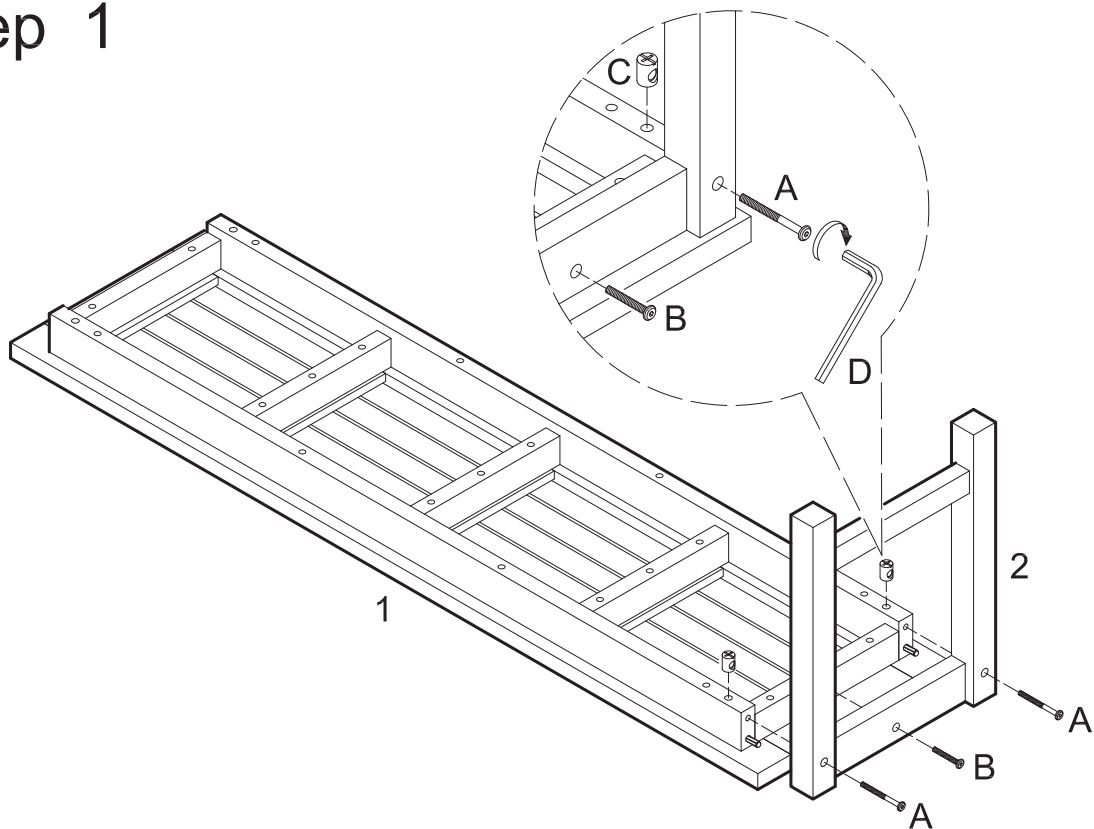


Insert barrel nuts (C) into bench seat (1). Attach leg set (2) to bench seat (1) using bolts (A,B). Bolts (A) will screw directly into barrel nuts (C). Tighten all bolts with wrench (D).

Step 2

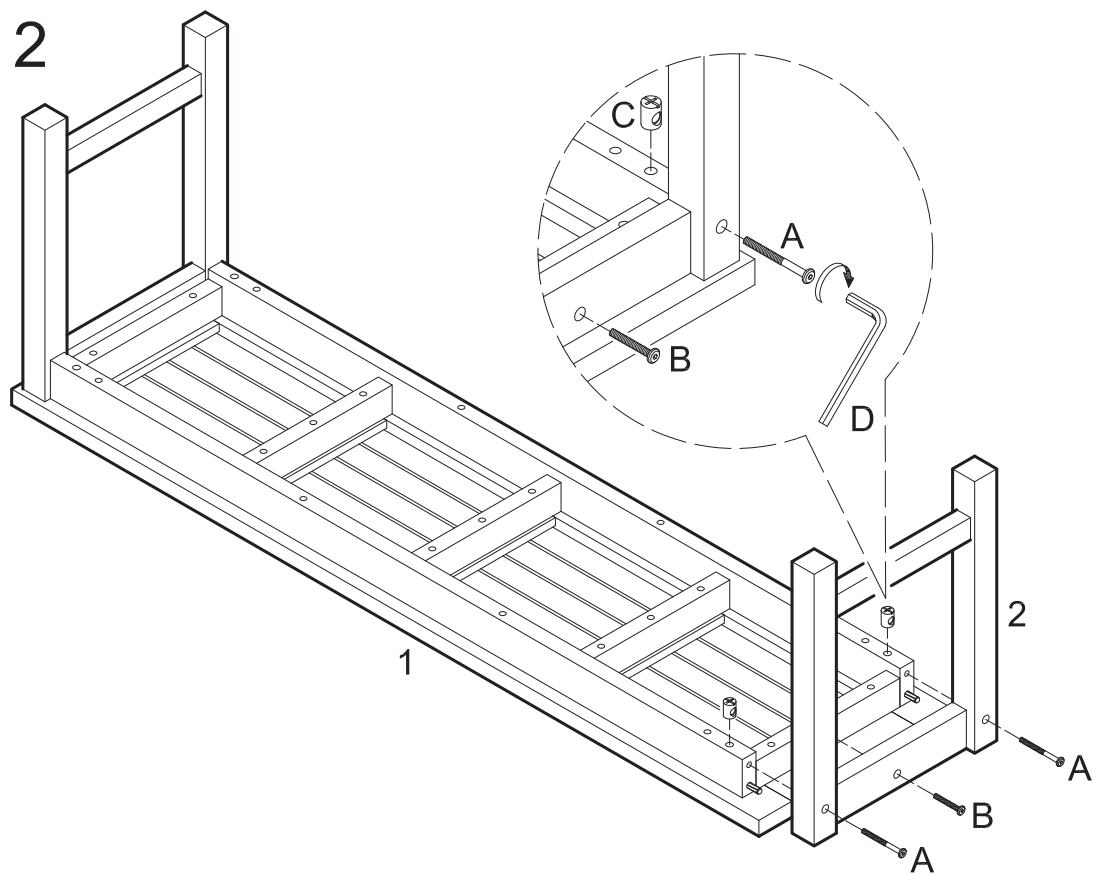

Insert barrel nuts (C) into bench seat (1). Attach leg set (2) to bench seat (1) using bolts (A,B). Bolts (A) will screw directly into barrel nuts (C). Tighten all bolts with wrench (D).

Step 3

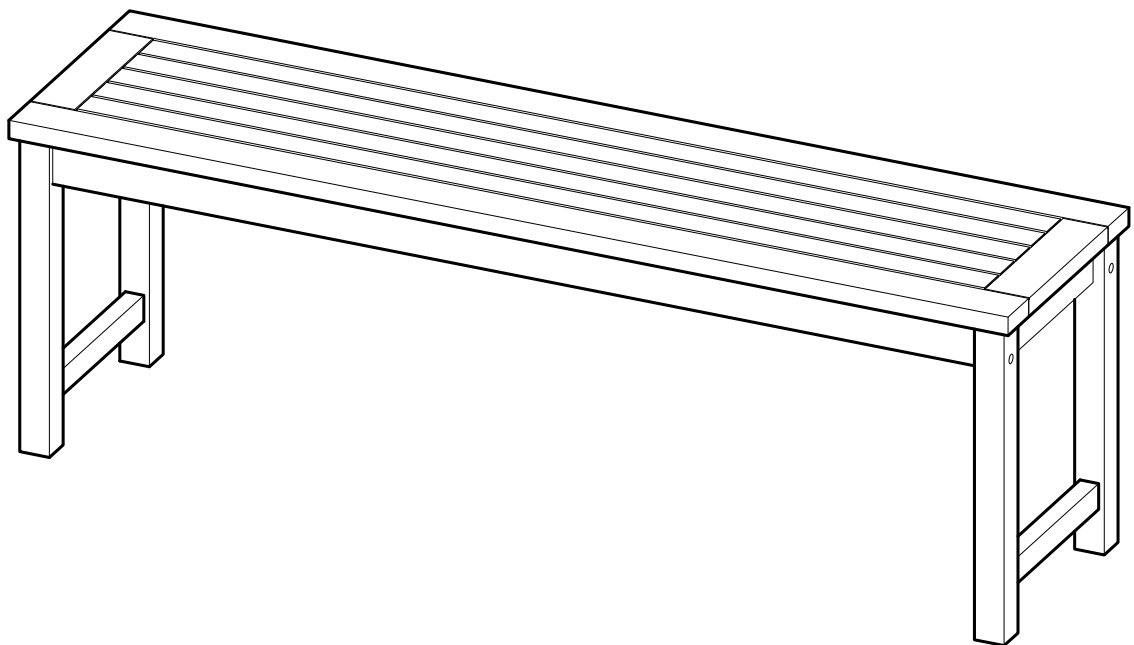

Final Assembly