


ASSEMBLY INSTRUCTION

ITEM#: 171983

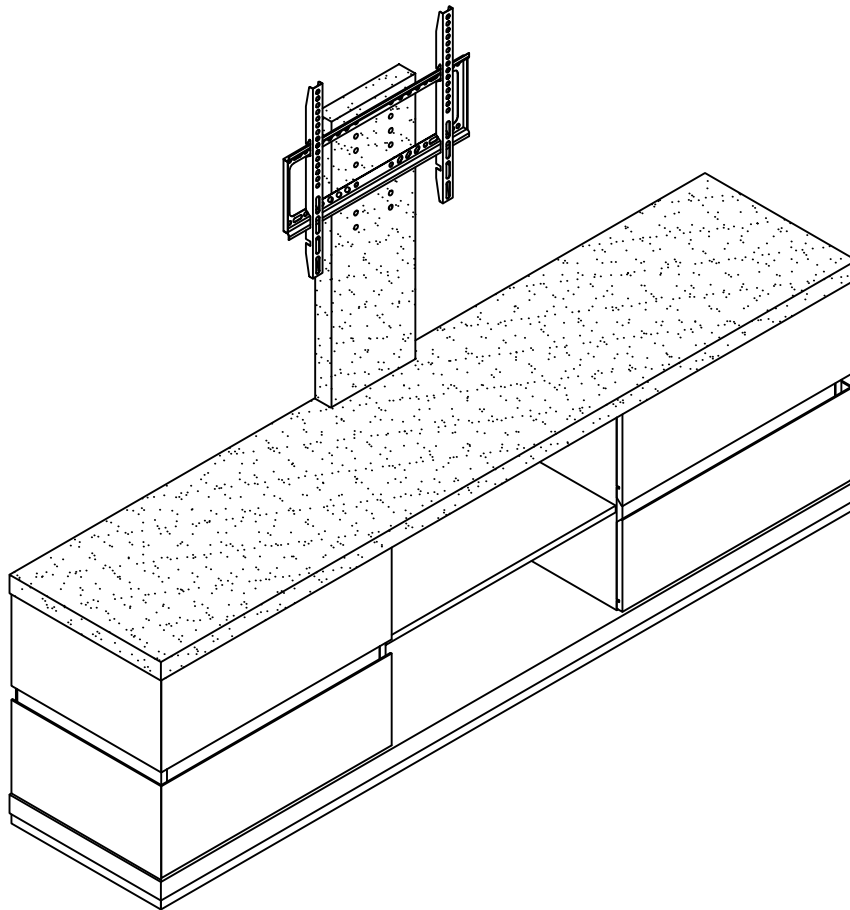

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Note position of all holes on each panel during assembly.

ITEM#: 171983

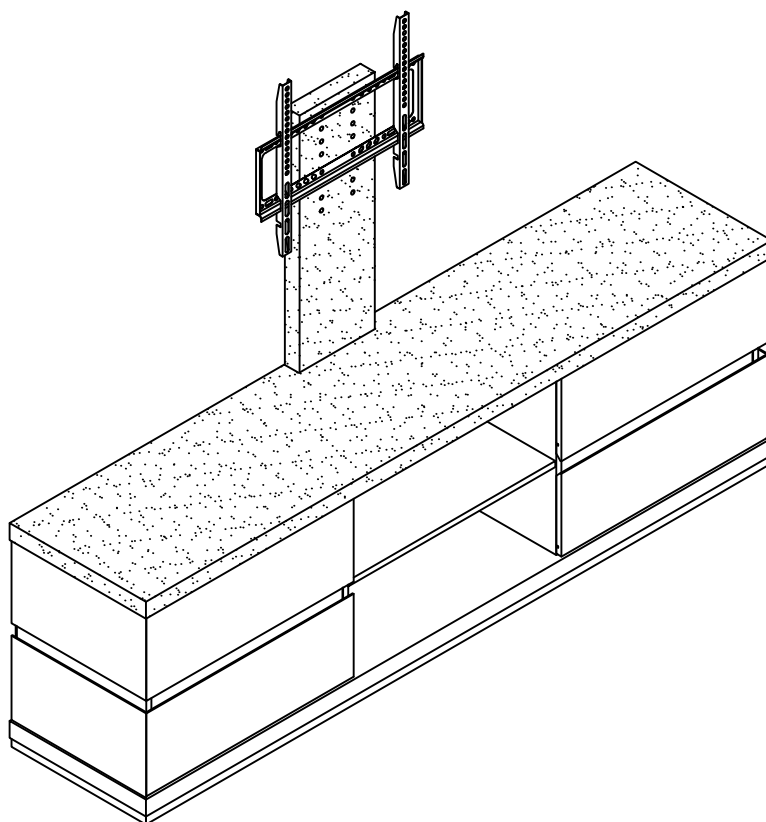

PARTS IDENTIFICATION





ITEM#:171983

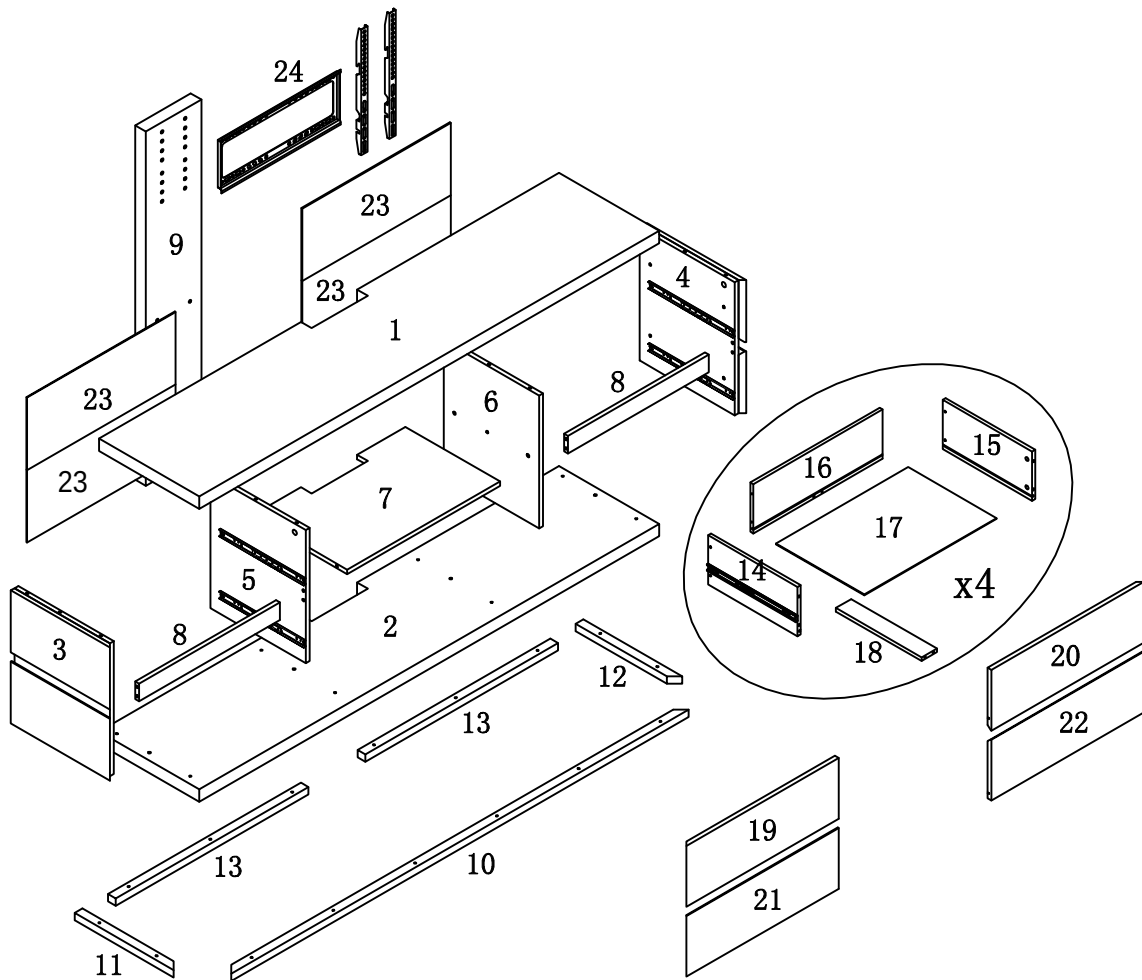

(1)	1pc	(9)	1pc	(17)	4pcs
(2)	1pc	(10)	1pc	(18)	4pcs
(3)	1pc	(11)	1pc	(19)	1pc
(4)	1pc	(12)	1pc	(20)	1pc
(5)	1pc	(13)	2pcs	(21)	1pc
(6)	1pc	(14)	4pcs	(22)	1pc
(7)	1pc	(15)	4pcs	(23)	4pcs
(8)	2pcs	(16)	4pcs	(24)	1pc

HARDWARE IDENTIFICATION

ITEM#: 171983


A		L29	12pcs
B		Ø15	12pcs
C		L20	16pcs
D		Ø12	16pcs
E		Ø8x25	18pcs
F		Ø6x30	8pcs
G		Ø4x30	24pcs
H		Ø4x40	16pcs
I		Ø4x50	8pcs
J		M8 x 45	4pcs
K		Ø8xØ16x2	4pcs
L		M5	1pc
M			46pcs
N		Ø20	4pcs
O		Ø16	12pcs
P			1pc

Glue: For securing please apply to wood
dowel first before inserting into panel

ASSEMBLY INSTRUCTION

ITEM#: 171983

HOW TO




Cam Bolt




Cam Lock

1

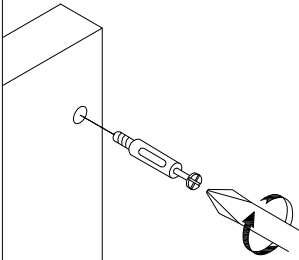


1. Screw Cam Bolt into panel.

2

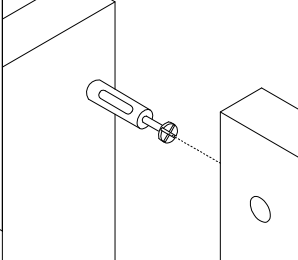


2. Insert Cam Bolt into bolt hole of joining panel.

3

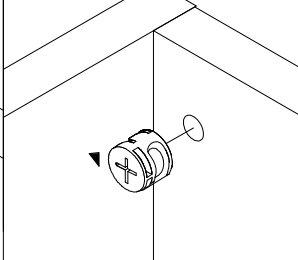


3. Insert Cam Lock. arrow facing bolt.

4

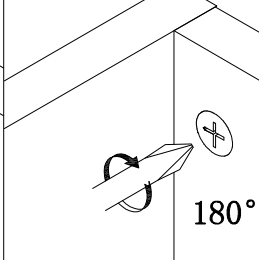


4. Gently turn Cam Lock clockwise to lock position.

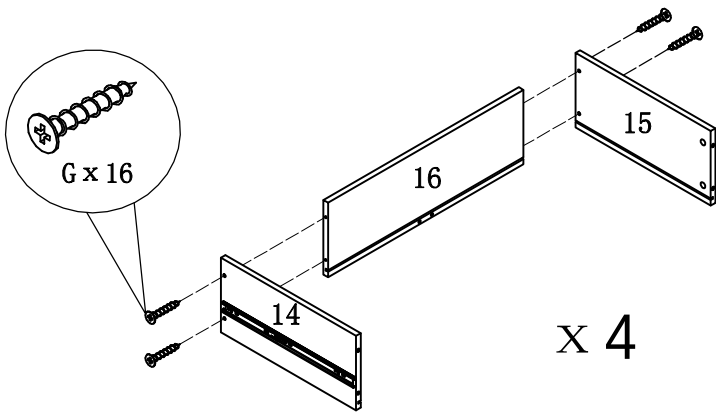


STEP1

STEP2

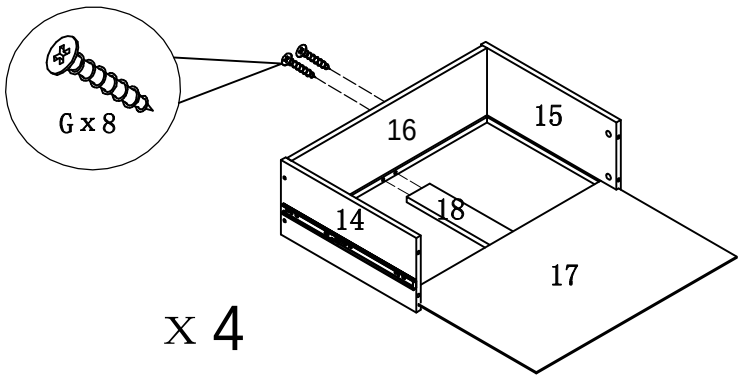


ASSEMBLY INSTRUCTION

ITEM#:171983

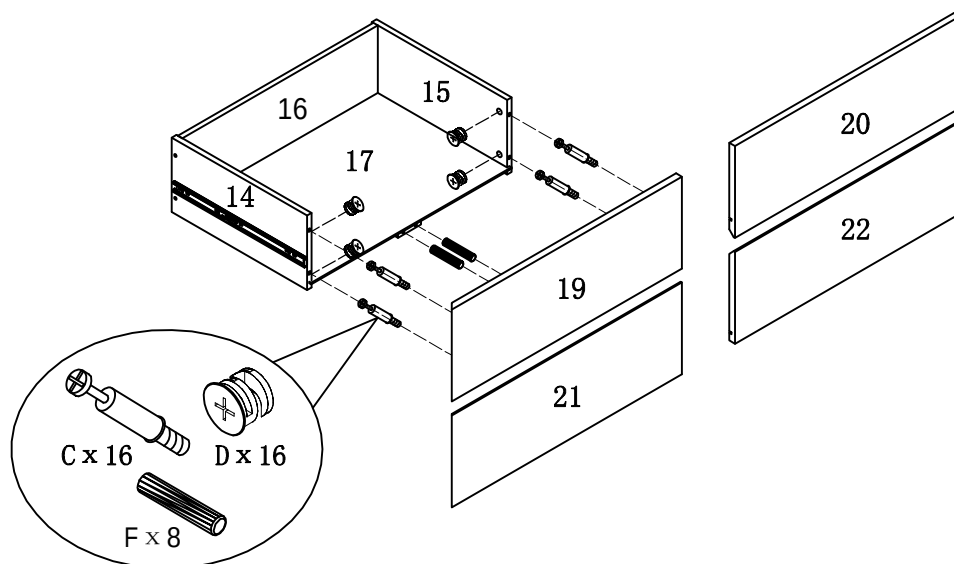


STEP3

STEP4

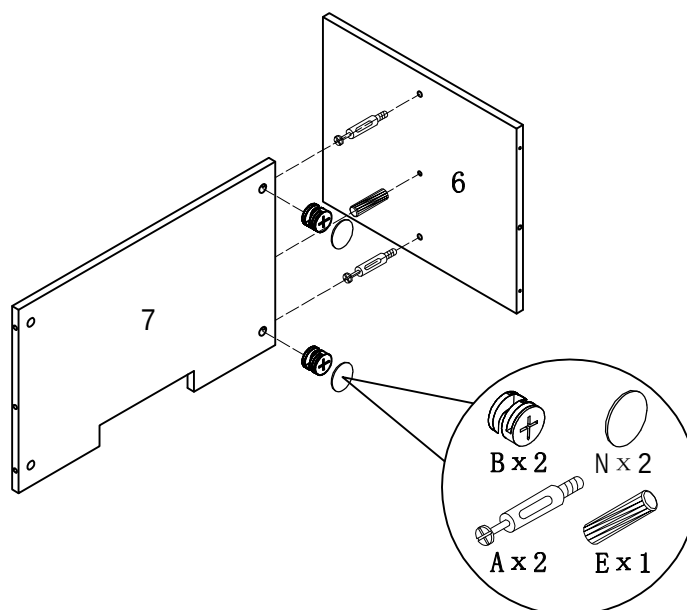


ASSEMBLY INSTRUCTION

ITEM#:171983

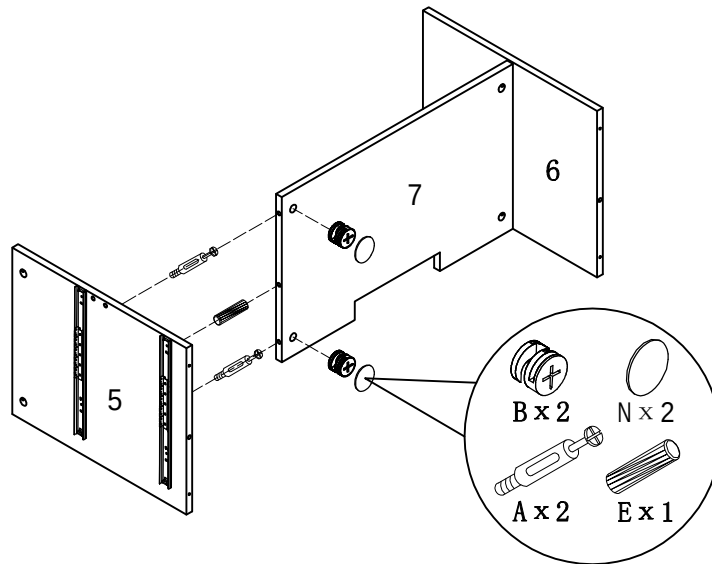


STEP5

STEP6

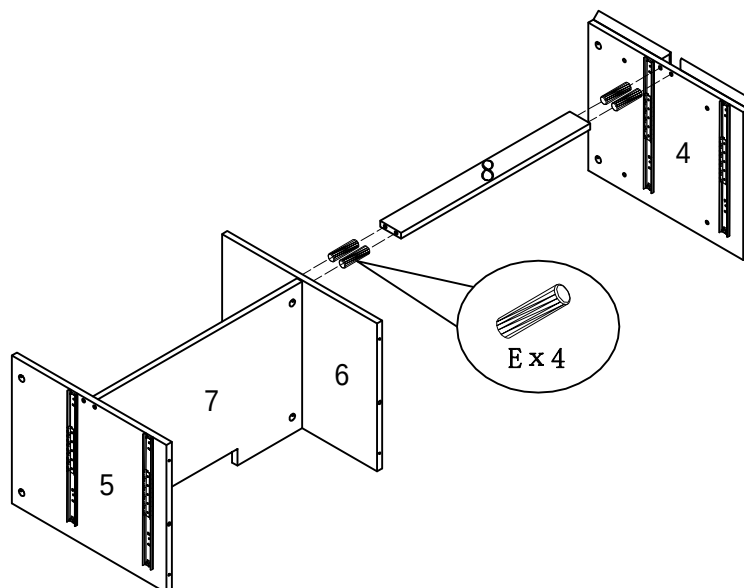


ASSEMBLY INSTRUCTION

ITEM#: 171983

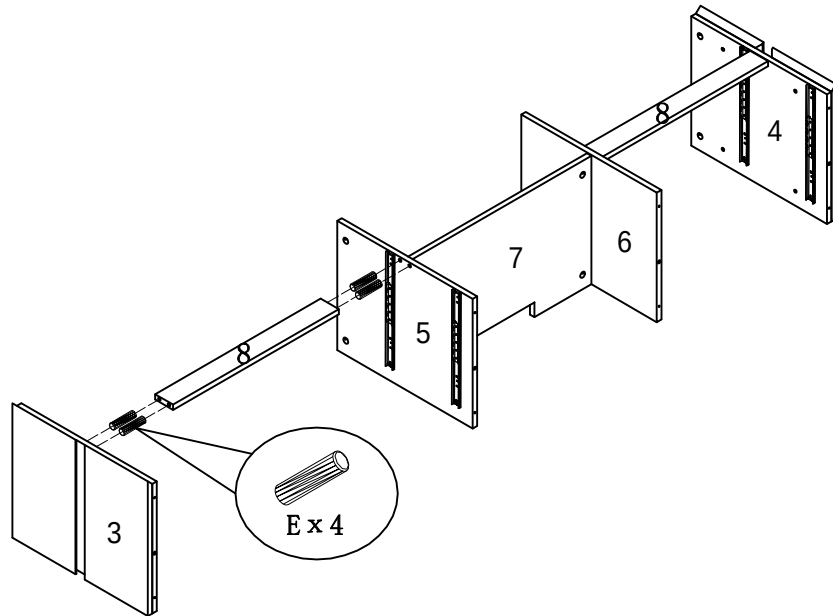


STEP7

STEP8

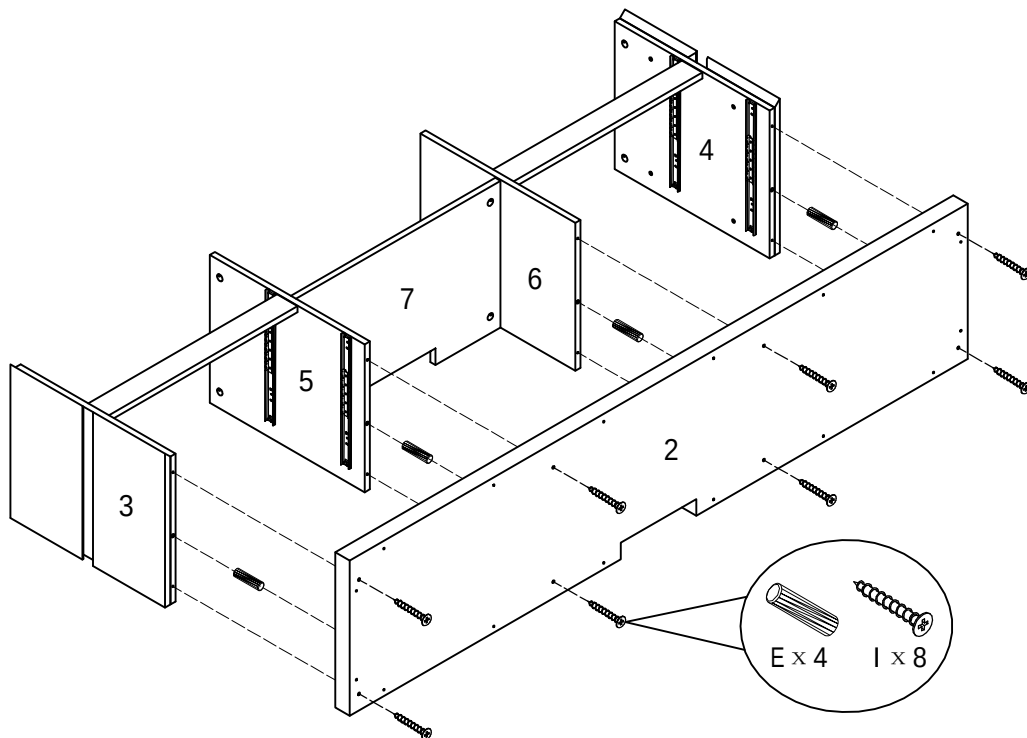


ASSEMBLY INSTRUCTION

ITEM#: 171983

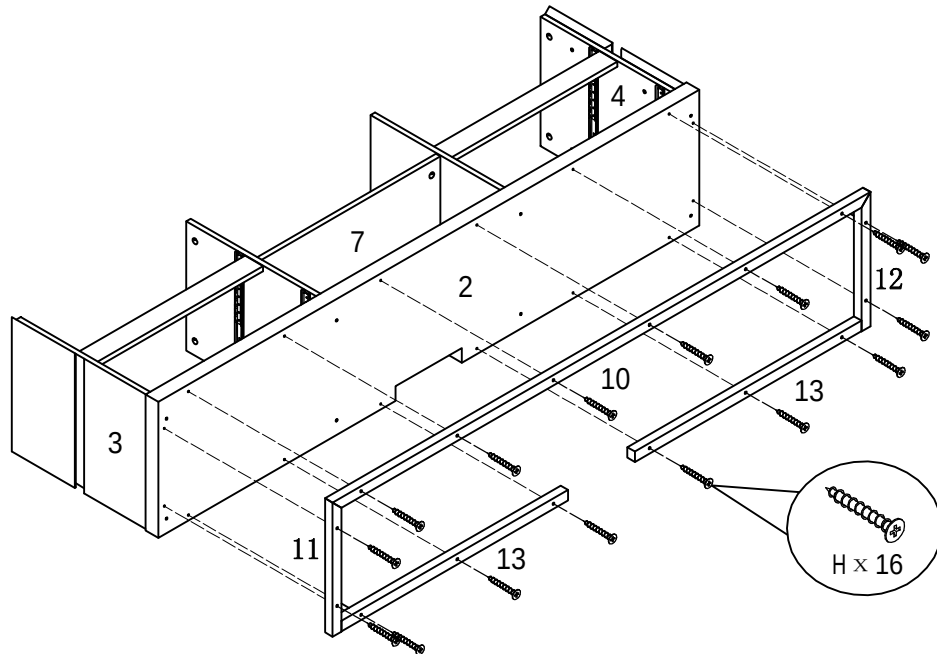


STEP9

STEP10

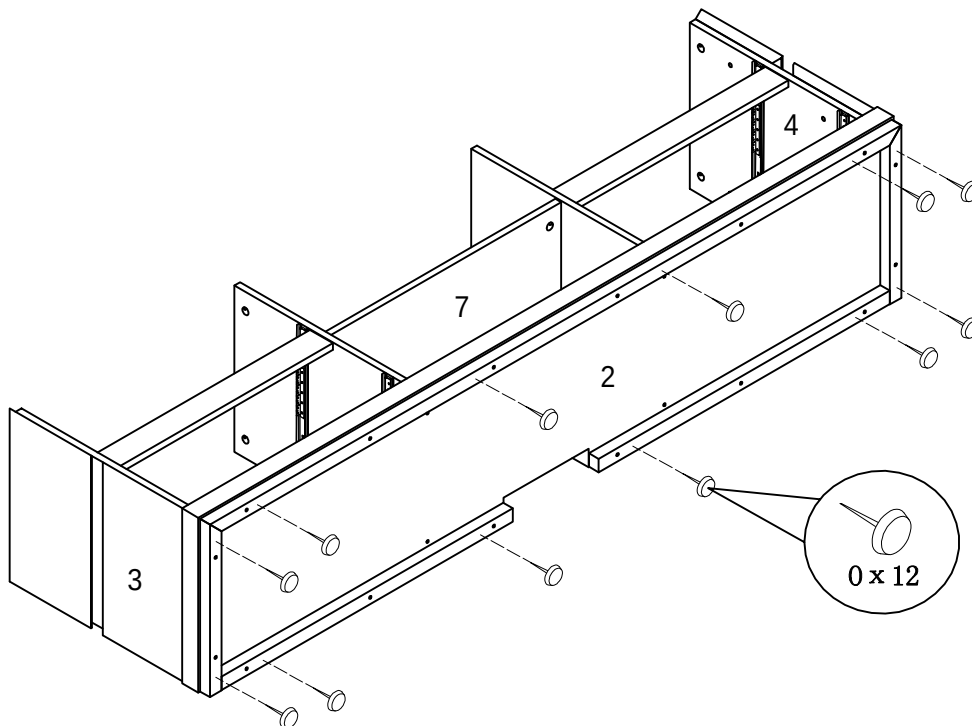


ASSEMBLY INSTRUCTION

ITEM#: 171983

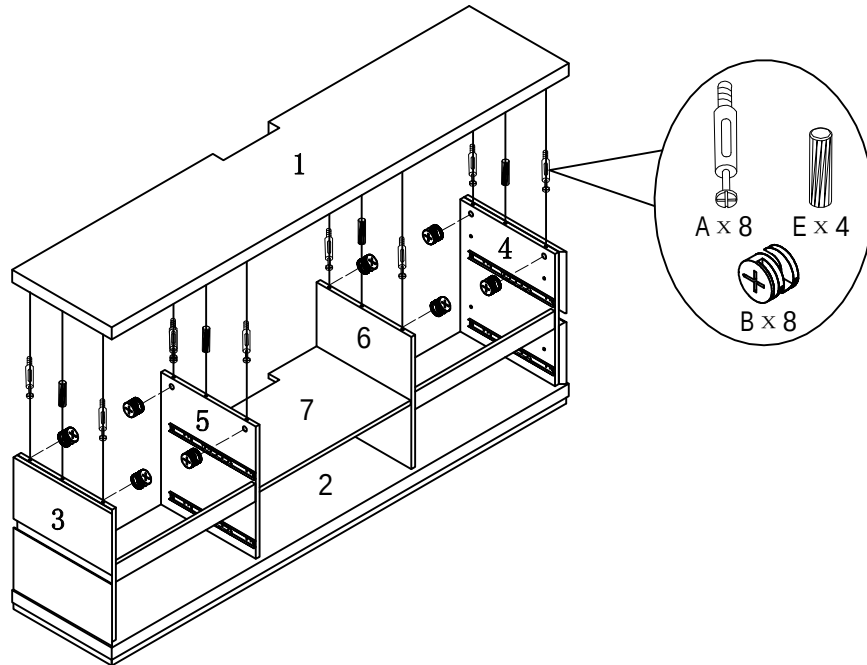


STEP11

STEP12

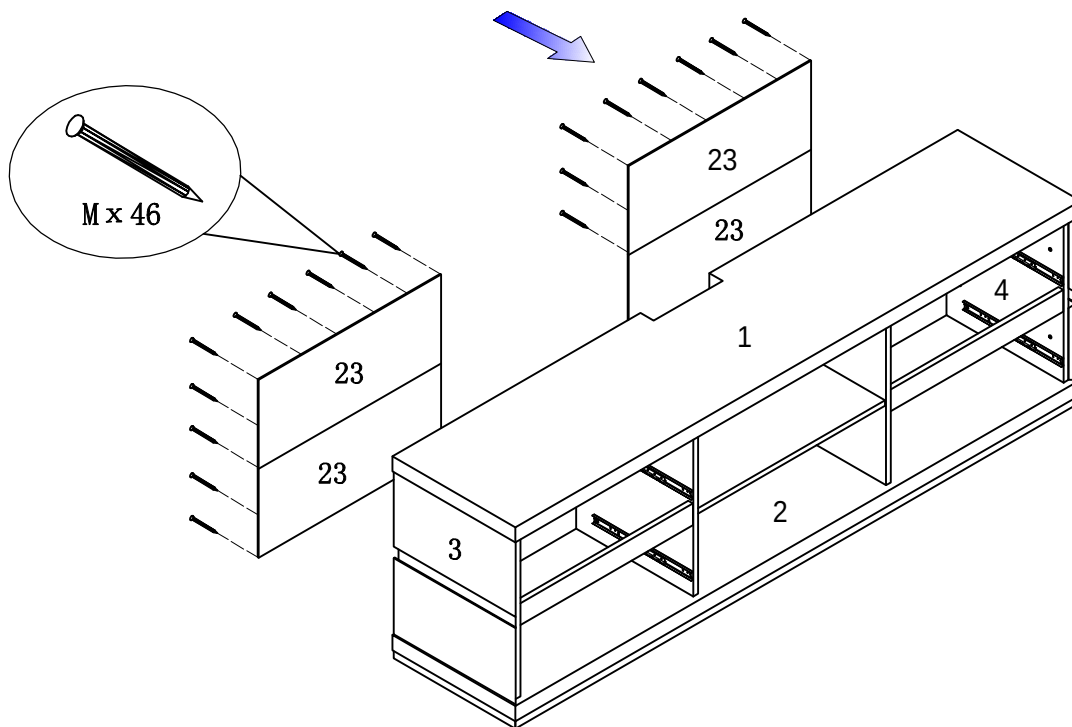


ASSEMBLY INSTRUCTION

ITEM#:171983

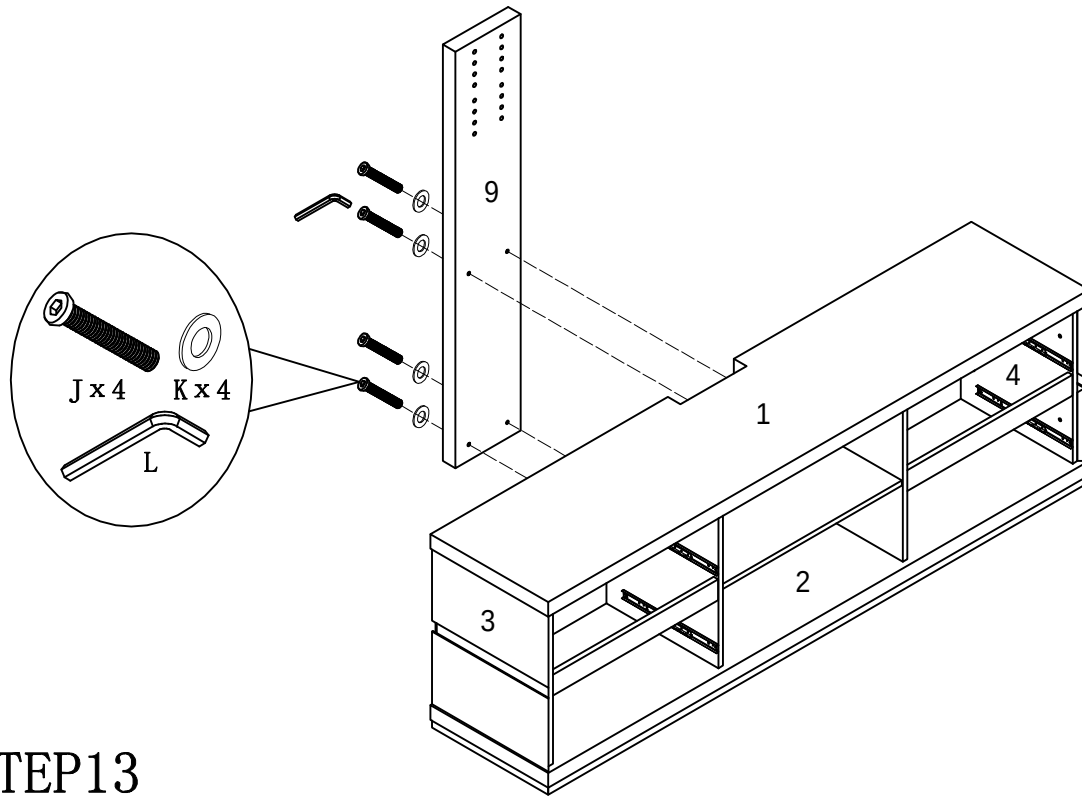


STEP13

STEP14

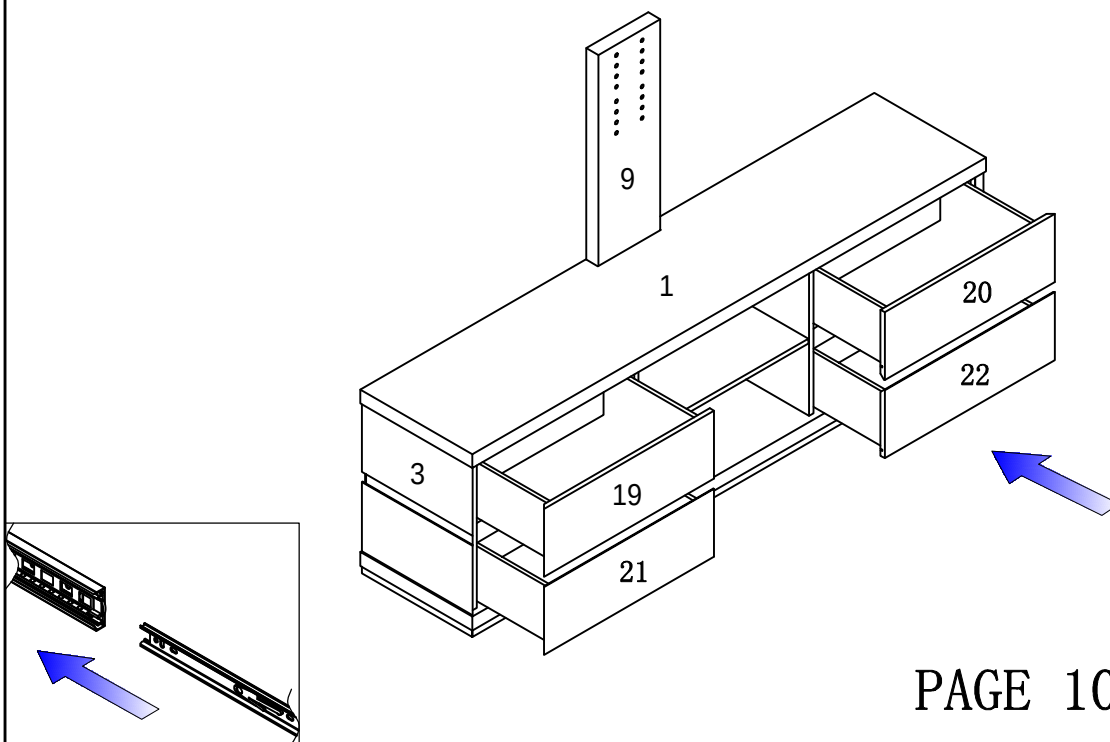

ASSEMBLY INSTRUCTION

ITEM#: 171983

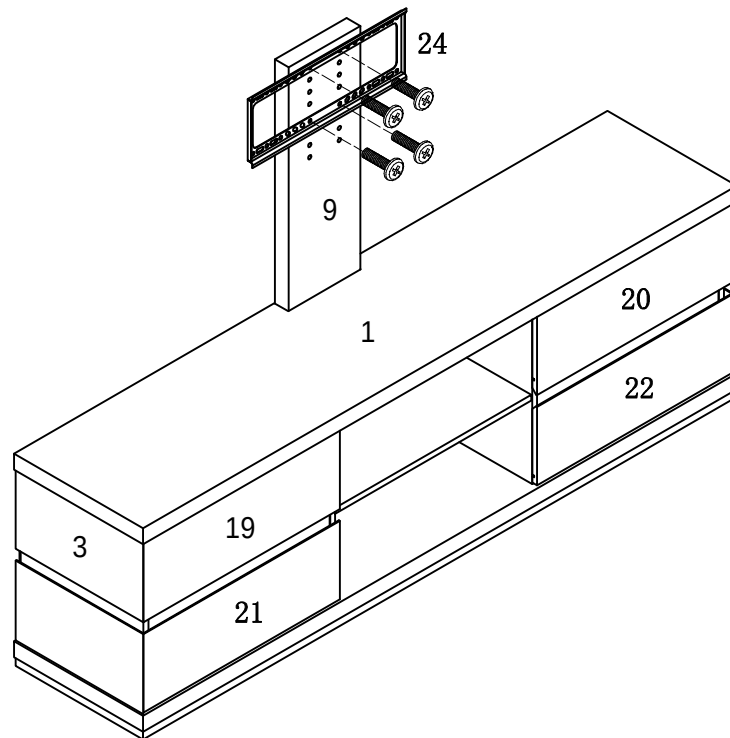

STEP15

STEP16

